


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

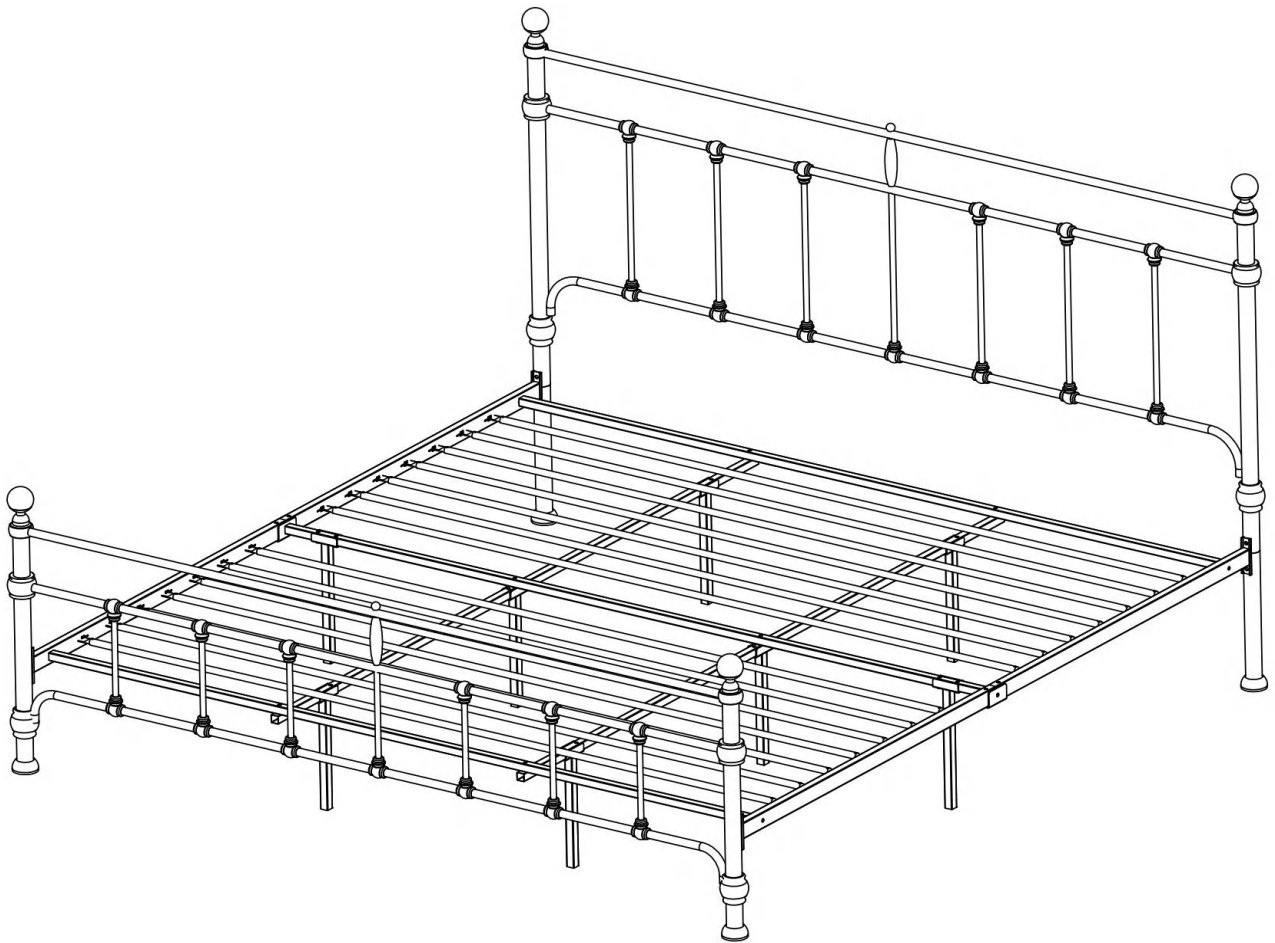

Fine Furniture for every stage of life

316001KE
KING BED

ITEM: 316001KE



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!



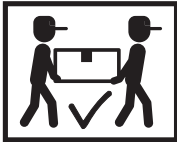









1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.












ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

A HEADBOARD		1PCS	G SLAT		14PCS
B FOOTBOARD		1PCS	H LARGE FINIAL		4PCS
C RAIL		4PCS	I SMALL FINIAL		2PCS
D CENTER SUPPORT BAR		1PCS	J HEADBOARD AND FOOTBOARD SUPPORT BAR		2PCS
E SUPPORT LEG 1		2PCS	K SUPPORT LEG 2		6PCS
F HEADBOARD LEG		2PCS	L CENTER RAIL		4PCS


Z- HARDWARE IDENTIFICATION

1 BOLT(M8x20MM)		8PCS	6 CURVED GASKET		2PCS
2 BOLT(M6x25MM)		16PCS	7 SLAT CONNECTOR		28PCS
3 BOLT(M6x45MM)		10PCS	8 BOLT(M6x30MM)		6PCS
4 BOLT(M8x20MM)		2PCS	9 BOLT(M6x17MM)		4PCS
5 ALLEN WRENCH		2PCS			


ITEM: 316001KE
ASSEMBLY INSTRUCTIONS




STEP 1

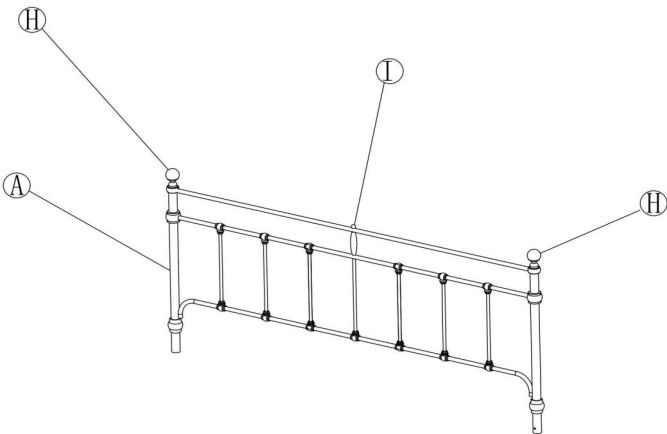

STEP 2

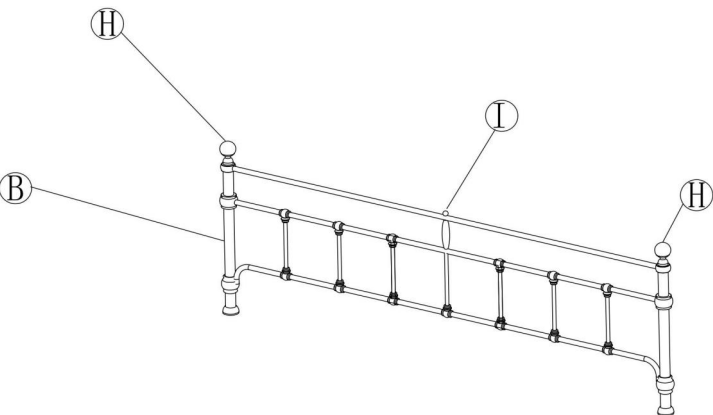


STEP 3

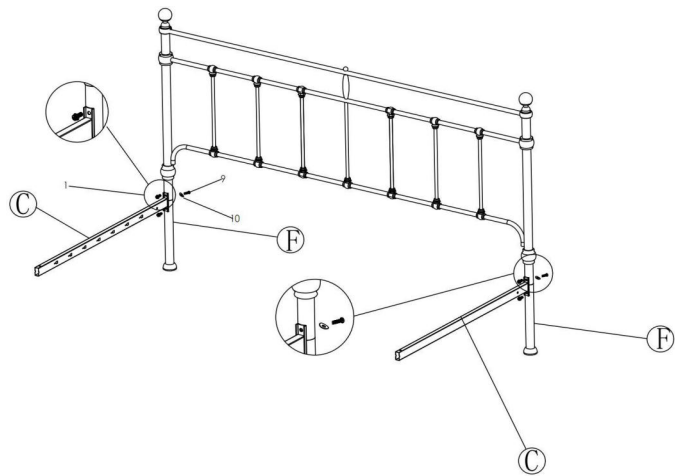

1	X 4	4	X 2
M8X20		M8X20	
6	X 2		
ø22Xø8.5			

STEP 4

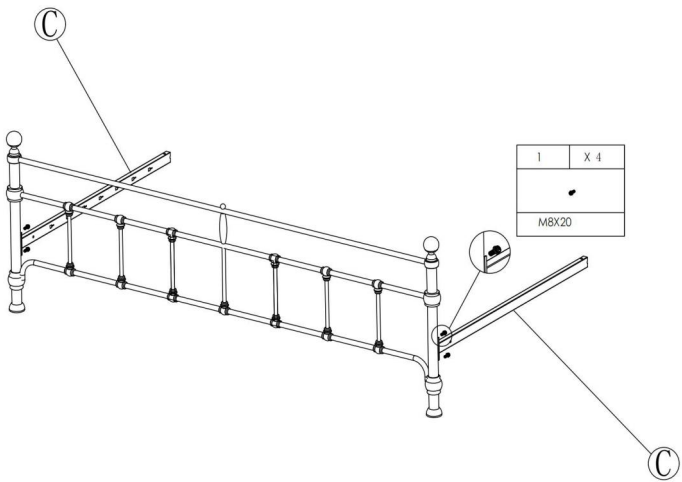

1	X 4
MBX20	

ASSEMBLY INSTRUCTIONS



3	X 2
M6X45	

3	X 2
M6X45	

Diagram illustrating the assembly of the sensor unit. The diagram shows a long, thin component (likely a sensor probe) being inserted into a slot in a larger assembly. Callout D points to the sensor probe. Callout E points to the vertical support structure. Callout F points to the horizontal support structure.

Diagram illustrating the assembly of the bed frame, showing the connection of the headboard and footboard to the side rails using screws.

Assembly details shown:


- Headboard connection: 3 screws (X 4) are used to secure the headboard to the side rail. The screw size is specified as M6X45.
- Footboard connection: 8 screws (X 2) are used to secure the footboard to the side rail. The screw size is specified as M6X30.

ITEM: 316001KE



ASSEMBLY INSTRUCTIONS



STEP 9

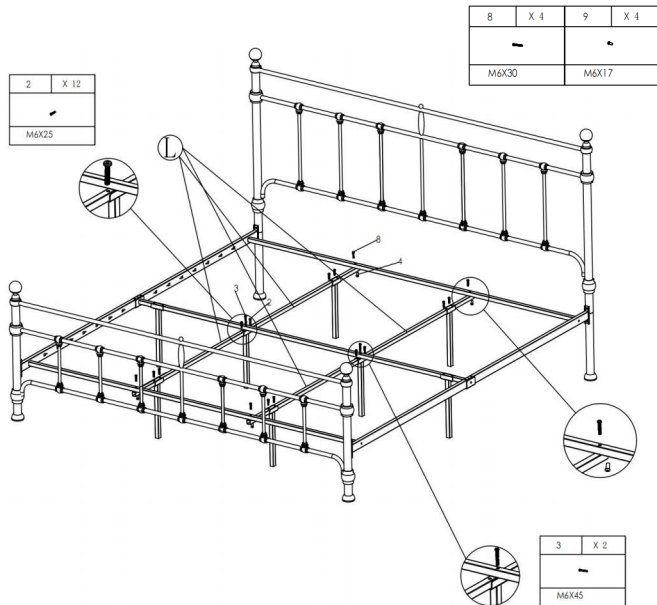

STEP 10

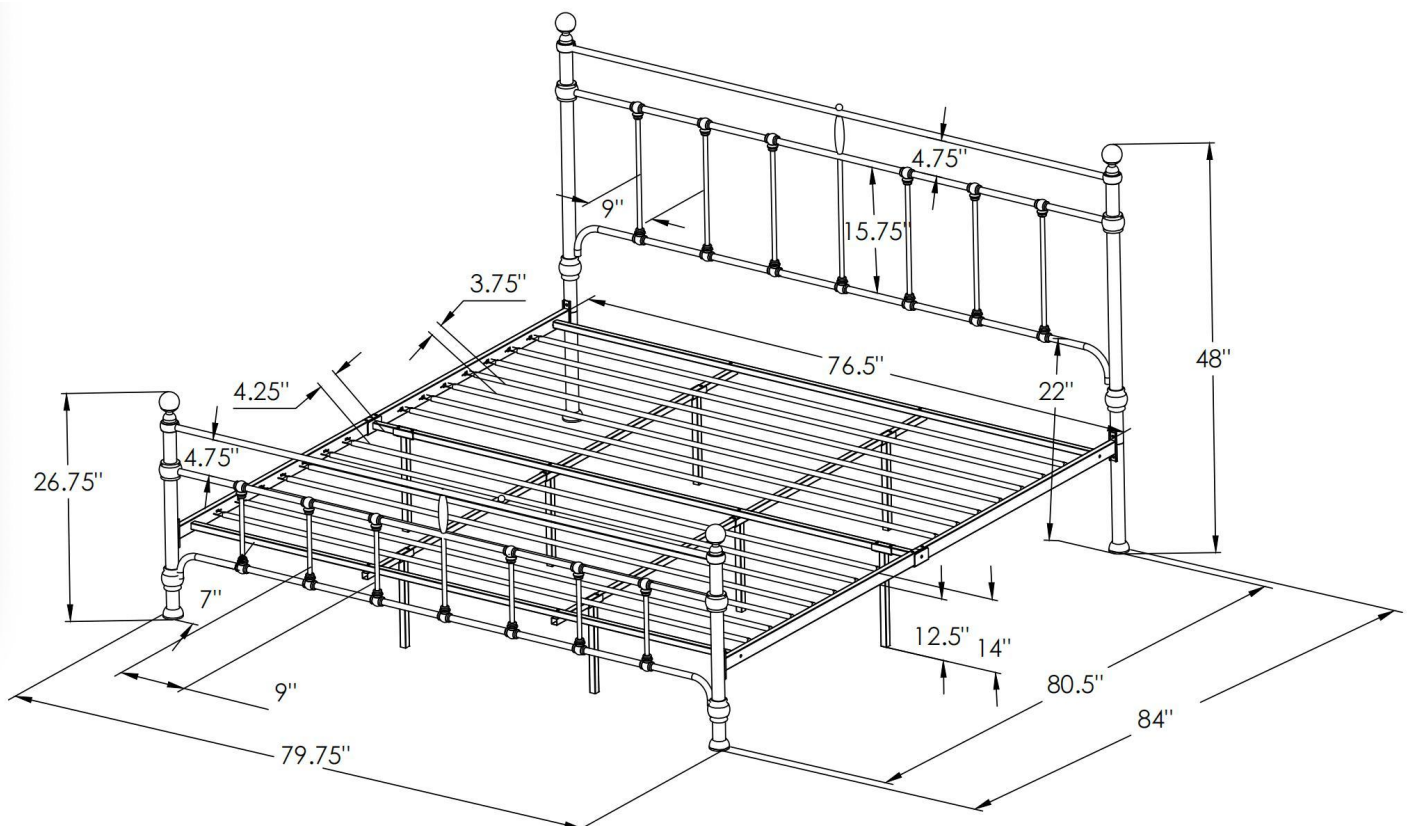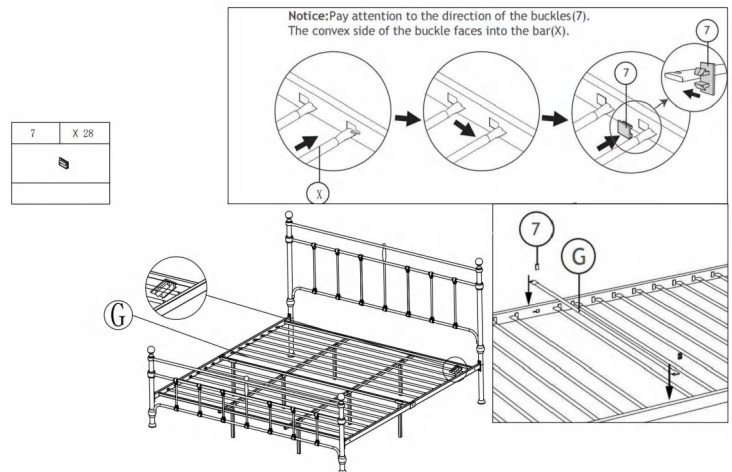

Note : Dimension tolerance $\pm 5\%$

