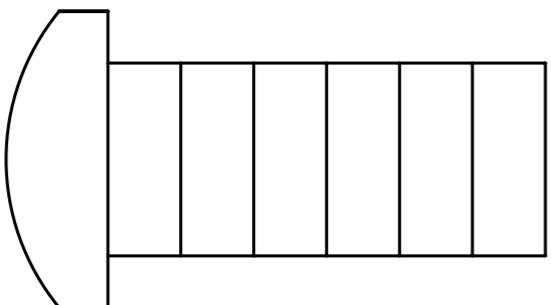
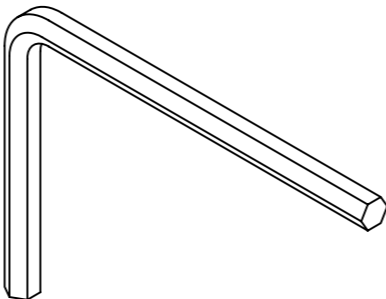
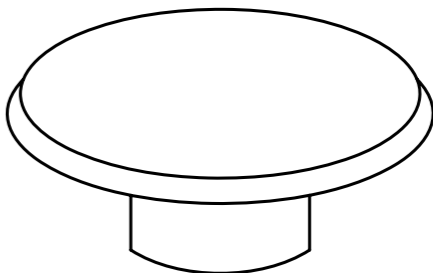


ROSTOCK CHAIR  
ASSEMBLY INSTRUCTIONS


A: Chair Seat 1 pc	Rostock Chair ASSEMBLED
B. Leg Base 1 pc	

HARDWARE IS PACKED IN BOX

1	BOLT M6x18 MM	4 PCS	2	ALLEN KEY M6	1 PC	3	FEET	6 PCS
								

**PLEASE NOTE!: YOU MUST INSTALL THE CHAIR FEET BEFORE USE OR RISK DAMAGE TO YOUR FLOORS.  
PLEASE FOLLOW INSTRUCTIONS ON ASSEMBLY.**

STEP 1: With the Chair Seat (A) upside down. Attach the leg base (B) to Chair Seat (A) with four M6 Bolts (1). Tighten completely using the provided Allen Key (2). Connect the four Feet (3) to the corresponding legs.

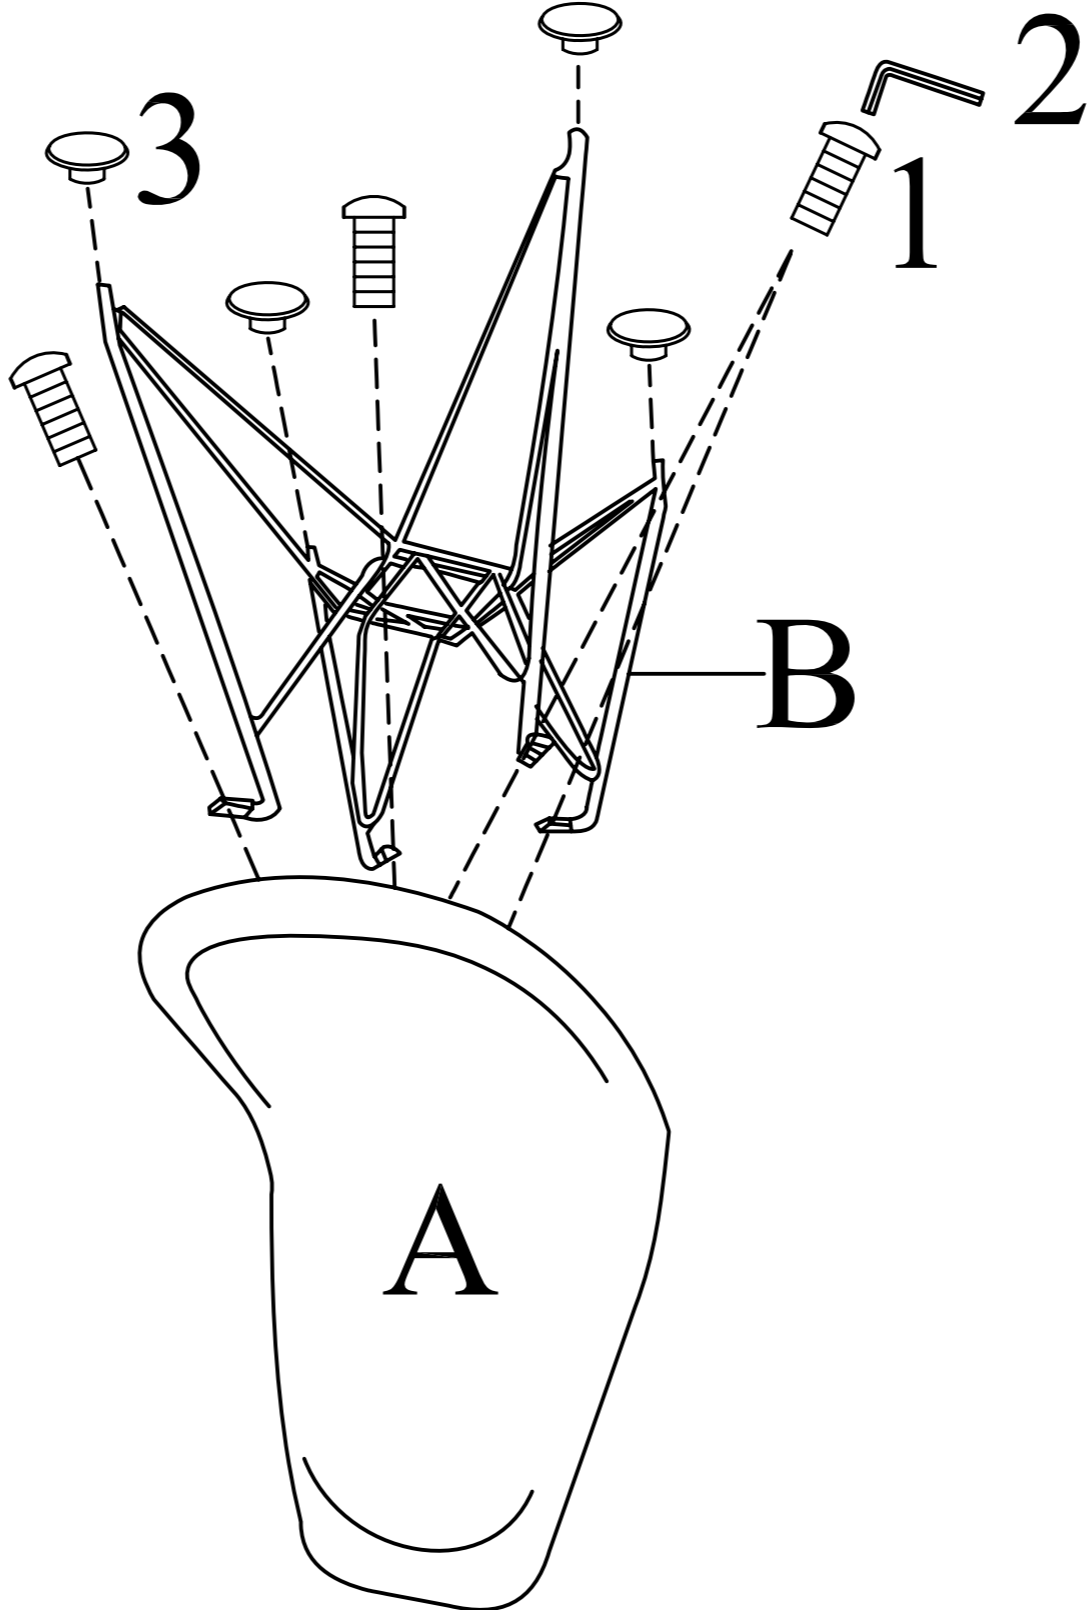

ROSTOCK CHAIR  
ASSEMBLY INSTRUCTIONS

STEP 2: Turn chair right side up after assembly is complete.

