CARACOLE CONTEMPORARY

ASSEMBLY INSTRUCTIONS

TWO(2)PEOPLE REQUIRED


UNPACK ALL PARTS AND CHECK AGAINST PARTS LIST ON THIS INSTRUCTION SHEET BEFORE DISCARDING PACKING AND CARTONING!!

- 1) Secure metal base to the leg using the bolts(A), tighten the bolts with wrench (E) untill stretcher is fully assembly(see step 1 on diagram A)
- 2) Turn the top upside down on a soft clean surface. Secure leg to top using the bolt(B), lock washer (C) and flat washers(D), tighten the bolts with wrench (E) untill stretcher is fully assembly (see step 2 on diagram A)
- 3) Assembly middle support leg on metal base by hand(see step 3 on diagram A)
- 4) Put the glass top on the top frame(see step 4 on diagram A)

*** NOTE KEEP THIS SHEET!!!

In the unlikely event that you would need a replacement part for your table, please fax this sheet to our CSR at 1-800-848-8930 with your order or call 1-800-468-8730 | If you need replacement hardware quickly, it could be purchased from your local hardware store.

	CON-COCTAB-024 MINIMALIST METAL/WD CKTI	TABLE	
Part Description	Part No.	QTY	
Тор	CON-COCTAB-024-20255	1	
Legs	CON-COCTAB-024-2018	4	
Bottom Shelf	CON-COCTAB-024-2027	1	
Middle Support leg	CON-COCTAB-024-20118	1	
Glass Top	CON-COCTAB-024-2029	1	
Adjust Floor Glide	CON-COCTAB-024-2075	5	
RTA Hardware	CON-COCTAB-024-2001	1	

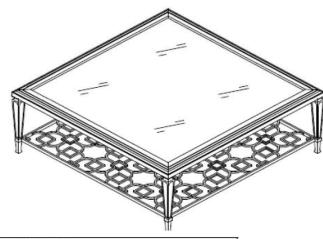

RTA Hardware				
Hardware List			Qty	
Α	Dim	DIA 1/4"X 5/8" Flat head Bolt	4	
В	0	DIA 1/4"X 1-1/8" Bolt	8	
С	0	DIA1/4" lock washer	8	
D	9	DIA 1/4" X 16mm flat washer	8	
E		4mm Allen Wrench	1	
F	0	M1/4"X3/8FLAT HEAD BOLT	2	

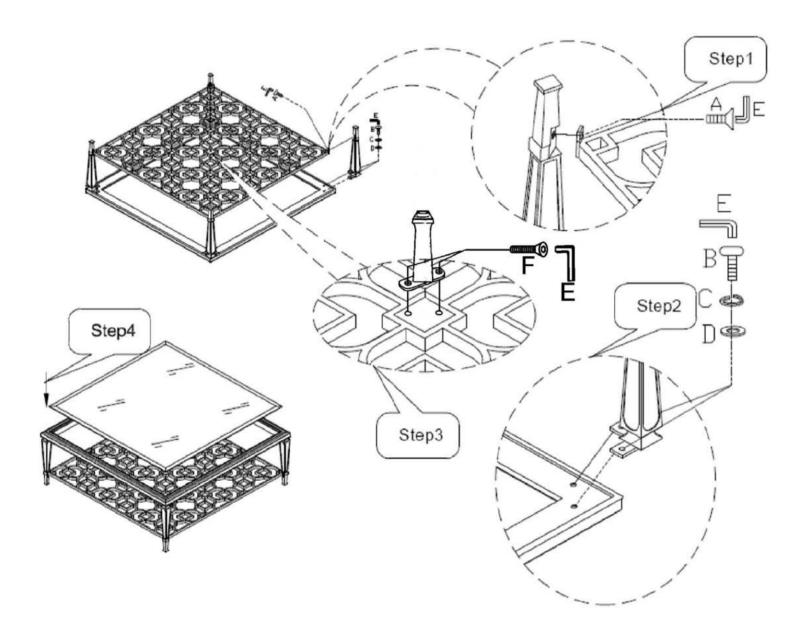


Diagram A