

**P1** Headboard (x1)



**01** Steel open wrench (x1)




**02** Hexagonal nut, washer & lock washer (x8)




**03** Steel threaded (x8)

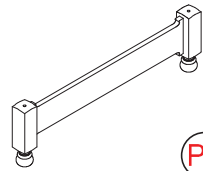

**P2** Footboard (x1)

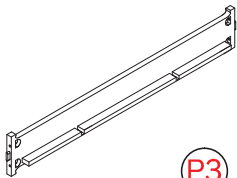

**P3** Side Rails (x2)

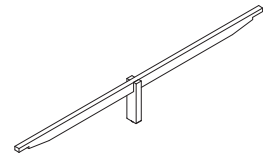


**P4** Center Support (x2)




**P5** Long Post (x2)




**P6** Short Post (x2)

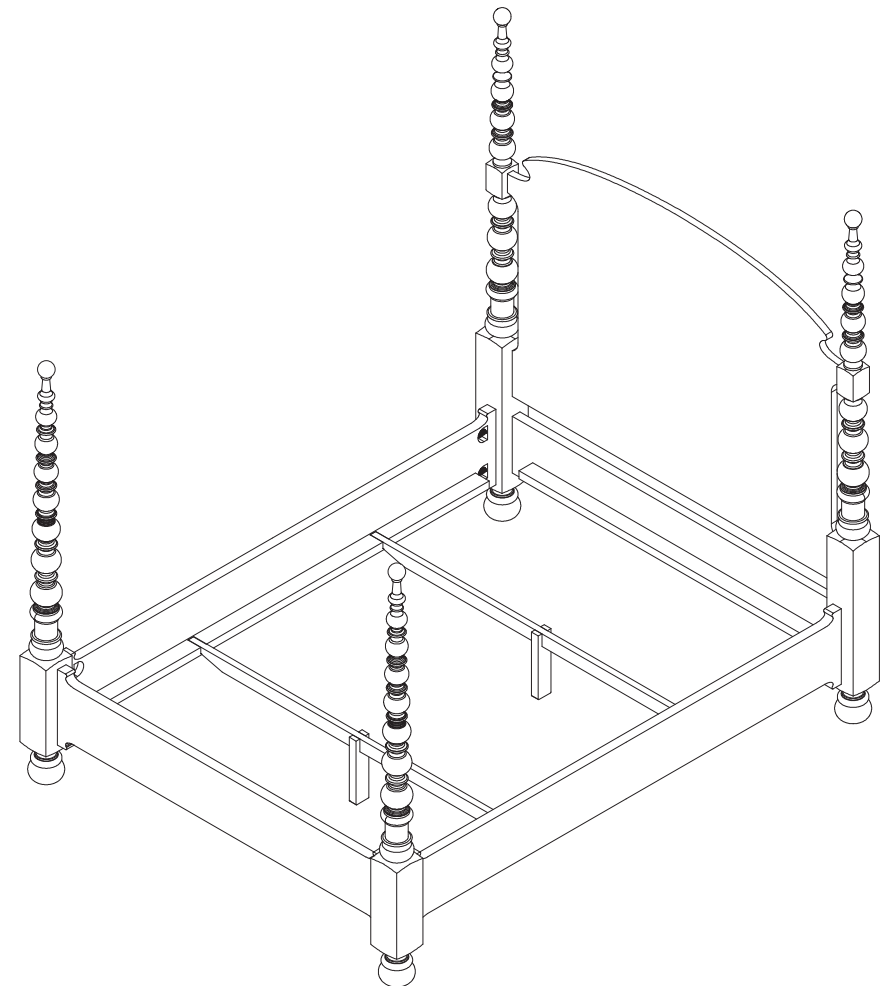

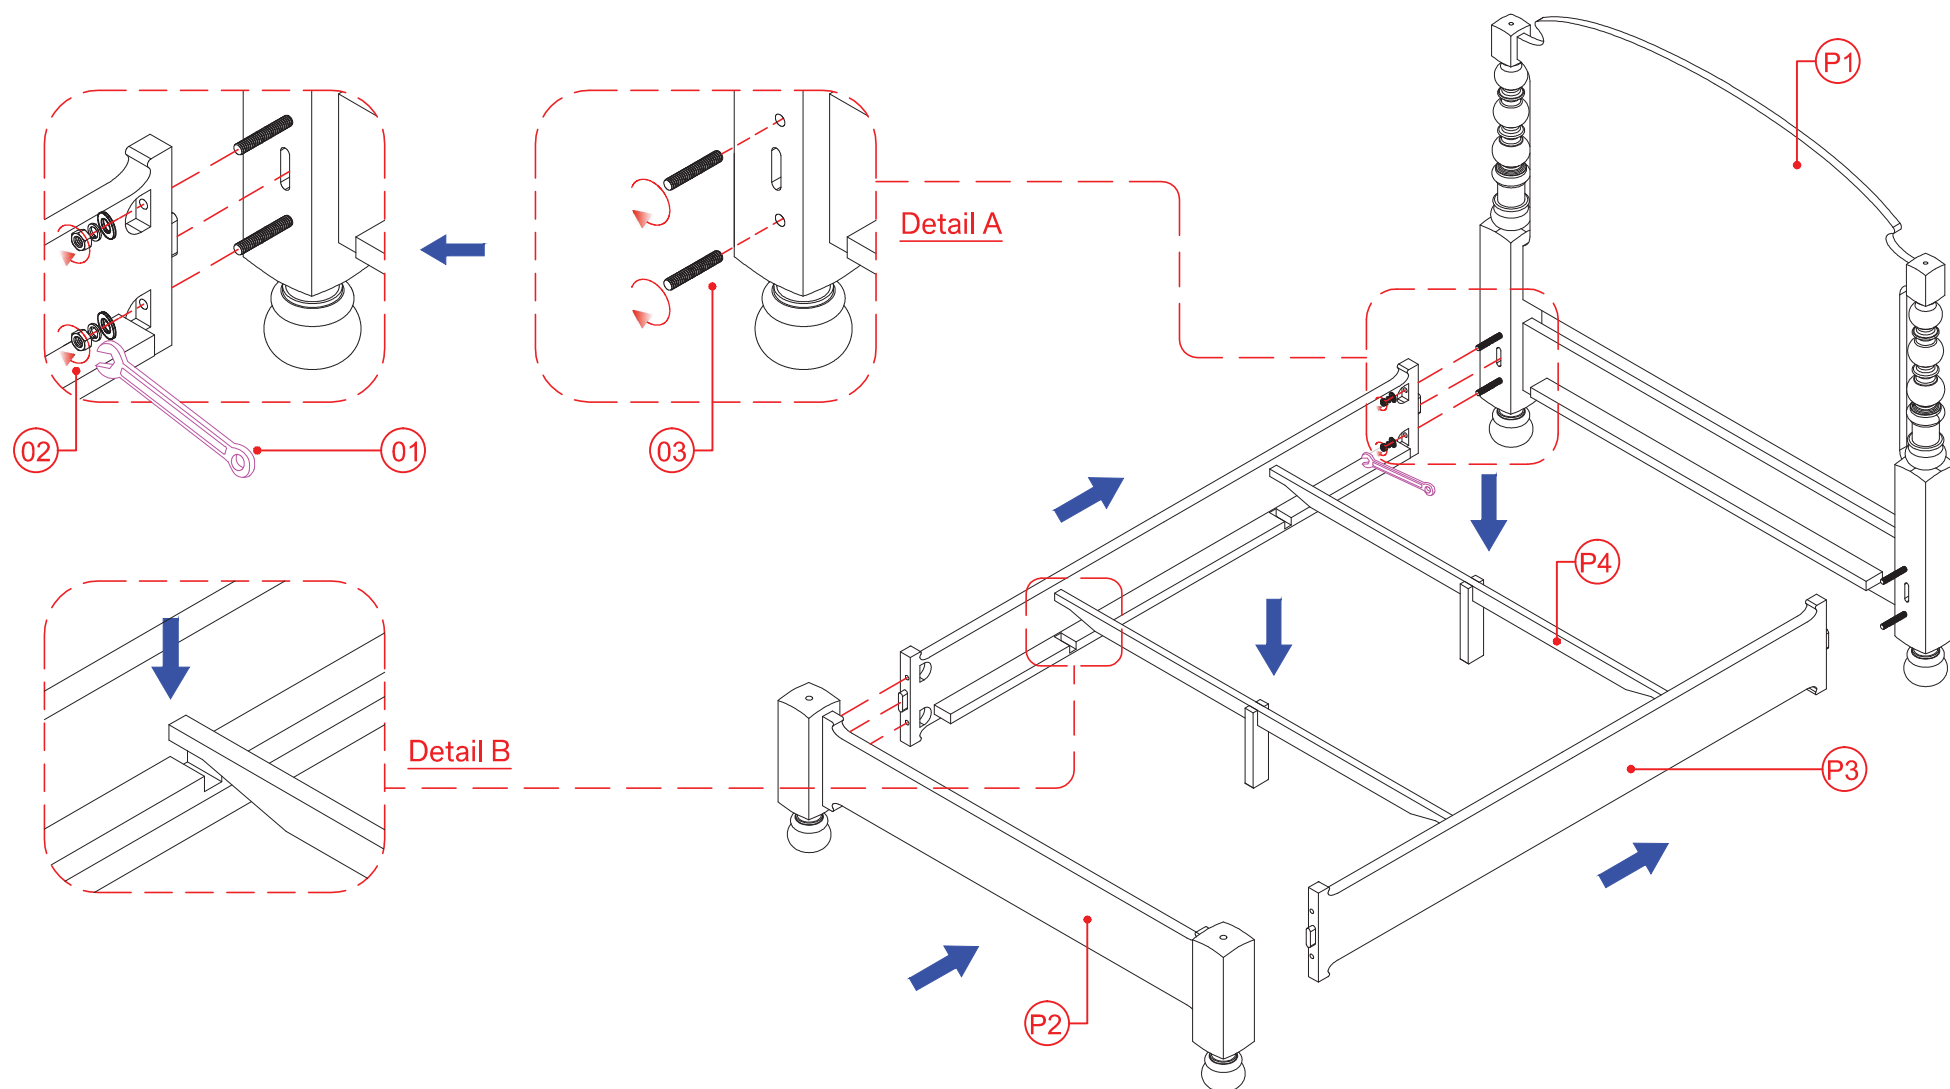**INSTRUCTIONS :**

1. insert the steel threadeds (3) on headboard (P1) and footboard (P2). Then assemble the side rails (P3) to the headboard (P1) and footboard (P2), insert washers, lock washers & hexagonal nuts , (2) , use steel open wrench (1) to turn clockwise direction securely, refer detail A .
2. Insert the center support (P4) to the pre-cut slots on side rails. Refer detail B.

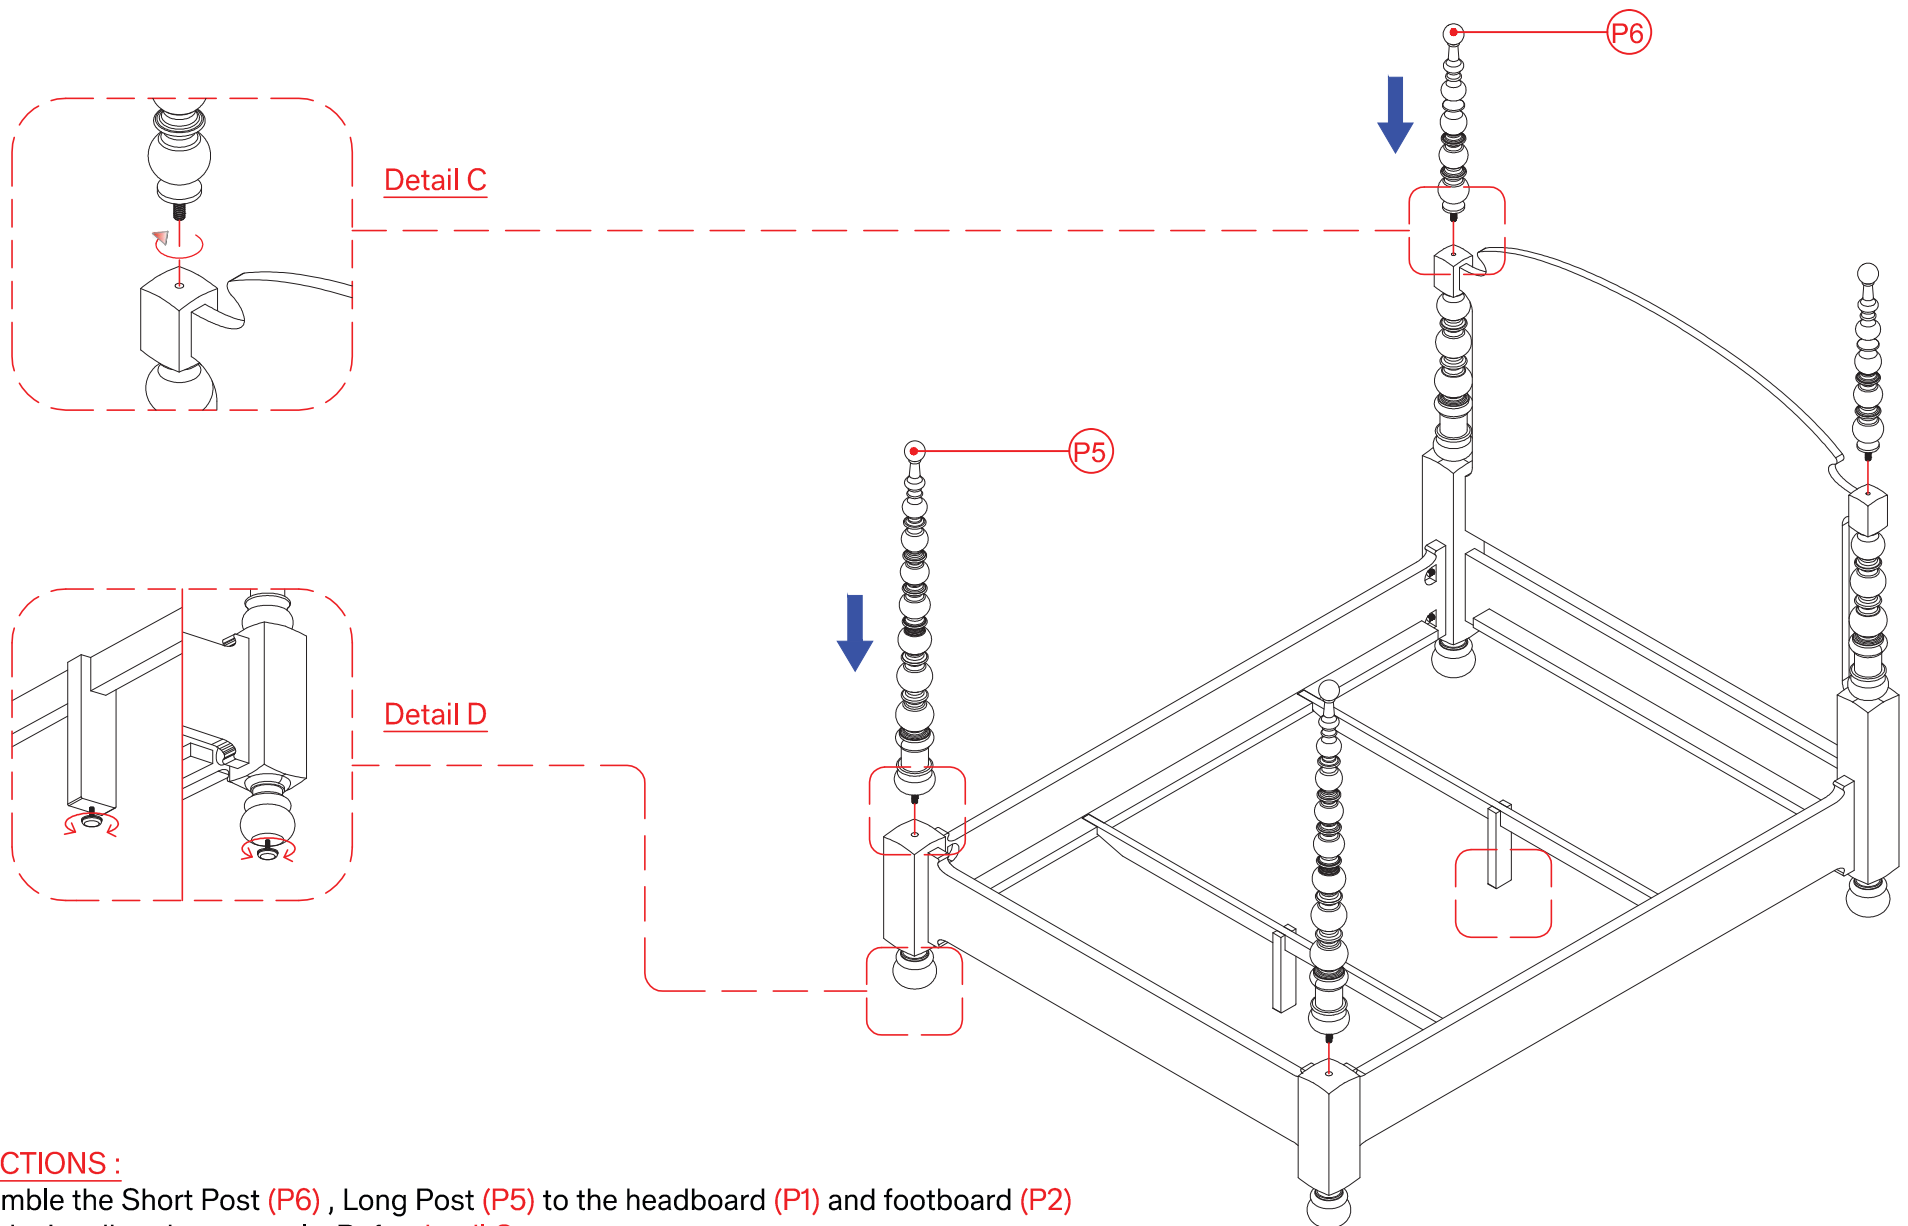**INSTRUCTIONS :**

3. Assemble the Short Post (P6) , Long Post (P5) to the headboard (P1) and footboard (P2) turn clockwise direction securely, Refer detail C.
4. Adjust leveler for levelling the support center rail and the legs if necessary. Refer detail D.