



# *ASSEMBLY INSTRUCTIONS*

## *COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**509965(B1 & B2)**  
**Sectional**

# ITEM: 509965(B1&B2)



## ASSEMBLY INSTRUCTIONS


### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

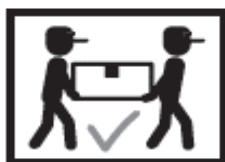







ASSEMBLY TIME







15 MINUTES

## PARTS IDENTIFICATION
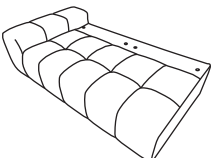
### B1(BOX 1)

A LAF SOFA SEAT		1PC	D BACKREST CUSHION		2PCS
B HEADREST SUPPORT		2PCS	E LEG		4PCS
C HEADREST		2PCS	H PILLOW		1PC

### B2 (BOX 2)

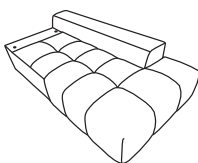F RAF CHAISE SEAT		1PC	D BACKREST CUSHION		1PC
G CHAISE BACKREST		1PC	H PILLOW		2PCS
C HEADREST		1PC	E LEG		4PCS

ITEM: **509965**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.











### WARNING!









1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 509965(B1)

1	<b>BOLT</b> (5/16" X 70mm - RBW)		8PCS	5	<b>THREADED BOLT</b> (5/16" X 90mm - RBW)		4PCS
2	<b>LOCK WASHER</b> (5/16" X 12mm - RBW)		12PCS	6	<b>ALLEN WRENCH</b> (M4 - RBW)		1PC
3	<b>FLAT WASHER</b> (5/16" X 16mm - RBW)		12PCS	7	<b>WRENCH</b> (5/16" - RBW)		1PC
4	<b>HEX NUT</b> (5/16" - RBW)		4PCS	8	<b>HEADREST CONNECTOR</b>		4PCS

### Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 509965(B2)


1	<b>BOLT</b> (5/16" X 70mm - RBW)		8PCS	5	<b>THREADED BOLT</b> (5/16" X 90mm - RBW)		2PCS
2	<b>LOCK WASHER</b> (5/16" X 12mm - RBW)		10PCS	6	<b>ALLEN WRENCH</b> (M4 - RBW)		1PC
3	<b>FLAT WASHER</b> (5/16" X 16mm - RBW)		10PCS	7	<b>WRENCH</b> (5/16" - RBW)		1PC
4	<b>HEX NUT</b> (5/16" - RBW)		2PCS	8	<b>HEADREST CONNECTOR</b>		2PCS

ITEM: **509965(B1&B2)**


## ASSEMBLY INSTRUCTIONS



### STEP 1

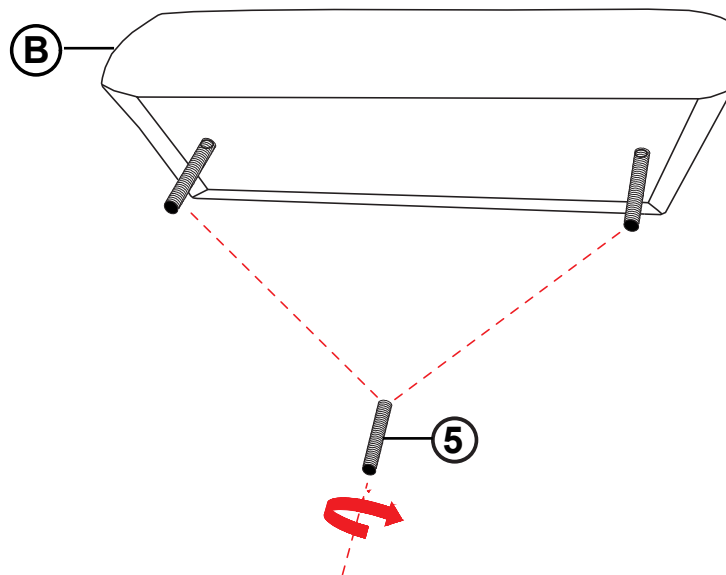

### STEP 2

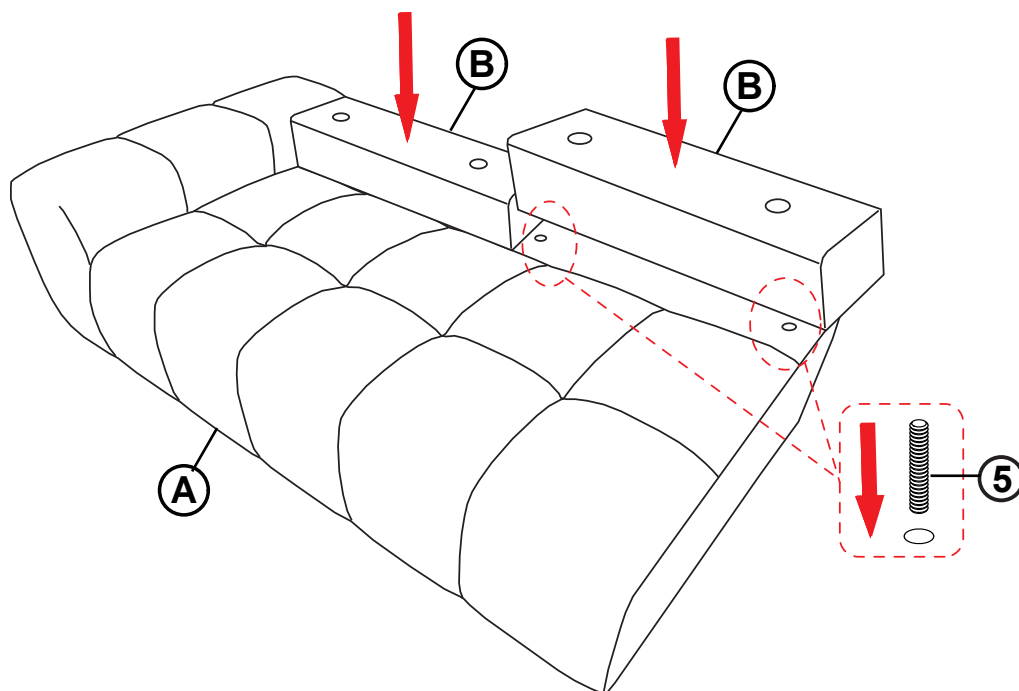


ITEM: **509965(B1&B2)**


## ASSEMBLY INSTRUCTIONS



### STEP 3

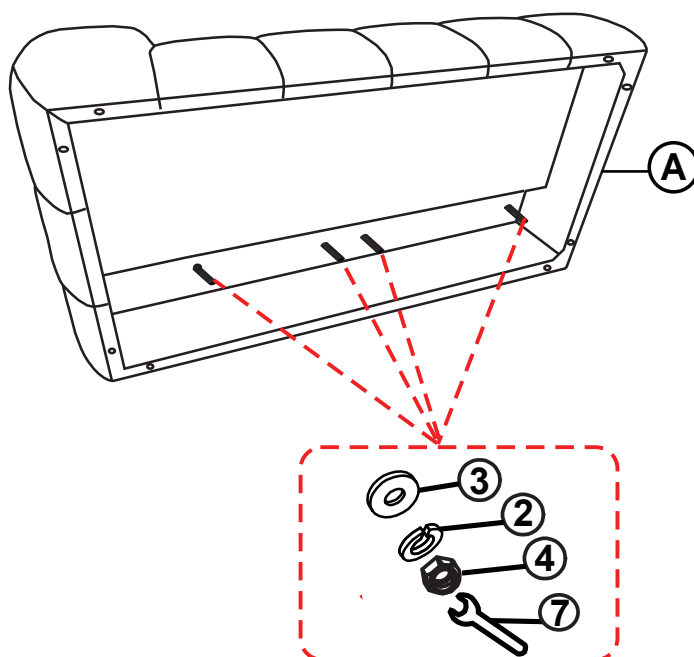

### STEP 4

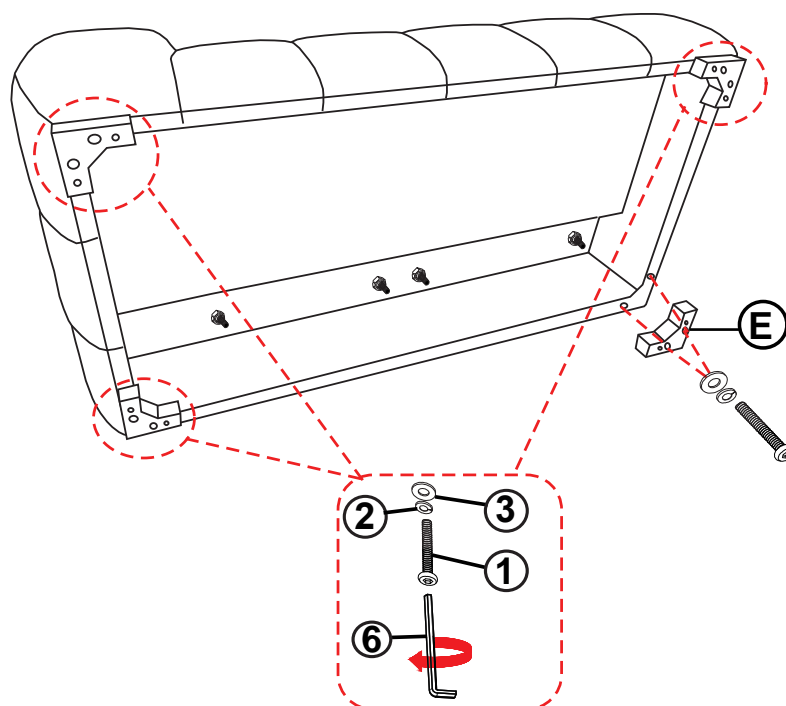


ITEM: **509965(B1&B2)**




## ASSEMBLY INSTRUCTIONS

### STEP 5

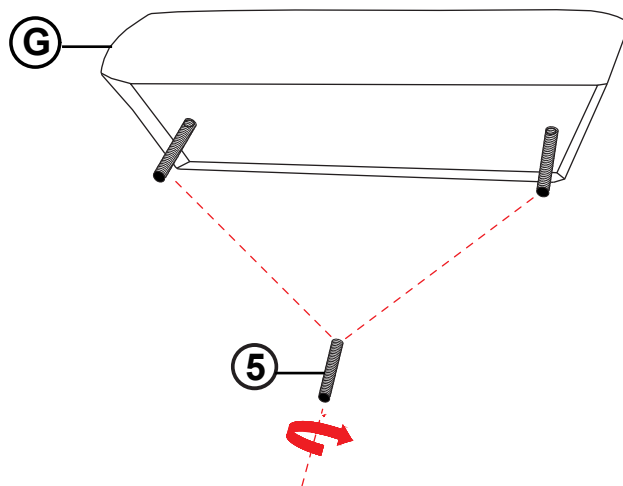

### STEP 6

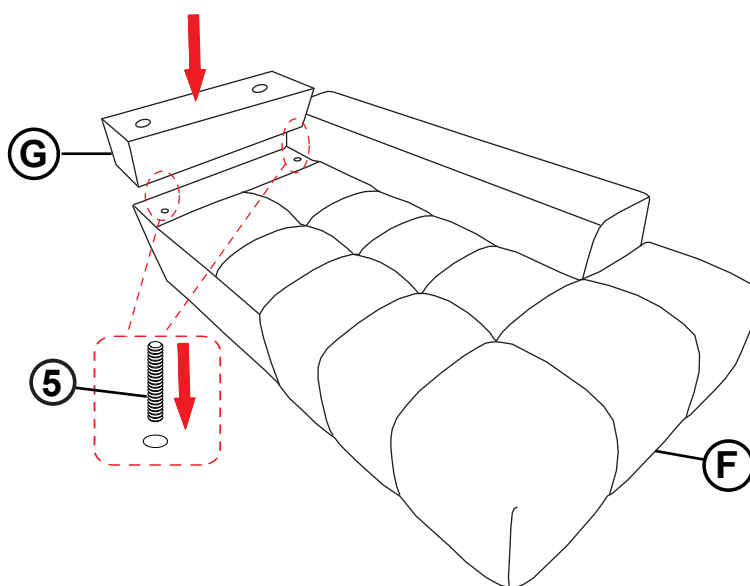


ITEM: **509965(B1&B2)**


## ASSEMBLY INSTRUCTIONS



### STEP 7

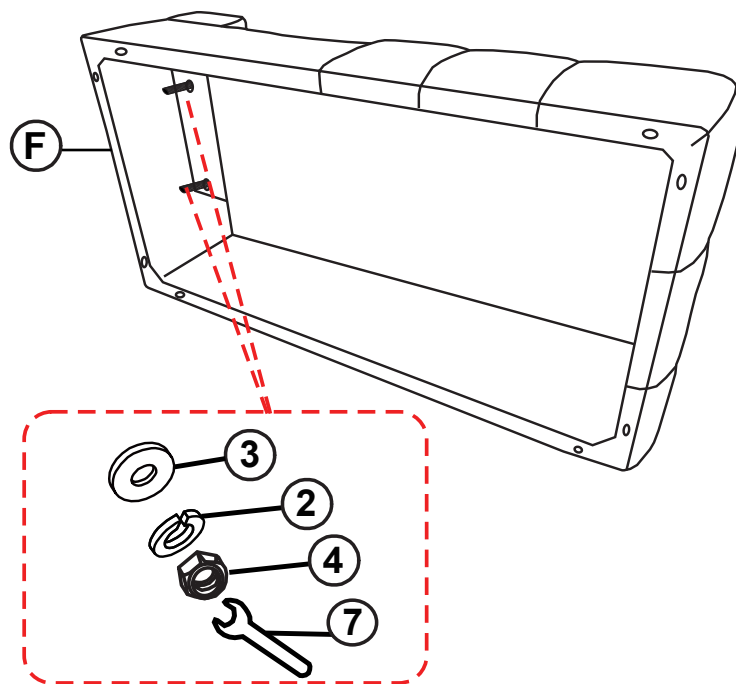

### STEP 8

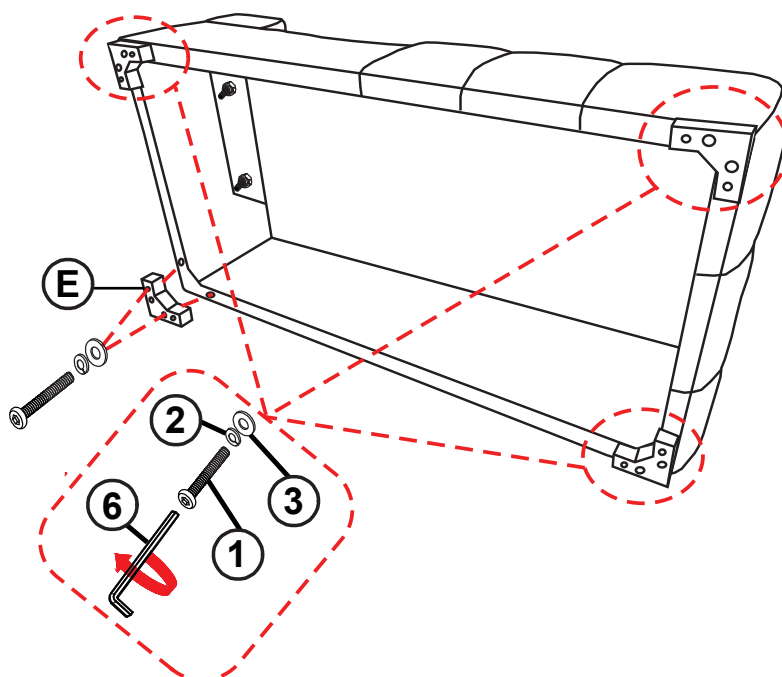


ITEM: **509965(B1&B2)**


## ASSEMBLY INSTRUCTIONS



### STEP 9

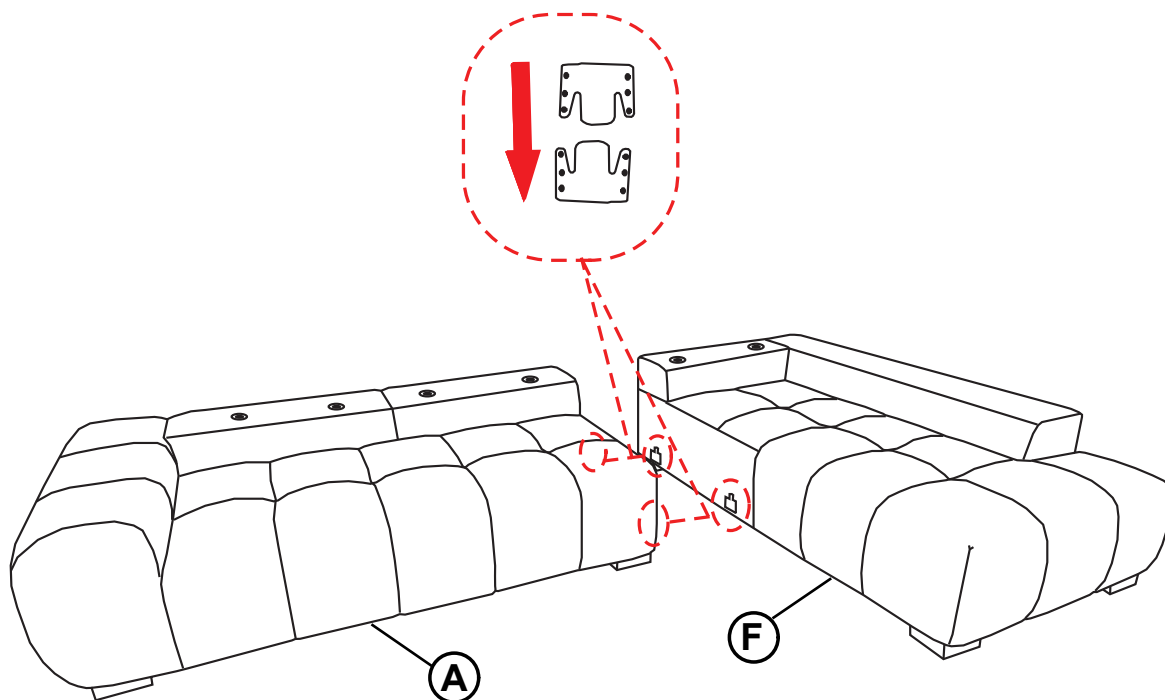

### STEP 10

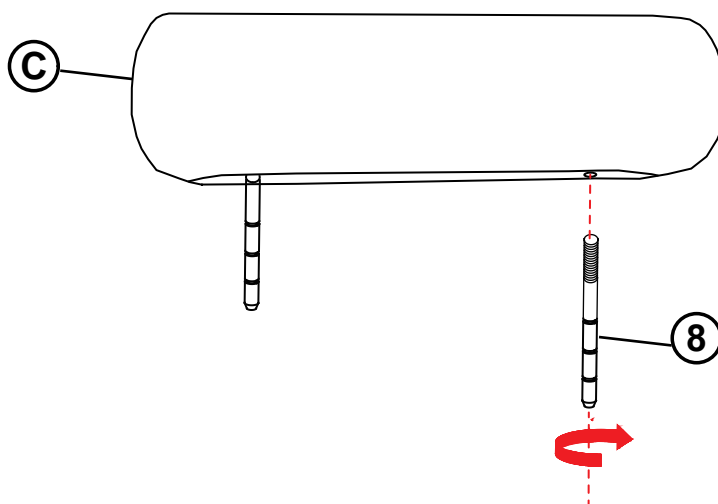




ITEM: **509965(B1&B2)**




## ASSEMBLY INSTRUCTIONS


### STEP 11

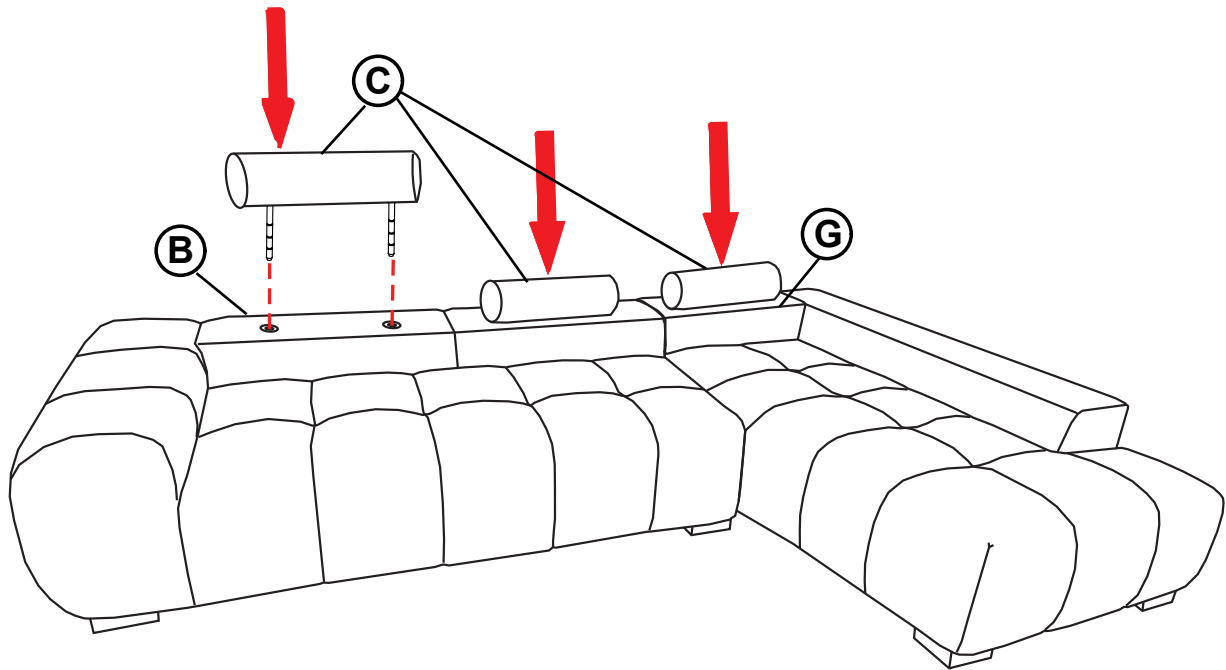

### STEP 12 COMPLETE

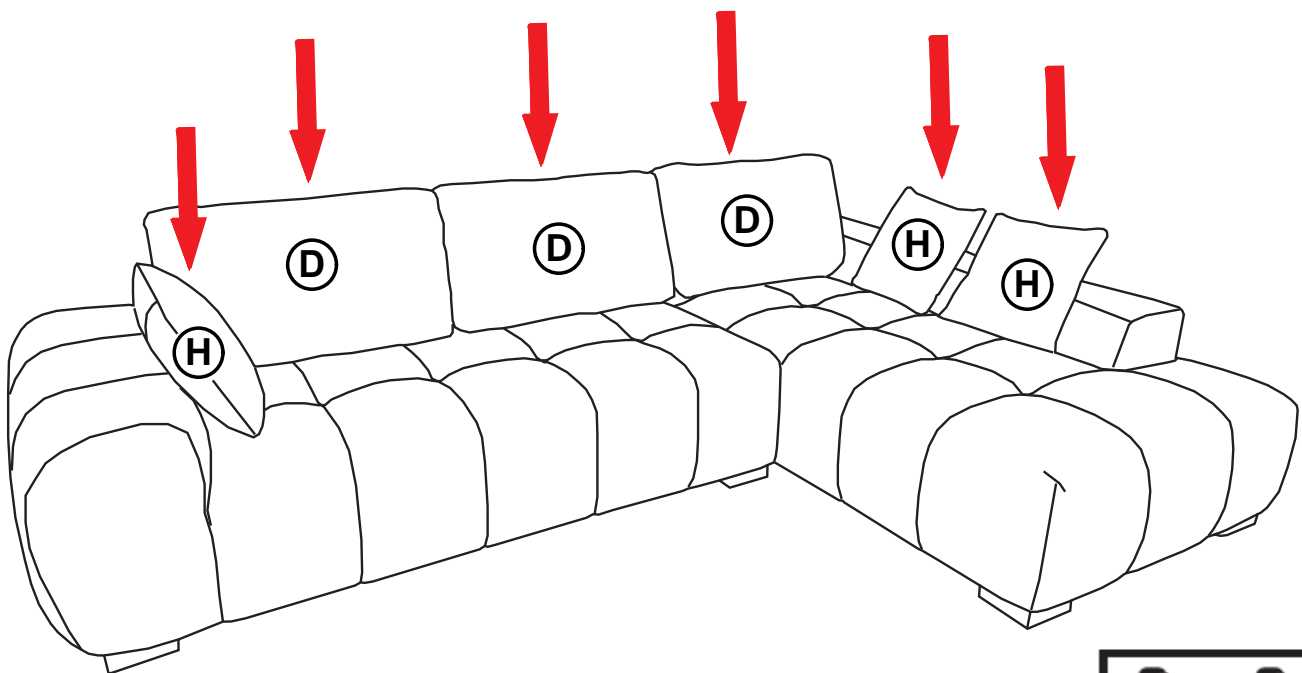

# ITEM: 509965(B1 & B2)

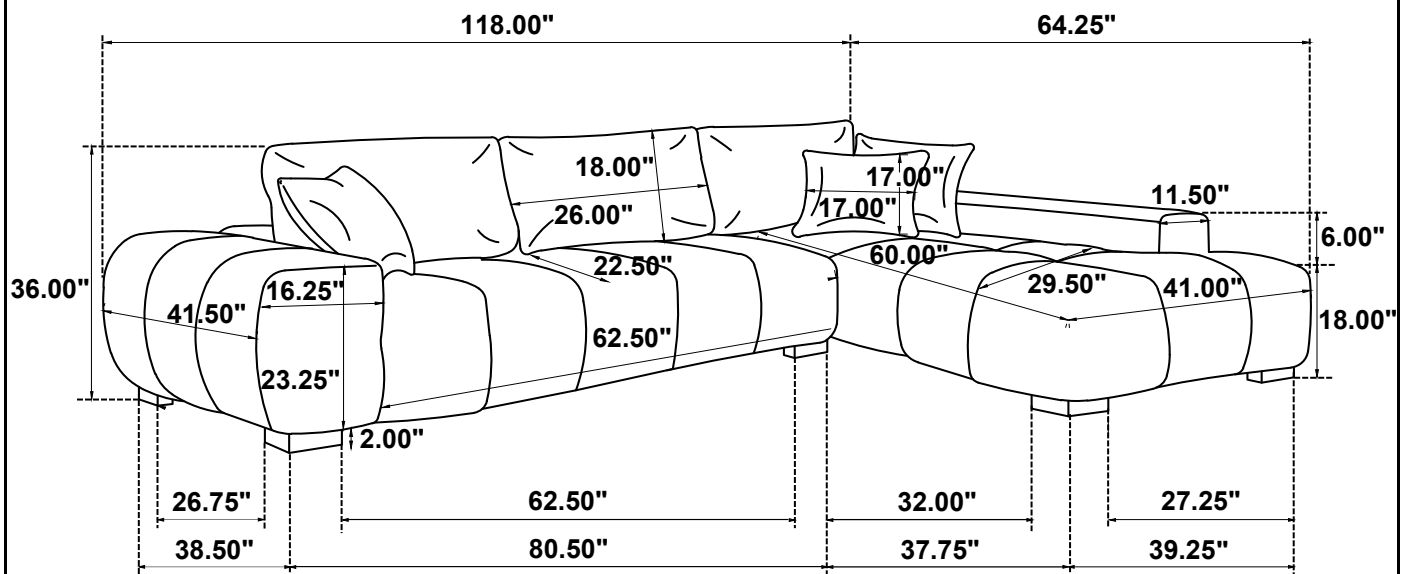

Note: Dimension tolerance  $\pm 5\%$



## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**509965(B1 & B2)**  
**Sectional**

# ITEM: 509965(B1&B2)



## ASSEMBLY INSTRUCTIONS


### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

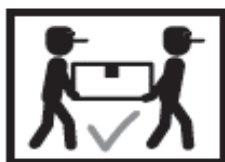







ASSEMBLY TIME







15 MINUTES

## PARTS IDENTIFICATION
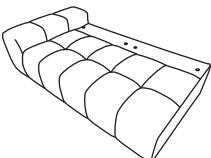
### B1(BOX 1)

A LAF SOFA SEAT		1PC	D BACKREST CUSHION		2PCS
B HEADREST SUPPORT		2PCS	E LEG		4PCS
C HEADREST		2PCS	H PILLOW		1PC
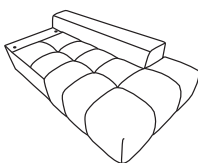
### B2 (BOX 2)

F RAF CHAISE SEAT		1PC	D BACKREST CUSHION		1PC
G CHAISE BACKREST		1PC	H PILLOW		2PCS
C HEADREST		1PC	E LEG		4PCS

ITEM: **509965**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.











### WARNING!









1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 509965(B1)

1	<b>BOLT</b> (5/16" X 70mm - RBW)		8PCS	5	<b>THREADED BOLT</b> (5/16" X 90mm - RBW)		4PCS
2	<b>LOCK WASHER</b> (5/16" X 12mm - RBW)		12PCS	6	<b>ALLEN WRENCH</b> (M4 - RBW)		1PC
3	<b>FLAT WASHER</b> (5/16" X 16mm - RBW)		12PCS	7	<b>WRENCH</b> (5/16" - RBW)		1PC
4	<b>HEX NUT</b> (5/16" - RBW)		4PCS	8	<b>HEADREST CONNECTOR</b>		4PCS

### Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 509965(B2)


1	<b>BOLT</b> (5/16" X 70mm - RBW)		8PCS	5	<b>THREADED BOLT</b> (5/16" X 90mm - RBW)		2PCS
2	<b>LOCK WASHER</b> (5/16" X 12mm - RBW)		10PCS	6	<b>ALLEN WRENCH</b> (M4 - RBW)		1PC
3	<b>FLAT WASHER</b> (5/16" X 16mm - RBW)		10PCS	7	<b>WRENCH</b> (5/16" - RBW)		1PC
4	<b>HEX NUT</b> (5/16" - RBW)		2PCS	8	<b>HEADREST CONNECTOR</b>		2PCS

ITEM: **509965(B1&B2)**


## ASSEMBLY INSTRUCTIONS



### STEP 1

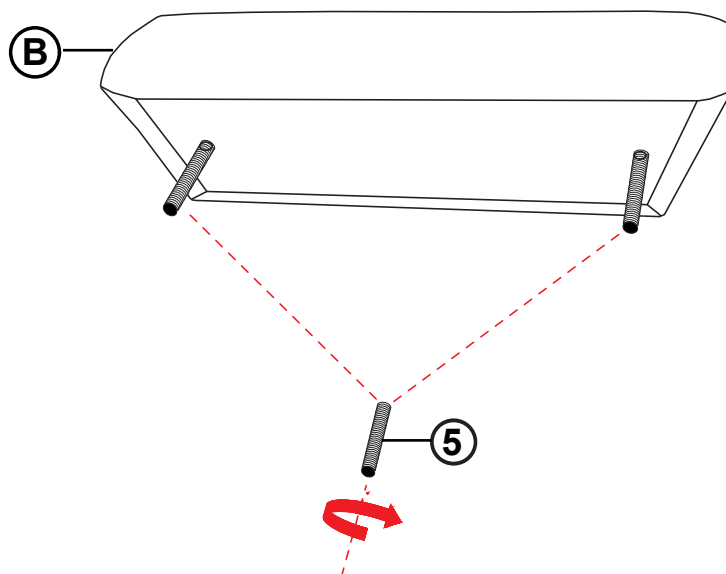

### STEP 2

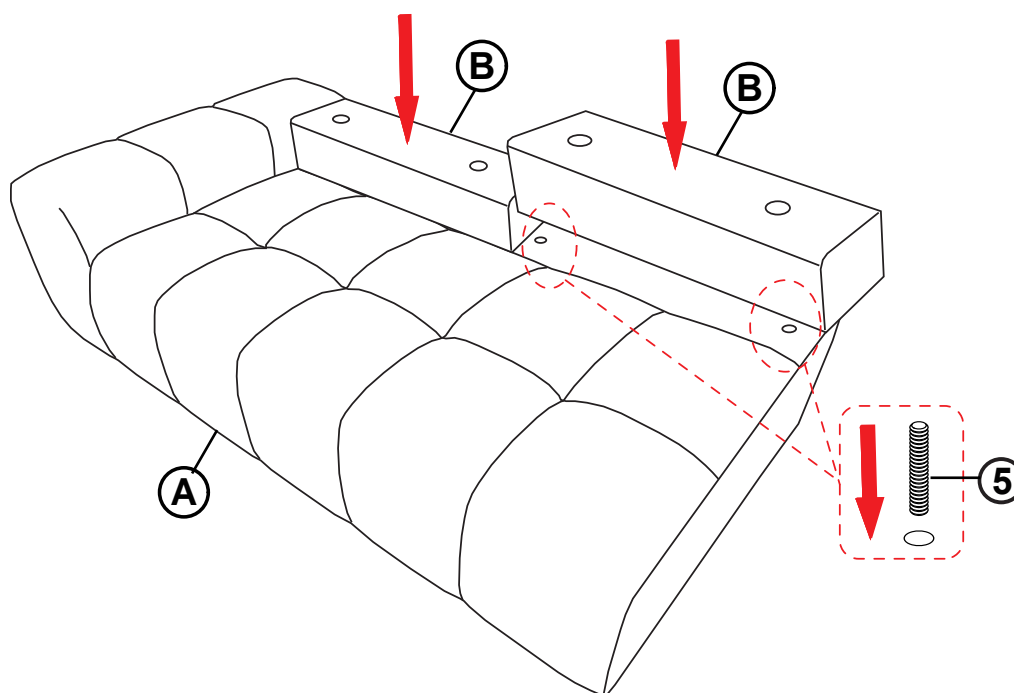


ITEM: **509965(B1&B2)**


## ASSEMBLY INSTRUCTIONS



### STEP 3

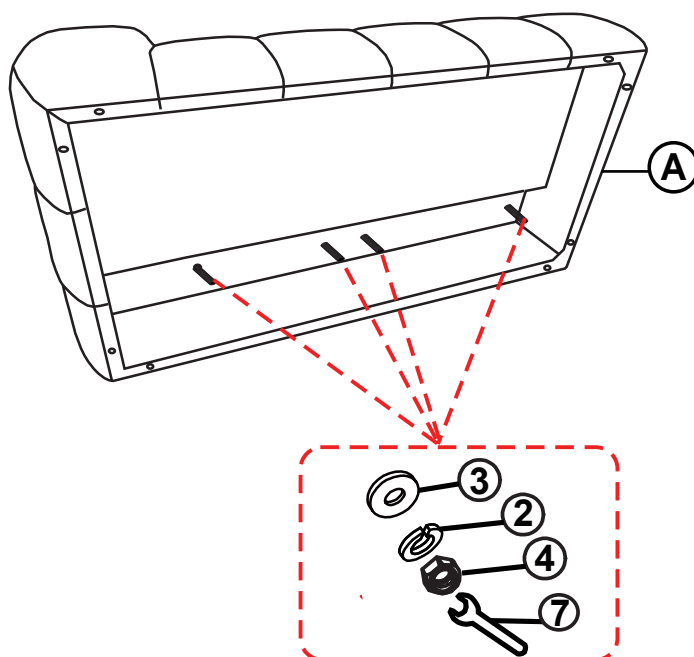

### STEP 4

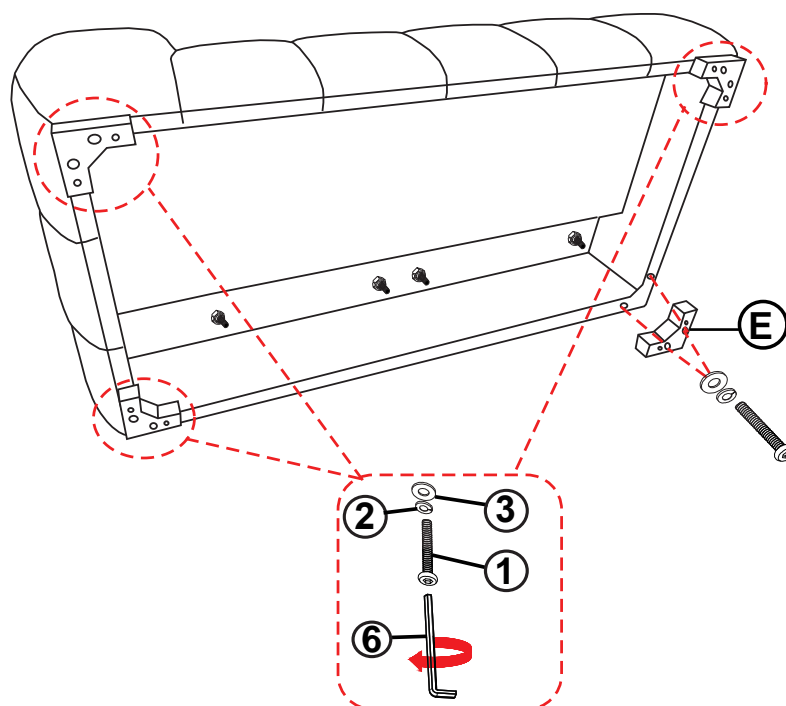


ITEM: **509965(B1&B2)**




## ASSEMBLY INSTRUCTIONS

### STEP 5

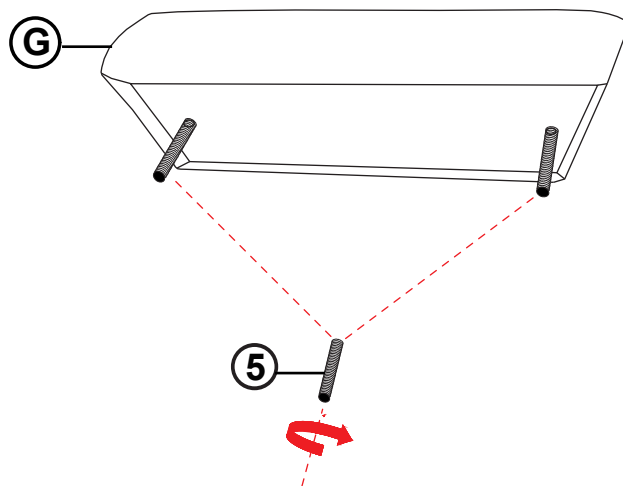

### STEP 6

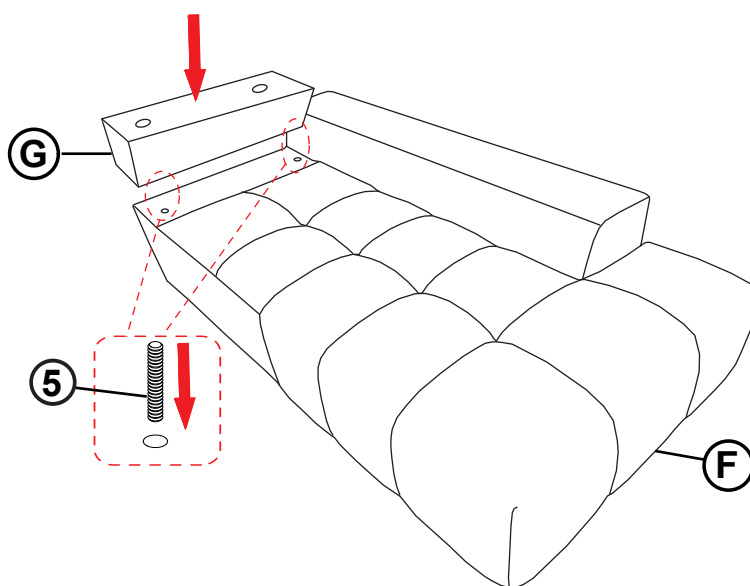




ITEM: **509965(B1&B2)**


## ASSEMBLY INSTRUCTIONS



### STEP 7

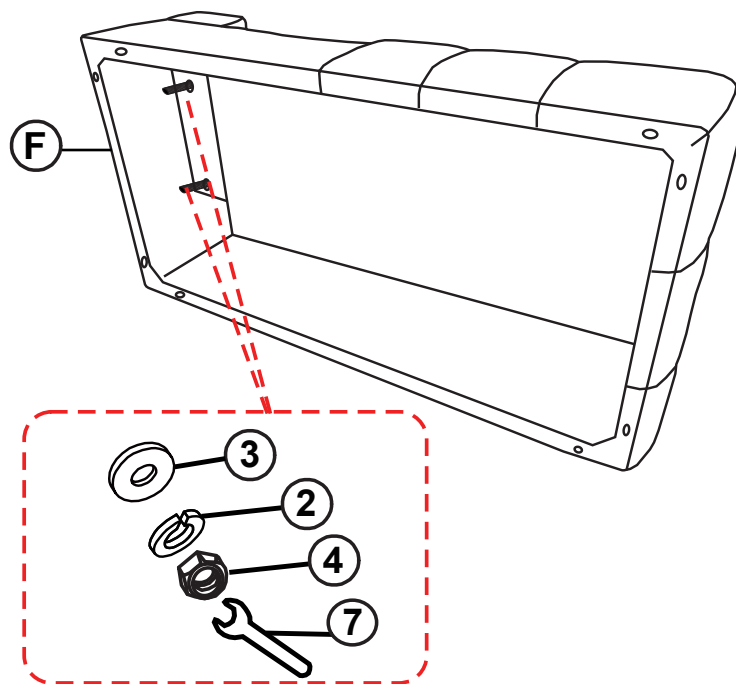

### STEP 8

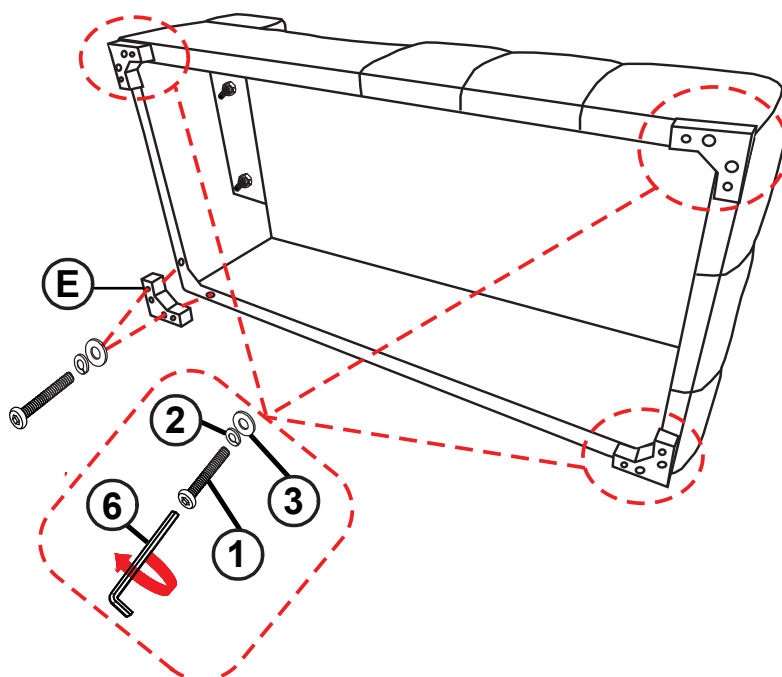


ITEM: **509965(B1&B2)**


## ASSEMBLY INSTRUCTIONS



### STEP 9

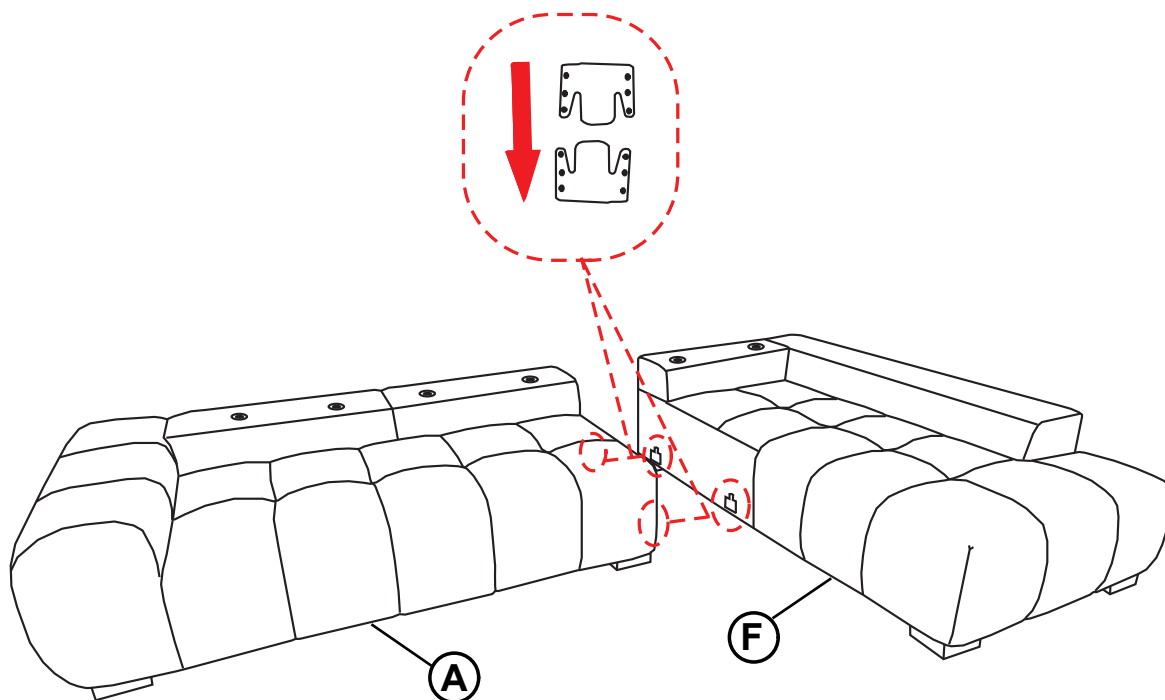

### STEP 10

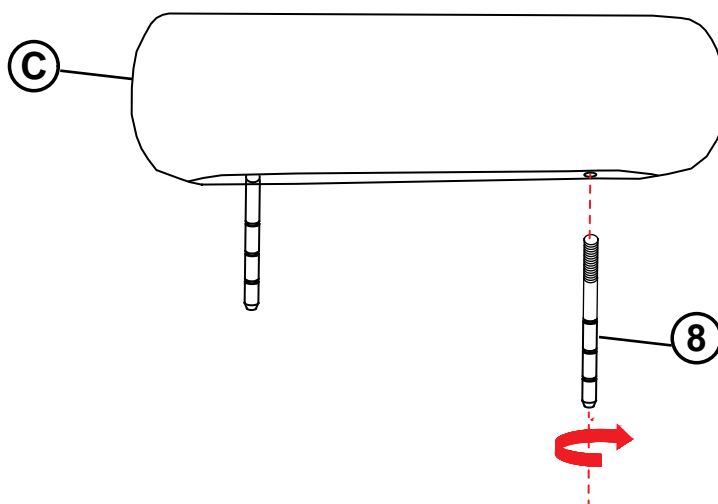


ITEM: **509965(B1&B2)**




## ASSEMBLY INSTRUCTIONS


### STEP 11

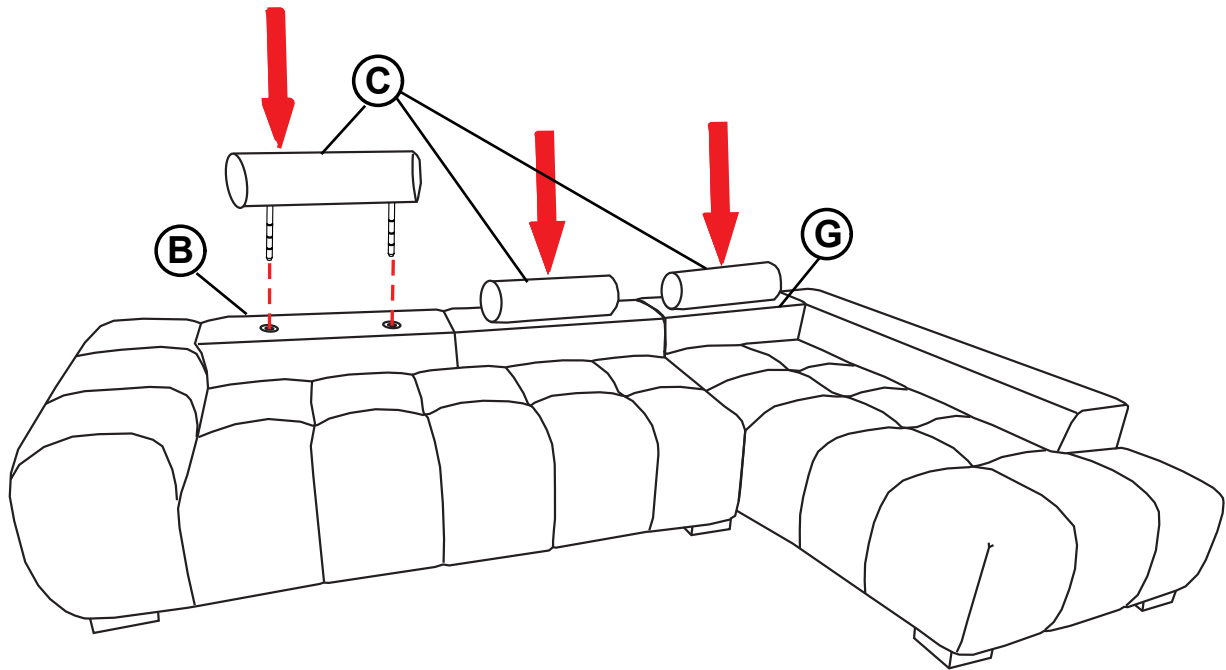

### STEP 12 COMPLETE

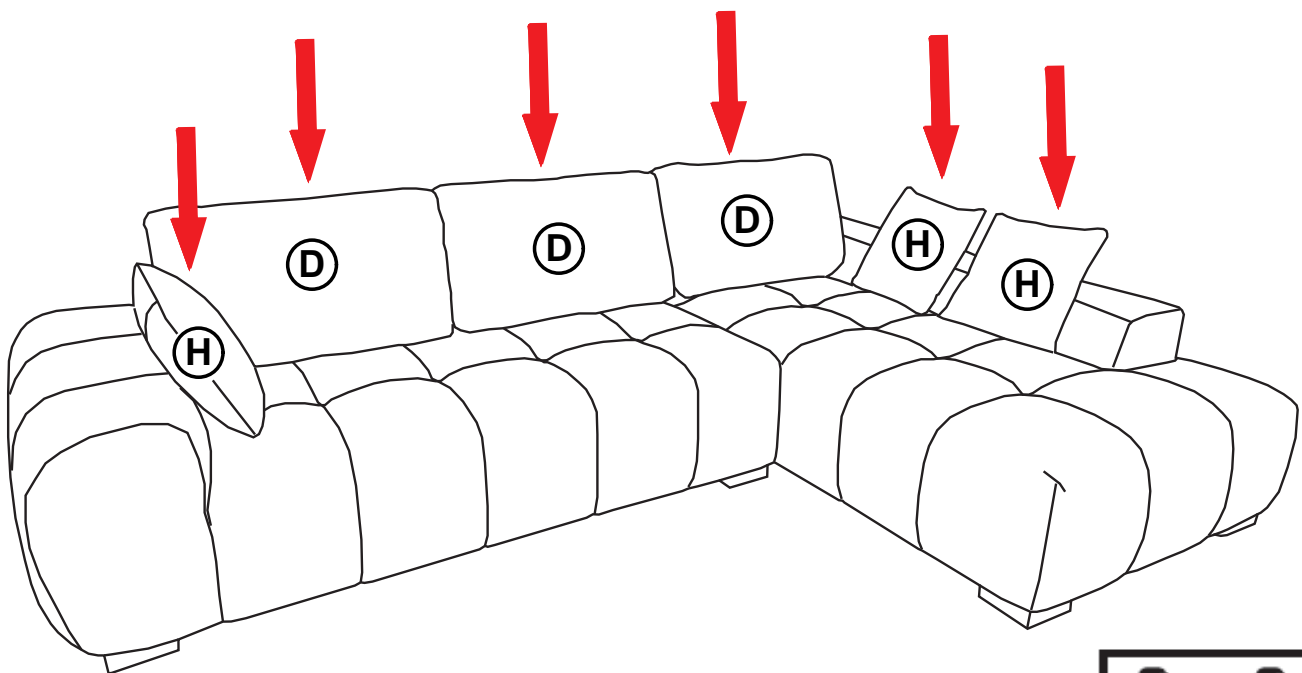

ITEM: **509965(B1 & B2)**

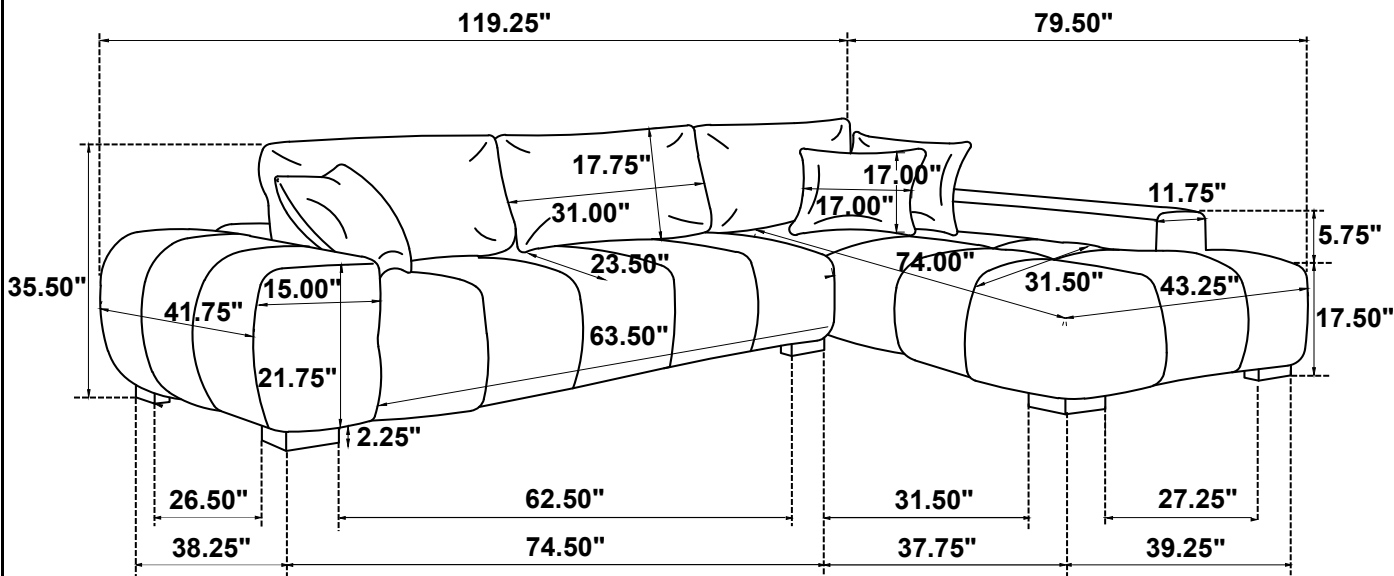

**Note: Dimension tolerance  $\pm 5\%$**