SEASIDE CASUAL FURNITURE
ENVIRO WOOD

(92,93,94) Nantucket Side & Coffee Tables & Ottoman rev. B

Parts List:

(1) Table Top

(4) Legs







Hardware:
(12) 3” Hex 1/4” Lags
(12) 5/8” Plugs


Tools Required:
Phillip's Head Screwdriver
4MM Allen Wrench (Included)

Assembly Instructions

Step One: Set Up

READ ENTIRE INSTRUCTIONS BEFORE BEGINNING! Carefully remove contents from box. Make sure that all parts and hardware are included.


Step Two: Leg Assembly

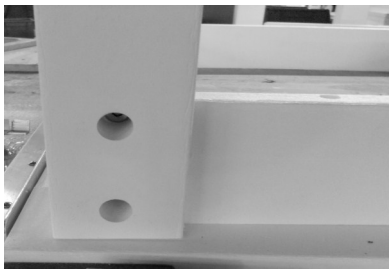

Place Table Top face down on a flat clean surface. Place Legs upside down on each side of Table Top aligning pre-drilled holes (Left Picture). Attach using (2) 3” Hex 1/4” Lags. Repeat process on other side.

Step Three: Side Apron Assembly

Attach using (1) 3” Hex 1/4” Lags. Repeat process on other side. (Right Picture)

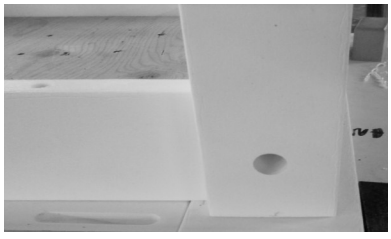

Step Four: Tightening of Hardware

Tighten all connections. **Do not over tighten!!! Over tightening of hardware can cause damage to the item.** Plug all holes using (12) 5/8” Plugs. Don’t force plugs in with anything that can damage them.

Made in USA