

25897

ASSEMBLY INSTRUCTIONS

MODEL : 0162A
KING STORAGE BED

(Box 1)
HARDWARE LIST (HEADBOARD)

No	ITEM	Qty
A	Headboard	1 pc
B	Footboard	1 pc
C	Headboard Leg (L/R)	2 pcs

(Box 2)
BOX OF SIDE RAIL

No	ITEM	Qty
D	Side rail	2 pcs
E	Center slat drawer	1 pc
F	Bed slat	3 pcs
G	Bed slat support	8 pcs
H	Drawer slat support	1 pc
I	Concealed panel	6 pcs
J	Drawer support rail	2 pcs
K	Bed slat with marking	2 pcs

(Box 1)
HARDWARE LIST (HEADBOARD)

No	ITEM	Qty
1	JCBC M6 x 30mm	6 pcs
2	SPRING WASHER 1/4" R/W	6 pcs
3	Flat Washer 1/4" ID x 13mm OD	6 pcs
4	ALLEN KEY m4x55mm Blk	1 pc


(Box 2)
HARDWARE LIST (SIDE RAIL)

No	ITEM	Qty
5	CSK M6 x 32mm	14 pcs
6	Flat Head Screw M3.5 x 20 Blk	30 pcs
7	JCBC M6 x 35mm	2 pcs
8	JCBC M6 x 30mm	9 pcs
9	SPRING WASHER 1/4" R/W	2 pcs
10	Flat Washer 1/4" ID x 13mm OD	2 pcs
11	ALLEN KEY m4x55mm Blk	1 pc
12	ALLEN KEY m5x65mm Blk	1 pc

(Box 3)
BOX OF DRAWER


No	ITEM	Qty
L	Drawer	2 pcs

STEP 1 : Attach Head Board Leg (C) to Head Board (A) as shown using JCBC BOLT (1) with Spring Washer (2), Flat washer (3) and securing with ALLEN KEY (4).

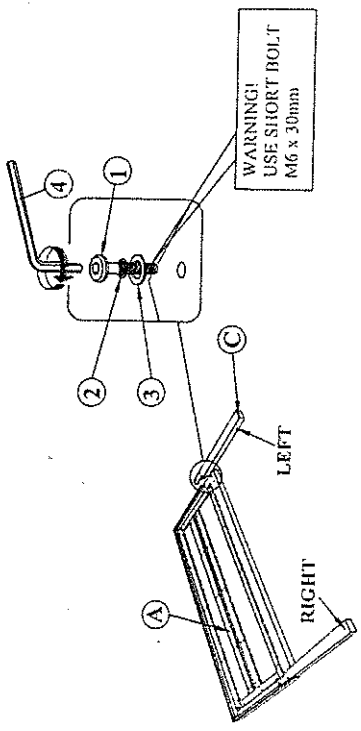

WARNING!
USE SHORT BOLT
M6 x 30mm


STEP 2 : Loosen the JCBH Bolt from Headboard (A) and Footboard (B) using ALLEN KEY (12). Attach the Side Rail (D) to Headboard (A) and Footboard (B) by pushing the bracket down to fit it. Tighten the JCBH Bolt by ALLEN KEY (12).

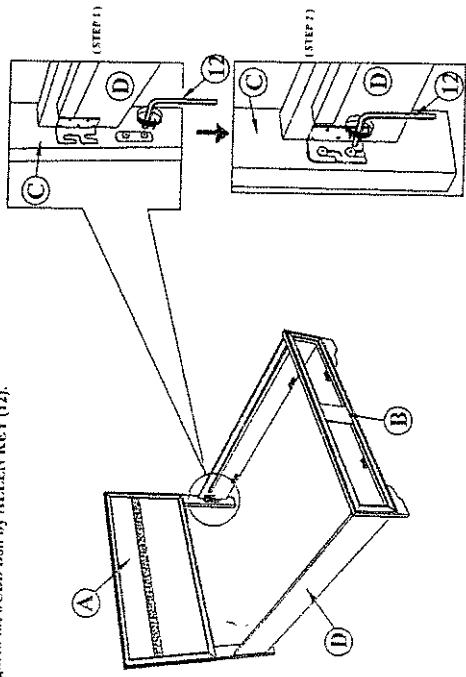


NOTE: MUST TIGHTEN SCREWS PERIODICALLY SCREW NATURALLY LOOSEN WITH USE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

ASSEMBLY INSTRUCTIONS


STEP 3 : Attach the Center Slat Drawer (E) to Side Rail (D) as shown using CSK Screw (5) and tighten with Screw Driver.(Not Included)

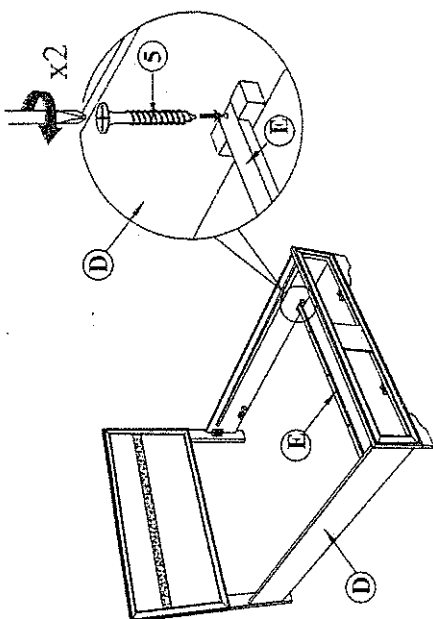

STEP 4 : Attach the Support Slat Drawer (H) to Center Slat Drawer (E) as shown using JCBC Bolt (8) and tighten with ALLEN KEY (11).

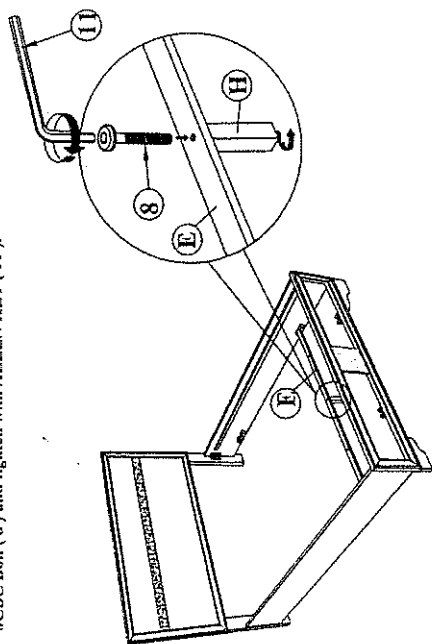


STEP 5.1 : Attach the Drawer Support Rail (J) as shown using CSK Screw (5) and tighten with Screw Driver.(Not Included)
STEP 5.2 : Using JCBC Bolt (7) with Spring Washer (9), Flat Washer (10) and securing with ALLEN KEY (11).

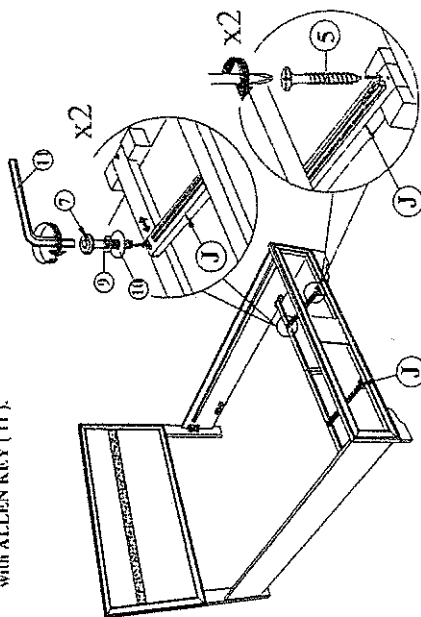

STEP 6.1 : Insert the Drawer (L) at the Drawer Support Rail (J).


STEP 6.2 : Remove HANDLE and using a Philips head screw driver as shown

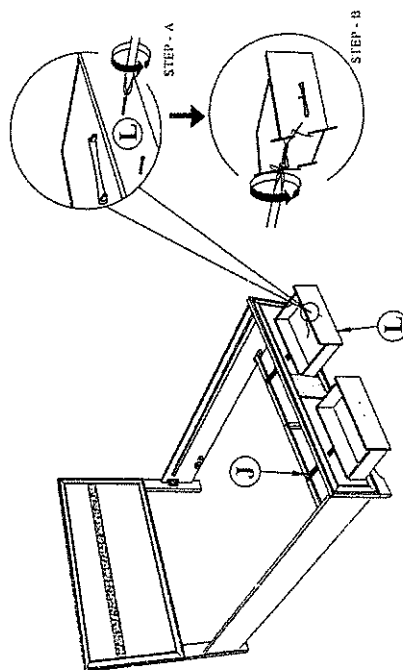


NOTE : MUST TIGHTEN SCREWS PERIODICALLY SCREW NATURALLY LOOSEN WITH USE.CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

ASSEMBLY INSTRUCTIONS




STEP 7 : Fix the Bed Slat Support (G) to the Bed Slat (F) as shown.

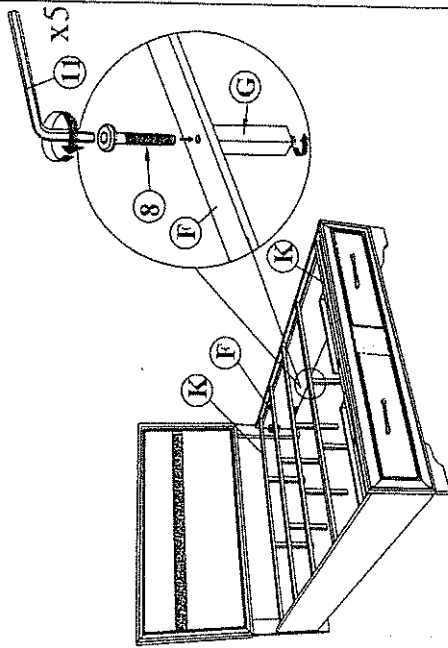

STEP 8 : Fix the Bed Slat (F) & (K) by push closely to the Side Rail (D) by using SCK Screw (5) as shown.

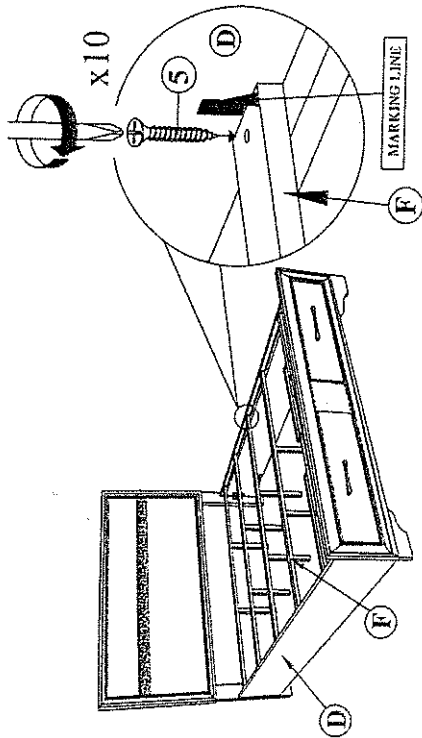

STEP 9: Attach Concealed Panel (I) at the upper Bed Slat (F) using Panhead Screw (6) and tighten with Screw Driver.(not Included)

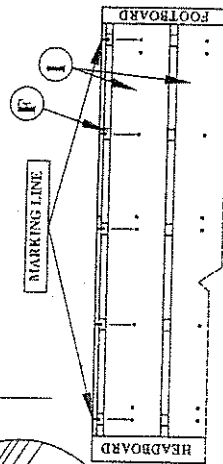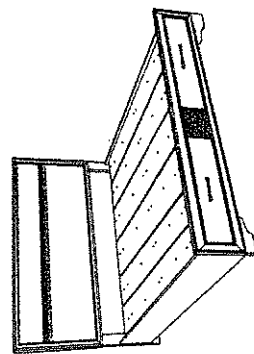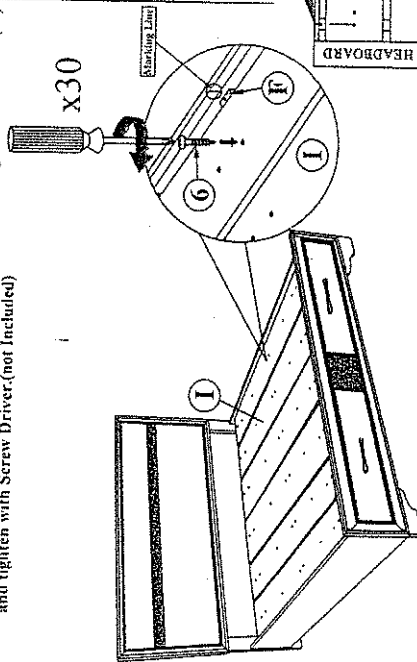

COMPLETED ASSEMBLY

TIGHTEN THE PANHEAD SCREW (6)
BY FOLLOW THE ARROW AS SHOWN

NOTE : MUST TIGHTEN SCREWS PERIODICALLY.SCREW NATURALLY LOOSEN WITH USE.CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.