


# **CROSLEY**













---

## FURNITURE






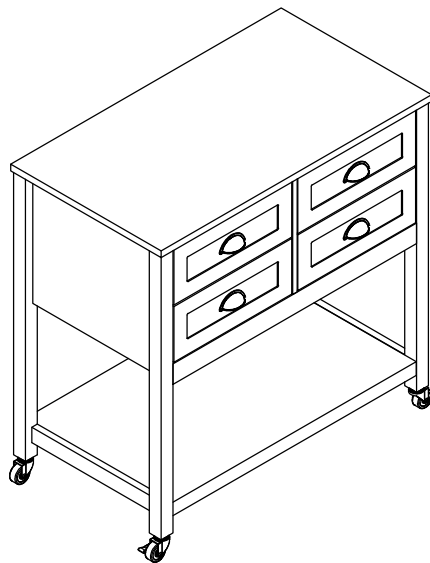



Kitchen Island/Cart  
CF3036

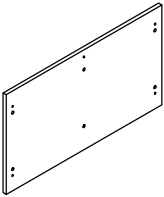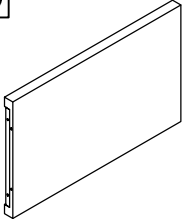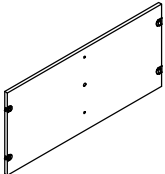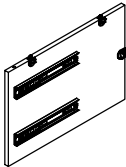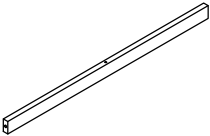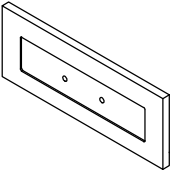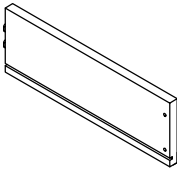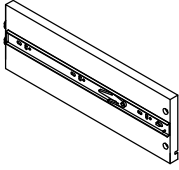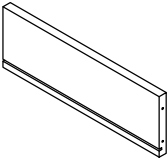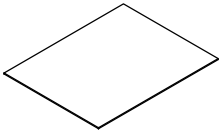

# PART LIST

<div>A</div> 	<div>B</div> 	<div>C</div> 	<div>D</div> 	<div>E</div> 
<div>Top Panel</div> <div>1 PC</div>	<div>Left Panel</div> <div>1 PC</div>	<div>Right Panel</div> <div>1 PC</div>	<div>Bottom Panel</div> <div>1 PC</div>	<div>Back Panel</div> <div>1 PC</div>
<div>F</div> 	<div>G</div> 	<div>H</div> 	<div>I</div> 	<div>J</div> 
<div>Partition Panel</div> <div>1 PC</div>	<div>Front Rail</div> <div>1 PC</div>	<div>Drawer Front Panel</div> <div>4 PCS</div>	<div>Drawer Left Panel</div> <div>4 PCS</div>	<div>Drawer Right Panel</div> <div>4 PCS</div>
<div>K</div> 	<div>L</div> 			
<div>Drawer Back Panel</div> <div>4 PCS</div>	<div>Drawer Bottom Panel</div> <div>4 PCS</div>			

# HARDWARE LIST
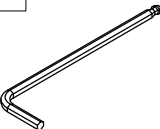
#1		#2		#3		#4		#5	
	Ø3*30mm Screw		Ø5/32"*13mm Round Head Bolt		Ø1/4"*1-1/4" Bolt		Ø8*30mm Wood Dowel		84*34*27mm Handle
	17 PCS (Extra 2)		8 PCS(Extra 1)		4 PCS(Extra 1)		13 PCS (Extra 2)		4 PCS
#6		#7		#8		#9			
	Locking Caster		Caster		4mm Allen Wrench		Wrench		
	2 PCS		2 PCS		1 PC		1 PC		

## ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Please do not use tools to assemble this unit unless specifically indicated.

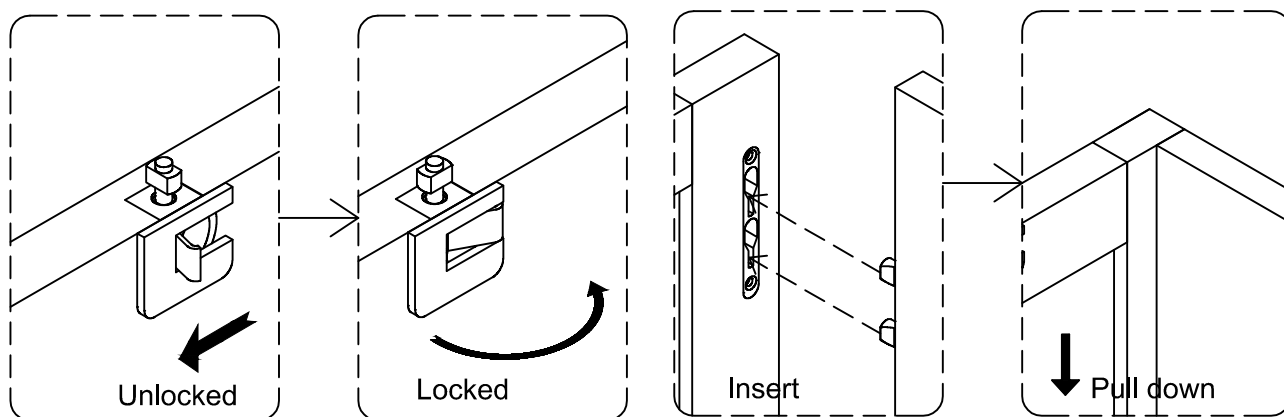


Reference the images above any time the instructions state "lock the hardware" or "insert hardware and pull down to lock".

Be sure to check all hardware is locked when complete.

Step 1. Insert drawer left panel (part I) and drawer right panel (part J) into drawer front panel (part H) pull down to lock. Slide drawer bottom panel (part L) into grooves of assembled unit (parts H, I & J). Attach drawer back panel (part K) to assembled unit (parts I, J & L) using screws (part #1) and phillips head screwdriver. Attach handle (part #5) to drawer front panel (part H) using round head bolts (part #2) and phillips head screwdriver. Repeat for remaining drawers.

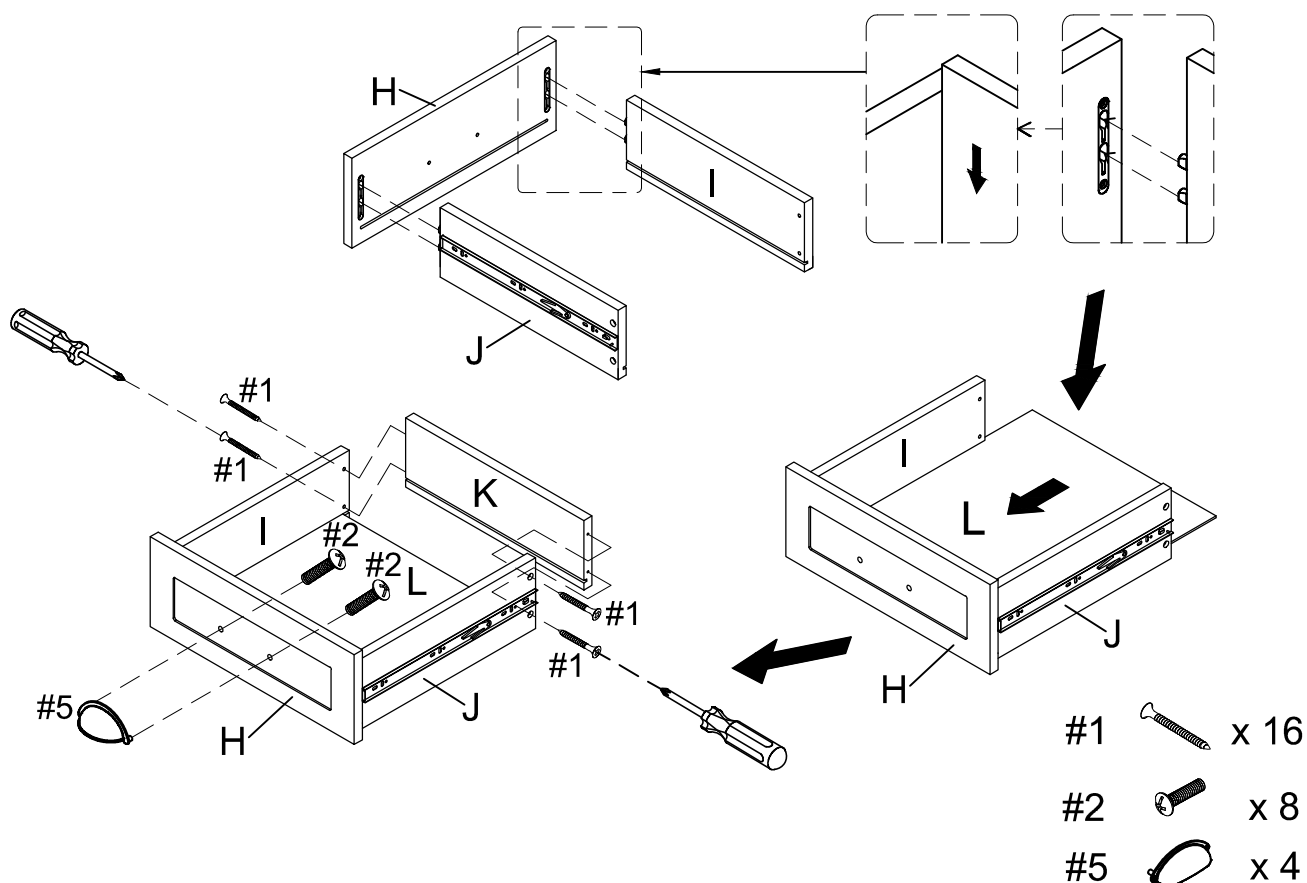


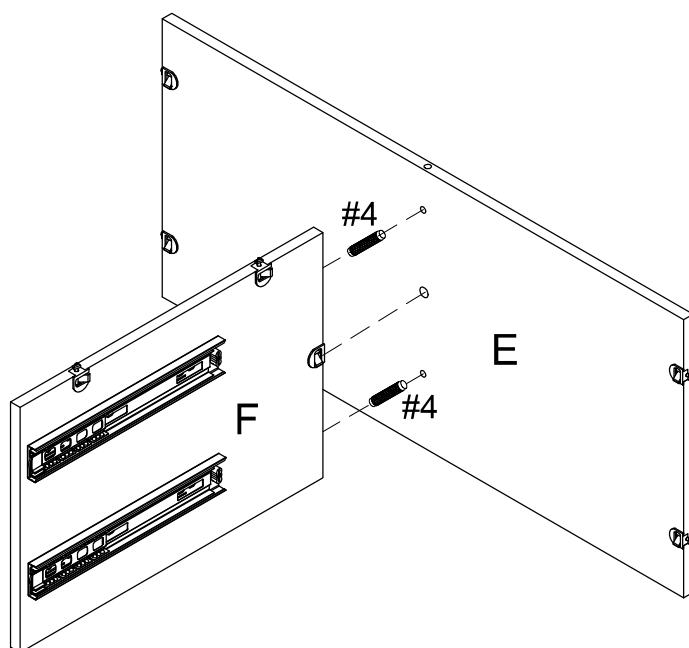



Step 2. Attach partition panel (part F) to back panel (part E) using wood dowels (part #4) and lock the hardware.




#4  x 2

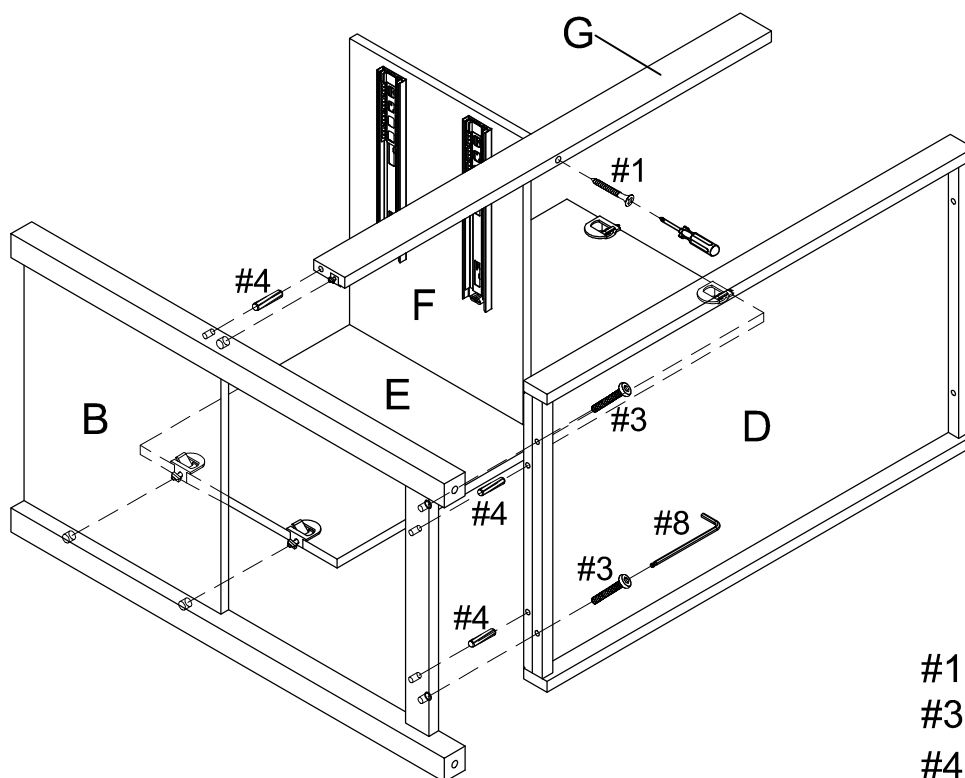Step 3. Attach left panel (part B) and front rail (part G) to bottom panel (part D) and assembled unit (parts E & F) using wood dowels (part #4), screw (part #1), bolts (part #3), allen wrench (part #8), phillips head screwdriver and lock the hardware.




#1  x 1  
 #3  x 2  
 #4  x 3  
 #8  x 1


Step 4. Attach right panel (part C) to assembled unit (parts D, E & G) using wood dowels (part #4), bolts (part #3), allen wrench (part #8) and lock the hardware.

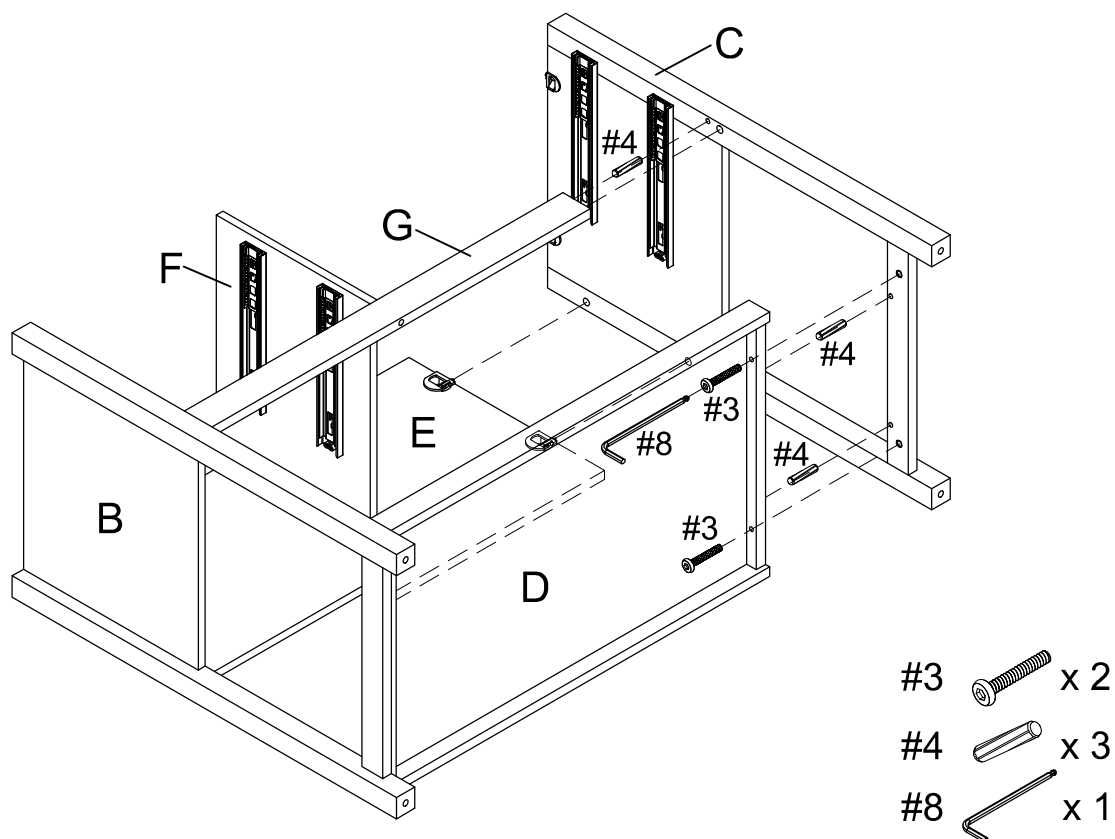

Step 5. Attach locking casters (part #6) and casters (part #7) to panels (parts B & C) using wrench (part #9).

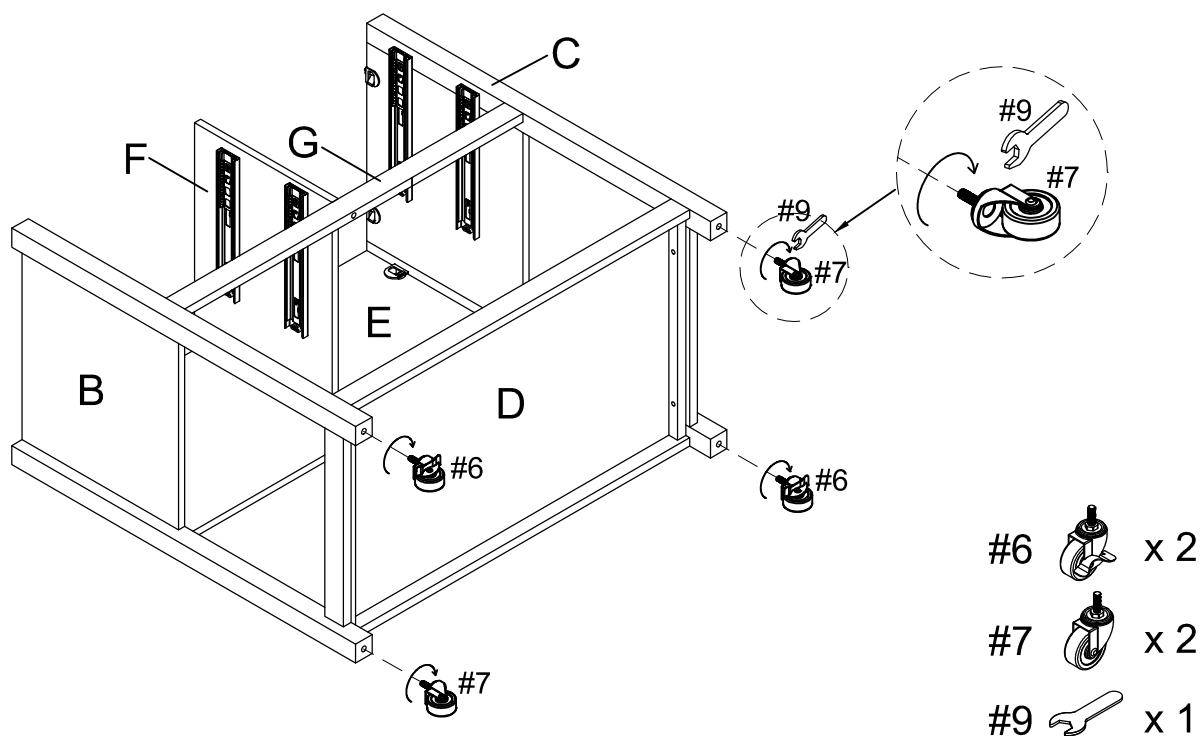

Step 6. Carefully turn unit upright. Attach top panel (part A) to assembled unit (parts B, C & F) using wood dowels (part #4) and lock the hardware.

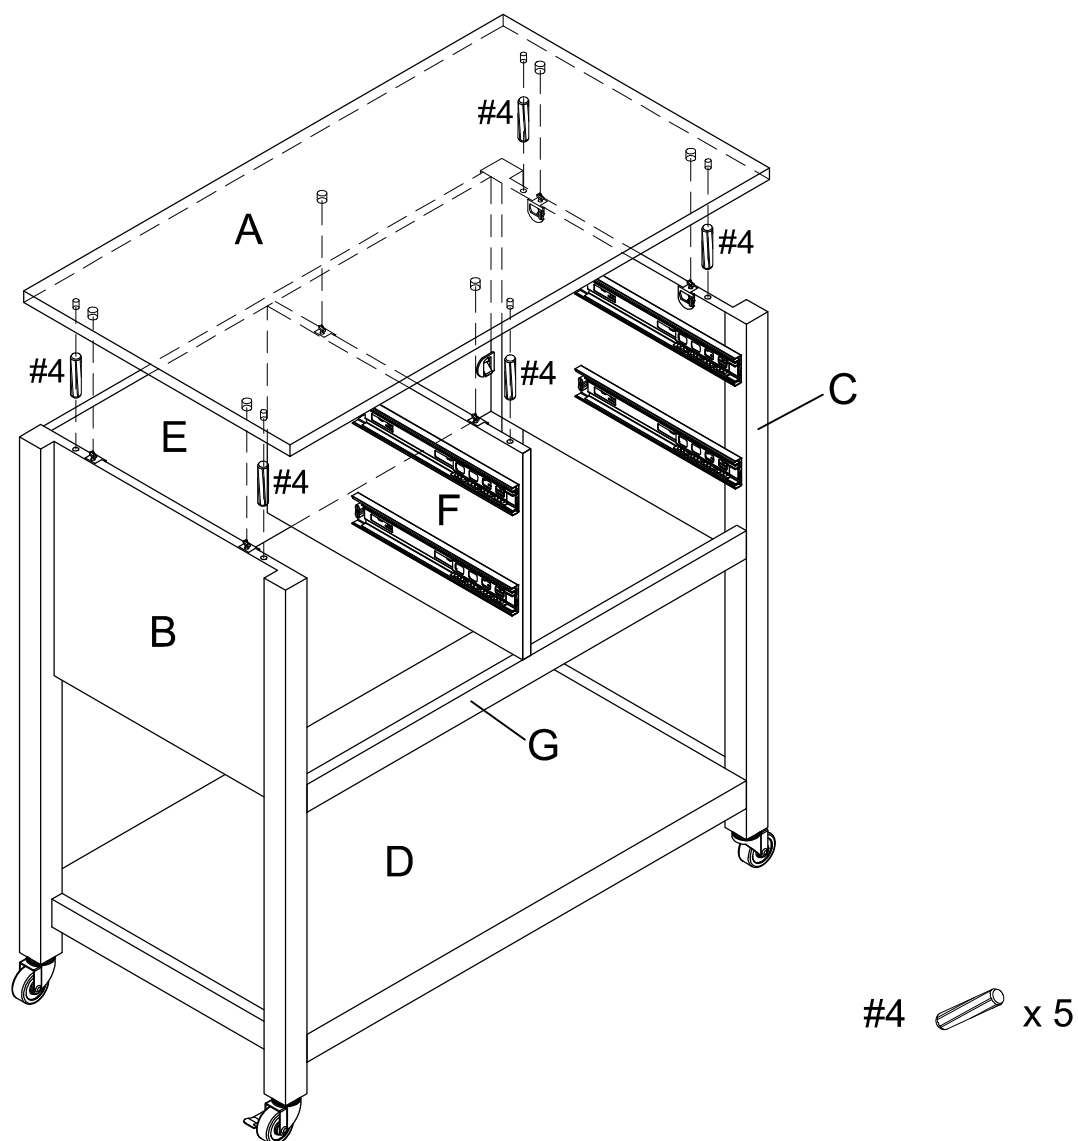

Step 7. Slide assembled drawers into place.

Note: To release trigger disconnect levers push one side up and the other down.

