

IMPORTED BY C&T International, Inc. / IMPORTE` PAR de C&T International, Inc. 105 Stonehurst Ct Northvale, NJ 07647 U.S.A. Tel, 201- 531-1919 Fax, 201- 531-1920 CANADA ADDRESS:

3453, DU PRESIDENT KENNEDY LAC MEGANTIC, QUEBEC, CANADA G6B 2Y4 Website: www.sorellefurniture.com / Site Internet : www.sorellefurniture.com

Portofino 4 Drawer Chest Assembly Instruction




Important Information:

Read all instructions **BEFORE** assembling. KEEP INSTRUCTIONS FOR FUTURE USE.



SORELLE

Assembly Parts B (X1) C (X1) A (X1) Right Outer Wall Left Outer Wall Тор E (X1) F (X3) G (X1) Upper Front Rail Middle Front Rail Bottom Front Rail J (X2) H (X1) R1 (X4) Middle Back Rail Upper Back Rail Dawer Front R4 (X4) R3 (X4 R2 (X4) K2 (X1) Dawer Back Dawer Right Dawer Left K1 (X1) R6 (X4) R5 (X4) Dawer Bottom Dawer Bottom Back Panel Support Bar

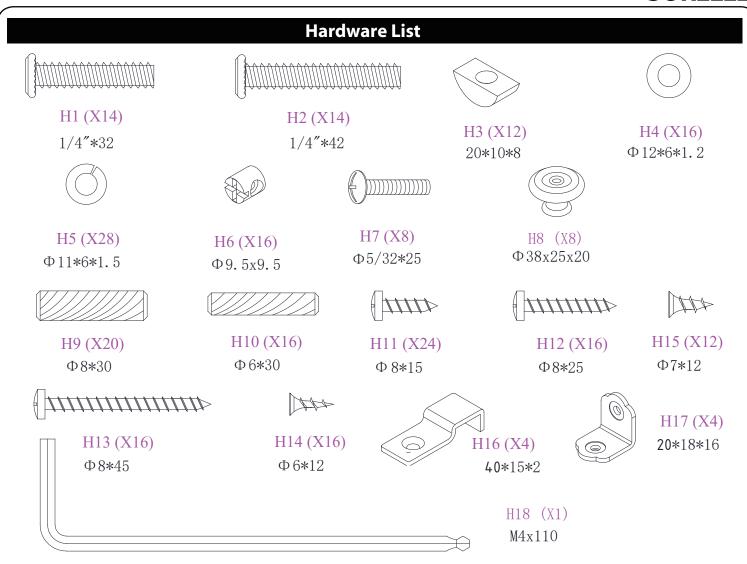

Preparation

Before beginning assembly of product, make sure all parts are present. Compare parts with parts list and hardware list. If any part is missing or damaged, do not attempt to assemble the product.

NOTES ON ASSEMBLY:

- -During the assembly process whenever using screws or bolts, check each by placing the screw/bolt on the diagram of the item which is drawn actual size and design. Be sure to use the proper size and shape specified in the instructions.
- -To assemble this unit you may be required to place the unit on it's side and face. It is strongly recommended that assembly is done on a soft, non-abrasive surface to avoid damaging the finish.


Tools Required for Assembly (not included): Phillips Screwdriver



extstyle ext


- 1. Please do not use power tool Veuillez ne pas utiliser d'outil électrique
- 2.Please do not over tighten the bolt/ screw Veuillez ne pas trop serrer les boulons et/ou les vis
- 3.Please clean the product use water, do not use liquid/ detergent. Veuillez nettoyer le produit avec de l'eau, ne pas utiliser de détergent liquide.
- 4.Please set up the anti-tip kit Veuillez configurer et installer la courroie anti-basculement.

SORELLE

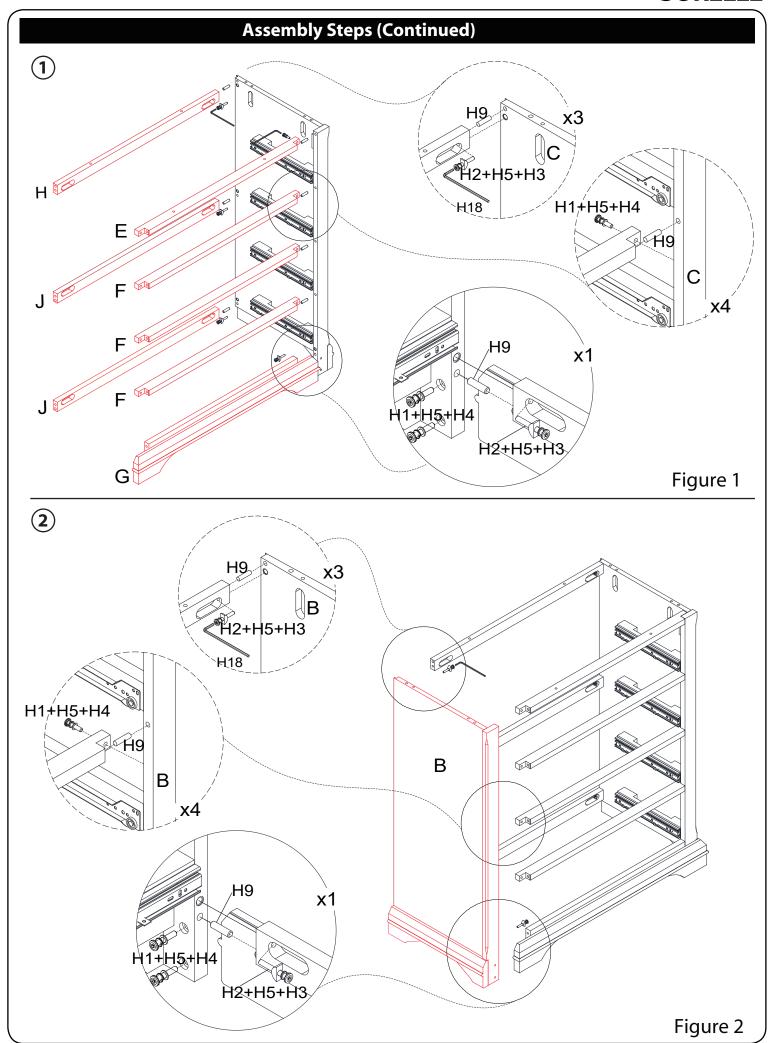

Page 4


SORELLE

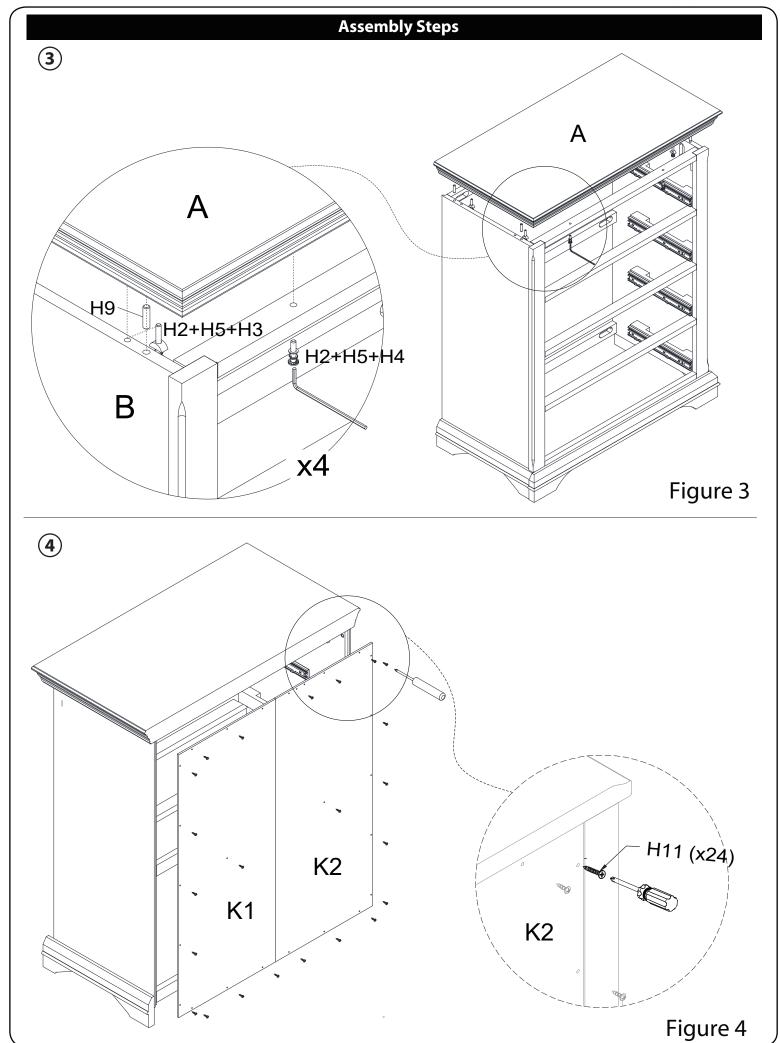

Page 5

Drawer Assembly Steps


1. Working on a padded flat surface, attach Drawer Sides (R2&R3) to Drawer Back (R4) as Figure 1

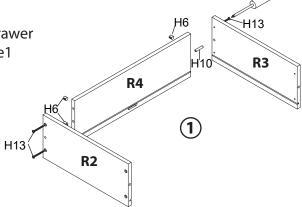


2 R5 R6

2. Slide Drawer Bottom (R5) and into drawer Bottom Support (R6) assembly as Figure 2.


3. Secure both sides of Drawer Front (R1) to drawer assembly as Figure 3.

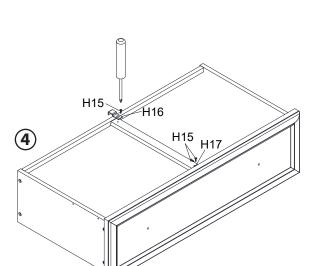

5. Using Drawer Knob Screw (H7) install Knob (H8) on Drawer as Figure 5.

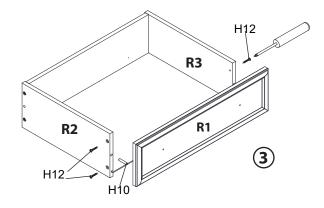

4. Attach Matel Connector A (H16)and Matel Connector B (H17). *Figure 4*

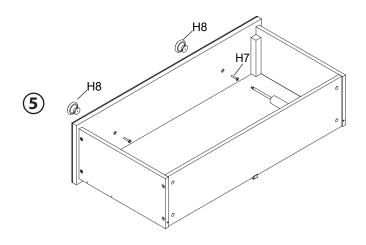

Repeat for all drawers. Set drawers aside for later use.

Check all screws for tightness

Figure 6

Assembly Steps (Continued) (6) H14 x4

NOTES

NOTES ON USE:

Repeat for all drawers

Keep children and others safe by following these simple rules:

- Do not allow any child to play on furniture
- **Do not** allow climbing on any piece of furniture.
- **Do not** allow hanging from any piece of furniture.
- Always monitor your child's activity when in the nursery.

NOTES ON CARE AND MAINTENANCE:

- Do not scratch or chip the finish.
- Inspect the product periodically, contact C&T International Inc. for replacement parts or questions.
- **Do not** store the product or any parts in extreme temperatures and conditions such as a hot attic or a damp, cold basement. These extremes can cause a loss of structural integrity.
- -To preserve the luster of the high quality finish on your product, it is recommended to place a doily or felt pad under any items you place on the finish.
- -Clean with a damp cloth, then a dry cloth to preserve the original luster and beauty of this fine finish.
- -Do not use abrasive chemicals.
- **-Do not** spray cleaners directly onto furniture.
- -Lift slightly when moving on carpeting to prevent leg breakage.
- -Use of a vaporizer near furniture will cause wood to swell and finish to peel.