
















Hardware and Parts packed with the Headboard #75880

Headboard Panel  (H-A) 1 pc.	Headboard Post  (H-B) 1 Right 1 Left	Headboard Stretcher  (H-C) 1 pc.	
Ø5/16" x 1-1/2" Allen Head Bolt  (H-D) 10 pcs.	Ø5/16" Spring Washer  (H-E) 10 pcs.	Ø5/16" x 19mm Flat Washer  (H-F) 10 pcs.	5mm Allen Wrench  (H-G) 1 pc.

Hardware and Parts packed with the Footboard #75883

Storage Footboard  (F-A) 1 pc.	Wood Slat 76 3/4 Lg.  (F-B) 5 pcs.	Support Leg 13 7/8 Lg.  (F-C) 8 pcs.	Storage Box Support Leg 8 3/4 Lg.  (F-D) 3 pcs.	Ø8 x 1" Wood Screw  (F-E) 18 pcs.	
Ø1/4" x 1-1/4" Allen Head Bolt  (F-F) 6 pcs.	Ø1/4" Spring Washer  (F-G) 6 pcs.	Ø1/4" x 16mm Flat Washer  (F-H) 6 pcs.	4mm Allen Wrench  (F-I) 1 pc.	Decking Panel 80 5/8 x 24  (F-J) 3 pcs. for 6/0-6/6	6/6-6/0 Support Filler 80 5/8 x 4  (F-K) 1 pc. per bed

Hardware and Parts packed with the Bed Rails #75872 (6/6) or the #75882 (6/0)

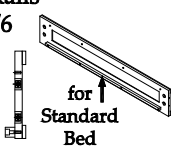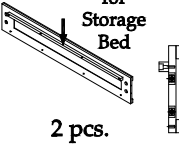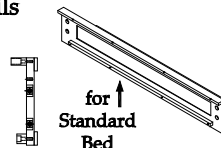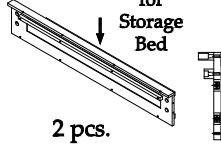Bed Rails 5/0-6/6  (R-A) for Standard Bed	for Storage Bed  (R-B) 2 pcs.		Bed Rails 6/0  (R-C) for Standard Bed	for Storage Bed  (R-D) 2 pcs.
Ø5/16" x 3-1/2" All-thread Bolt  (R-E) 8 pcs.	Ø5/16" Washer  (R-F) 8 pcs.	Ø5/16" Spring Washer  (R-G) 8 pcs.	Ø5/16" Hex Nut  (R-H) 8 pcs.	13mm Open Wrench  (R-I) 1 pcs.

6/0-6/6 King Panel Storage Bed


75880 – 6/0-6/6 Panel Headboard

75883 – 6/0-6/6 Storage Bench Footboard, Platform & Slats

75872 – 5/0-6/6 Bed Rails (for 6/6 Bed)

or

75882 – 6/0 Bed Rails (for 6/0 Bed)

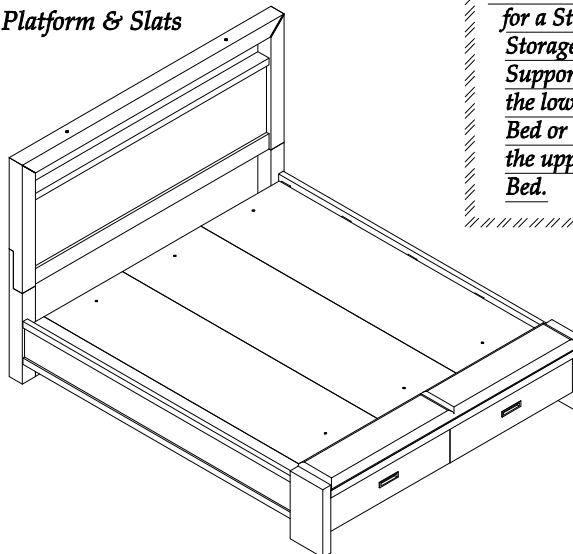

Note: The same Bed Rails are used for a Standard Bed set-up or for a Storage Bed. The wood, Slat Support cleat will be mounted in the lower position for a Standard Bed or will need to be mounted at the upper position for a Storage Bed.

ASSEMBLY STEPS :









1. Place the Headboard Panel (H-A) face down on a clean and soft surface.
2. Attach two Headboard Posts (H-B) to the back of the Headboard Panel, using the Flat Washers (H-F), Spring Washers (H-E) and Bolts (H-D). (see Detail A). Do not fully tighten until after next step.
3. Attach the Stretcher (H-C) to the back of the Headboard Posts using the Bolts (H-D) and the same Washers as previous step. Tighten all Bolts using the Allen Wrench (H-G).
4. Attach the Storage Box Support Legs (F-D) to the back of the Footboard storage box using the Bolts (F-F), Spring Washers (F-G) and Flat Washers (F-H). Tighten with the Allen Wrench.
5. Install the eight All-Thread Bolts (R-B) into the threaded metal inserts installed in the Headboard and Footboard posts.
6. Gently lean the Headboard against the wall where the completed Bed will be located in the room.

Using the Allen Wrench, temporarily remove the Slat Support Cleats mounted to the inside of the Bed Rails and lay them aside.


7. Position one end of one Bed Rail (R-A) onto the All-Thread Bolts and fasten with the Washers (R-C) and (R-D) and Hex Nuts (R-E). Only partially tighten the Hex Nuts until the Footboard has been connected. Repeat for other Bed Rail.
8. Position and connect the Footboard to the other end of the Bed Rails as in previous Step.
9. Carefully align the Footboard to be 'square' with the Headboard. Using the Open Wrench (R-F) tighten all Hex Nuts attaching the Side Rails to the Headboard and Footboard. (See Detail C).

Reattach the Slat Support Cleats at the upper position on the Bed Side Rails.

10. Attach the Support Legs (F-C) to the Wood Slats (F-B). (See Detail D).
11. Locate or position the Wood Slats as shown and attach the Wood Slats to the Bed Rails using the Wood Screws (F-E) and your Phillips Screwdriver. The levelers located at the bottom of the Support Legs can be adjusted if necessary to provide support. (See Detail E).
12. Place the Decking Panels (F-J & F-K) on the slats as shown and attach to the Slats using the Wood Screws (F-E) and your Phillips Screwdriver. (See Detail F).

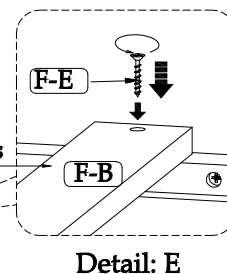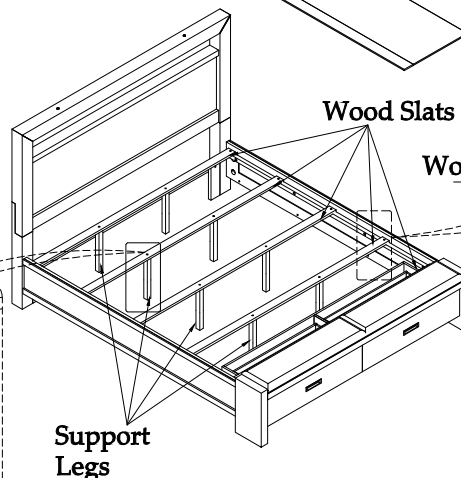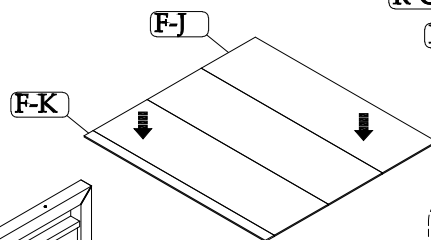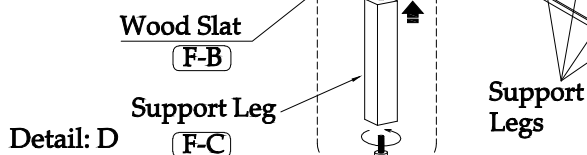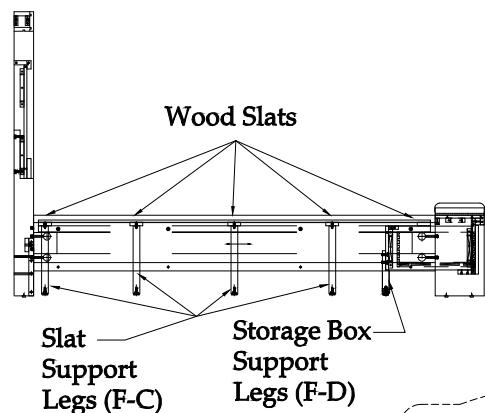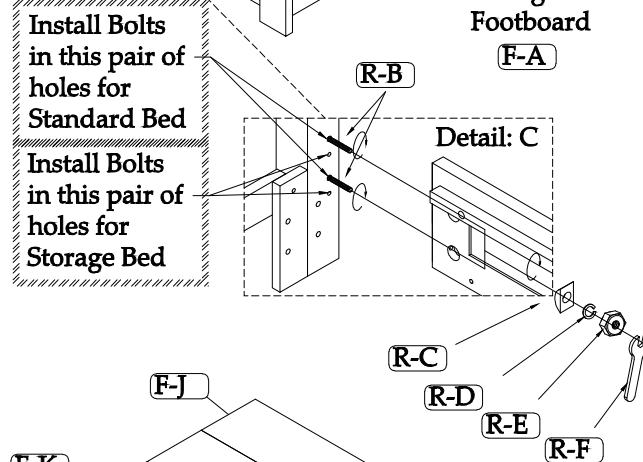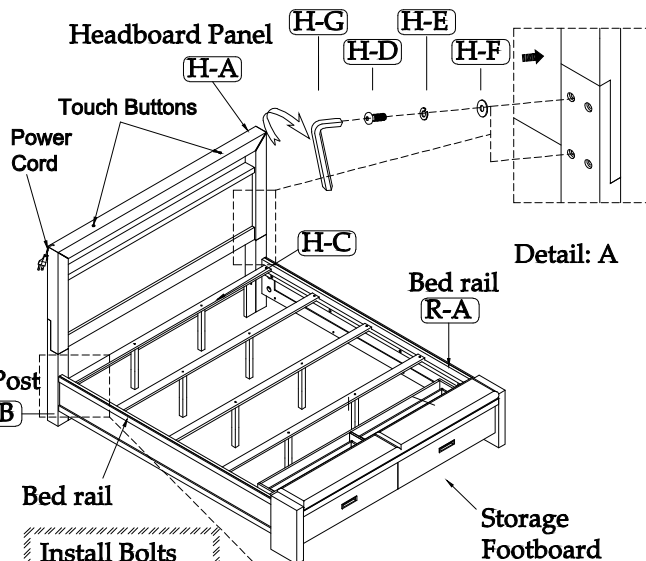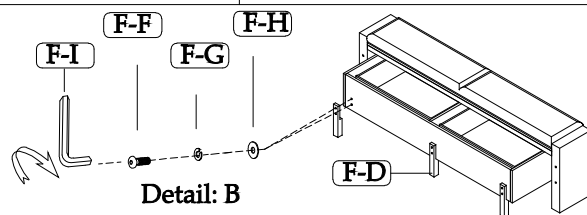

There is an LED strip light installed in the bottom side of the top rail which is activated using either of the two touch buttons mounted on top of the rail, which are connected to a three-level touch switch.

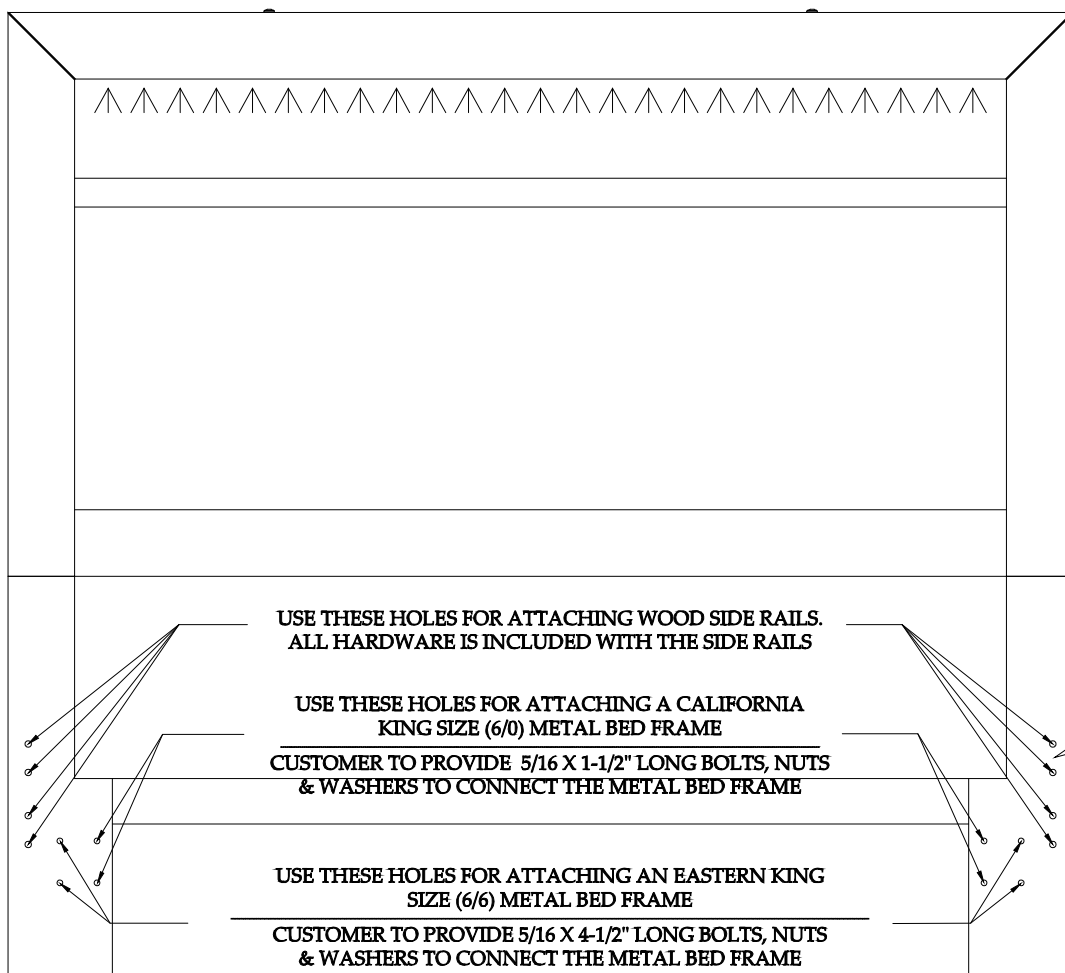

6/6 King Storage Bed

75880 -- 6/0-6/6 Panel Headboard

75883 -- 6/0-6/6 Storage Bench Footboard & Platform

75872 -- 5/0-6/6 Bed Rails

6/0 California King Storage Bed

75880 -- 6/0-6/6 Panel Headboard

75883 -- 6/0-6/6 Storage Bench Footboard & Platform

75882 -- 6/0 Bed Rails

6/6 King Standard Bed

75880 -- 6/0-6/6 Panel Headboard

75881 -- 6/0-6/6 Panel Footboard & Slats

75872 -- 5/0-6/6 Bed Rails

6/0 California King Standard Bed

75880 -- 6/0-6/6 Panel Headboard

75881 -- 6/0-6/6 Panel Footboard & Slats

75882 -- 6/0 Bed Rails

