

BEDFORD DAYBED Model #100230-100395 (124-01V) Back Panel

Model #100231-100396 (124-02V) Side Panel

Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. The product of Hillsdale Furniture, LLC is designed for residential use only. Customer Service Phone Number: 502-562-0000



- (12) Allen Bolts Α
- В
- (8) Spring Washers(8) Metal Washers С
- D (1) Allen Wrench

PARTS LIST

- (1) Back Section Е
- F 1) Right Side Section
- G (1) Left Side Section

FIGURE 2


* LINK SPRING NOT INCLUDED FIGURE 1

Ε

C_BA

сВ⁴

G

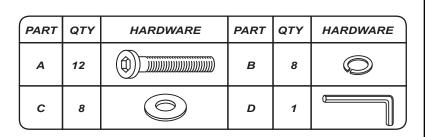

STEP 1 - Figure 1

Begin assembly by fastening both Right (F) and Left (G) Side Sections to Back Section (E) using 2 Allen Bolts (A). Only hand tighten bolts at this time.

STEP 2 - Figure 2

Next secure the spring (link spring not included) to both Side Sections (F & G) using 2 Metal Washers (C), 2 Spring Washers (B) and 2 Allen Bolts (A) per daybed leg. Tighten all bolts used in steps 1 & 2.

CARE & MAINTENANCE: The touch of a soft cloth is all the maintenance the finish will ever need. Please do not use harsh or abrasive cleaners for polishing, as they may cause damage to the finish. Periodic checks are recommended to make sure that all hardware is securely tightened.