

email: info@riverside-furniture.com


Cora Bedroom Assembly Instructions


Made in Viet Nam
Queen Panel Bed

Warning:


- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture **MUST BE ASSEMBLED BY TWO PEOPLE** on a soft surface such as a blanket or carpet.

Hardware and Parts packed with the Headboard Headboard Post Left Headboard Post Right Panel Headboard 37270 Headboard stretcher (H-A) (H-D) (H-B) (H-C) 1 pc. 1 pc. 1 pc. 1 pc. φ5/16"-1- **3/4**" Ø5/16" 5mm Allen Key \$\phi 5/16\" x 19*2mm Allen Head Bolt Allen Head Bolt Spring Washer Flat Washer (H-G) (H-H) (H-E) (H-F) (H-I) 8 pcs. 2 pcs. 6 pcs. 8 pcs. 1 pc. Hardware and Parts packed with the Footboard

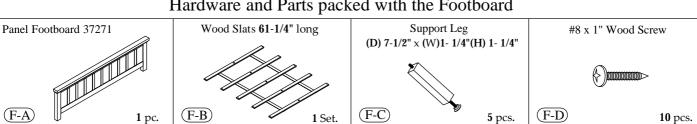

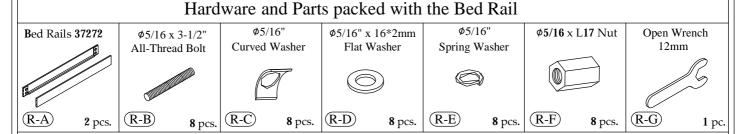



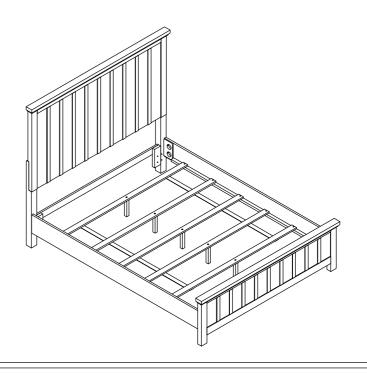




email: <u>info@riverside-furniture.com</u>


Cora **B**edroom **A**ssembly Instructions

Page 2 of 5

Made in Viet Nam
Queen Panel Bed

<u>5/0</u> Queen <u>Bed</u> <u>37270 -- 4/6-5/0</u> Panel **H**eadboard

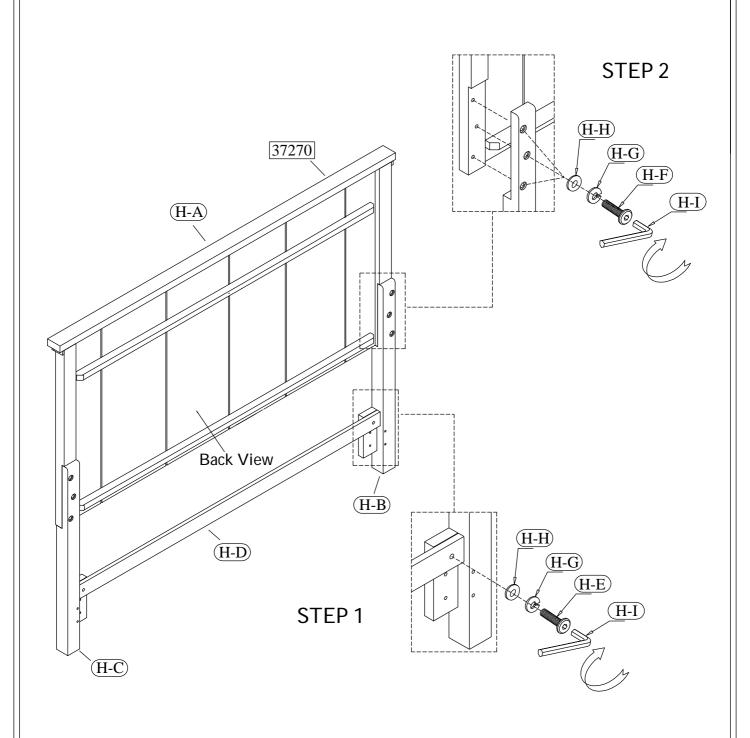



Riverside


email: <u>info@riverside-furniture.com</u>

Cora **B**edroom **A**ssembly Instructions

Made in Viet Nam Queen Panel Bed

5/0 Queen **B**ed

37270 -- **4/6-5/0** Panel **H**eadboard **37271** -- **5/0** Panel **F**ootboard

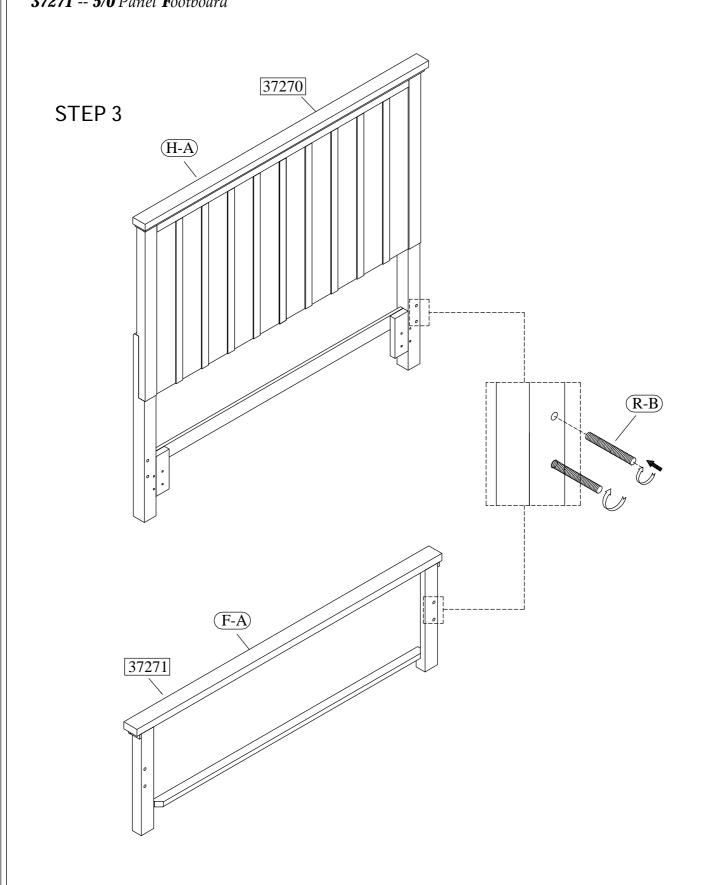


email: <u>info@riverside-furniture.com</u>

Cora **B**edroom **A**ssembly Instructions

Page 4 of 5

Made in Viet Nam Queen Panel Bed

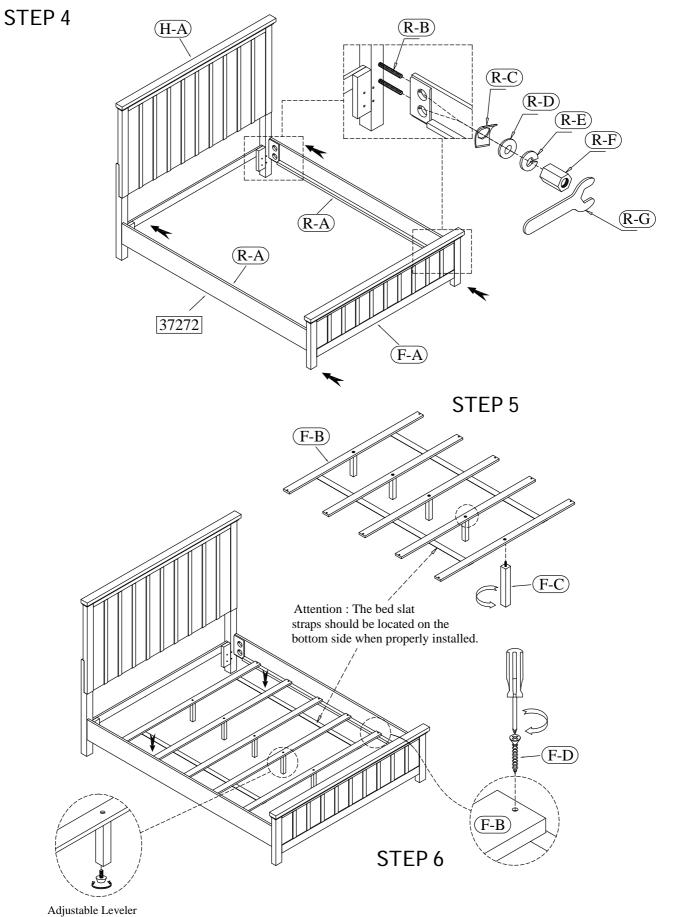




email: info@riverside-furniture.com

Cora **B**edroom **A**ssembly Instructions

Made in Viet Nam Queen Panel Bed

Page 5 of 5

<u>5/0</u> Queen <u>Bed</u> <u>37270 -- 4/6-5/0</u> Panel **H**eadboard

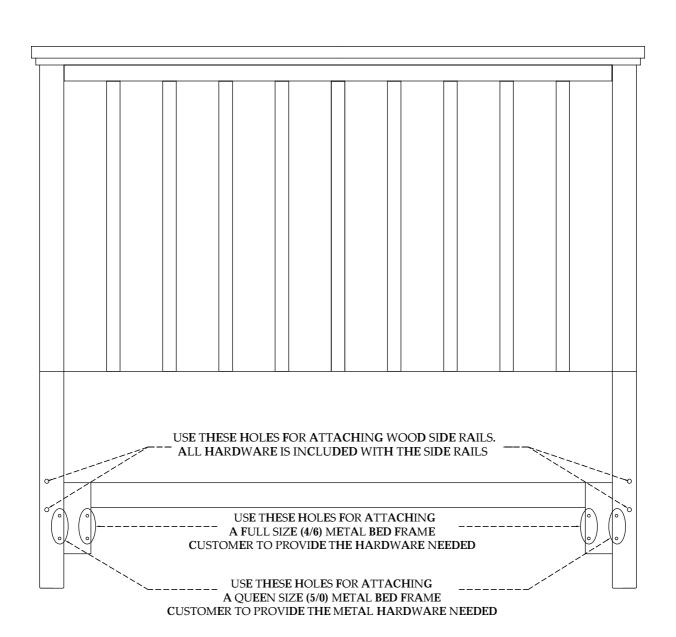

4/6 & 5/0 Bed
THE HEADBOARD MAY BE USED ALONE WITH
A QUEEN OR FULL SIZE METAL BED FRAME.