


ASSEMBLY INSTRUCTIONS

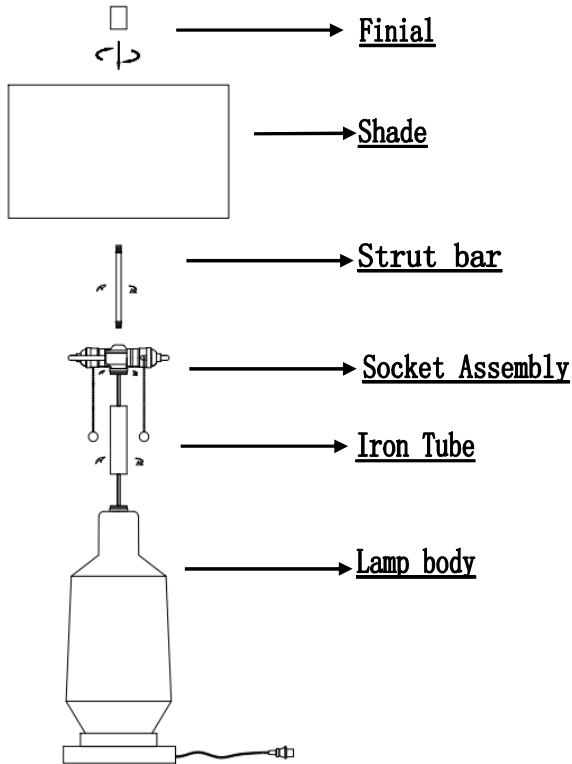

ASSEMBLE IT BY FOLLOWING STEPS .

1. Fasten The Iron Tube Onto The Lamp body.
Be careful not TO Twist The Power Cord.
2. Fasten The Socket Assembly Onto The Iron Tube.
3. Insert The Strut bar Into The Socket Assembly.
4. Place The Shade Onto The strut bar And Tighten The finial.
5. Please Use ON/OFF 100W Bulb (Bulb not Included)

IMPORTANT SAFETY INSTRUCTIONS

CAUTION: THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER), AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK, THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY, IF THE PLUG DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG, IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN, NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED , DO NOT ALTER THE PLUG.