Banbury® Technical Specification

Robe Hook Y2603


Stock Numbers:

- □ Y2603BN Robe Hook Brushed Nickel Finish
- □ Y2603BRB Robe Hook Mediterranean Bronze Finish
- □ Y2603CH Robe Hook Chrome Finish

Materials:

Robe Hook is die cast from highest quality zinc alloy (Zamac).

Dimensions:

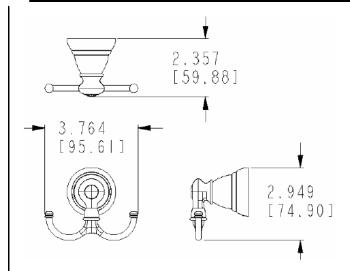

Installation Instructions:

- 1. Remove mounting plate from hardware pack.
- 2. Position the mounting plate on the wall at desired location with "UP" facing you. Mark hole locations.
- 3. Drill two holes as marked using a 5/16" drill bit.
- 4. Fold ends of the plastic toggle together and insert into each hole in the wall.
- 5. Lightly tap anchors until flush with the wall.
- One at a time, insert plastic pin into each anchor and lightly tap to activate anchor.
- 7. Place the mounting plate on the wall over the installed wall anchors with "UP" facing you.
- 8. Tighten screws.
- Place decorative product over the mounting plate with setscrew facing down and tighten setscrew.

Cleaning Instructions:

To preserve the fine finish of this product, clean only with a soft damp cloth. Dry well. Do not use commercial or abrasive cleaners.

Sto	ock N	lum	ber	<u> </u>	 	 Robe Ho	ok
	_		_				

By Creative Specialties

25300 AL MOEN DRIVE • NORTH OLMSTED, OH 44070 CORPORATE HEADQUARTERS: (800) 321-8809 • FAX: (800) 848-6636 INTERNATIONAL: (440) 962-2000 • FAX: (440) 962-2726 CUSTOMER SERVICE (USA): 800-882-0116 • FAX: (888) 379-2720 WWW.MOEN.COM

©Copyright Creative Specialties International



