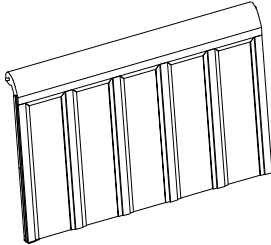








Warning:

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture **MUST BE ASSEMBLED BY TWO PEOPLE** on a soft surface such as a blanket or carpet.


Hardware and Parts packed with the Headboard

Panel Headboard - 15280  H-A 1 pc.	Headboard Post Left  H-B 1 pc.	Headboard Post Right  H-C 1 pc.	Headboard Stretcher  H-D 1 pc.		
Ø5/16" x 1- 1/2" Allen Head Bolt  H-E 8 pcs.	Ø5/16" Spring Washer  H-F 8 pcs.	Ø5/16" x Ø19mm Flat Washer  H-G 8 pcs.	4mm Allen key  H-H 1 pc.	Wood Screw Ø4 x 50 (mm)  H-I 2 pcs.	

Hardware and Parts packed with the Footboard

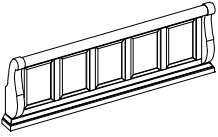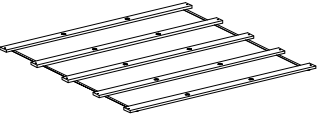Panel Footboard - 15281  (F-A) 1 pc.	Bun Foot  (F-B) 2 pcs.	Slats (79-1/2" long)  (F-C) 5 pcs.	Support leg (194mmx45mmx45mm)  (F-D) 10 pcs.	Wood Screw Ø4 x 30 (mm)  (F-E) 10 pcs.
--	---	---	---	---

Hardware and Parts packed with the Bed Rails

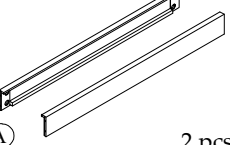
15272 - Bed Rails  (R-A) 2 pcs.	Ø5/16" Curved Washer  (R-B) 8 pcs.	Ø5/16" x 17mm Nut  (R-C) 8 pcs.	Ø5/16"x 3- 1/8" Long Bolt  (R-D) 8 pcs.	12 mm Open Wrench  (R-E) 1 pc.
---	--	---	---	---

6/0-6/6 King Sleigh Bed

15280 -- 6/6 Sleigh Headboard


15281 -- 6/6 Sleigh Footboard

15272 -- 5/0-6/6 Side Rails

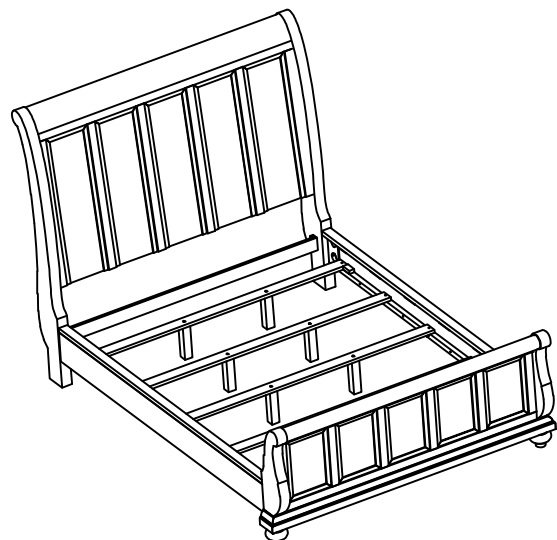


6/0- 6/6 King Sleigh Bed
15280 -- 6/6 Sleigh Headboard
15281 -- 6/6 Sleigh Footboard


Step 1

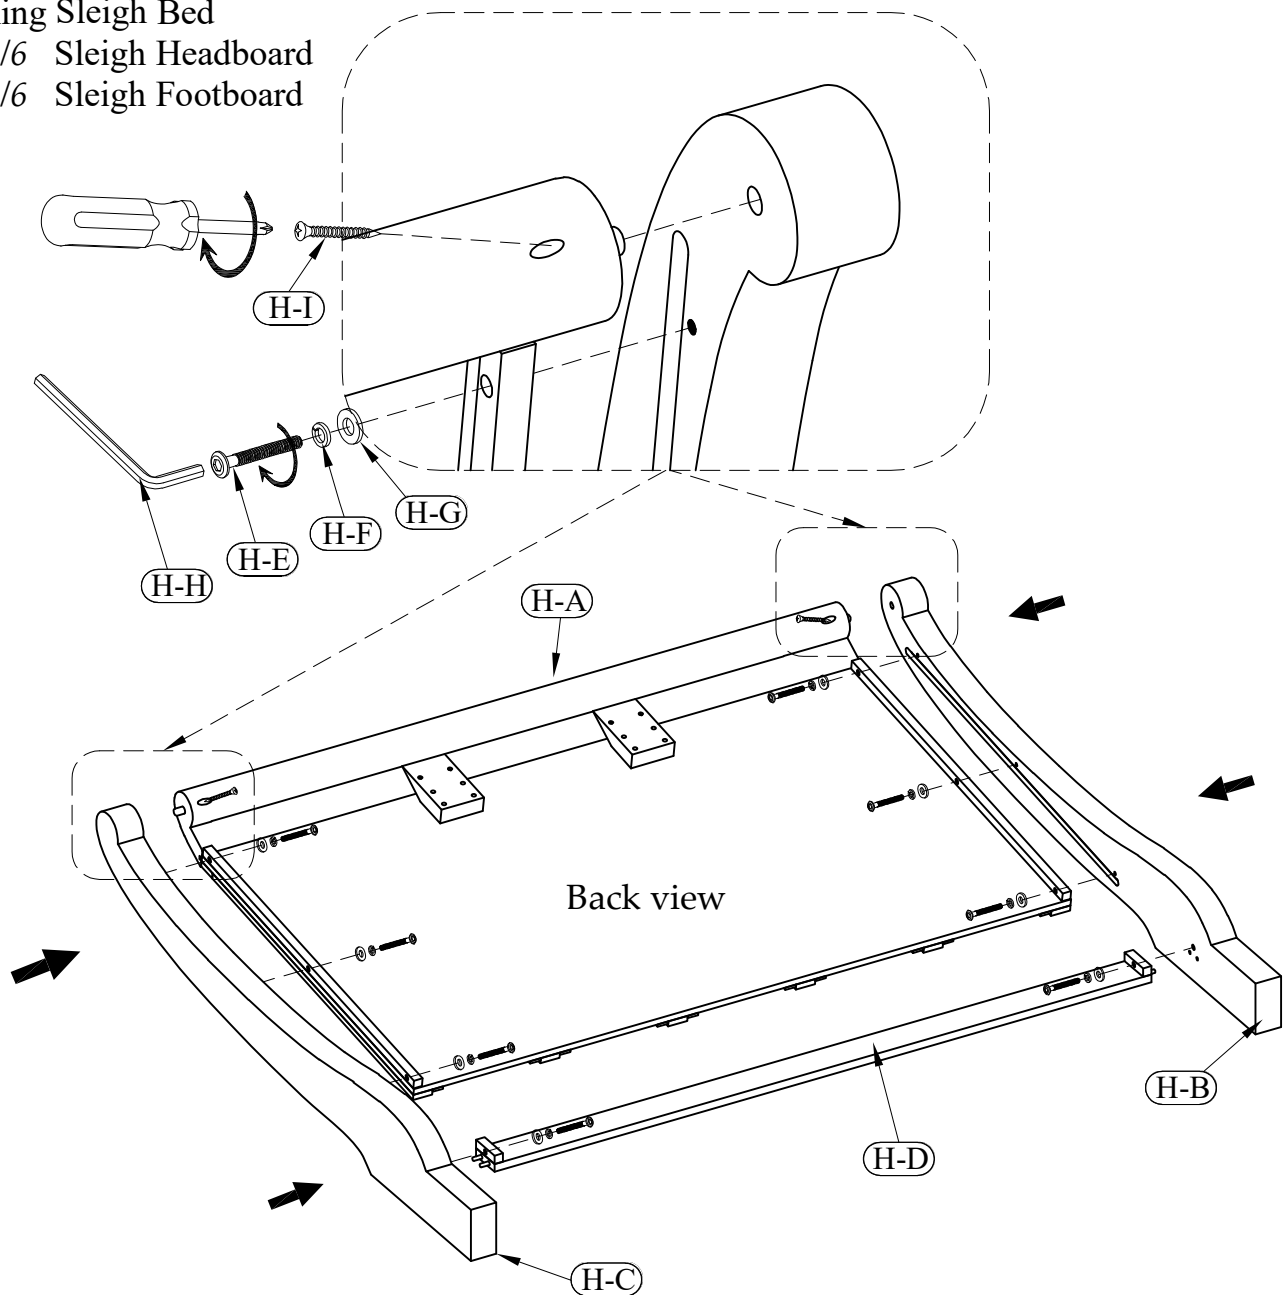


Step 2

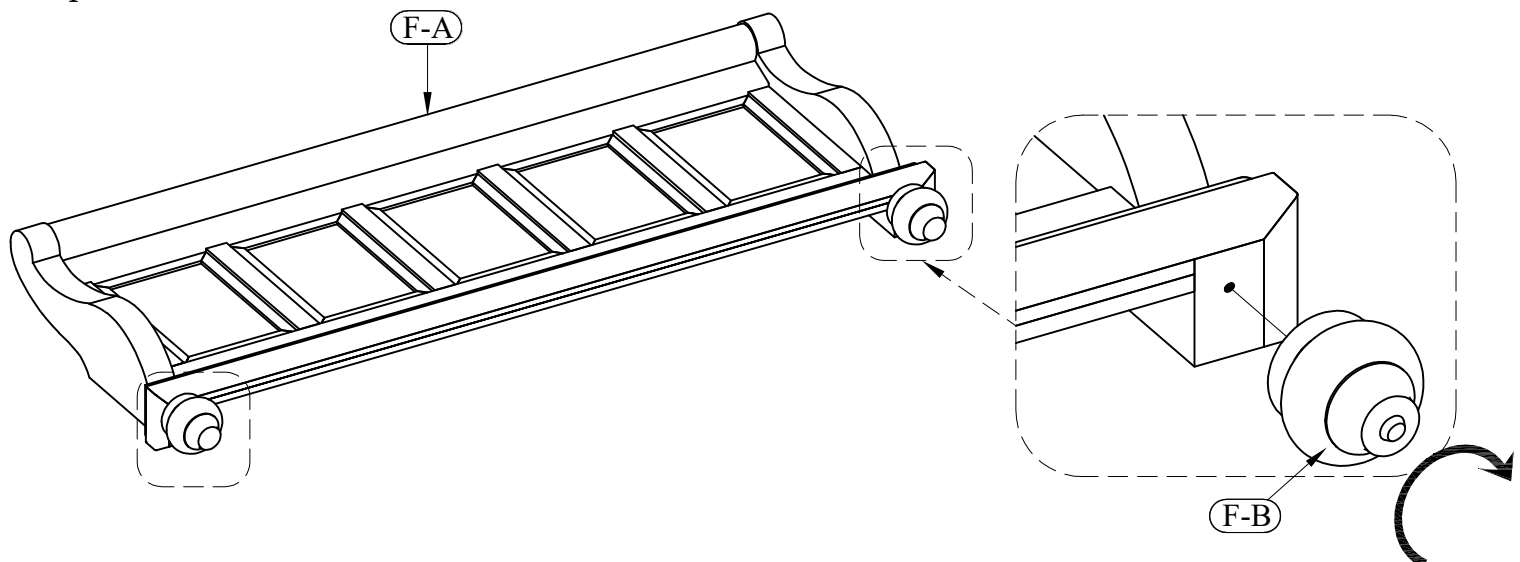



6/0- 6/6 King Sleigh Bed
15280 -- 6/6 Sleigh Headboard

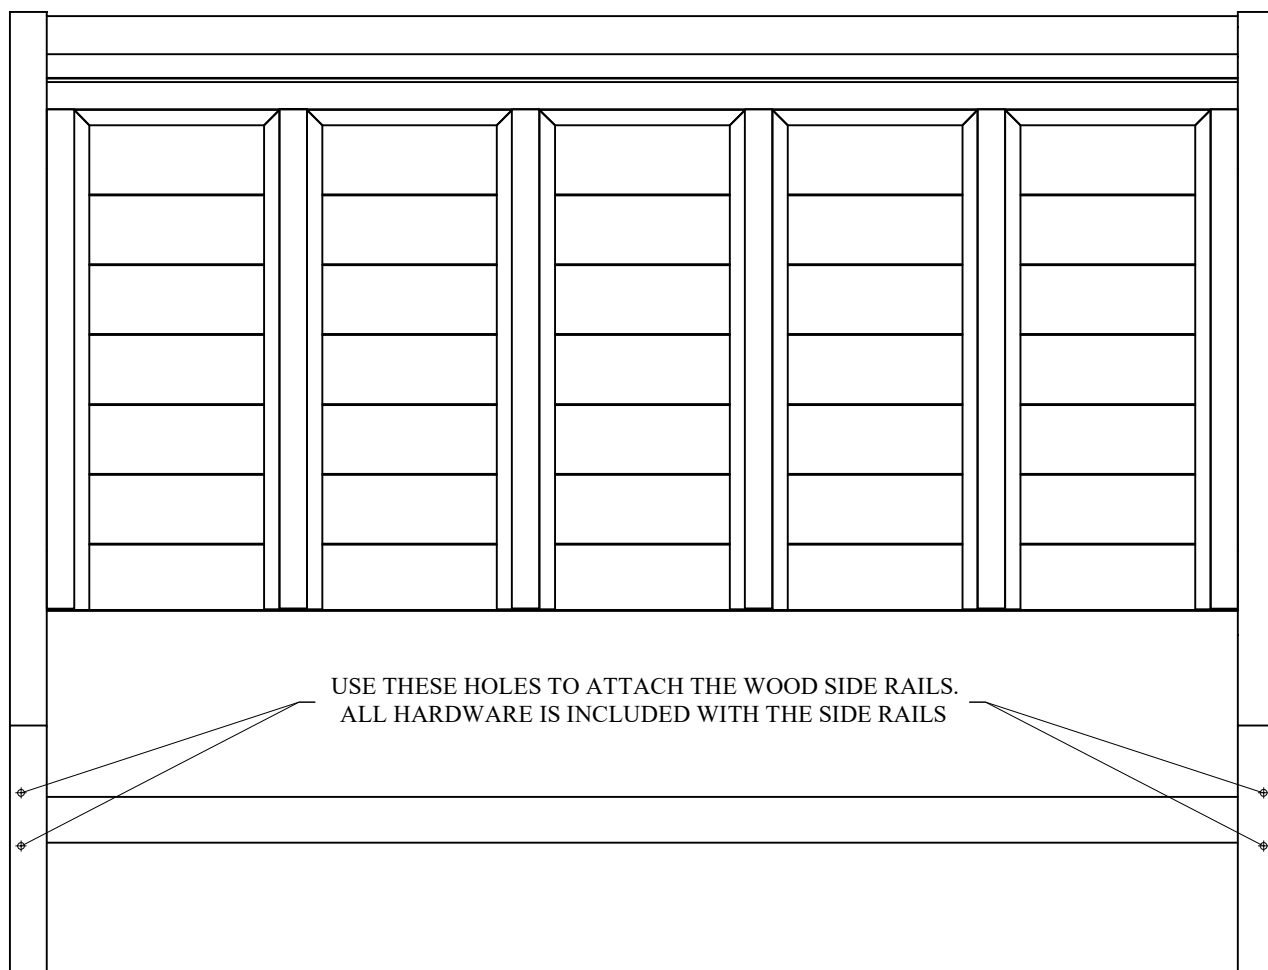


6/0- 6/6 King Sleigh Bed
15280 -- 6/6 Sleigh Headboard
15281 -- 6/6 Sleigh Footboard

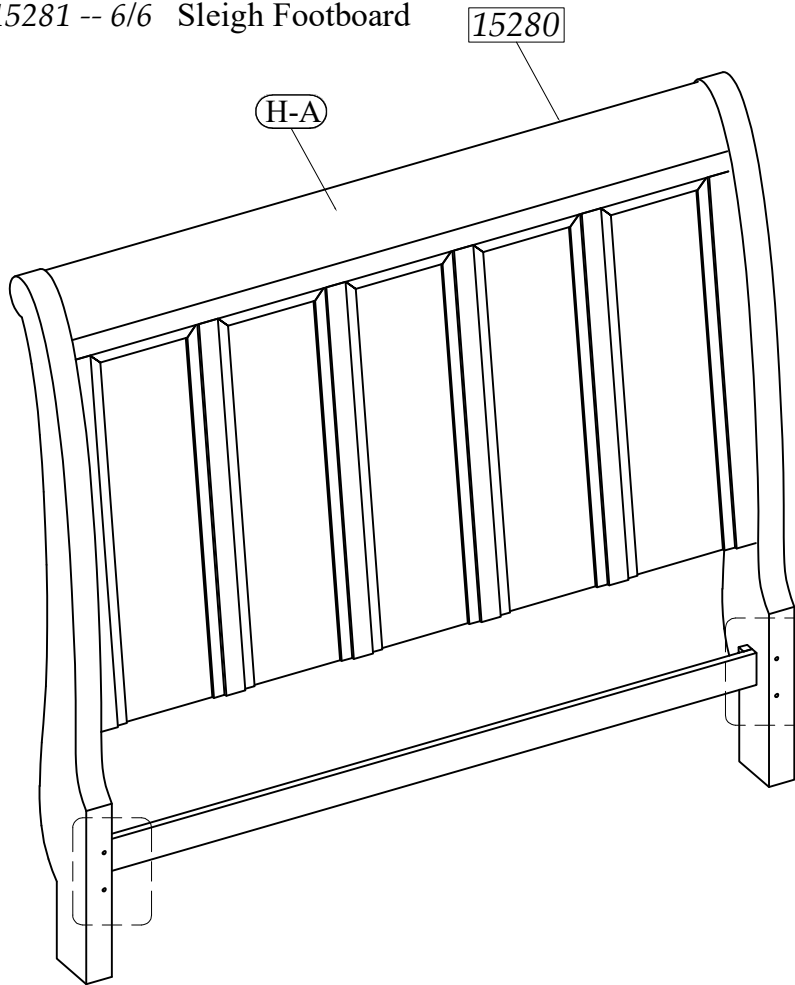


Step 3

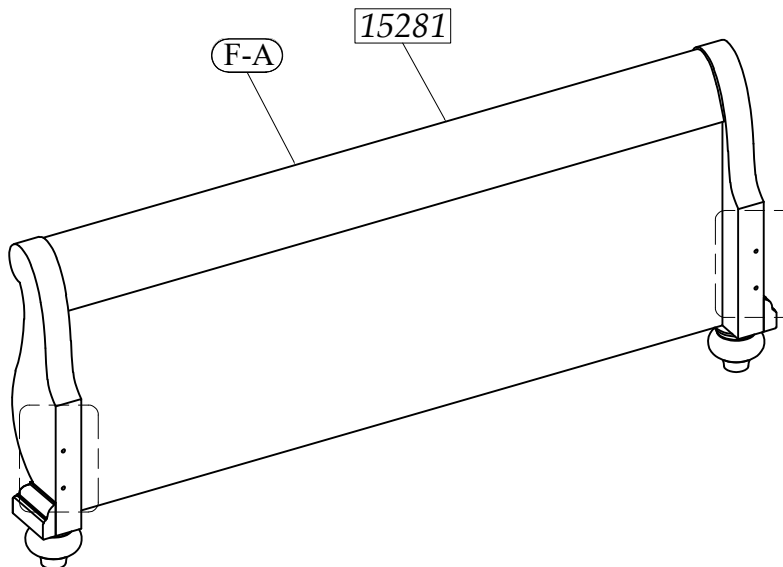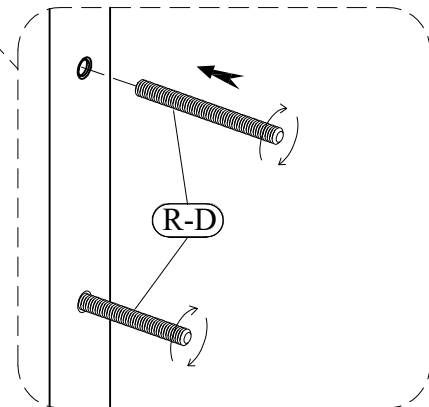

Step 4

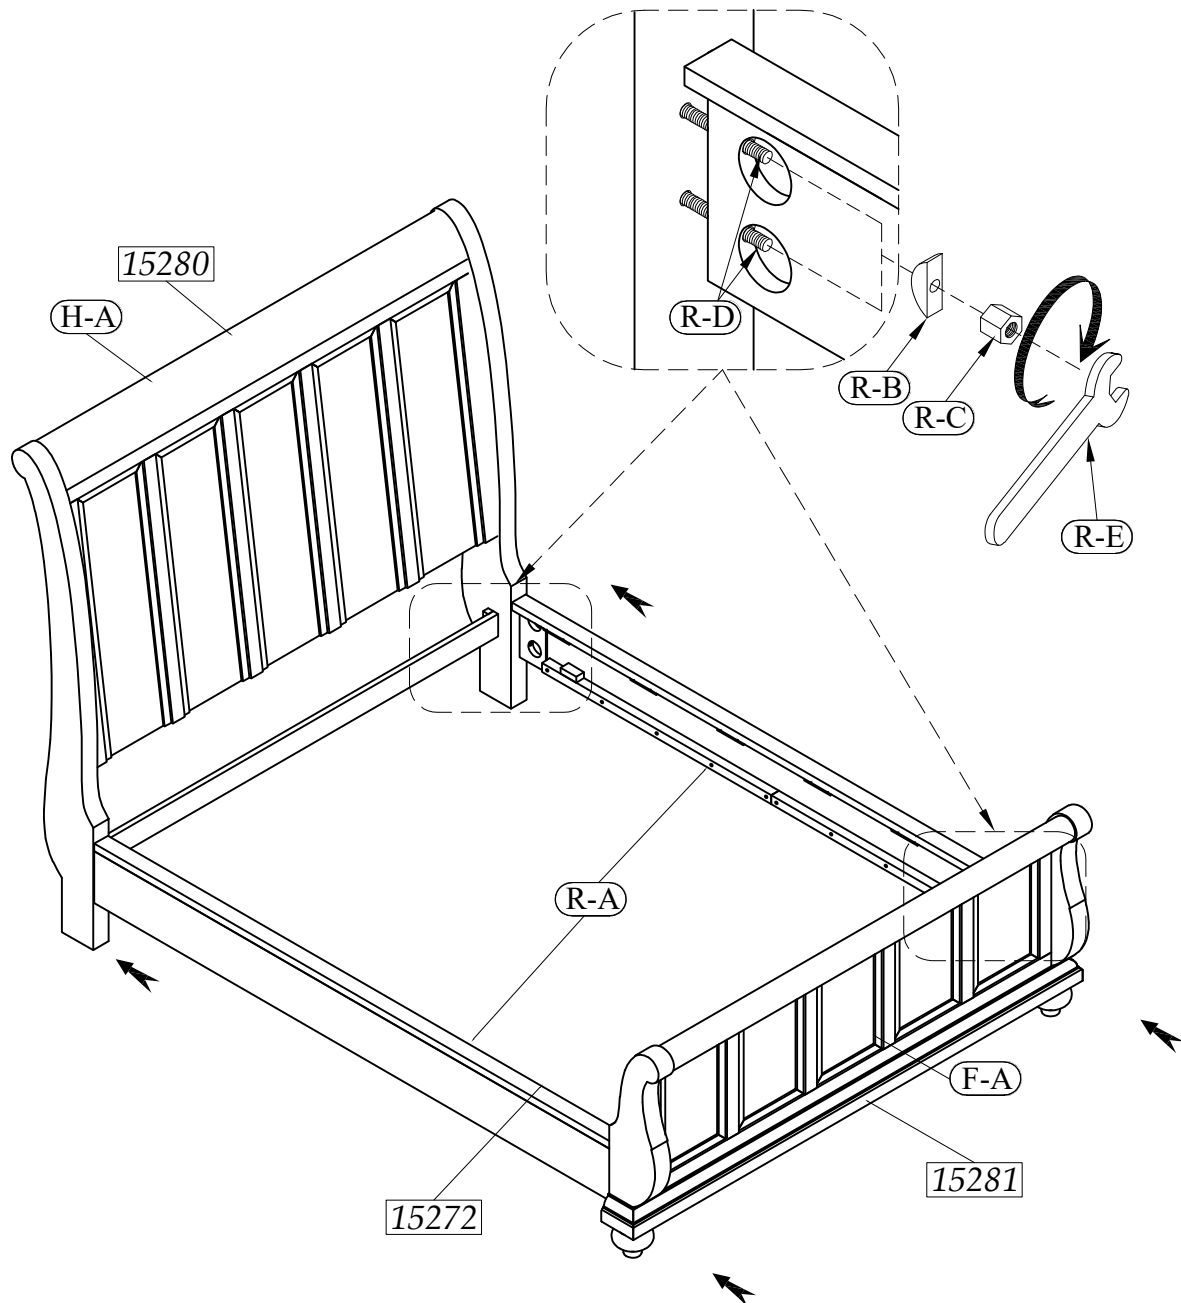

Step 5

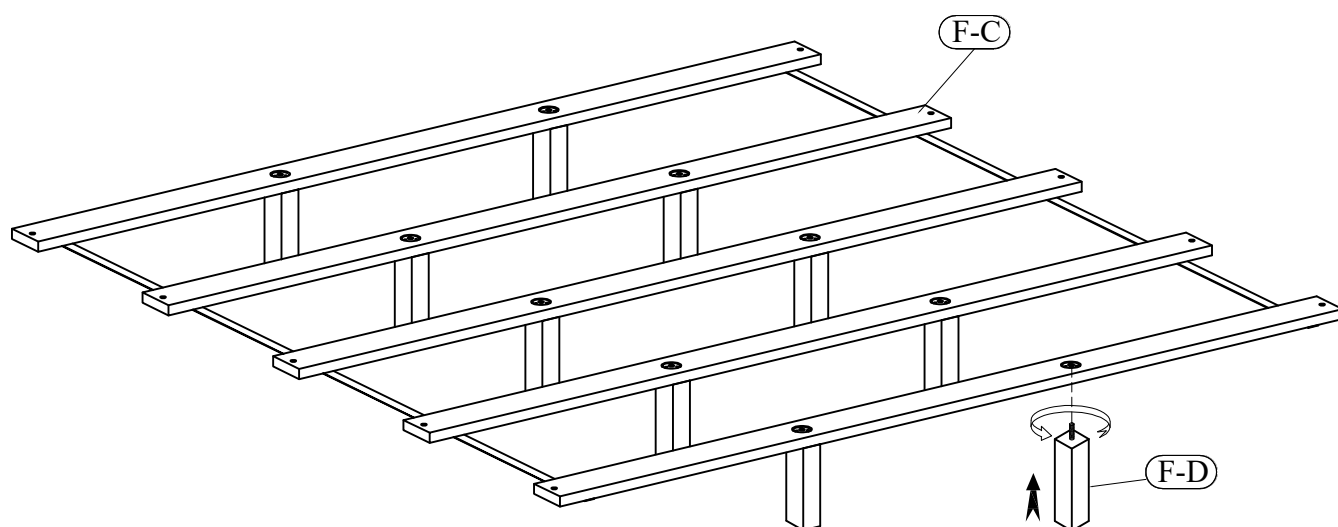

Step 6

