



SYNERGY QUAD PANEL MOUNT


SQ/PM2

BEFORE YOU BEGIN

- This TV mount is intended for use with Flat-Panel TV 65" or smaller and a maximum weight capacity of 175lbs.
- Use with products heavier than the maximum weight or larger than the size indicated may result in instability causing possible injury.
- Carefully inspect the mount for shipping damage or missing parts. If any damage is apparent or you are missing parts contact Salamander Designs at 800-535-5659.
- Read ALL instructions before assembly. If you have any questions, please contact your installation contractor or Salamander Designs.
- Mounts must be attached as specified in assembly instructions. Improper installation can result in serious personal injury.

PARTS

- 2 Extruded Posts
- Drill Bit
- FX200 Mount Kit

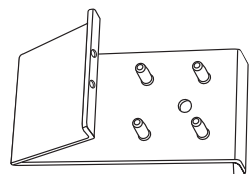

R (2x) 301-422 Base Plate




S (5x) 301-600 Wire Manager

Synergy Quad Mount Hardware Bag - PHK-523




K (2x) 300-555
2" Button Head

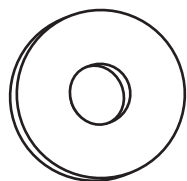

L (4x) 300-470
Metal Washer




M (8x) 300-505
Cup Point Set Screw

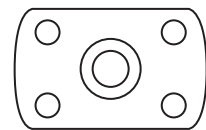


G (12x) 300-560
Flat Nut




F (4x) 300-485
Button Head Screw

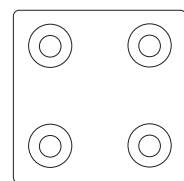


P (2x) 301-425
Post Cover

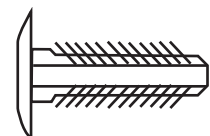

Q (8x) 301-575
Plastic Fasteners

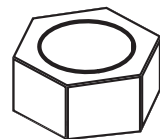

V (4x) 300-460

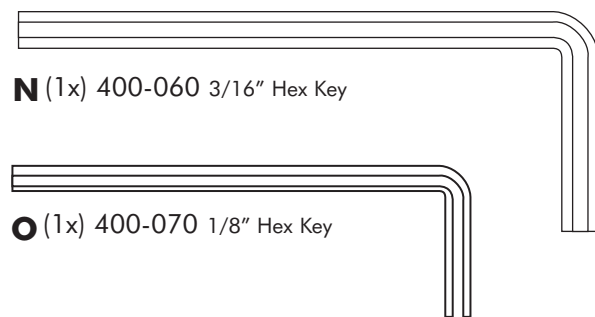


N (1x) 400-060 3/16" Hex Key


O (1x) 400-070 1/8" Hex Key

1. DRILLING HOLES

Use the center rear bolt as your template guide.

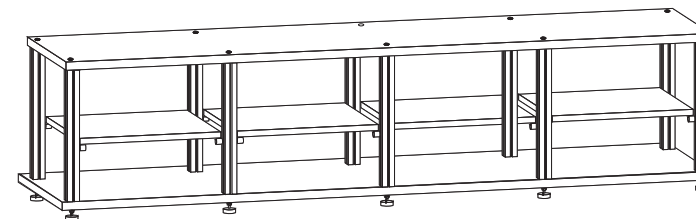


2X - Along the rear edge of the cabinet, use template on the edge of this page as a guide to drilling the hole. Line up one hole on template with the center bolt and use the other as a guide to mark where to drill your hole.



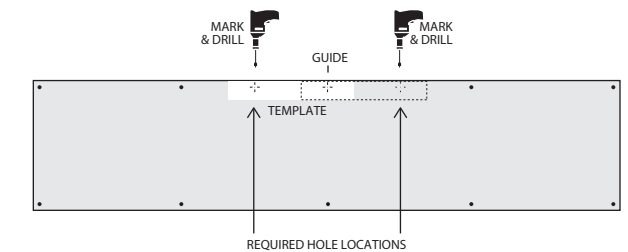


2. INSTALL BASE PLATES

A. Loosely assemble 2 flat nuts (G) with 2 button head screws (F) through each base plate (R).

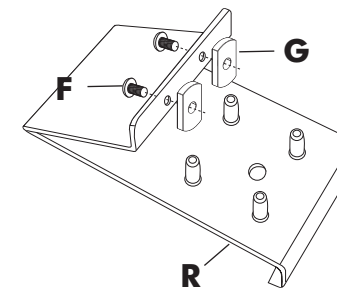

B. Attach Both Base Plates as Shown
TIGHTEN FIRMLY WITH HEX KEY AND

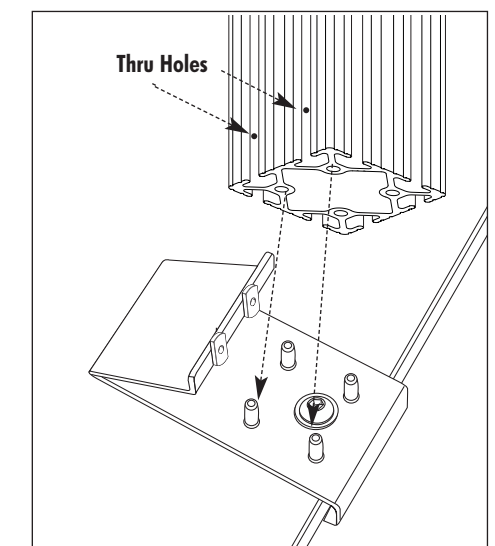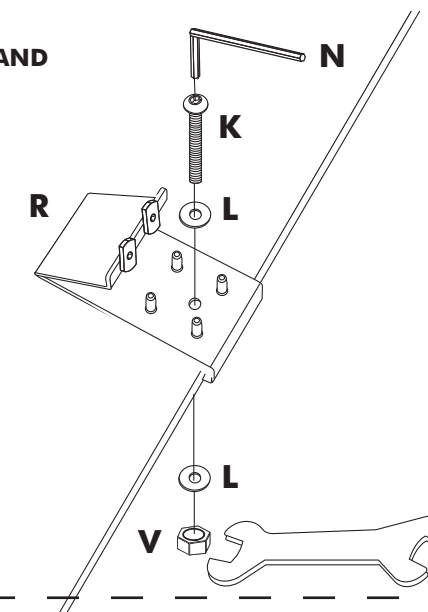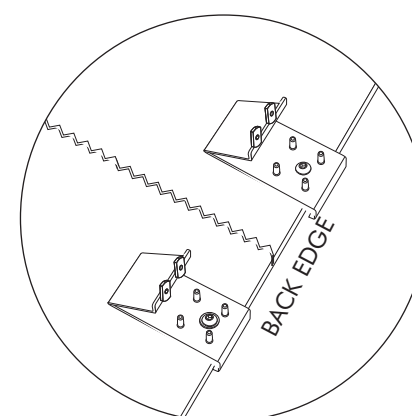

3. INSTALL POSTS


A. Align thru holes in posts over the pins in the base plates.

Guide the flat nuts (G) through the front of the posts.

If necessary, use rubber mallet or other device to ensure the posts fits snugly against the top surface.

Tighten the screws (F) with hex key (H).


POKE THROUGH
USING A PENCIL

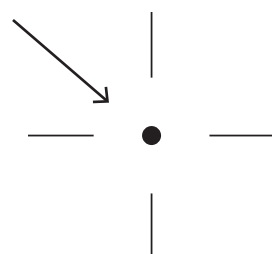


↑ FOLD AND ALIGN THIS BEND WITH THE REAR OF THE CABINET. ↑

TEMPLATE


POKE THROUGH
USING A PENCIL

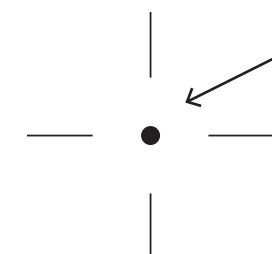

B. Assemble 8 flat nuts (G) with 8 set screws (M) and drop into the left and right sides of each post.

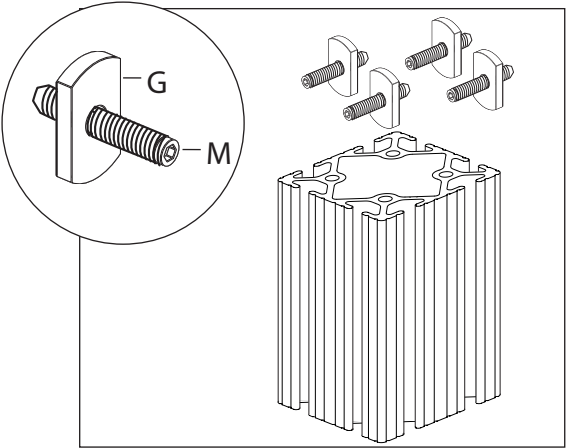

C. Position the set screws (M) into the thru holes and tighten through to the base plate pins. This will lock the posts to the top of your Synergy cabinet.
Tighten firmly with hex key (O).

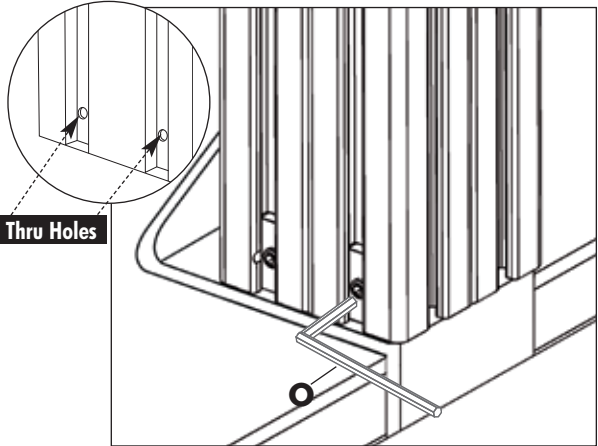


4. ASSEMBLE TV BRACKETS

Refer to Step 2 in the FX200 Manual

5. ASSEMBLE POST BRACKETS

Assemble 1 Button Head Screw with Washer through the the appropriate slot (4 places) with flat nuts loosely on each.

Thread the screws to the nuts enough to ensure the nut does not fall off.

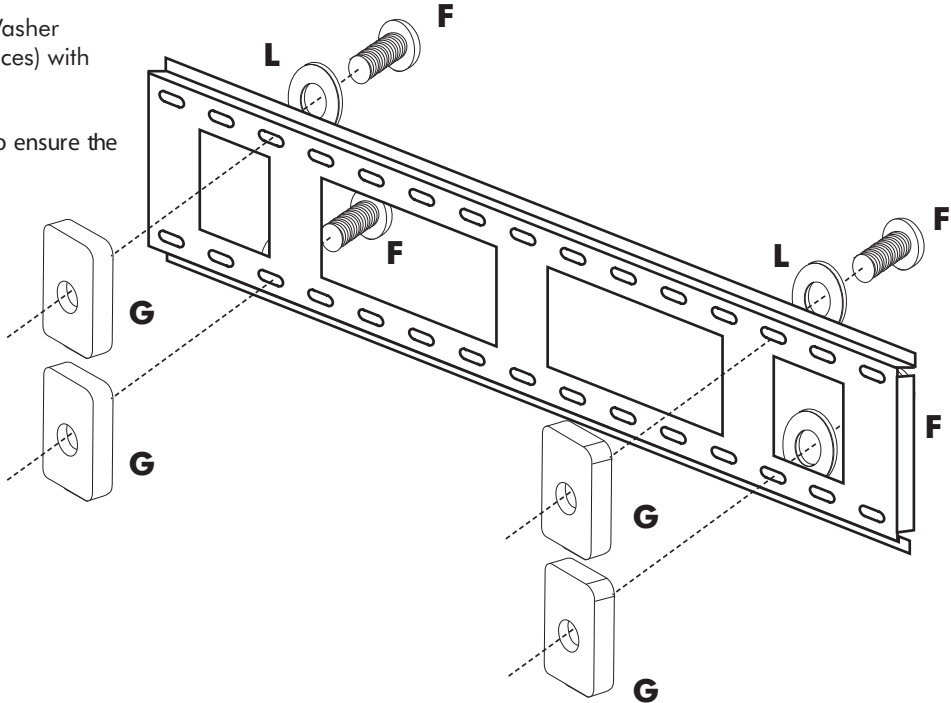


LIMITED WARRANTY- For five full years Salamander Designs Ltd. will repair or replace, at our option, any product defective in materials or craftsmanship. Salamander Designs Ltd. will not be responsible for any damage to or destruction of other equipment consequential to our equipment failure. Defective product must be given Return Authorization and is to be returned to the factory prepaid, in the original carton and packing material. Any damage incurred in a shipment not in original packaging shall be the responsibility of the owner. Warranty repairs will be returned prepaid, via UPS within the continental U.S.A. only.

6. INSTALL POST BRACKET WIRE MANAGERS & CAPS


Slide the post bracket into the posts as shown below, guiding the flat nuts (G) to ensure all parts slide freely.

Position the post bracket vertically along the posts where you wish the center of the television to rest.

Tighten button head screws (F) with hex key (H) to firmly set the bracket onto the posts.

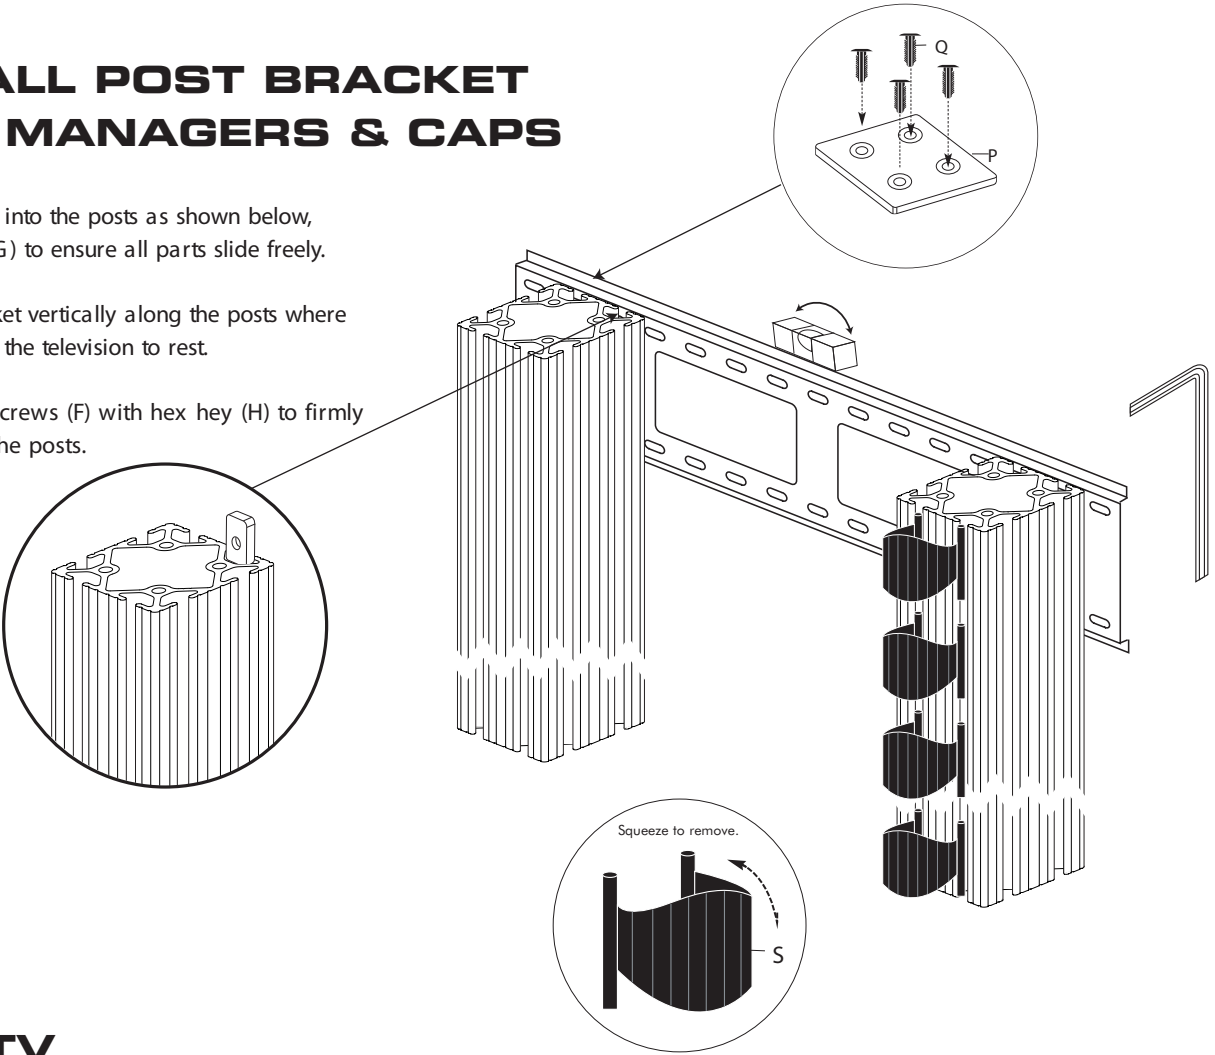


7. HANG TV

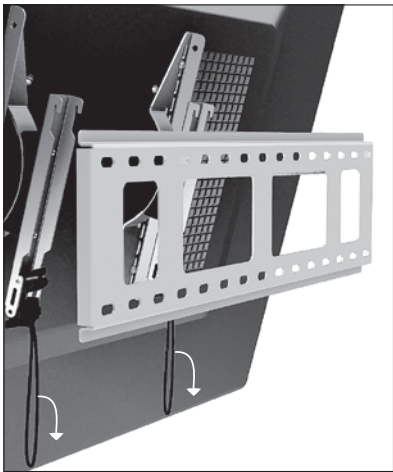


A

Pull on black cord to unlock Click Fasteners and hook TV Brackets (II) onto Wall Bracket (I) from top.

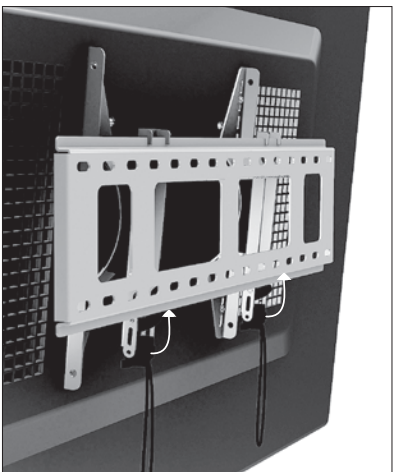

B

Center TV Brackets (II) on Wall Bracket (I) and push black Click Fasteners up into lock position.

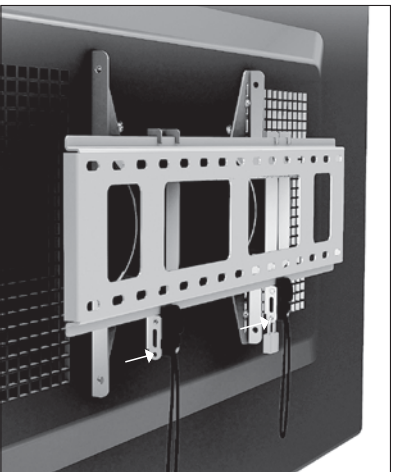

C

Install Pad Lock (IV).