



FOOT LOW PROFILE & TAPERED WOOD

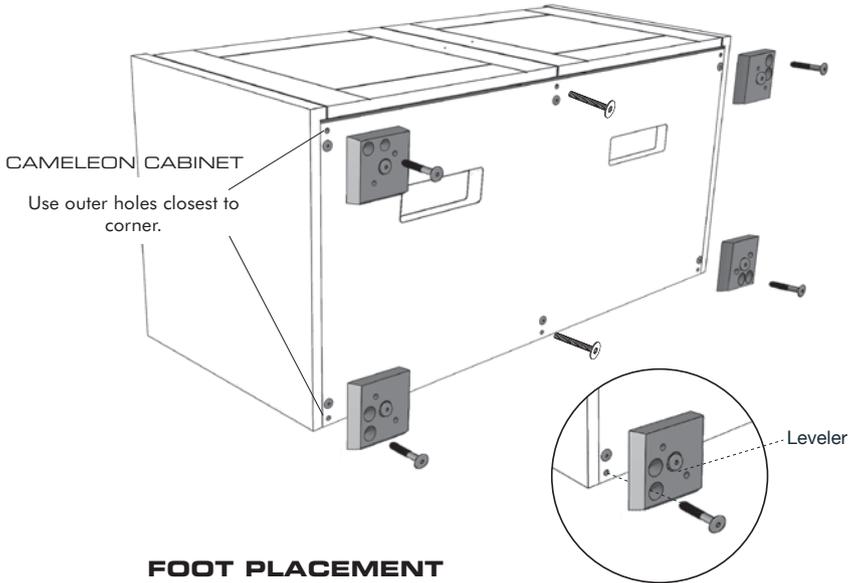

FOOT PLACEMENT

CHAMELEON

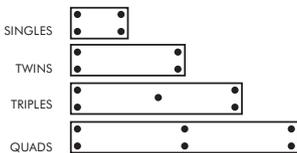

TIP: Level cabinet prior to loading with equipment.

ATTACHING FOOT

- Slide connector bolt through wood feet and into cabinet. Secure foot in place using hex key.
- Fasten posts not requiring feet with provided connector bolts.
- Level cabinet as needed with plastic levelers.