
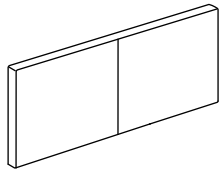






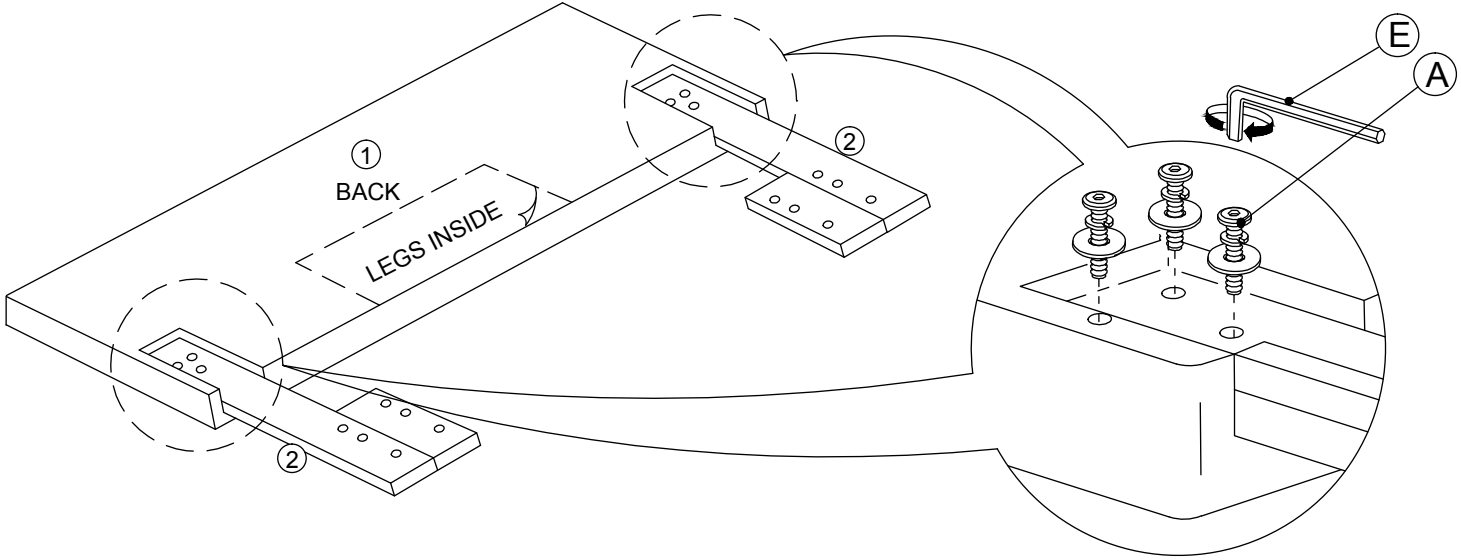


ASSEMBLY INSTRUCTION


ITEM : 5271-PU-FQ-HB

NO	PART LIST	QTY
HEAD BOARD		
1		1pc
HEAD BOARD LEG		
2		2pcs
NO	HARDWARE LIST	QTY
A	 JCBC SCREW M6 x 40mm (with washer)	6pcs
B	 JCBC SCREW M6 x 50mm	4pcs
C	 SPRING WASHER M6 x 12mm	4pcs
D	 FLAT WASHER M6 x 19mm	8pcs
E	 L - KEY M4 x 65mm	1pc
F	 HEX NUT	4pcs

STEP 1



STEP 2

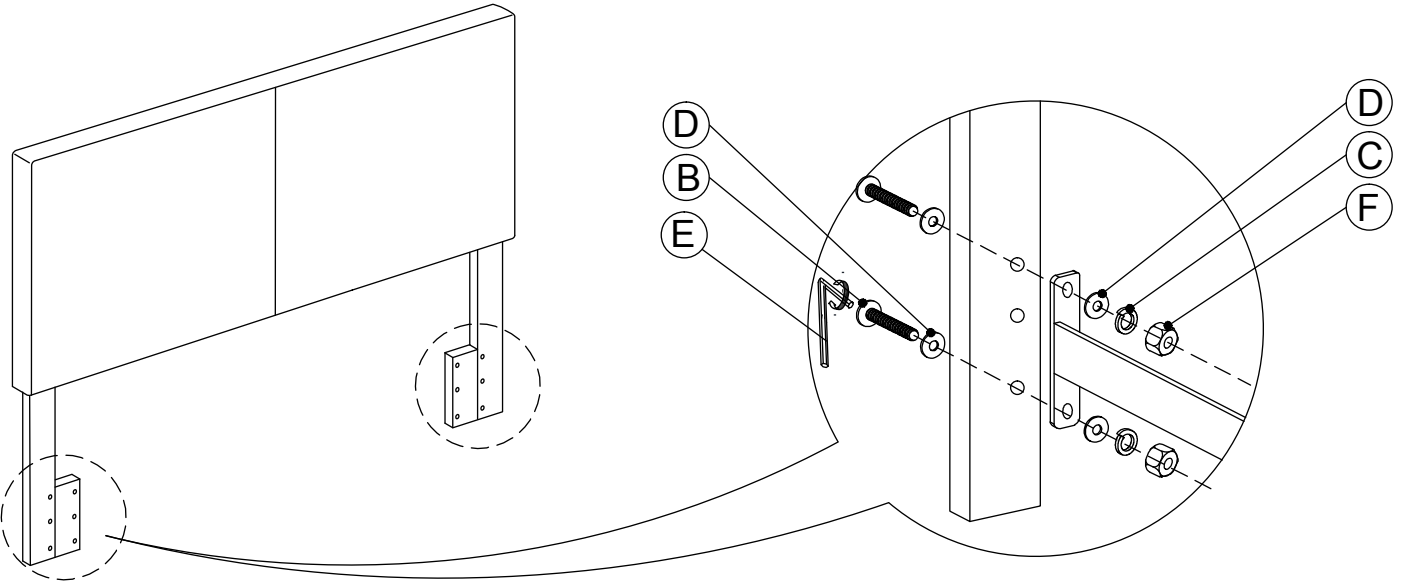

NOTE: AFTER A FEW DAYS OF ASSEMBLY, IT WILL HAVE ACCLIMATIZED TO THE ENVIRONMENT. PLEASE TIGHTEN ALL HARDWARE. CHECK TIGHTNESS OF ALL SCREWS EVERY 6-8 WEEKS.