
ASSEMBLY INSTRUCTIONS

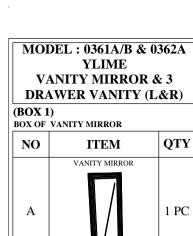


(BOX 2) BOX OF 3 DRW VANITY (L&R)

NO	ITEM	QTY
В	VANITY (L&R)	2 PCS
С	Tempered Glass Shelf 8mmx330mmx644mm	1 PC


(BOX 3) BOX OF STOOL

NO	ITEM	QTY
D	STOOL	1 PC

STEP 1: Before start your assembly please remove hardware pack from Top drawer of Vanity Right Side.

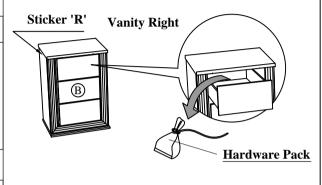

STEP 2 : Attach Mirror (A) to Vanity(L&R)(B) as shown. Insert ,Spring washer (2) , Flat Washer (3) and tighten JCBC Screw (1) using an Allen Key (4).

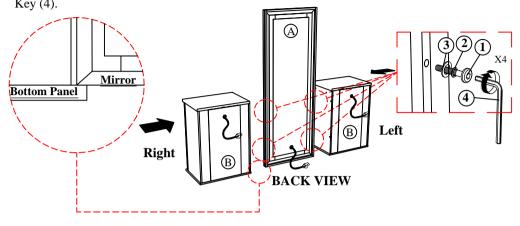

(BOX 1)
HARDWARE LIST ENCLOSED INSIDE VANTTY MIRROR

No	ITEM	Qty
1	JCBC Bolt m6x35mm Blk	4 pcs
2	Spring Washer 1/4" Blk	4 pcs
3	Flat Washer 1/4"IDx13mmOD Blk	4 pcs
4	ALLEN KEY m4x65mm Blk	1 pc

(BOX 2)

HARDWARE LIST ENCLOSED INSIDE VANITY RIGHT

No	ITEM	Qty
5	612V+12W+1A Adaptor With ETL	1 pc
6	Flat Head Chipboard Screw m3x12mm Rbw	4 pcs
7	Shelf Glass Holder	4 pcs

STEP 3 : Fixed the Glass holder (7) to the L&R Vanity (B) by following the pre-drilled hole provided . Secure with Csk Screw (6) and tighten them with Screw Driver(NOT PROVIDED).

