


# Margo Vanity Table

## Item #: CVMG800VTPL


### ASSEMBLY INSTRUCTIONS

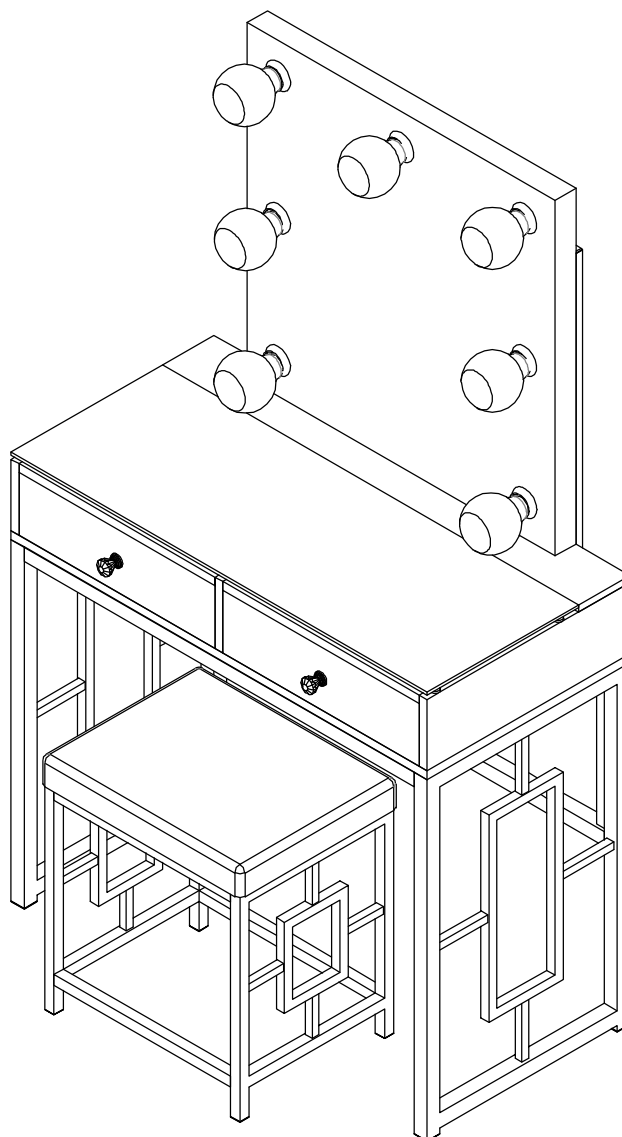

**Light bulbs are located inside the drawer.**

**Recommendation:** Replace clear 4W/6W LED filament bulb equivalent 40W/60W Incandescent.






**WARNING:**  
**RISK OF FIRE**  
**LED LIGHT BULB**  
**120V E26/MAX 25**  
**WATT (Per Light Bulb)**




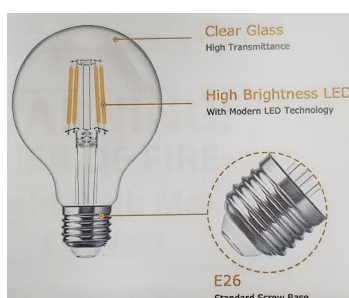










# ASSEMBLY INSTRUCTIONS

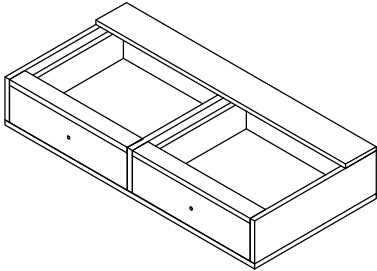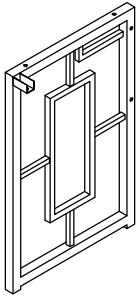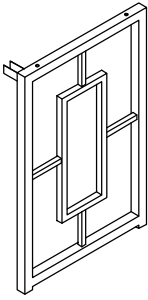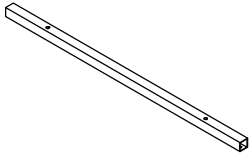
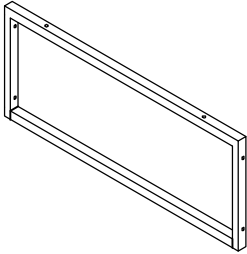




## Item #: CVMG800VTPL

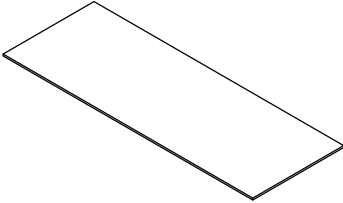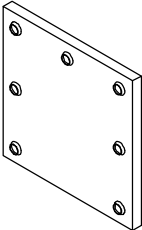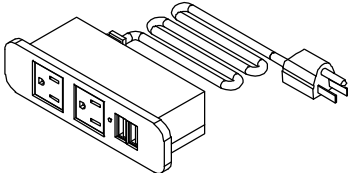
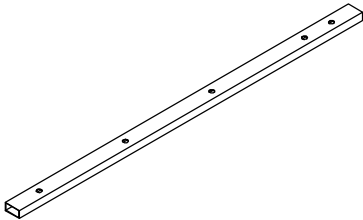
Please identify and locate all assembly parts (see parts list) before discarding any packing materials.  
Some parts may have become loose during transit.

PARTS LIST			
NO.	SKETCH	DESCRIPTION	QTY
1		VANITY TOP	1PC
2		LEFT FRAME	1PC
3		RIGHT FRAME	1PC
4		CROSSBAR	1PC
5		BACK FRAME	1PC

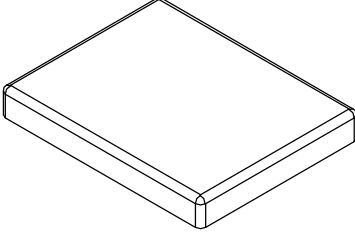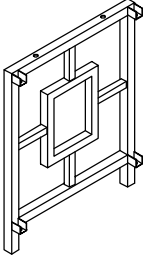NO.	SKETCH	DESCRIPTION	QTY
6		GLASS	1PC
7		MIRROR	1PC
8		POWER OUTLET	1PC
9		SUPPORT CROSSBAR	2PCS
10		DRAWER PULL (Install inside the drawer.)	2PCS
11		CAP (Install inside the drawer.)	2PCS

NO.	SKETCH	DESCRIPTION	QTY
12		LIGHT BULB	8PCS
13		STOOL CUSHION	1PC
14		CHAIR FRAME	2PCS
15		CHAIR CROSSBAR	4PCS
16		SHORT BOLT 1/4" x 12mm	12PCS
17		MEDIUM BOLT 1/4" x 30mm	8PCS

NO.	SKETCH	DESCRIPTION	QTY
18		LONG BOLT 1/4" x 35mm	18PCS
19		HANDLE BOLT 5/32" x 22mm (Install inside the drawer.)	2PCS
20		SCREW 3.5 x 12mm	2PCS
21		GLASS TIP	6PCS
22		RETANGULAR CAP 13 x 26mm	4PCS
23		LARGE SQUARE CAP 25 x 25mm	4PCS

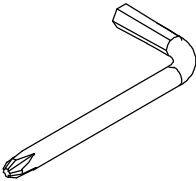
NO.	SKETCH	DESCRIPTION	QTY
24		<b>SMALL SQUARE CAP</b> 20 x 20mm	<b>4PCS</b>
25		<b>ALLEN KEY</b> 4mm	<b>4PCS</b>

**NOTE:** Do not tighten until each step is completed or instructed.


**Step 1:** 1. Insert Large Square Cap (23) onto the Left Frame (2) and Right Frame (3).

2. Attach Crossbar (4) to the Left Frame (2) and Right Frame (3) using Short Bolt (16) with Allen Key (25).


3. Attach Back Frame (5) to the Left Frame (2) and Right Frame (3) using Long Bolt (18) with Allen Key (25).

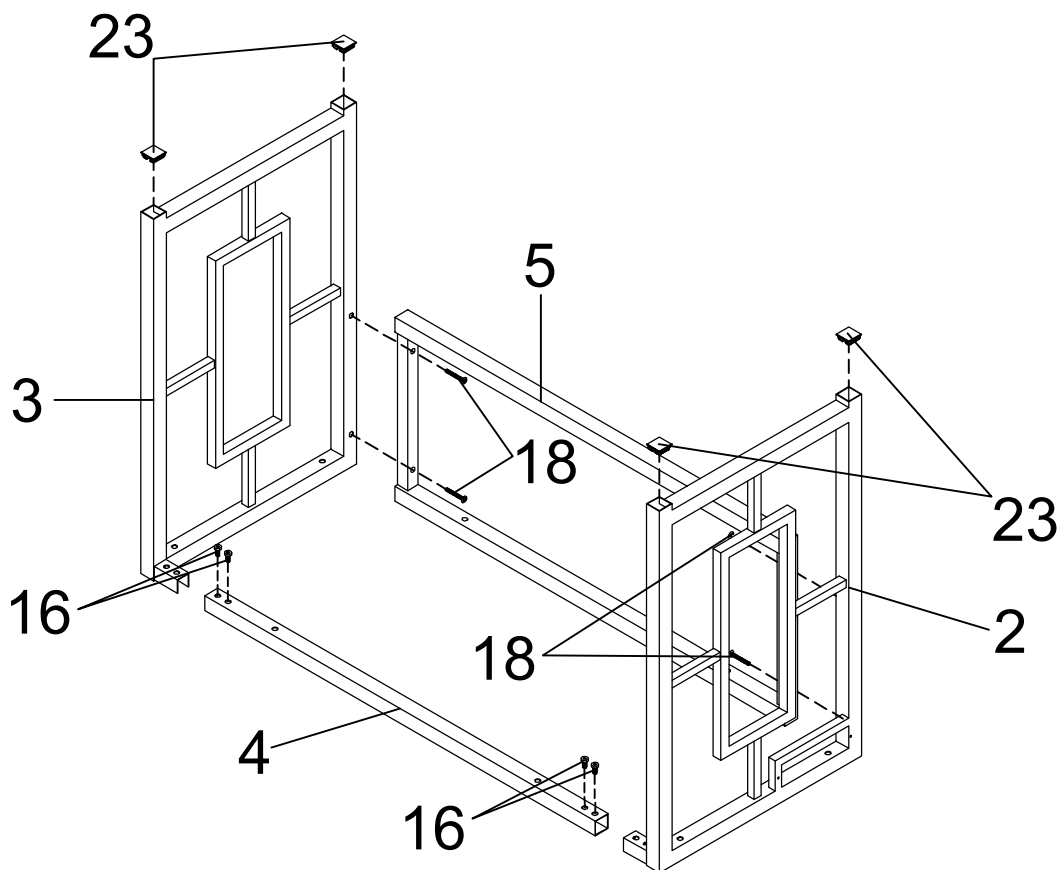


Step 2: Turn the Vanity Top (1) upside down on a protective surface. Attach the base on the Vanity Top (1) using Medium Bolt (17) and Long Bolt (18) with Allen Key (25).

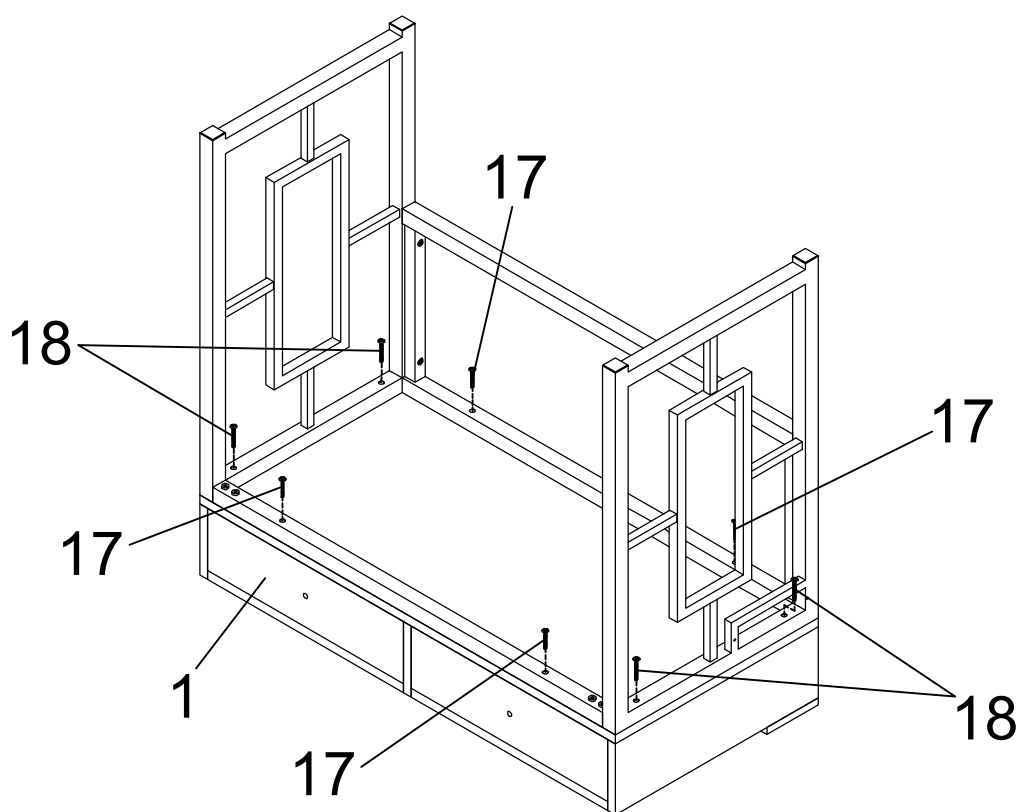


Step 3: Install Drawer Pull (10) and Cap (11) to the Drawer using Handle Bolt (19).

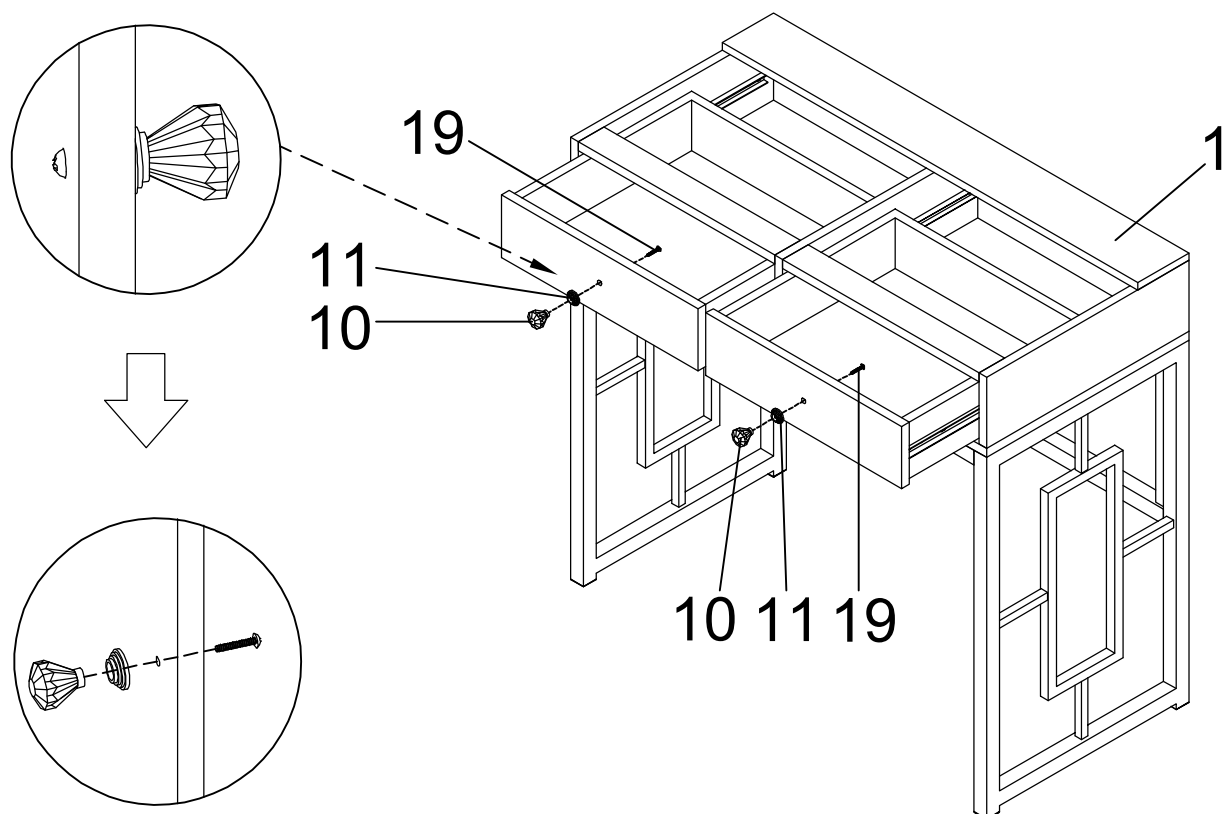

Step 4: Install Glass Tip (21) on the Vanity Top (1). And then place the Glass (6) on the Glass Tip (21).

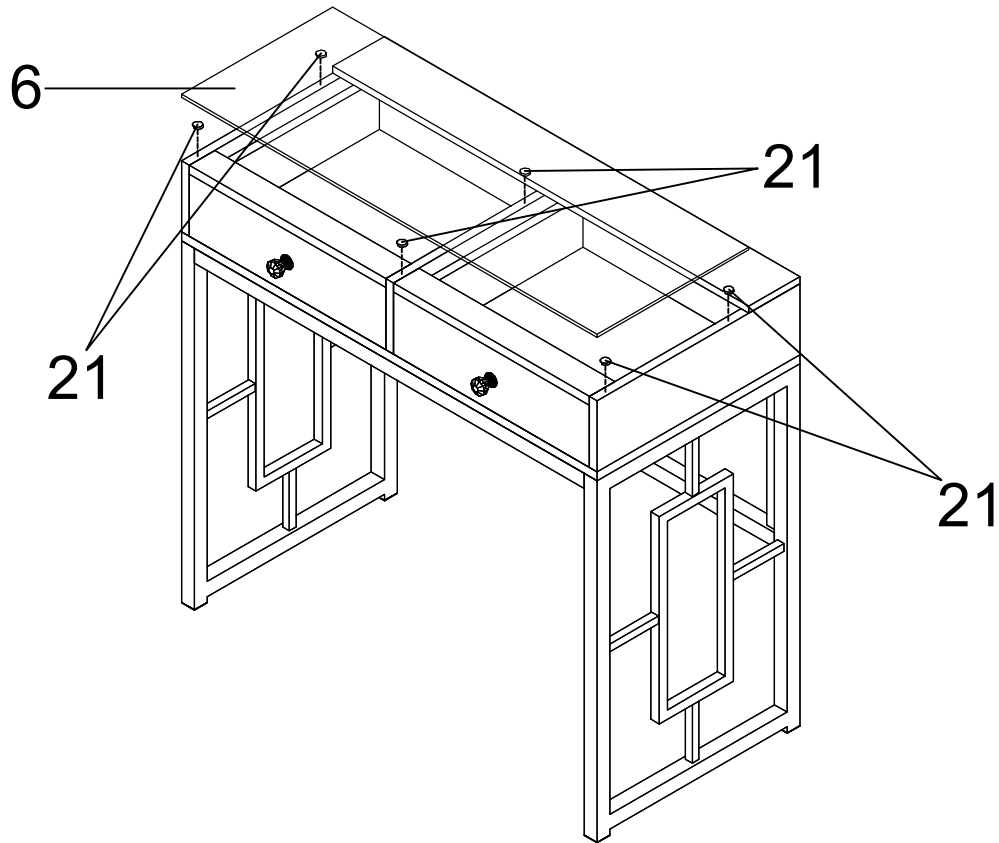


Step 5: Insert Rectangular Cap (22) on the Support Crossbar (9). Place Mirror (7) on the Step4. Attach Support Crossbar (9) to the Vanity Top (1) and Mirror (7) using Long Bolt (18) with Allen Key (25).

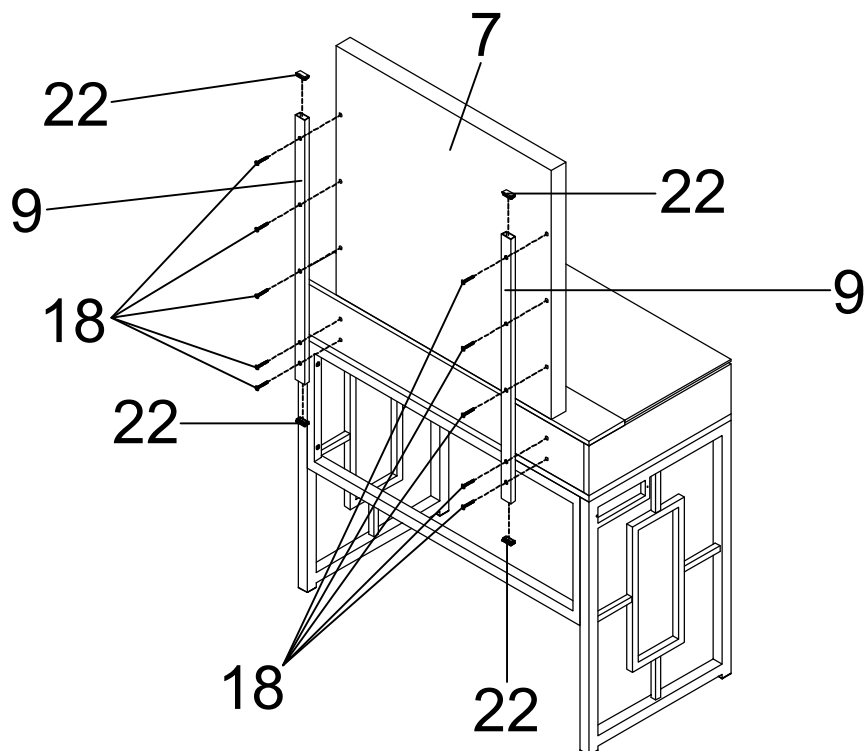





Step 6: Install Power Outlet (8) to the Left Frame (2) using Screw (23) with Allen Key (25).

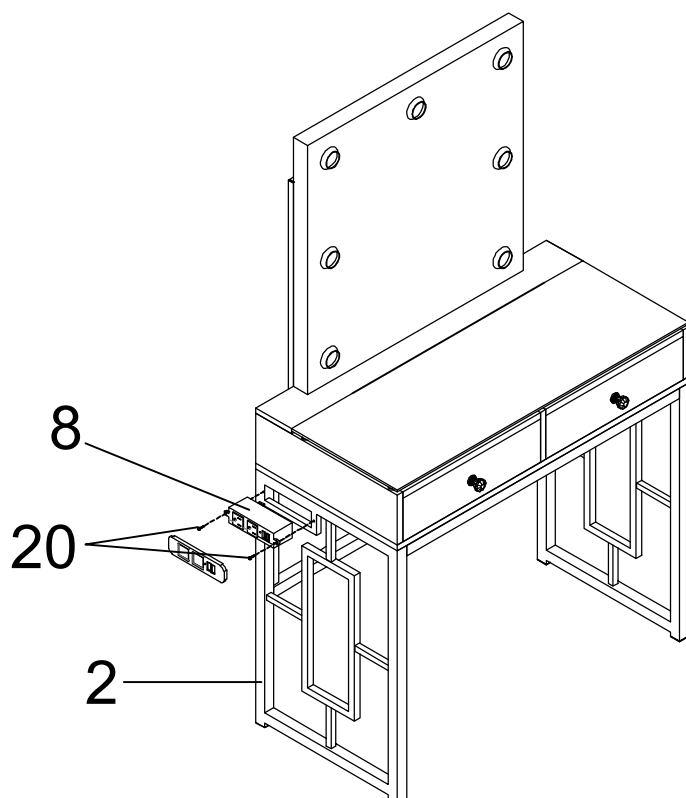


Step 7: Install Light Bulbs (12) to the Mirror (7) as shown.  
Light Bulbs (12) are located inside the drawer.

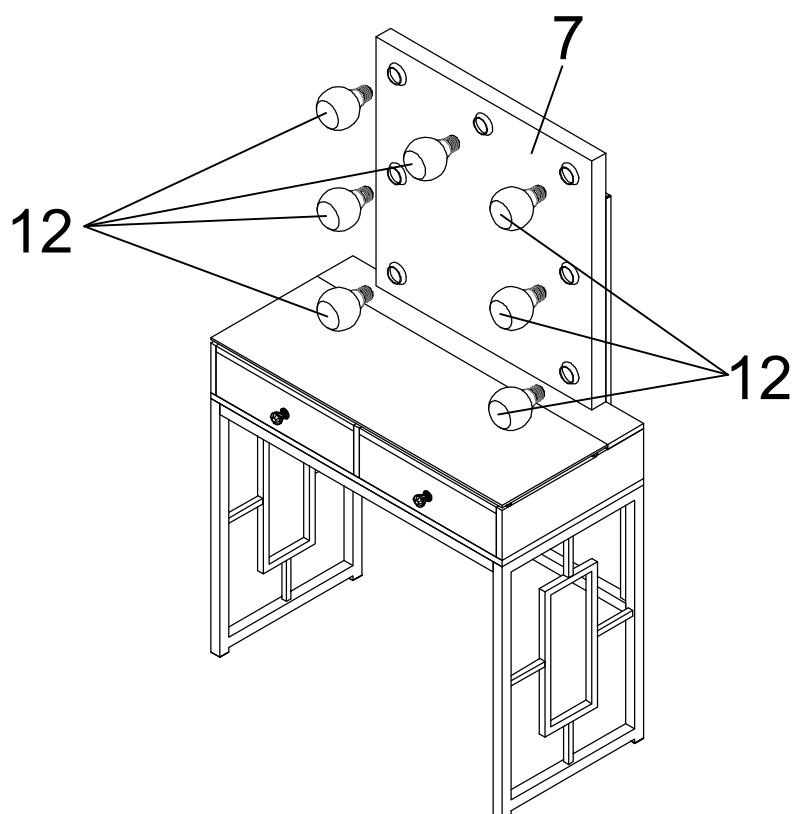

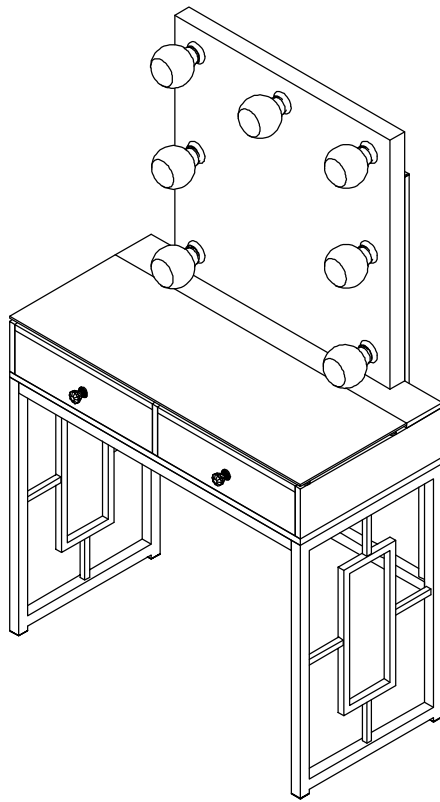

Complete. Congratulations on your assemble success.

Step 8: Attach Chair Crossbar (15) to Chair Frame (14) usnig Short Bolt (16) with Allen Key (25)

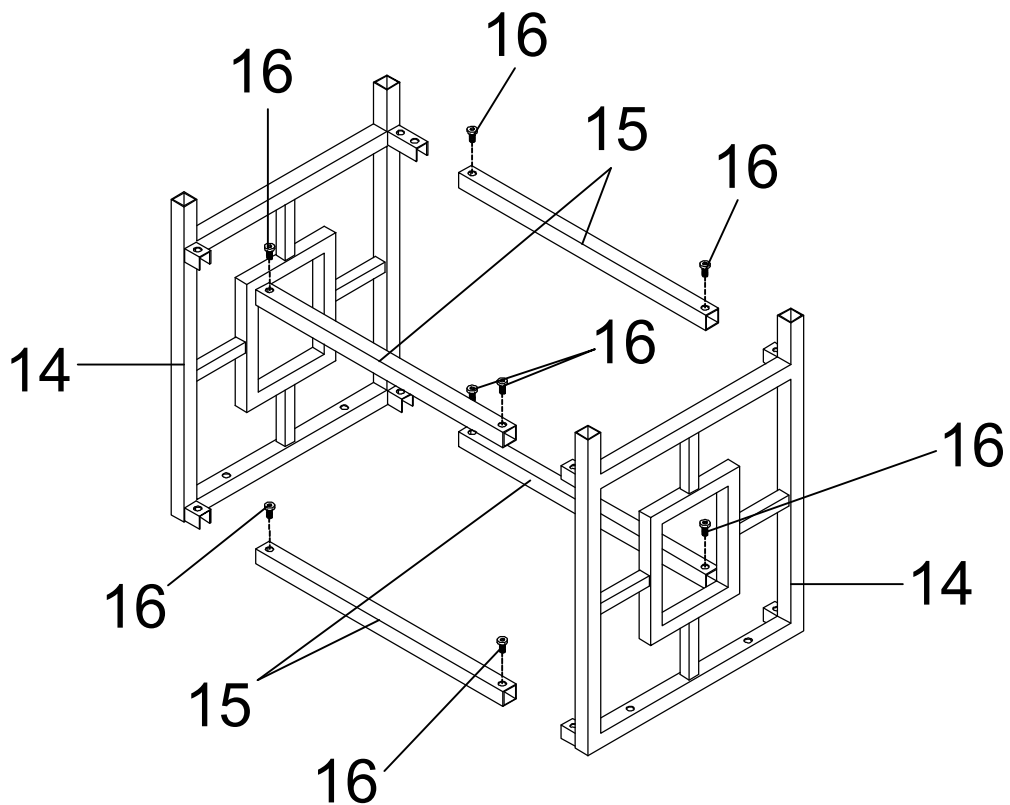

Step 9: Insert Small Square Cap (24) onto the Chair Frame (14). Attach Step 8 to the Stool Cushion (13) using Medium Bolt (17) with Allen Key (25).

