

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

222520Q(B1-B3)
Queen Bed

ITEM: 222520Q(B1-B3)

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.





ASSEMBLY TIME


30 MINUTES

PARTS IDENTIFICATION




B1 (BOX 1)

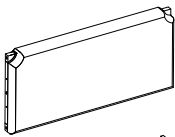A	HEADBOARD PANEL		1PC
B	HEADBOARD BOTTOM RAIL		1PC
C	FOOTBOARD		1PC
D	CONCEAL PANEL		4PCS

B2 (BOX 2)

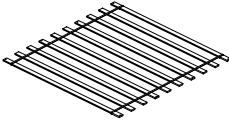E	BED RAIL		2PCS
F	ROLL SLAT (10 PCS)		1SET
G	CENTER RAIL		1PC
H	CENTER RAIL SUPPORT WITH LEVELER		4PCS

B3 (BOX 3)

I	LEFT HEADBOARD POST WITH LABEL "I"		1PC
J	RIGHT HEADBOARD POST WITH LABEL "J"		1PC
K	LEFT FOOTBOARD POST WITH LABEL "K"		1PC
L	RIGHT FOOTBOARD POST WITH LABEL "L"		1PC
M	CANOPY SHORT RAIL WITH LABEL "M"		2PCS
N	CANOPY LONG RAIL WITH LABEL "N"		2PCS

ITEM: 222520Q(B1-B3)

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 222520Q(B1)

1	LONG BOLT (5/16" x 50mm - BLK)		12PCS
2	LOCK WASHER (1.6 x 14mm - BLK)		8PCS
3	FLAT WASHER (2 x 19mm - BLK)		8PCS
4	CURVE WASHER (2 x 27mm - BLK)		4PCS
5	ALLEN WRENCH (M5 x 65mm - BLK)		1PC
6	WOOD DOWEL (10 x 40mm - BRW)		12PCS

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 222520Q(B2)

2	LOCK WASHER (1.6 x 14mm - BLK)		4PCS
3	FLAT WASHER (2 x 19mm - BLK)		4PCS
7	SHORT BOLT (5/16" x 19mm - BLK)		4PCS
8	SHORT THREADED BOLT (5/16" x 80mm - WHT)		8PCS
9	HEX NUT (5/16" x 13mm - WHT)		8PCS
10	HALF ROUND NUT (22 x 17 x 10mm - WHT)		8PCS
11	WRENCH (13mm - WHT)		1PC
12	FLAT HEAD SCREW (8 x 38mm - BLK)		8PCS

Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 222520Q(B3)

9	HEX NUT (5/16" x 13mm - WHT)		8PCS
10	HALF ROUND NUT (22 x 17 x 10mm - WHT)		8PCS
11	WRENCH (13mm - WHT)		1PC
13	LONG THREADED BOLT (5/16" x 150mm - WHT)		8PCS


NOTE :

Philips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: 222520Q(B1-B3)

ASSEMBLY INSTRUCTIONS

STEP 1

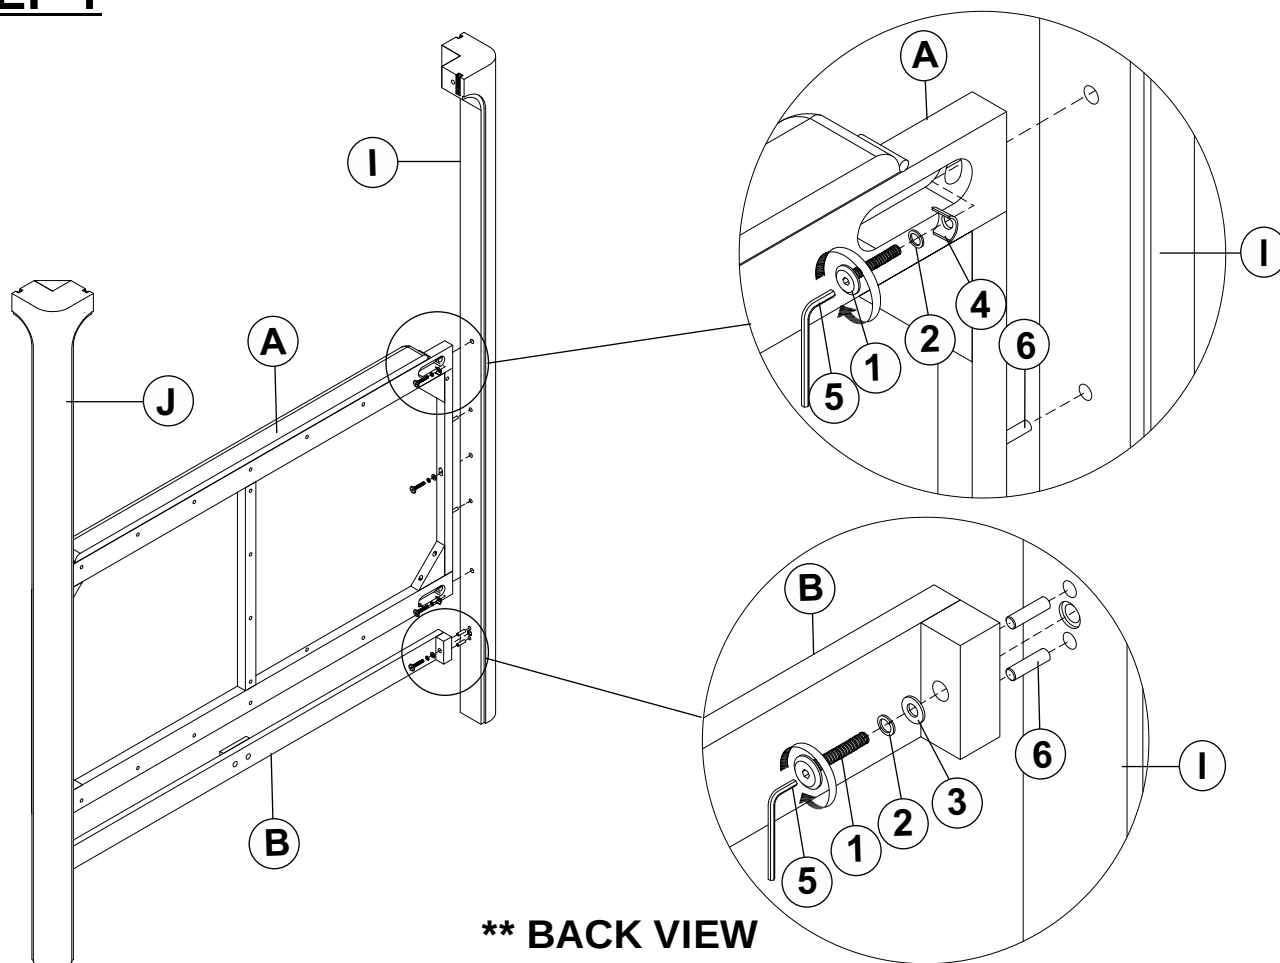

STEP 2

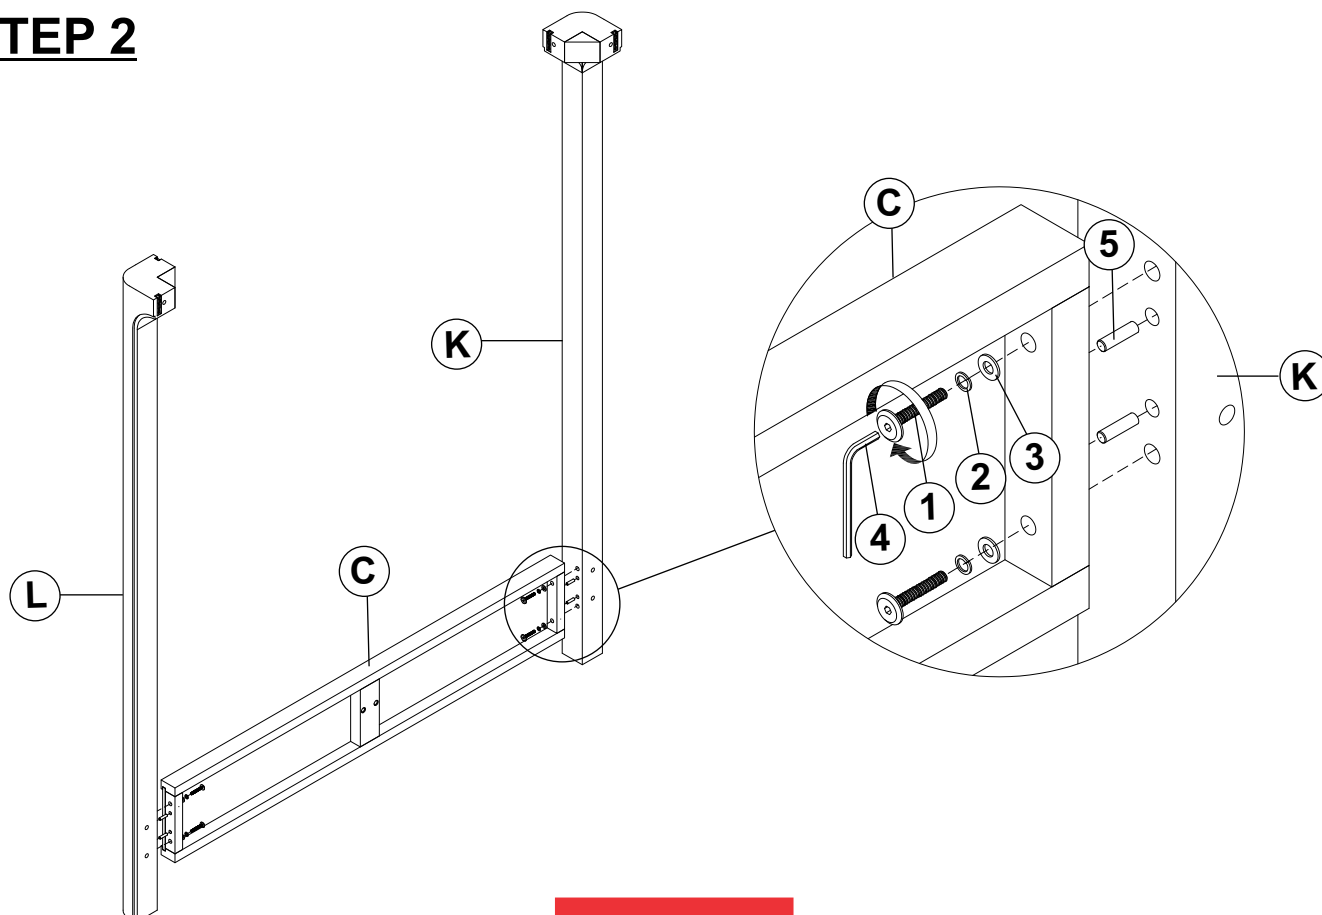


ITEM: **222520Q(B1-B3)**

ASSEMBLY INSTRUCTIONS




STEP 3


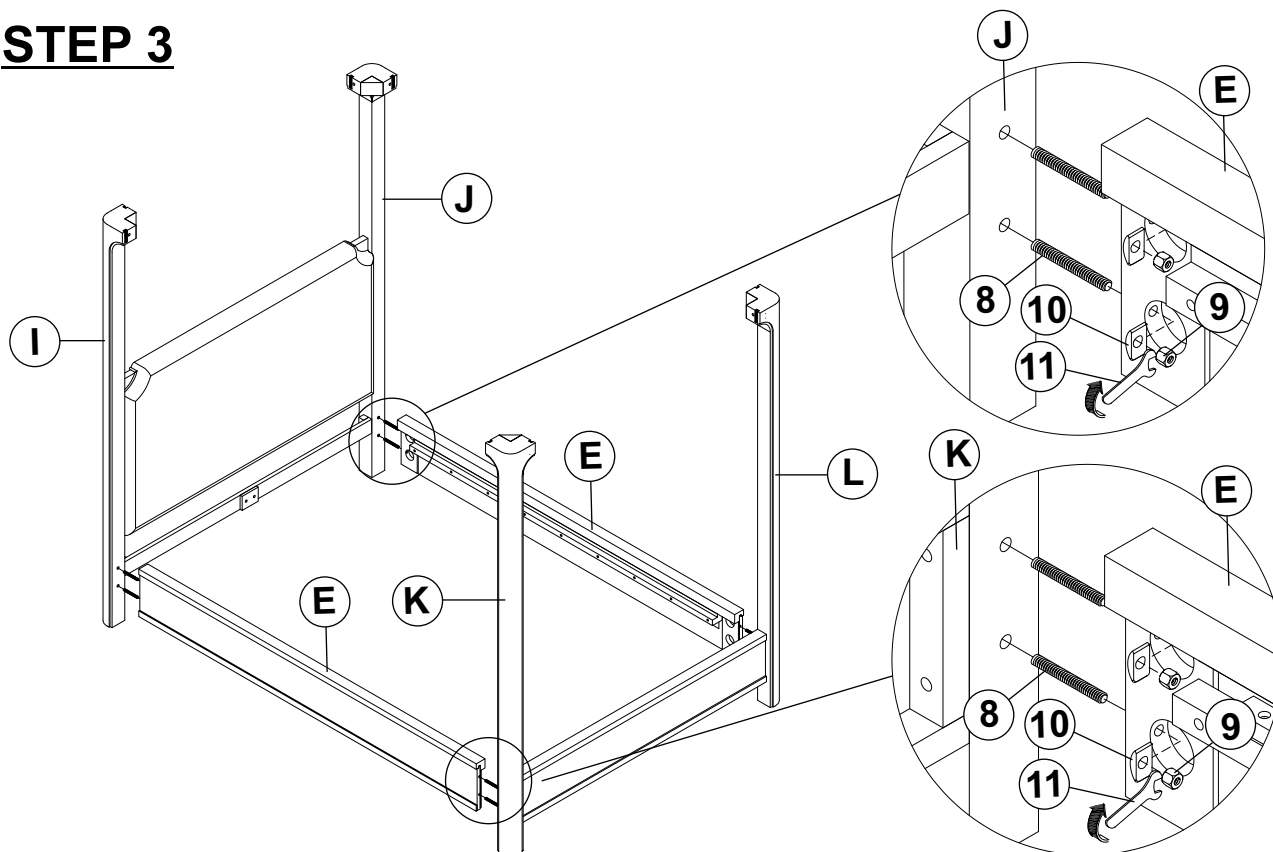


STEP 4

4.1

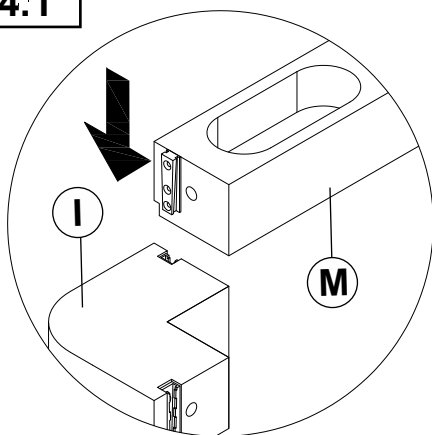


4.2

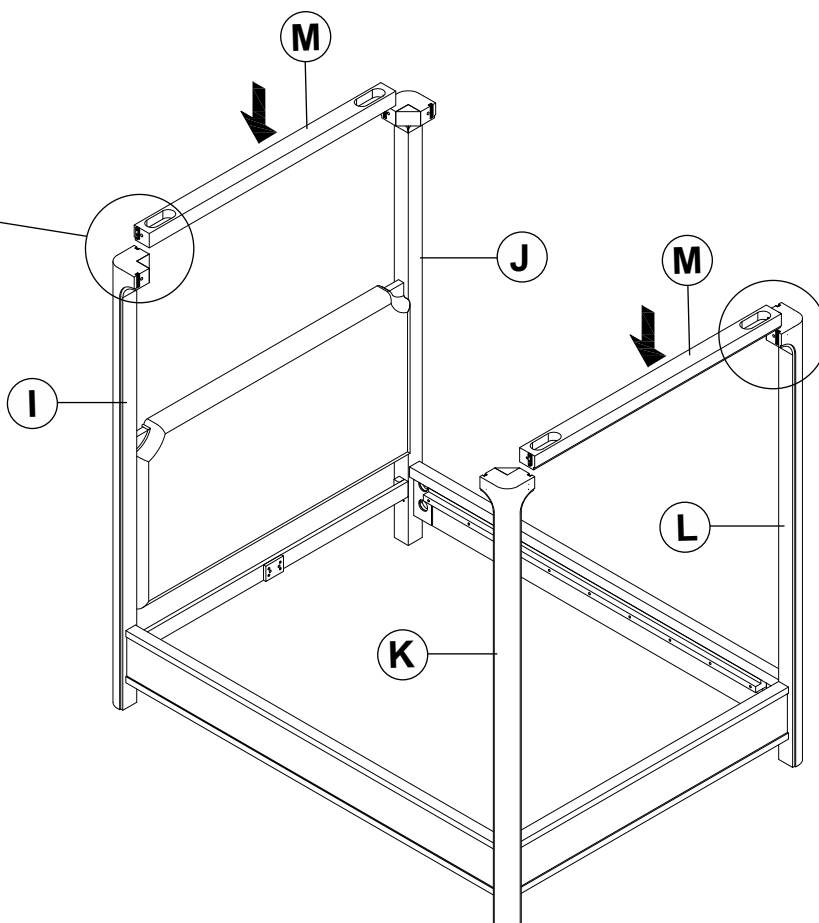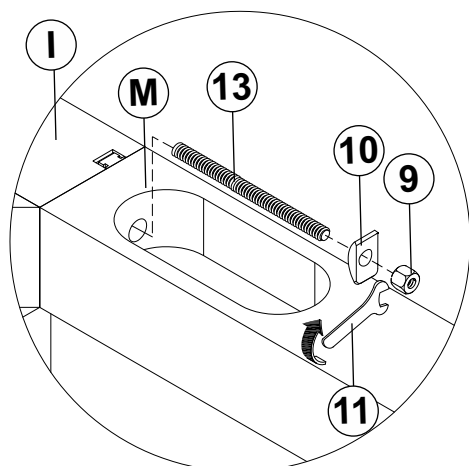


ITEM: 222520Q(B1-B3)

ASSEMBLY INSTRUCTIONS

STEP 5

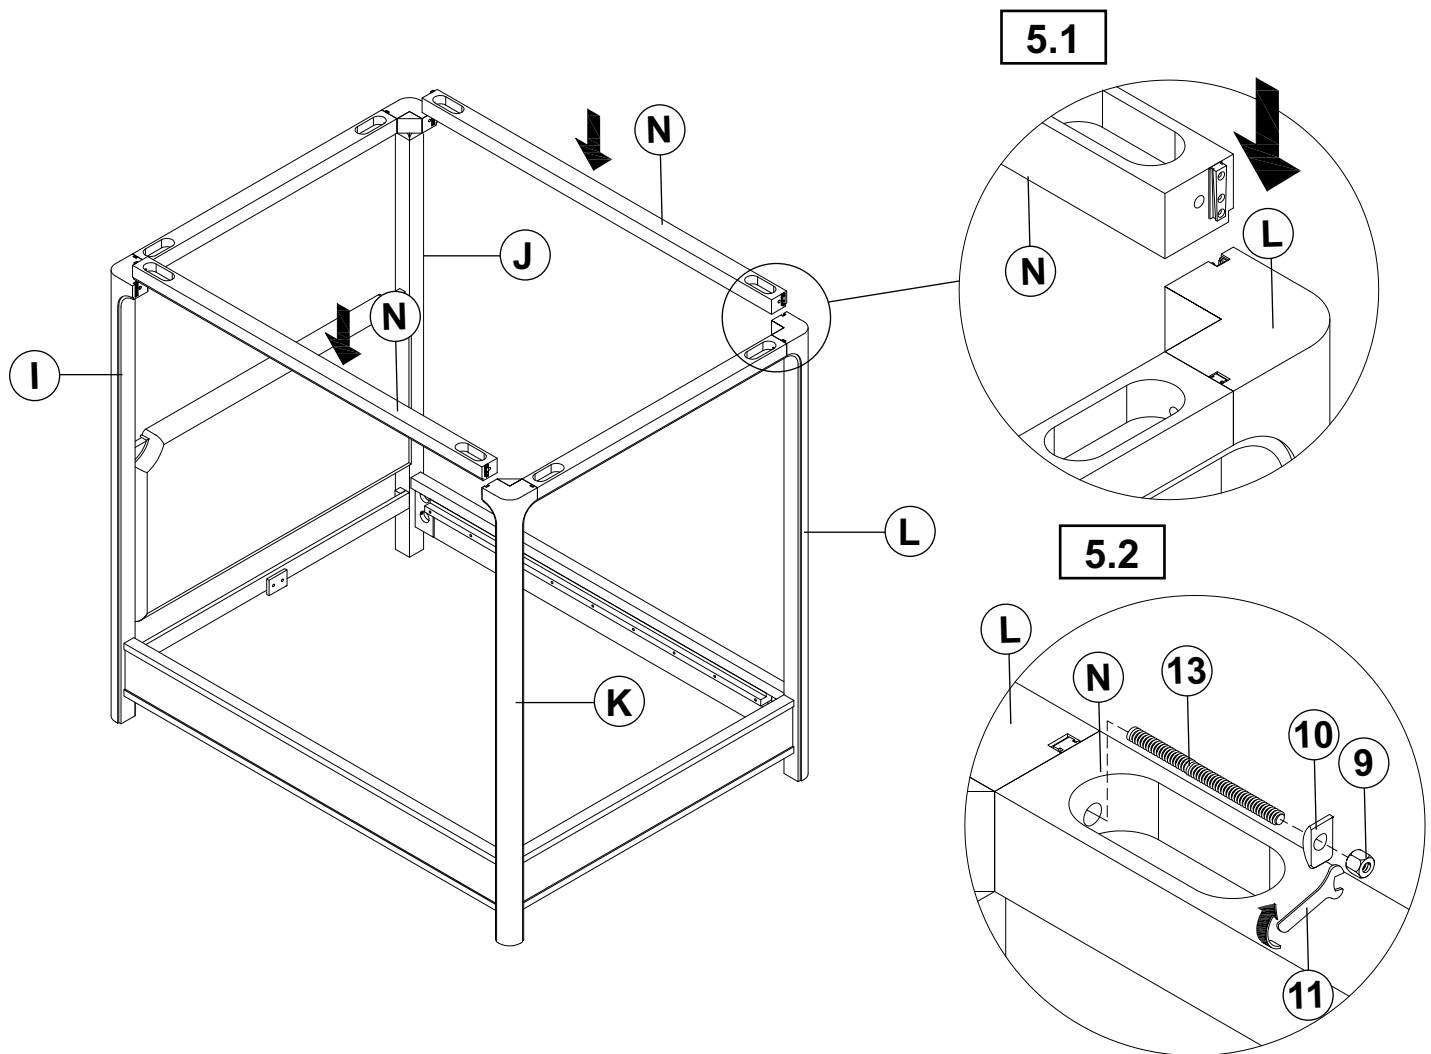

STEP 6

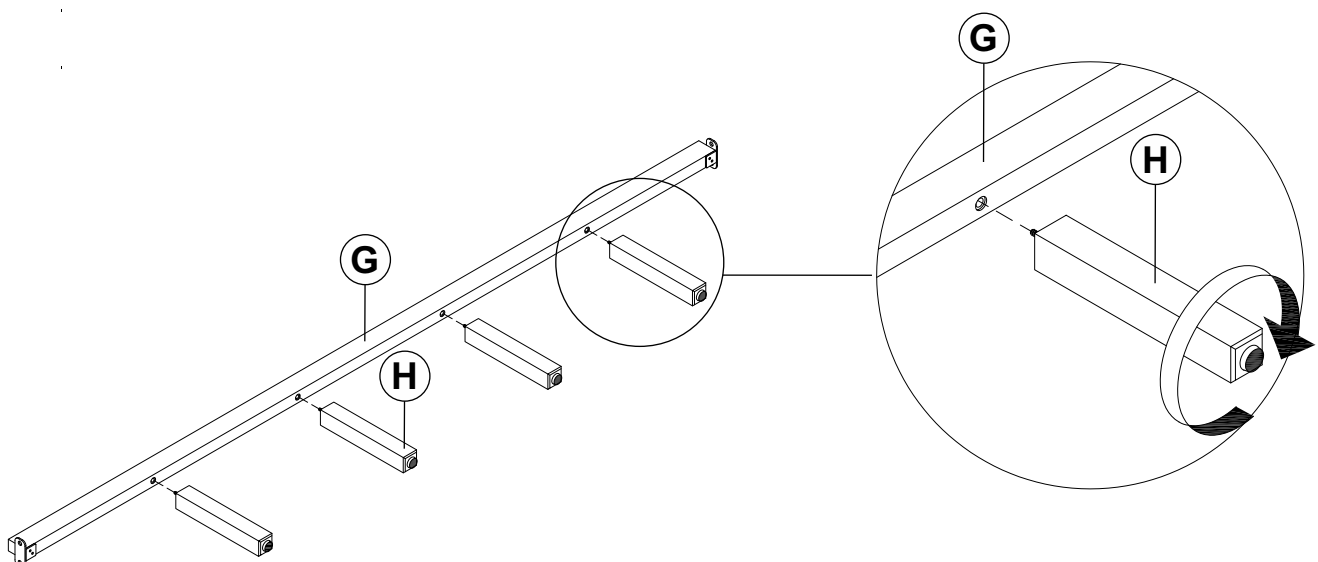


ITEM: 222520Q(B1-B3)


ASSEMBLY INSTRUCTIONS



STEP 7

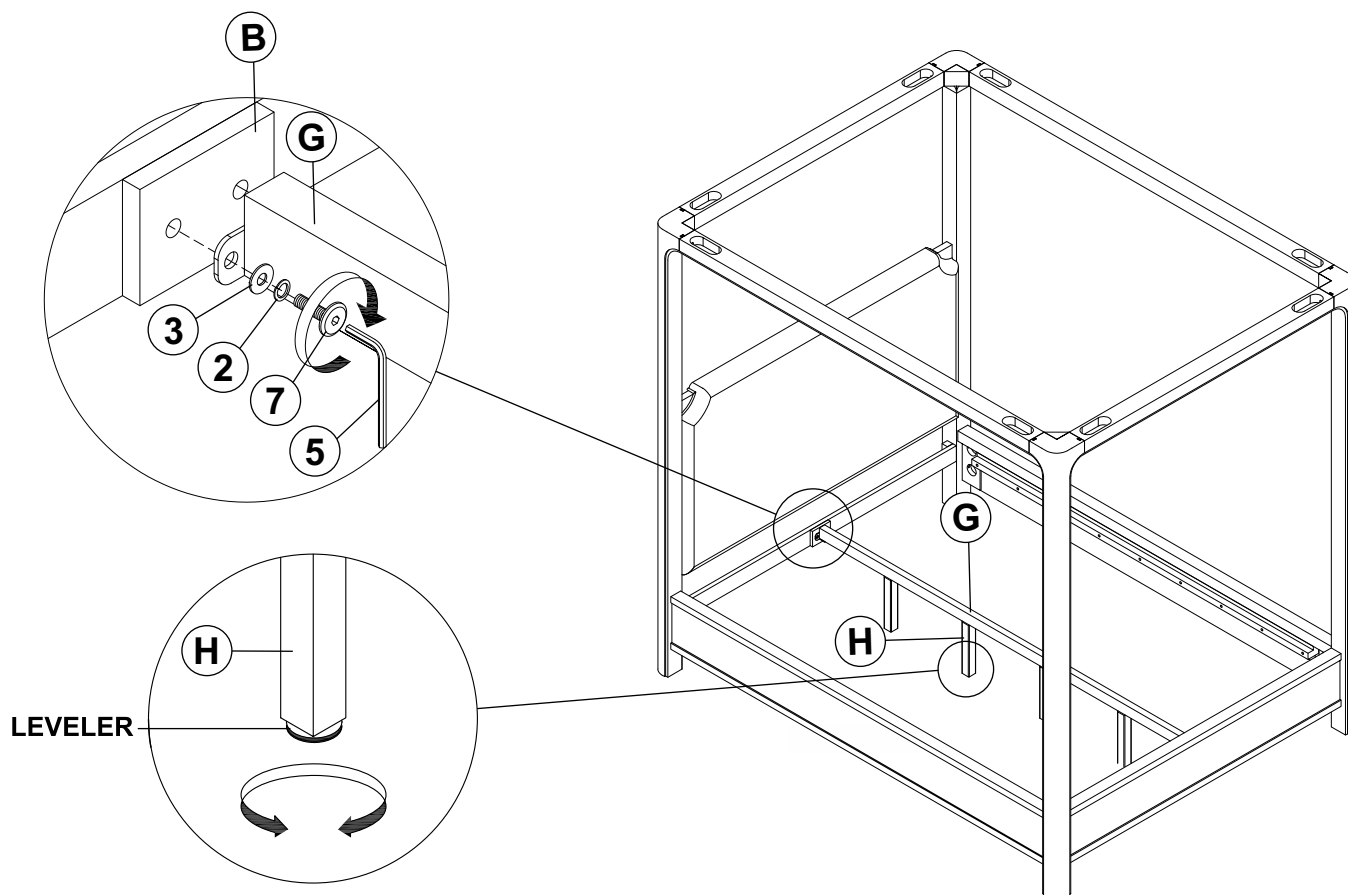

STEP 8

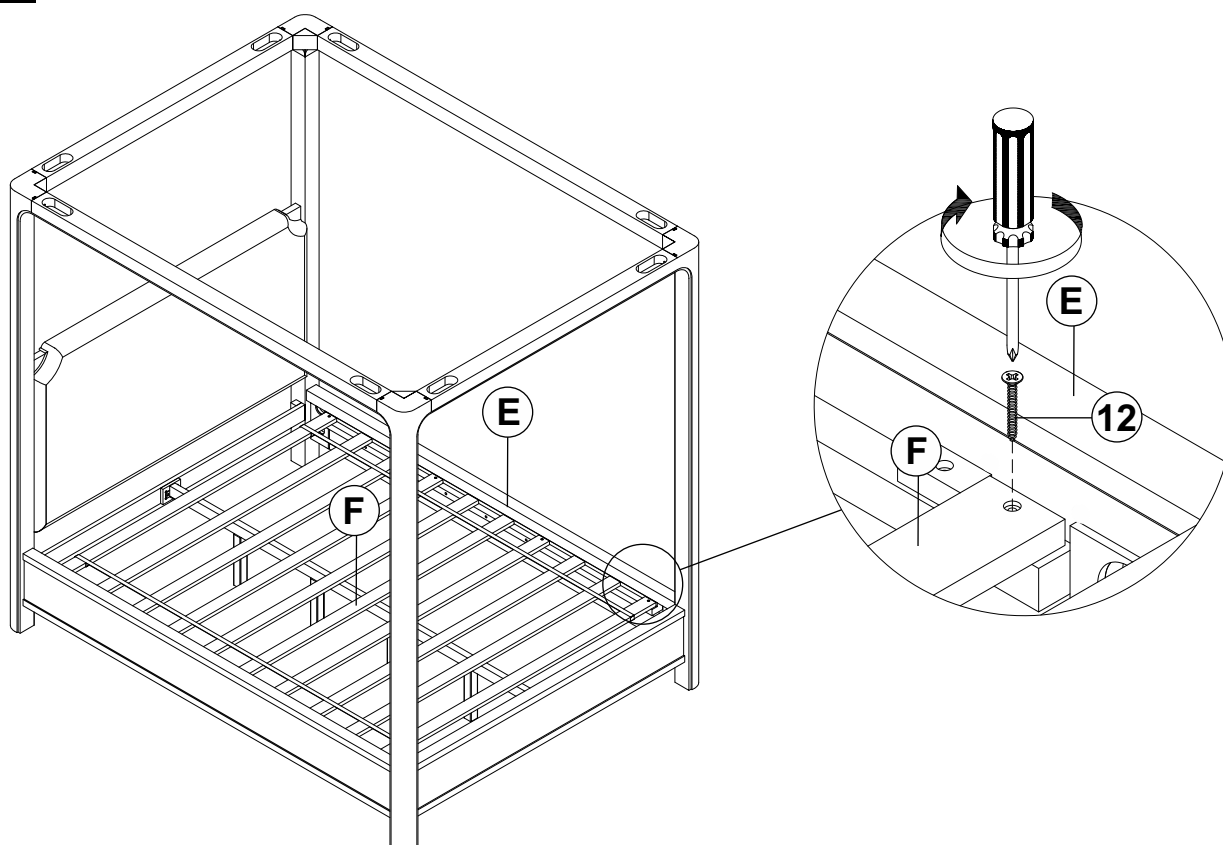


ITEM: **222520Q(B1-B3)**


ASSEMBLY INSTRUCTIONS



STEP 9

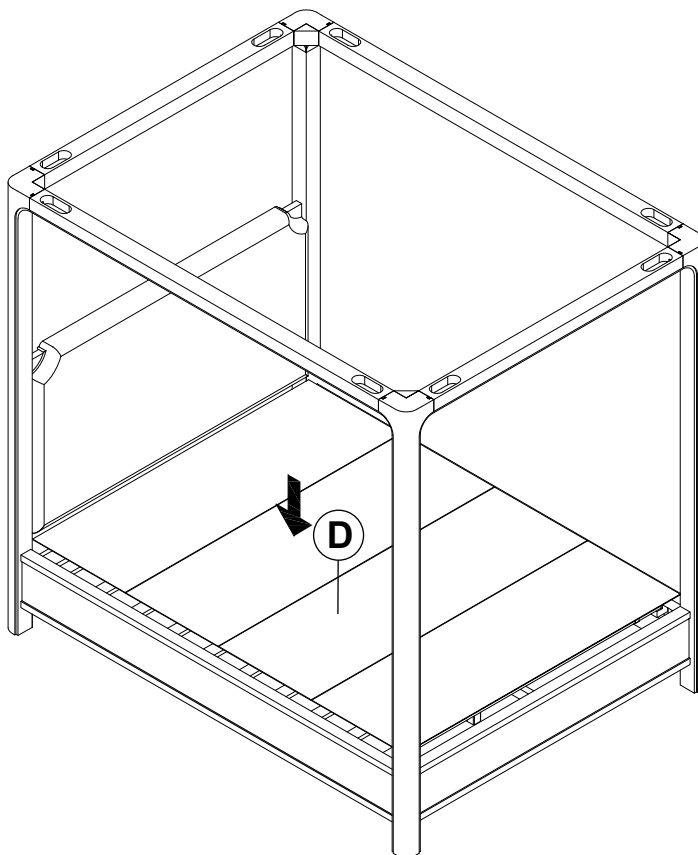


STEP 10 **COMPLETE**

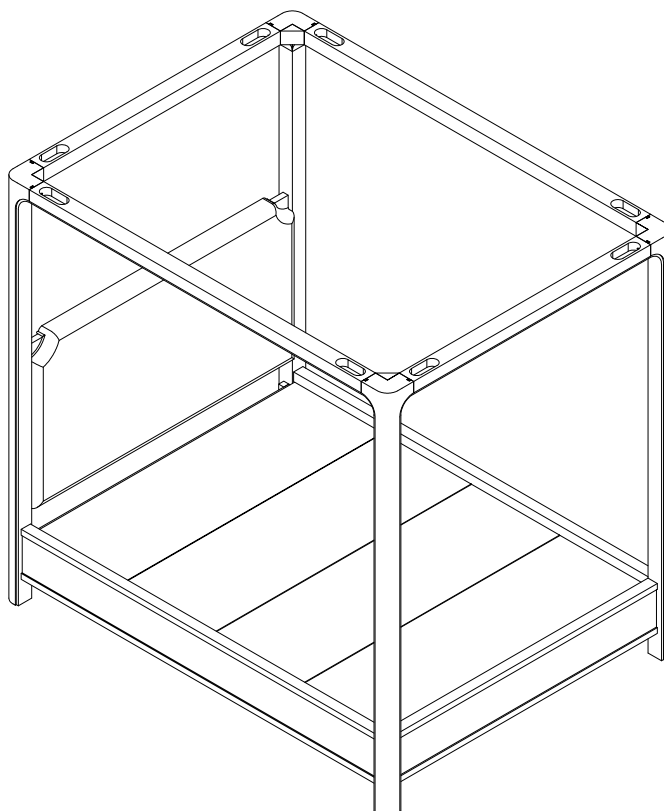

ITEM: **222520Q(B1-B3)**



Inner Size : 61.00"W x 82.00"D

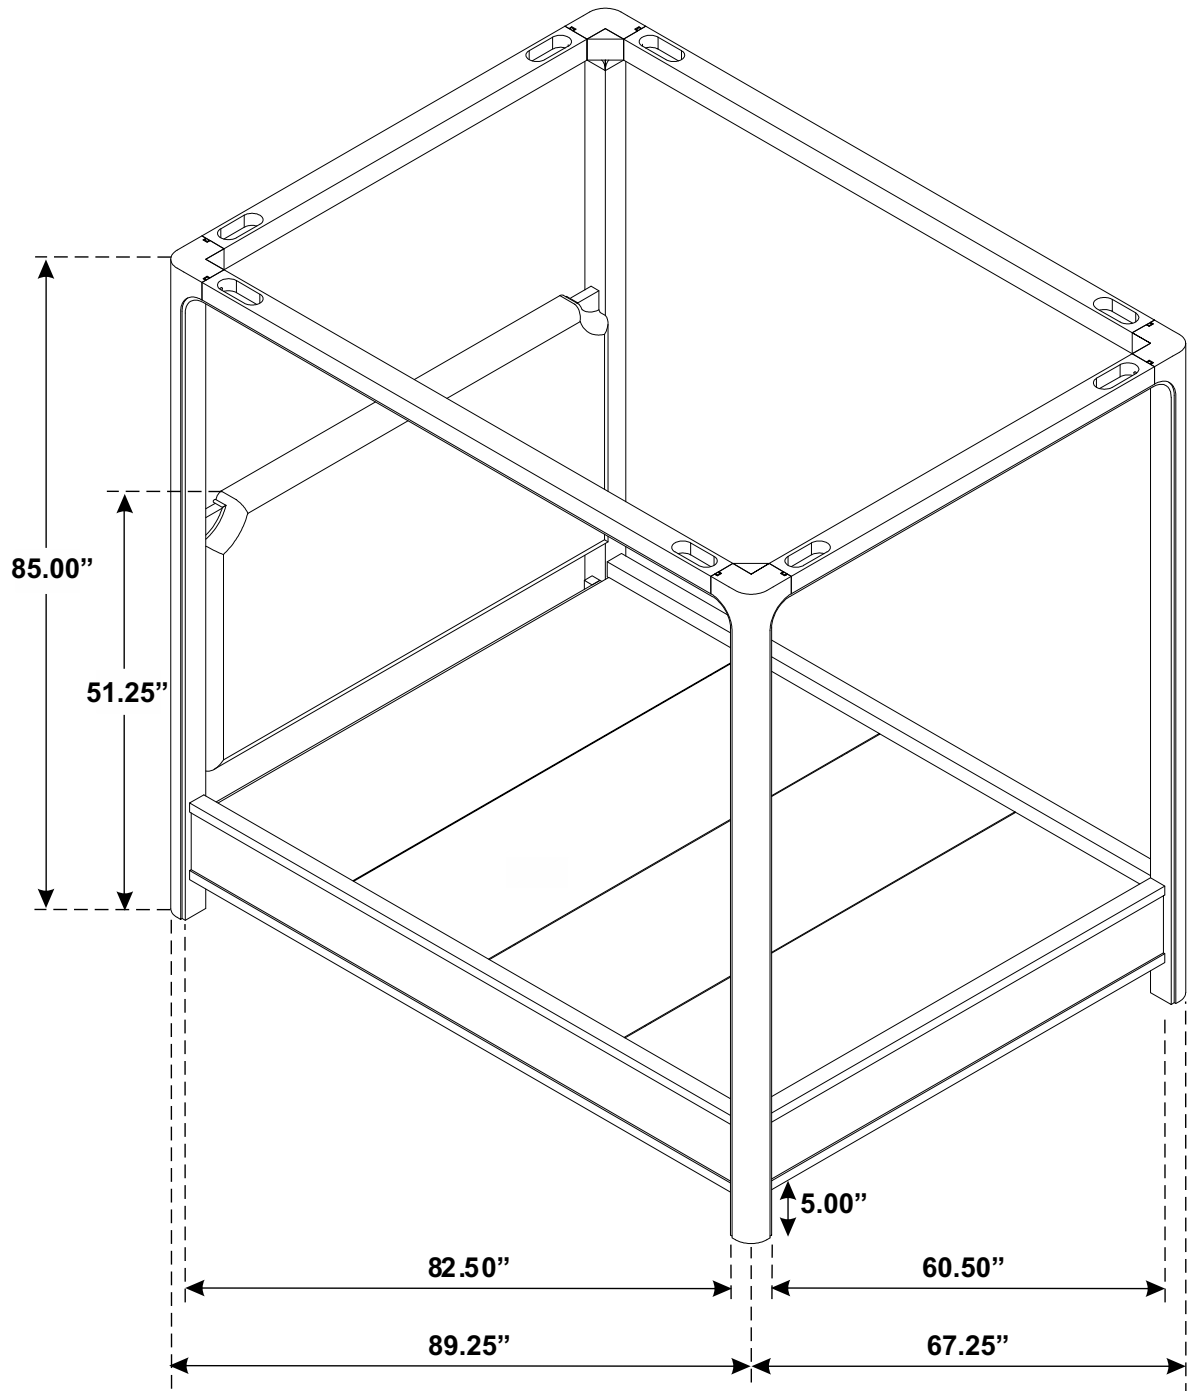

Note: Dimension tolerance $\pm 5\%$