



U3906 ASSEMBLY INSTRUCTION


CAUTION: For your safety, this product requires two people to lift.

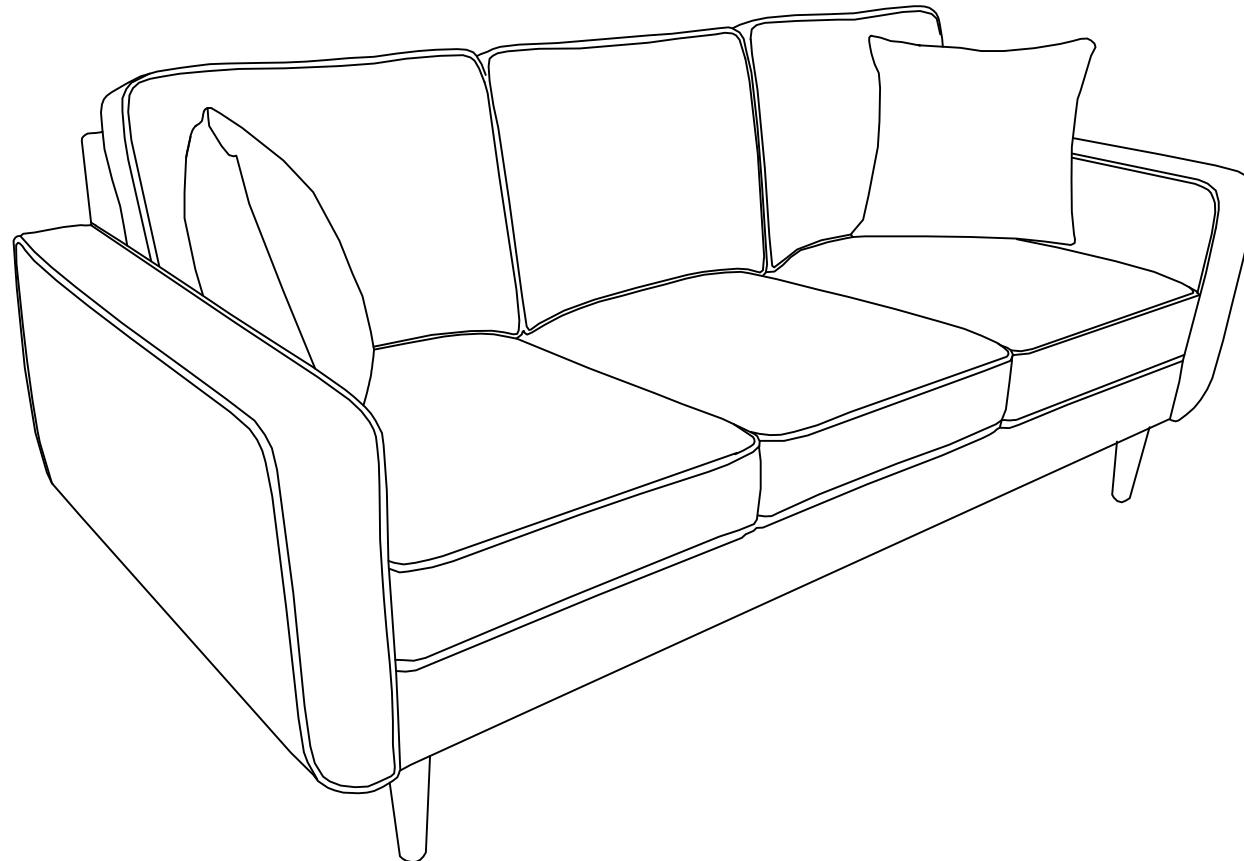

	PARTS AND HARDWARE	QTY
	WOOD LEG W/BOLT	4X
	WOOD LEG W/BOLT	1X

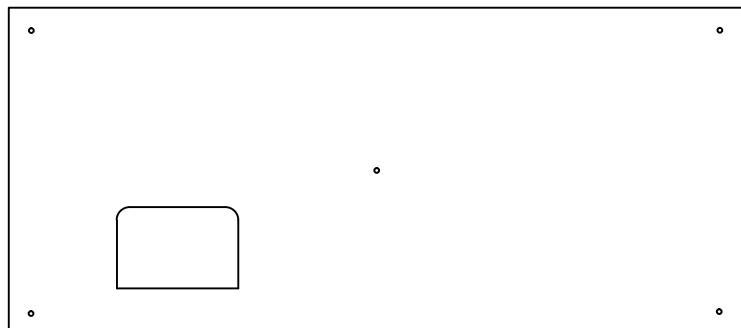

- remove the legs from zipper compartment here

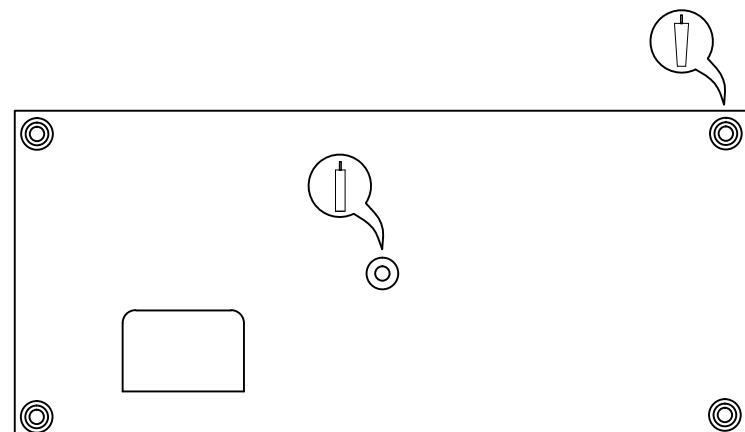

- locate the threaded insert on the underside of each unit and tighten legs into the inserts