

### Assembly Instructions

ITEM: B65-310 MARWICK 5/0 QUEEN HEADBOARD

B65-328 MARWICK 5/0 QUEEN STORAGR FOOTBOARD & SLATS

**B65-330 MARWICK 5/0 - 6/6 Q/EK SIDE RAILS** 

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Identify, count all parts and compare with the HARDWARE LIST below.

Caution: Please read the instructions thoroughly before assembly.


- 1. We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- 2. Please do not over tighten screws or bolts until the assembly is completed.
- 3. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficently.

#### **PART LISTS**

### HARDWARE LISTS

| NO: | COMPONENT                | SKETCH | Q'TY |   | NO: | COMPONENT            |
|-----|--------------------------|--------|------|---|-----|----------------------|
| Α   | QUEEN HEADBOARD          |        | 1PC  |   | 1   | Bolt 5/16" * 1-1/2"L |
| В   | QUEEN FOOTBOARD          |        | 1PC  |   | 2   | LOCK WASHER 5/16"    |
| C1  | HEADBOARD<br>LEFT LEG    |        | 1PC  |   | 3   | FLAT WASHER 5/16"    |
| C2  | HEADBOARD<br>RIGHT LEG   |        | 1PC  |   | 4   | ALLEN WRENCH         |
| D   | FOOTBOARD LEG            |        | 2PCS |   | 5   | BOLT Ø5/16"x3 1/2"   |
| Е   | FOOTBOARD<br>SUPPORT LEG |        | 2PCS |   | 6   | NUT 5/16"            |
| F   | SIDE RAIL                |        | 1SET |   | 7   | U WASHER 5/16" DIA   |
| G   | SLATS                    |        | 1SET |   | 8   | ALLEN KEY            |
| Н   | SUPPORT LEG              |        | 4PCS |   | 9   | SCREW # 8 X 25mm     |
| I   | HB BOTTOM RAIL           |        | 1PC  | ٠ |     |                      |

| NO: | COMPONENT            | SKETCH    | Q'TY  |
|-----|----------------------|-----------|-------|
| 1   | Bolt 5/16" * 1-1/2"L | 0         | 10PCS |
| 2   | LOCK WASHER 5/16"    | 0         | 10PCS |
| 3   | FLAT WASHER 5/16"    | 0         | 10PCS |
| 4   | ALLEN WRENCH         |           | 1PC   |
| 5   | BOLT Ø5/16"x3 1/2"   |           | 8PCS  |
| 6   | NUT 5/16"            |           | 8PCS  |
| 7   | U WASHER 5/16" DIA   |           | 8PCS  |
| 8   | ALLEN KEY            | 2         | 1PC   |
| 9   | SCREW # 8 X 25mm     | EDININDA. | 26PCS |

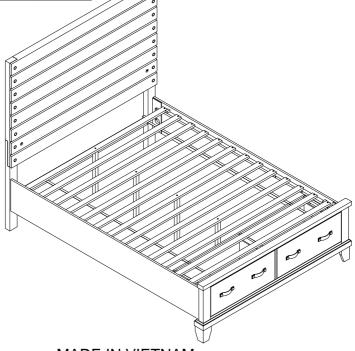

MADE IN VIETNAM


PAGE: 1 OF 3




## Assembly Instructions ITEM: B65-310 MARWICK 5/0 QUEEN HEADBOARD

B65-328 MARWICK 5/0 QUEEN STORAGR FOOTBOARD & SLATS

**B65-330 MARWICK 5/0 - 6/6 Q/EK SIDE RAILS** 

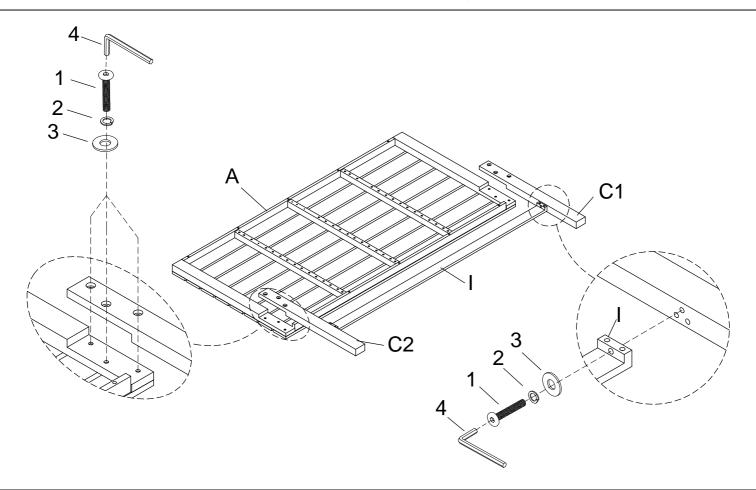

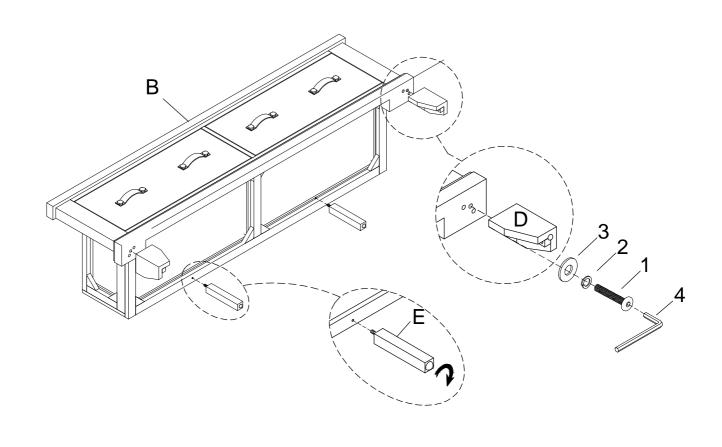





# Assembly Instructions ITEM: B65-310 MARWICK 5/0 QUEEN HEADBOARD

B65-328 MARWICK 5/0 QUEEN STORAGR FOOTBOARD & SLATS

**B65-330 MARWICK 5/0 - 6/6 Q/EK SIDE RAILS** 

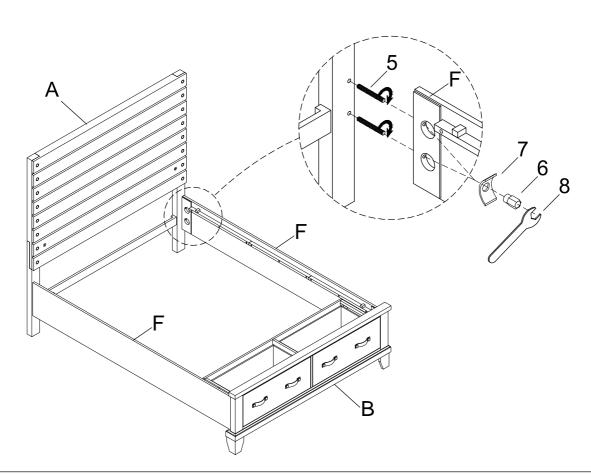

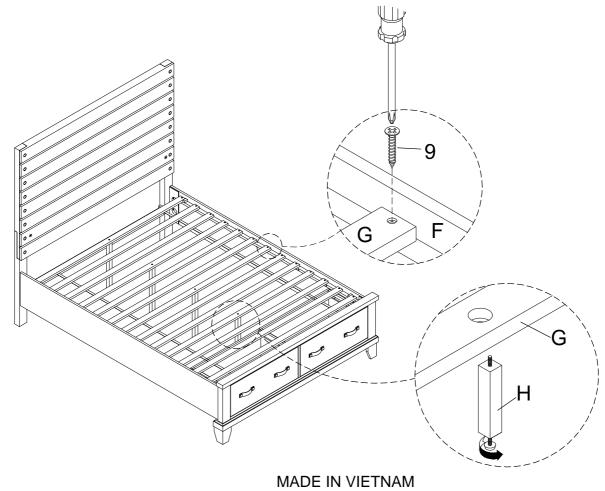

PAGE: 3 OF 3