

## **ASSEMBLY INSTRUCTIONS** B6970-Q-HB PHOEBE QUEEN HEADBOARD

## **CRWN**

| (BOX 1) - BOX OF QUEEN HEADBOARD |                   |        |     |               |   |        |     |  |
|----------------------------------|-------------------|--------|-----|---------------|---|--------|-----|--|
| PARTS LIST                       |                   |        |     | HARDWARE LIST |   |        |     |  |
| NO.                              | DESCRIPTION       | SKETCH | QTY | NO.           | DESCRIPTION   | SKETCH | QTY |  |
| 1                                | HEADBOARD PANEL   |        | 1   | A             | JCBB ( M8 x 40mm )<br>W/FLAT WASHER & SPRING WASHER | 200    | 6   |  |
| 2                                | HEADBOARD LEG (L) |        | 1   | В             | ALLEN KEY (M5)                                      |        | 1   |  |
| 3                                | HEADBOARD LEG (R) |        | 1   |               |   |        |     |  |

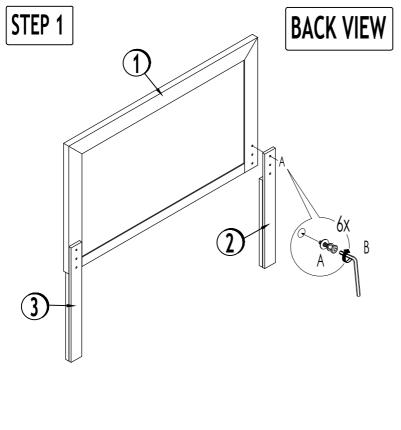

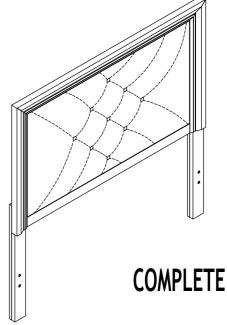

#### **IMPORTANT NOTE:**

- \* Place all wooden parts on a clean and smooth surface such as a rug
- or carpet to avoid the parts from being scratched.

  \* Check to be sure that you have all parts and hardware.

  \* Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until all completely assembled.
- \* Keep all hardware parts out of reach of children.

# ASSEMBLY INSTRUCTIONS B6970-Q-FB / B6970-Q-HB / B6970-KQ-RAIL PHOEBE QUEEN BED

## **CRWN**

| (BOX 2) - BOX OF QUEEN FOOTBOARD |              |        |     |                       |   |          |     |
|----------------------------------|--------------|--------|-----|-----------------------|---|----------|-----|
| PARTS LIST                       |              |        |     | HARDWARE LIST         |   |          |     |
| NO.                              | DESCRIPTION  | SKETCH | QTY | NO.                   | DESCRIPTION   | SKETCH   | QTY |
| 1                                | FOOTBOARD    | A      | 1   | A                     | JCBB ( M8 x 20mm )<br>W/FLAT WASHER & SPRING WASHER | <b>%</b> | 8   |
| 2                                | SLAT         |        | 4   | В                     | ALLEN KEY (M5)                                      |          | 1   |
| 3                                | VERTICAL LEG | ı İ    | 4   | C PANHEAD (M4 x 32mm) |   |          | 8   |
|                                  |              |        |     | D                     | SCREW DRIVER (*)                                    | <b>─</b> | 1   |

<sup>\*</sup>The manufacturer does not provide item D.

| ( BOX 1 ) - BOX OF QUEEN HEADBOARD |             |        |     |  |  |  |  |
|------------------------------------|-------------|--------|-----|--|--|--|--|
|                                    | PARTS LIST  |        |     |  |  |  |  |
| NO.                                | DESCRIPTION | SKETCH | QTY |  |  |  |  |
| 4                                  | HEADBOARD   |        | 1   |  |  |  |  |

| ( BOX 3 ) - BOX OF QUEEN/KING SIDE RAIL |             |        |     |  |  |  |
|---|-------------|--------|-----|--|--|--|
|   | PARTS LIST  |        |     |  |  |  |
| NO.                                     | DESCRIPTION | SKETCH | QTY |  |  |  |
| 5                                       | SIDE RAIL   |        | 2   |  |  |  |

### **IMPORTANT NOTE:**

- \* Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- \* Check to be sure that you have all parts and hardware.
- \* Remove all wrapping materials, including staples & packing straps before you start to assemble.
- \* Do not tighten all screws/bolts until all completely assembled.
- \* Keep all hardware parts out of reach of children.

