





New
Classic®
FURNITURE

Assembly Instructions




B976-070 RADIANCE CHEST

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the parts list and hardware list shown below.

PARTS LIST


NO	DESCRIPTION	SKETCH	QTY
A	CHEST		1 PC
B	LEG		4 PCS

HARDWARE LIST


NO	DESCRIPTION	SKETCH	QTY
1	JCBC BOLT - M6 x 3 $\frac{1}{8}$ "		4 PCS
2	SPRING WASHER - M6		4 PCS
3	ALLEN KEY - M4		1 PC

PLACE WOOD PARTS ON A
CLEAN NON-ABRASIVE SURFACE

STEP 2 : Install the LEG (B) by using the ALLEN KEY (3) with hardware (1) and (2)

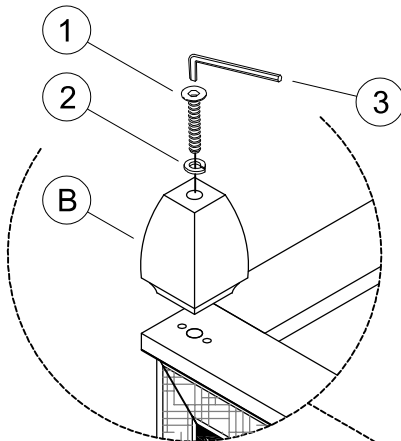

STEP 3 : Remove the drawer handle and re-install the handle on the outside.

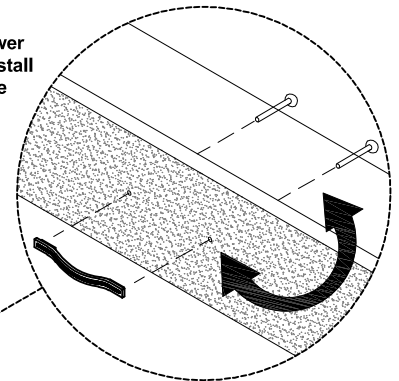

STEP 1 : Locate the LEG (B) pack in the lowest drawer.