




ITEM NO: I349-412-WST
I349-402-WST
I349-403D-WST

Queen Panel HB w/ 2 Lamps
Queen Rails
Queen Storage FB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

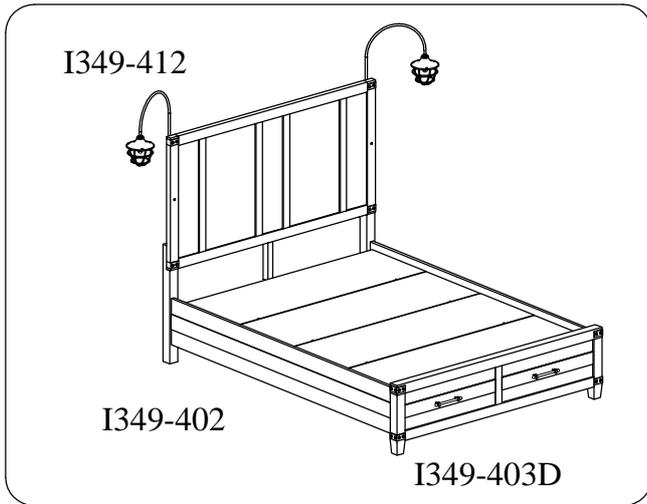


All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER

Swing Lamp

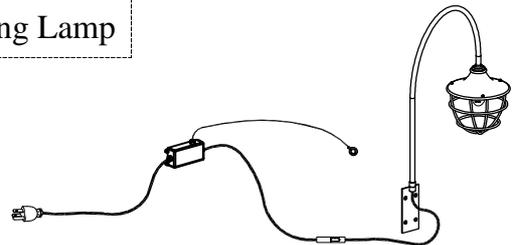

Assembly instructions for the Swing Lamps are in the Lamp package. Follow the below instructions when attaching the swing lamps to this headboard.

BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.
Save these instructions for future reference.

FOR INDOOR USE ONLY



ITEM NO: I349-412-WST
I349-402-WST
I349-403D-WST

Queen Panel HB w/ 2 Lamps
Queen Rails
Queen Storage FB

HARDWARE LIST: I349-412			
No.	Description	Sketch	Quantity
A	Bolt Ø5/16" x 1-3/4"(18)		5 PCS
B	Bolt Ø5/16" x 2"(18)		6 PCS
C	Lock Washer Ø5/16"		11 PCS
D	Flat Washer Ø5/16" x 3/4"		11 PCS
E	Allen Wrench 4mm		1 PC

HARDWARE LIST: I349-402			
No.	Description	Sketch	Quantity
F	Hanger Bolt Ø5/16"x3-1/8"(18)		8 PCS
G	Half Moon Washer Ø5/16"		8 PCS
H	Lock Washer Ø5/16"		8 PCS
I	Hex Nut Ø5/16"		8 PCS
J	Hex Wrench 12mm		1 PC
K	Wood Screw #4 x 1-1/4"		8 PCS


HARDWARE LIST: I349-403D			
No.	Description	Sketch	Quantity
L	Bolt Ø1/4" x 1-3/8"(20)		8 PCS
M	Lock Washer Ø1/4"		8 PCS
N	Flat Washer Ø1/4" x 3/4"		8 PCS
O	Allen Wrench 4mm		1 PC
P	Wood Screw #4 x 1"		8 PCS

COMPONENTS LIST: I349-412			
No.	Description	Sketch	Quantity
1	Headboard		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC
5	Center Support Leg		1 PC
6	Lamp		2 Sets

COMPONENTS LIST: I349-402			
No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		4 PCS

COMPONENTS LIST: I349-403D			
No.	Description	Sketch	Quantity
1	Footboard		1 PC
2	Support Leg (for center rail)		2 PCS
3	Decking		4 PCS
4	Center rail		1 PC
5	Support Leg (for footboard)		3 PCS

STEP 1: Lay the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 6 bolts(B), lock washers(C) and flat washers(D). Do not completely tighten bolts.

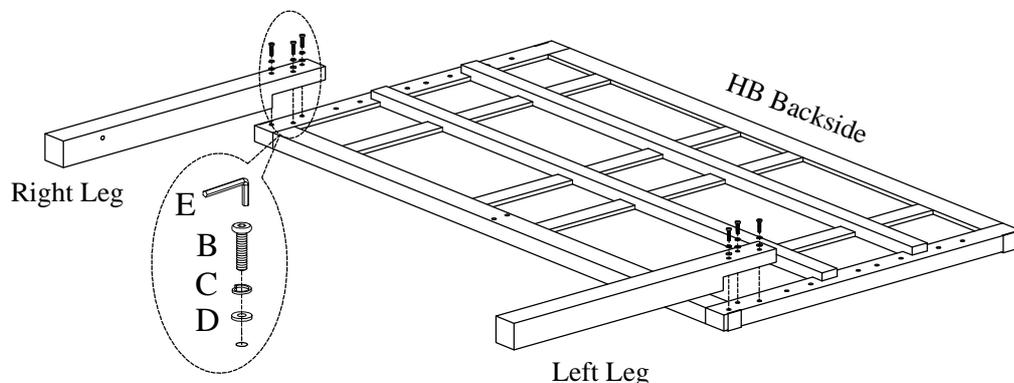





ITEM NO: I349-412-WST
I349-402-WST
I349-403D-WST

Queen Panel HB w/ 2 Lamps
Queen Rails
Queen Storage FB


STEP 2: Attach the wood stretcher to the legs by using 2 bolts(A), lock washers(C) and flat washers(D). Completely tighten all bolts.

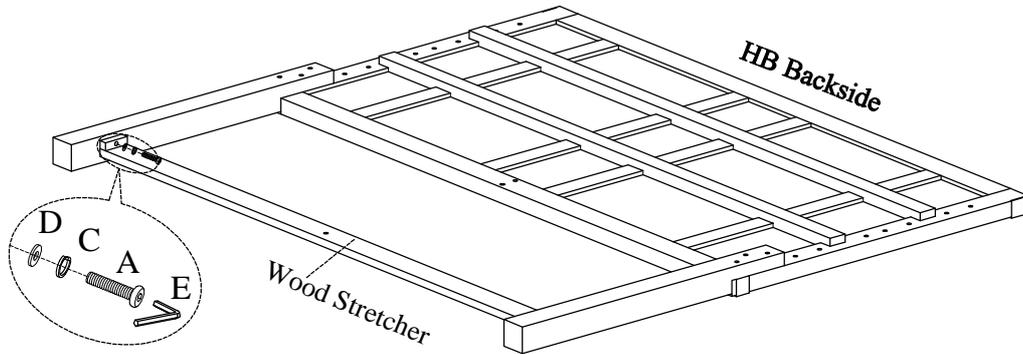

STEP 3: Attach the center support leg to headboard and wood stretcher by using 3 bolts(A), lock washers(C) and flat washers(D).

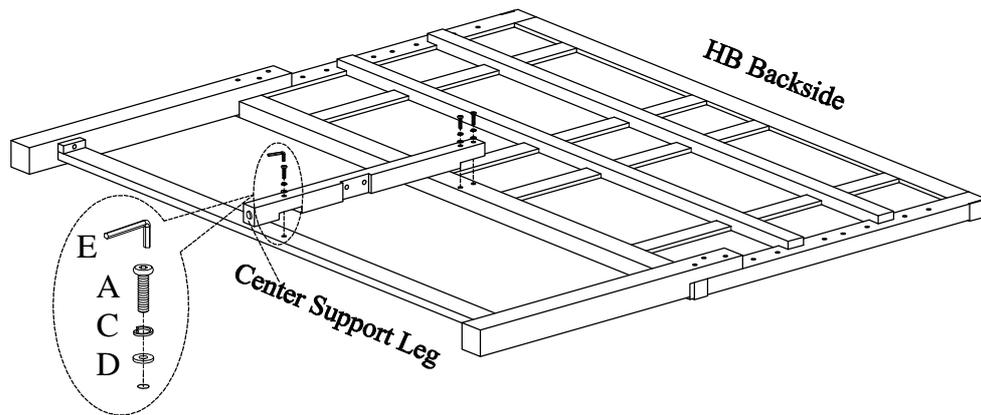

STEP 4: Put the footboard face down on a soft surface. Attach the support legs (for footboard) to the footboard as shown below.

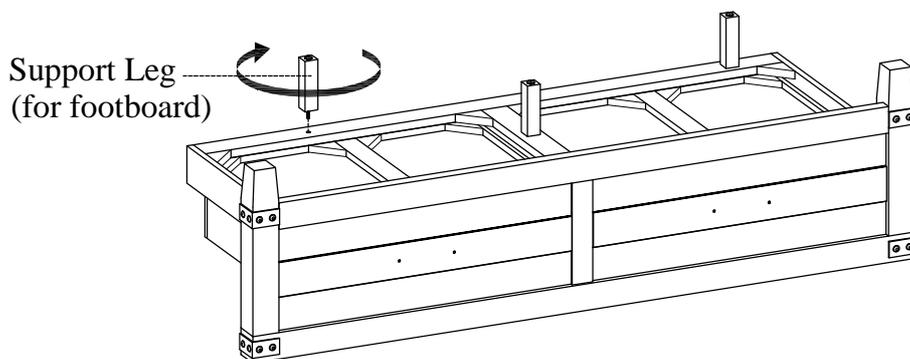





ITEM NO: I349-412-WST
I349-402-WST
I349-403D-WST

Queen Panel HB w/ 2 Lamps
Queen Rails
Queen Storage FB


STEP 5: Screw the bolts(F) into HB & FB. Make sure the slat bearer is in the UPPER position. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using half moon Washers(G), Lock Washers(H) and hex nuts (I). Then use a hex wrench to tighten all the nuts.

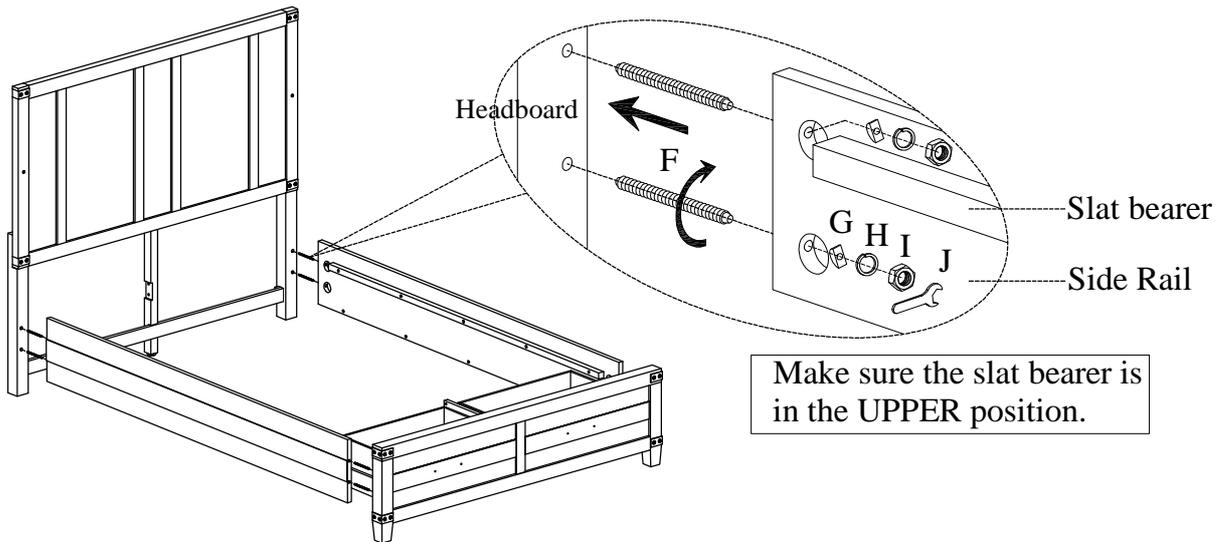

STEP 6: Attach the center rail to the footboard and center support leg of headboard using 4 bolts(L), lock washers(M) and flat washers(N).

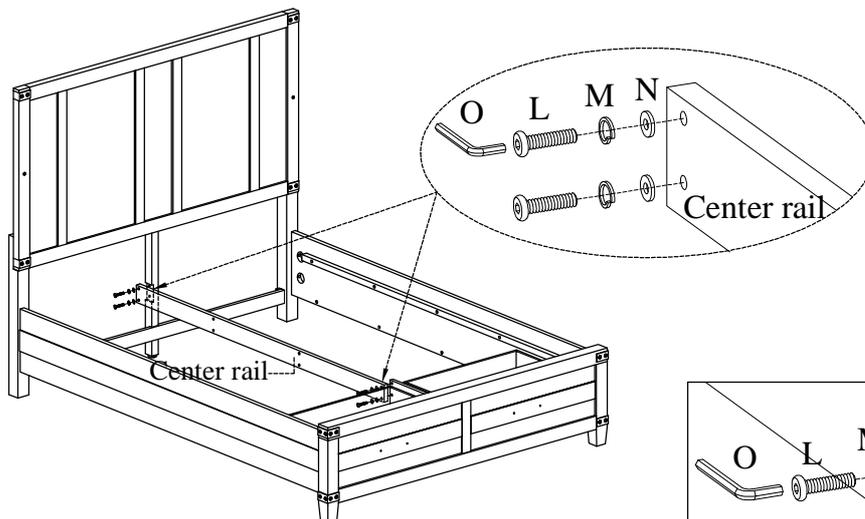

STEP 7: Attach 2 support legs (for center rail) to the center rail using 4 bolts(L), lock washers(M) and flat washers(N). Use the Allen Wrench(O) to tighten all of the bolts.

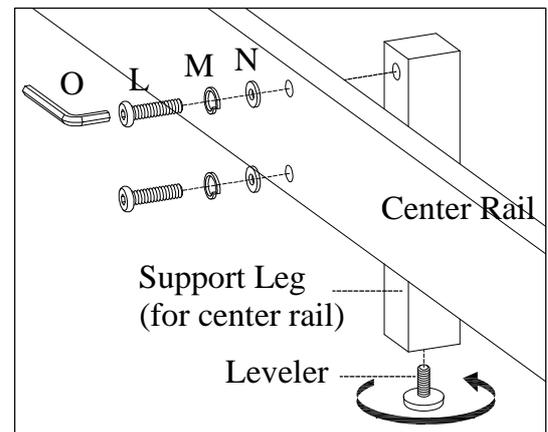





ITEM NO: I349-412-WST
I349-402-WST
I349-403D-WST

Queen Panel HB w/ 2 Lamps
Queen Rails
Queen Storage FB

STEP 8: Arrange slats on the slat bearers and then lay the decking on top of the slats. Make sure the top and bottom slats are situated underneath the pre-drilled holes as shown below in STEP 9. Remove the decking and attach slats to the slat bearers with wood screws (K).

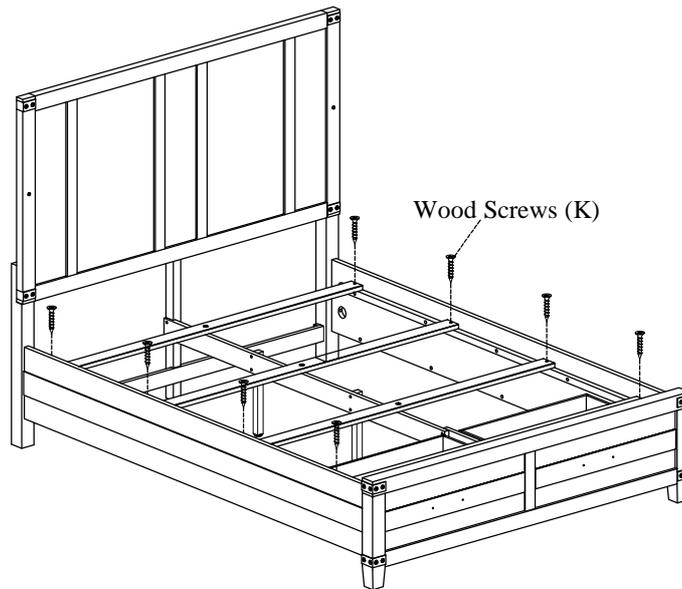

STEP 9: Put the decking over the slats, secure decking to the slats with wood screws (P) through the pre-drilled holes in the decking as shown below.

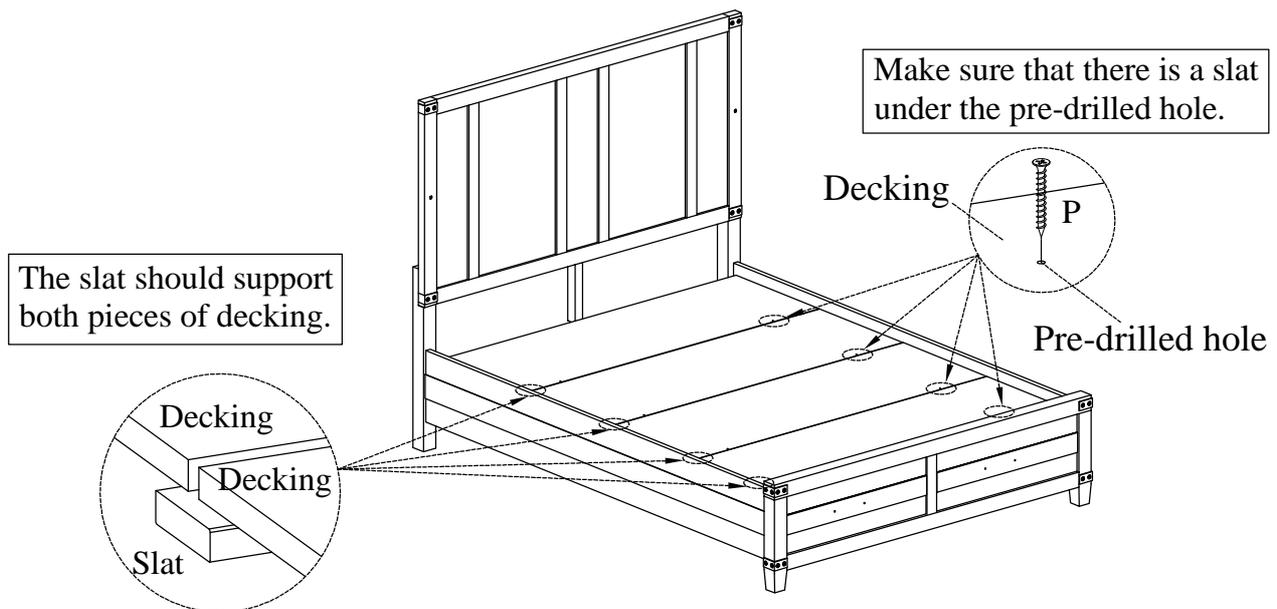



ITEM NO: I349-412-WST
I349-402-WST
I349-403D-WST


Queen Panel HB w/ 2 Lamps
Queen Rails
Queen Storage FB

FOR SWING LAMP ASSEMBLY:


STEP 1: Attach each of the swing lamp ("1" on the component list for swing lamp) to the back of the headboard with 4 flat head wood screws ("A" on the hardware bag for swing lamp) as shown below.

STEP 2: Attach each of the control box w/wires ("2" on the component list for swing lamp) to the back of headboard with 4 pan head wood screws ("B" on the hardware bag for swing lamp) as shown below.

STEP 3: Plug the male connectors into the female connectors as shown below.

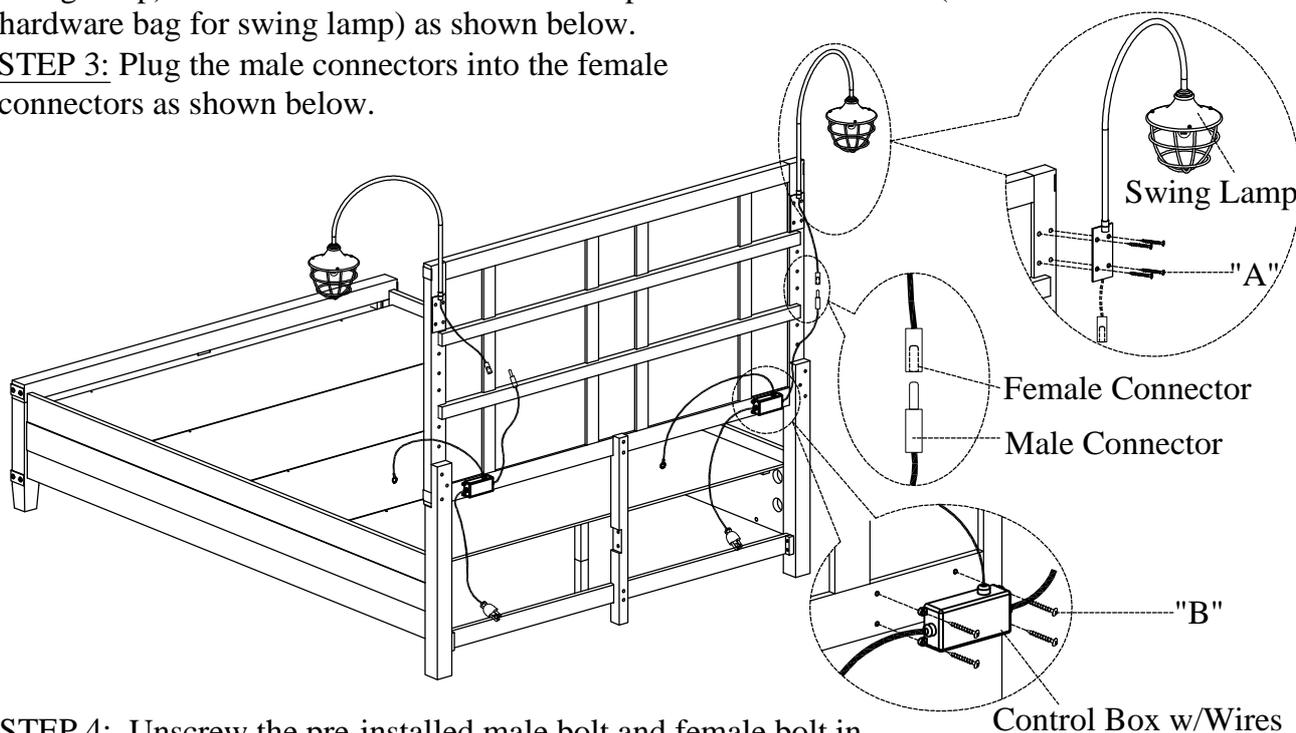

STEP 4: Unscrew the pre-installed male bolt and female bolt in each of the headboard post by an allen wrench. Insert each of the flat washer firstly and the brass ring secondly to the bolt male, press each bolt female/touch switch by finger into the hole on headboard post, then completely tighten the 2 male bolts.

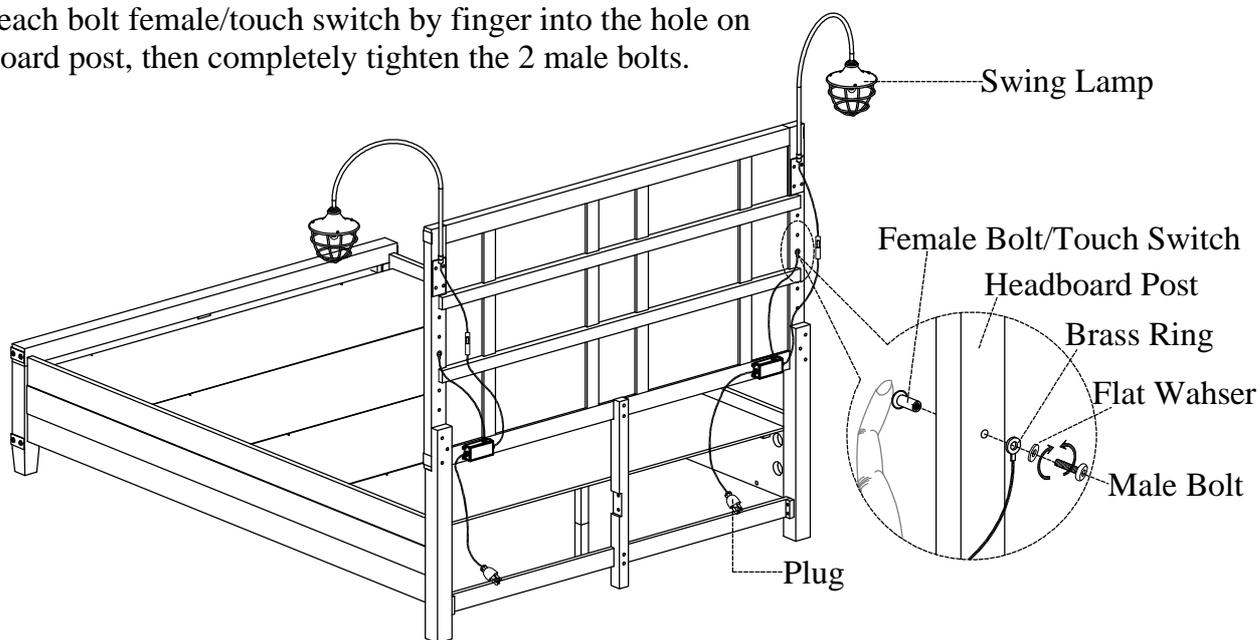




ITEM NO: I349-412-WST
I349-402-WST
I349-403D-WST


Queen Panel HB w/ 2 Lamps
Queen Rails
Queen Storage FB

STEP 5: Insert the plugs to the socket, lift (do not push or drag) the bed assembly to the desired location and rotate the swing lamps to the desired angle.

Note: adjust the small bolts using the allen wrench ("D" on the hardware bag for swing lamp) as shown right when the swingable metal arm is too loose / tight.

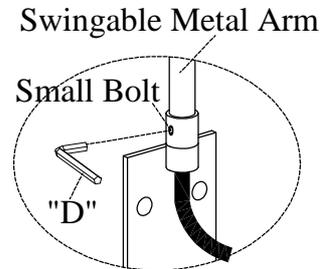

FUNCTIONALITY INSTRUCTION

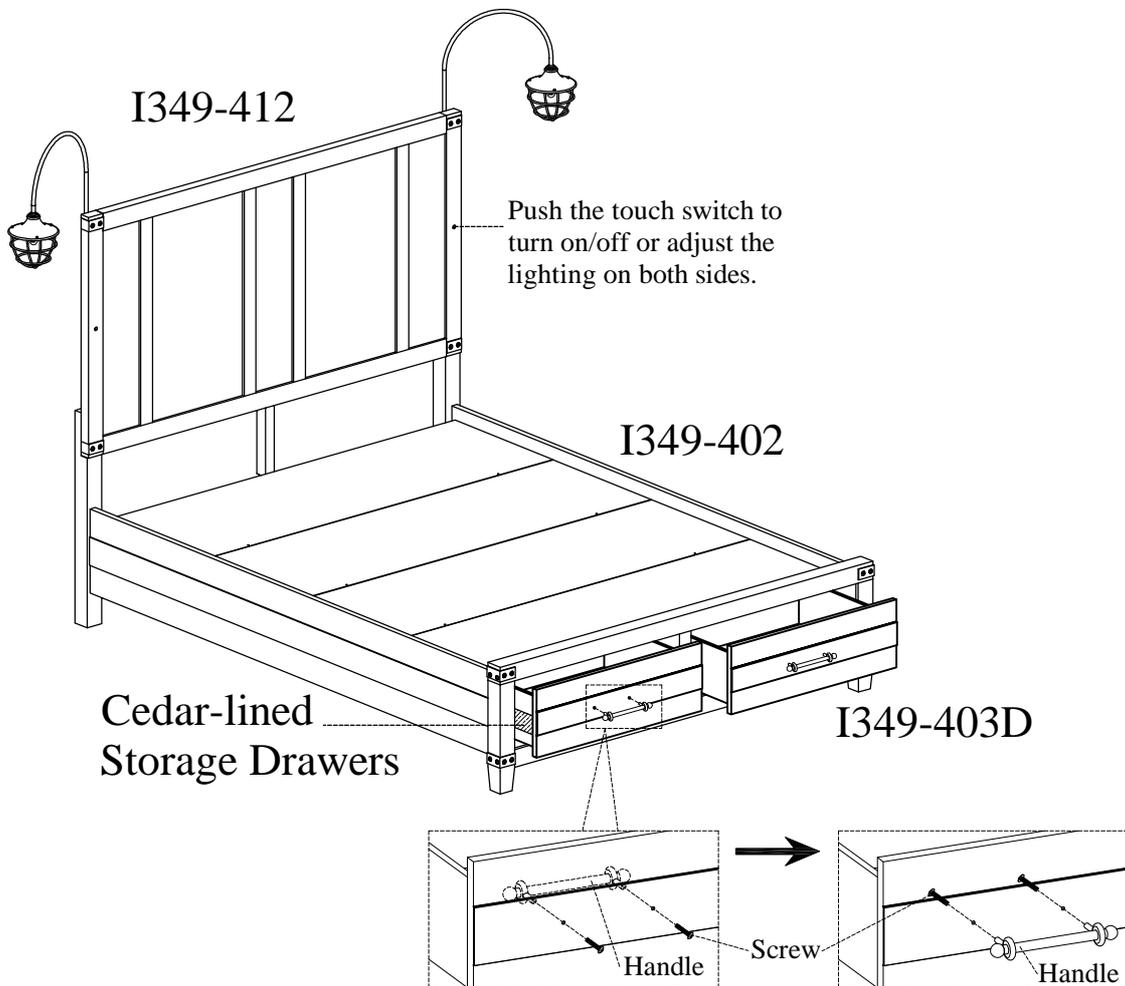

Reverse each handle by removing the screws while each drawer is open and attach all handles to the front of the drawers with screws as shown.




ITEM NO: I349-412-WST
I349-402-WST
I349-403-WST

Queen Panel HB w/ 2 Lamps
Queen Rails
Queen Low Profile FB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.





UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

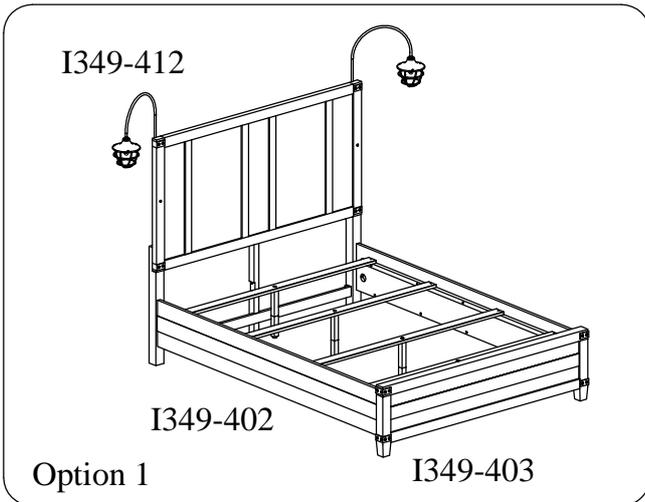

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

TOOLS REQUIRED (NOT PROVIDED)
PHILLIPS SCREWDRIVER 

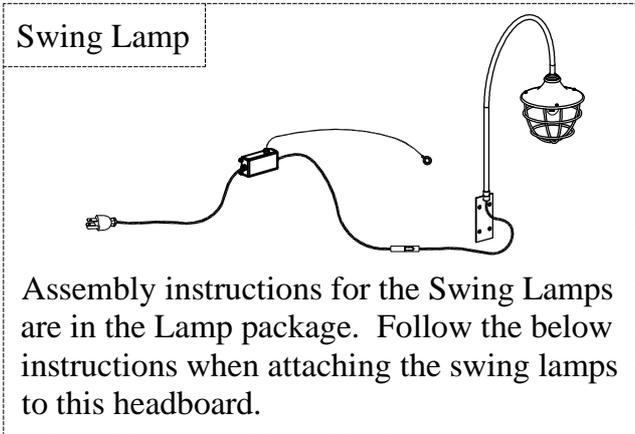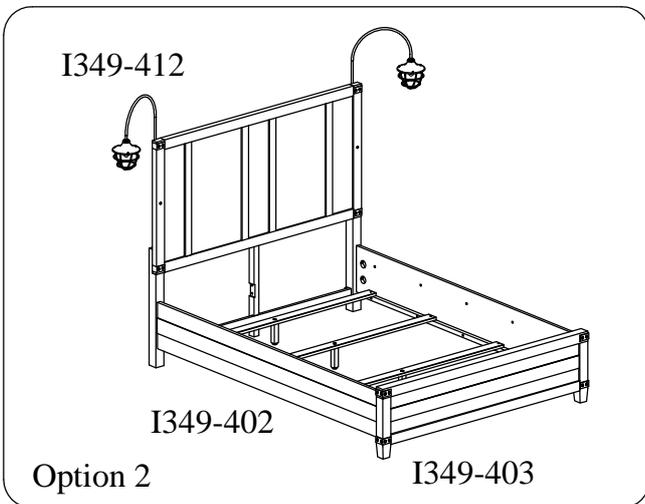

BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.
Save these instructions for future reference.

FOR INDOOR USE ONLY



ITEM NO: I349-412-WST
I349-402-WST
I349-403-WST

Queen Panel HB w/ 2 Lamps
Queen Rails
Queen Low Profile FB

HARDWARE LIST: I349-412			
No.	Description	Sketch	Quantity
A	Bolt Ø5/16" x 1-3/4"(18)		5 PCS
B	Bolt Ø5/16" x 2"(18)		6 PCS
C	Lock Washer Ø5/16"		11 PCS
D	Flat Washer Ø5/16" x 3/4"		11 PCS
E	Allen Wrench 4mm		1 PC


HARDWARE LIST: I349-402			
No.	Description	Sketch	Quantity
F	Hanger Bolt Ø5/16"x3-1/8"(18)		8 PCS
G	Half Moon Washer Ø5/16"		8 PCS
H	Lock Washer Ø5/16"		8 PCS
I	Hex Nut Ø5/16"		8 PCS
J	Hex Wrench 12mm		1 PC
K	Wood Screw #4 x 1-1/4"		8 PCS

COMPONENTS LIST: I349-412			
No.	Description	Sketch	Quantity
1	Headboard		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC
5	Center Support Leg		1 PC
6	Swing Lamp		2 Sets


COMPONENTS LIST: I349-402			
No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		4 PCS

COMPONENTS LIST: I349-403			
No.	Description	Sketch	Quantity
1	Footboard		1 PC
2	Support Leg		4 Set

STEP 1: Lay the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 6 bolts(B), lock washers(C) and flat washers(D). Do not completely tighten bolts.

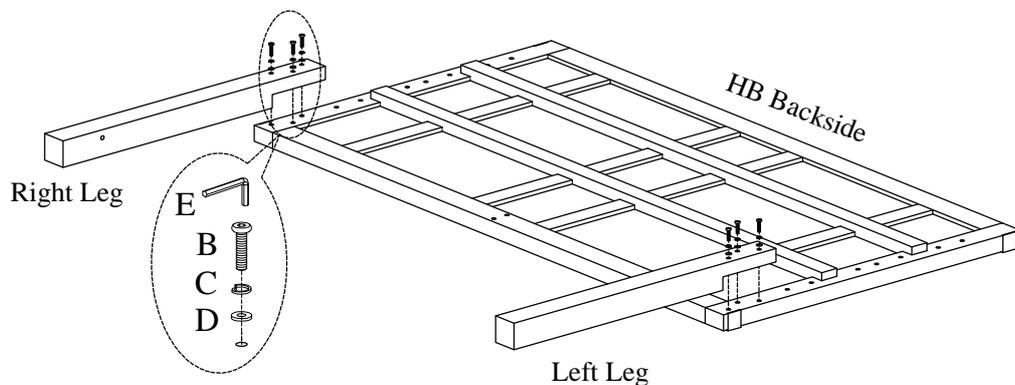

STEP 2: Attach the wood stretcher to the legs by using 2 bolts(A), lock washers(C) and flat washers(D). Completely tighten all bolts.

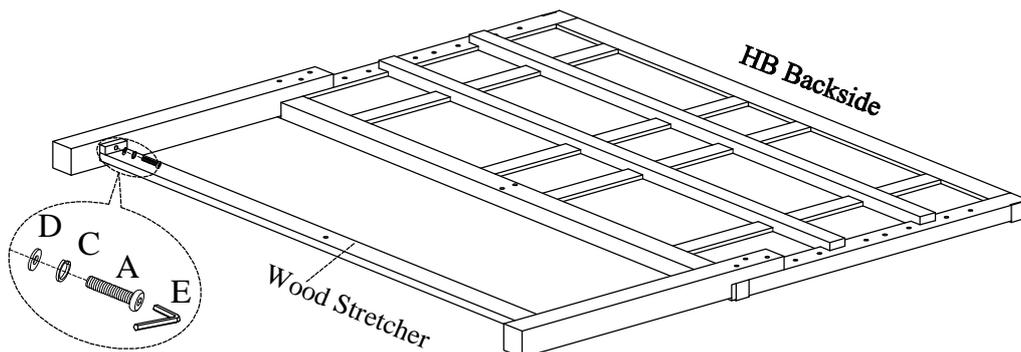




ITEM NO: I349-412-WST
I349-402-WST
I349-403-WST


Queen Panel HB w/ 2 Lamps
Queen Rails
Queen Low Profile FB

STEP 3: Attach the center support leg to headboard and wood stretcher by using 3 bolts(A), lock washers(C) and flat washers(D).

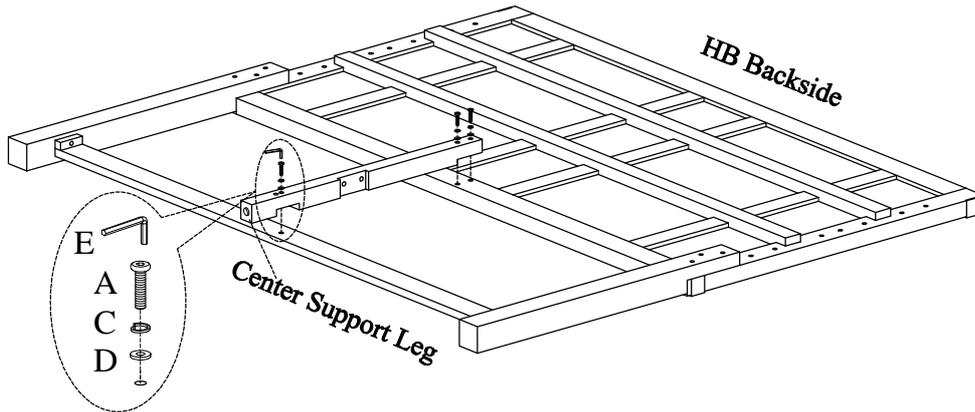

FOR OPTION 1:

STEP 4: Screw the bolts(F) into HB & FB. Make sure the slat bearer is in the position (b). Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using half moon Washers(G), Lock Washers(H) and hex nuts (I). Then use a hex wrench to tighten all the nuts.

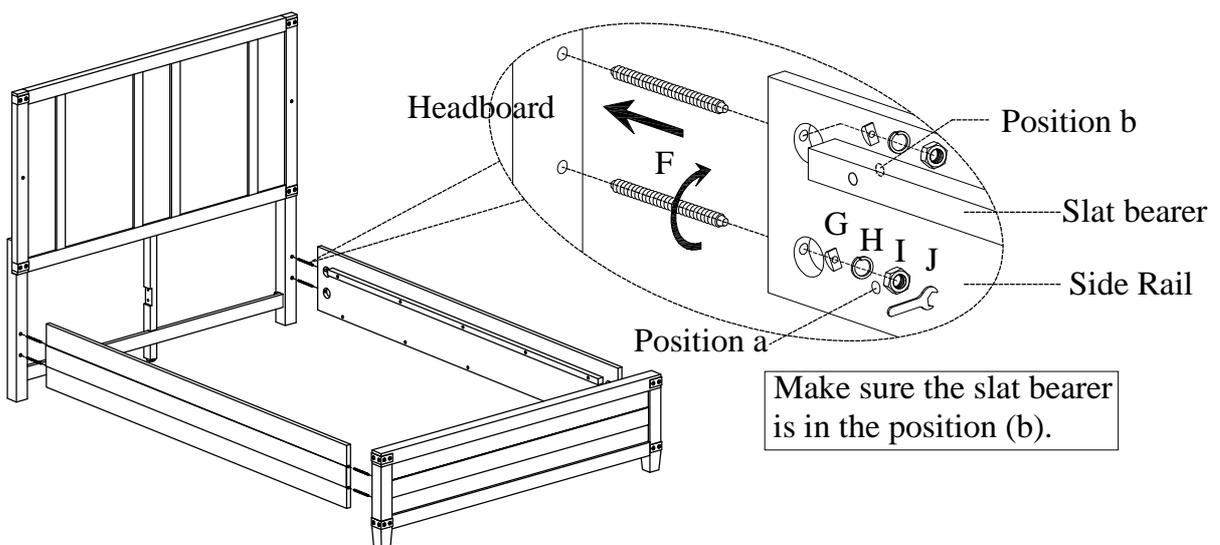





ITEM NO: I349-412-WST
I349-402-WST
I349-403-WST

Queen Panel HB w/ 2 Lamps
Queen Rails
Queen Low Profile FB

STEP 5: Attach the support legs with leveler to the slats.
Adjust the levelers on bottom of support legs when necessary.

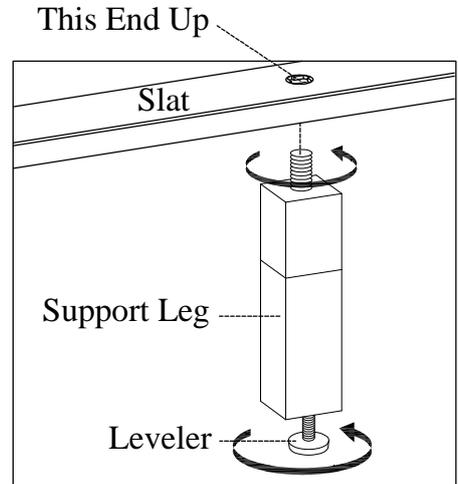


STEP 6: Arrange the slats on the slat bearers equally and attach to the slat bearers with wood screws (K).

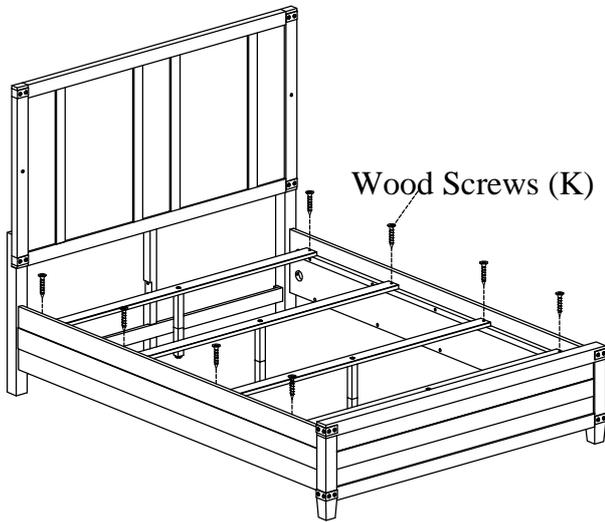

FOR OPTION 2:

STEP 4: The slat bearers have been attached in position (b) approximately 2" from the top of the side rails for use with a storage footboard. The slat bearers must be moved into position (a) based on this bed configuration. Remove the bolts from the slat bearers and side rails as shown below. Then re-attach the slat bearers to the side rails in desired position (a) with bolts, lock washers, flat washers. **Caution: Do not over tighten bolts as this may loosen the threaded inserts in the side rails.**

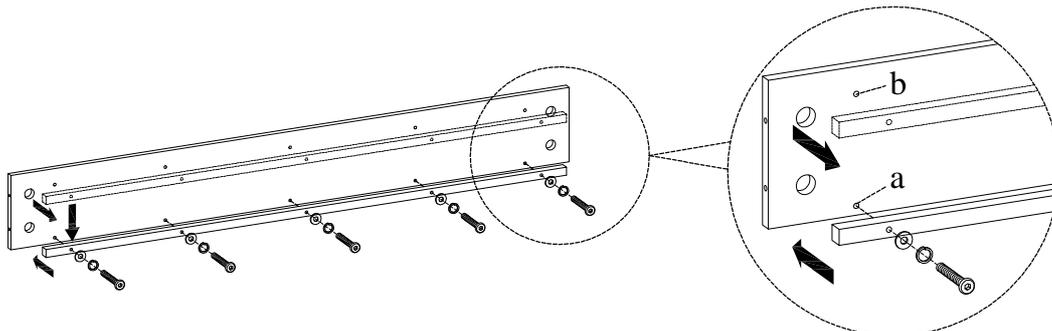




ITEM NO: I349-412-WST
I349-402-WST
I349-403-WST



Queen Panel HB w/ 2 Lamps
Queen Rails
Queen Low Profile FB

STEP 5: Screw the bolts(F) into HB & FB. Make sure the slat bearer is in the position (a). Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using half moon Washers(G), Lock Washers(H) and hex nuts (I). Then use a hex wrench to tighten all the nuts.

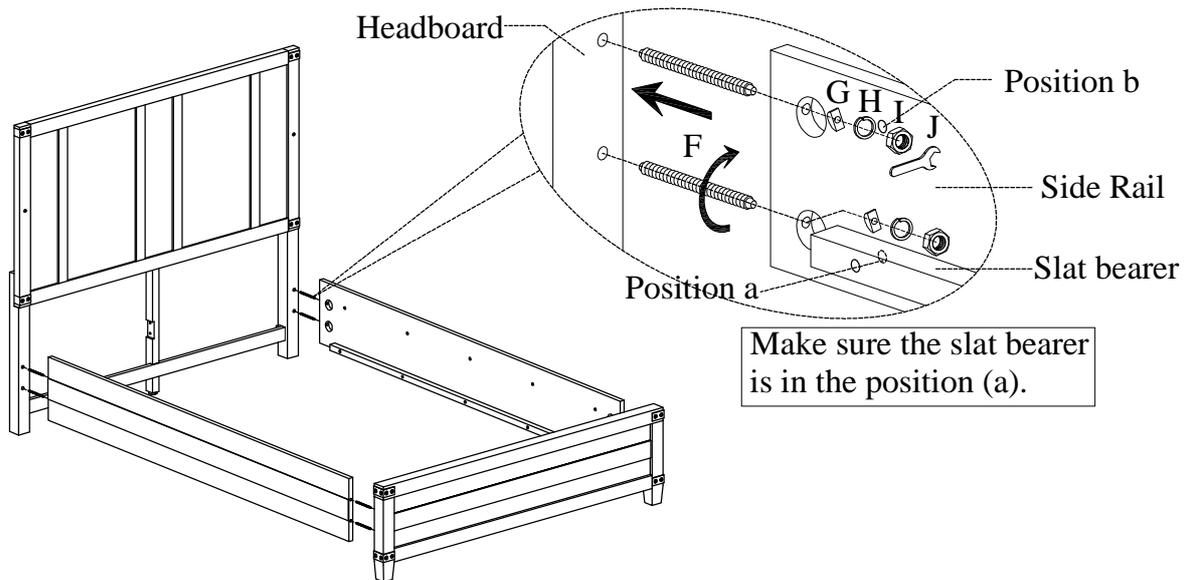

STEP 6: Remove the support legs (top) as shown in the picture to the right. Attach the support legs with leveler to the slats. Adjust the levelers on bottom of support legs when necessary.

STEP 7: Arrange the slats on the slat bearers equally and attach to the slat bearers with wood screws (K).

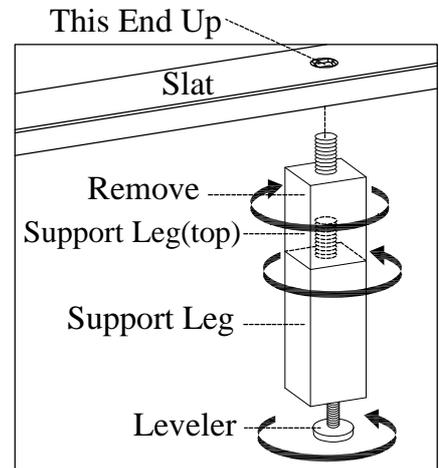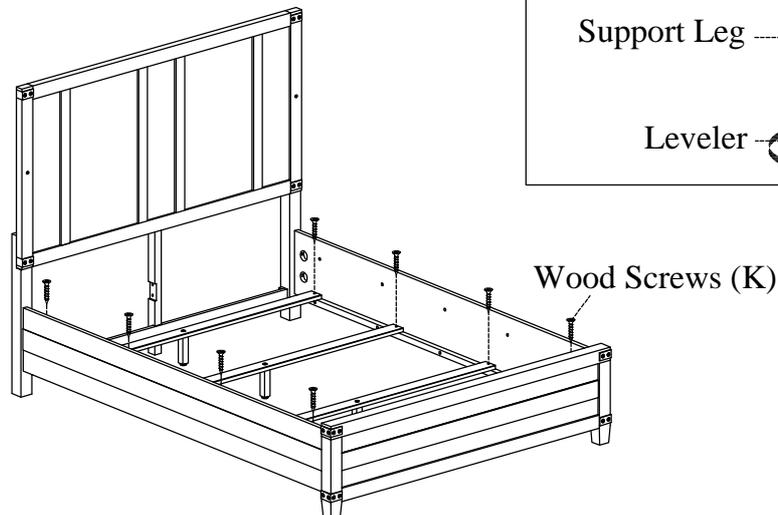



ITEM NO: I349-412-WST
I349-402-WST
I349-403-WST


Queen Panel HB w/ 2 Lamps
Queen Rails
Queen Low Profile FB

FOR SWING LAMP ASSEMBLY:


STEP 1: Attach each of the swing lamp ("1" on the component list for swing lamp) to the back of the headboard with 4 flat head wood screws ("A" on the hardware bag for swing lamp) as shown below.

STEP 2: Attach each of the control box w/wires ("2" on the component list for swing lamp) to the back of headboard with 4 pan head wood screws ("B" on the hardware bag for swing lamp) as shown below.

STEP 3: Plug the male connectors into the female connectors as shown below.

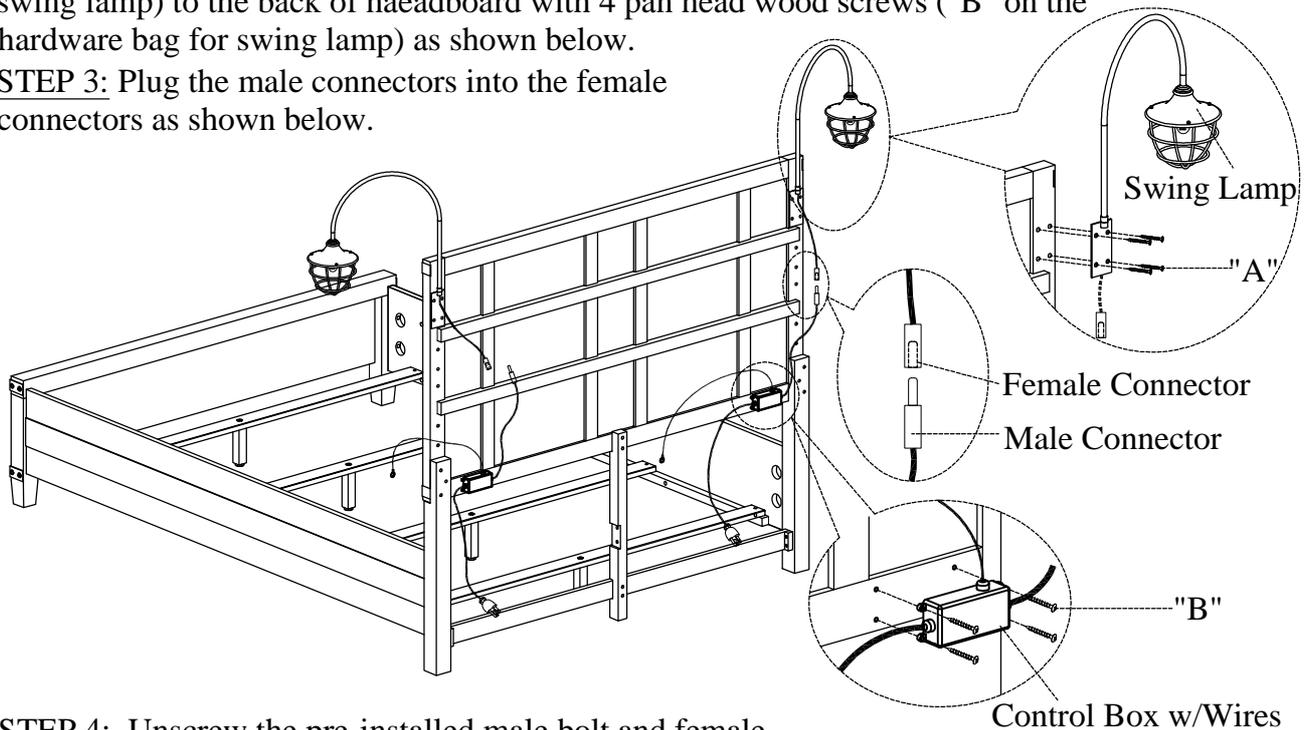

STEP 4: Unscrew the pre-installed male bolt and female bolt in each of the headboard post by an allen wrench. Insert each of the flat washer firstly and the brass ring secondly to the bolt male, press each bolt female/touch switch by finger into the hole on headboard post, then completely tighten the 2 male bolts.

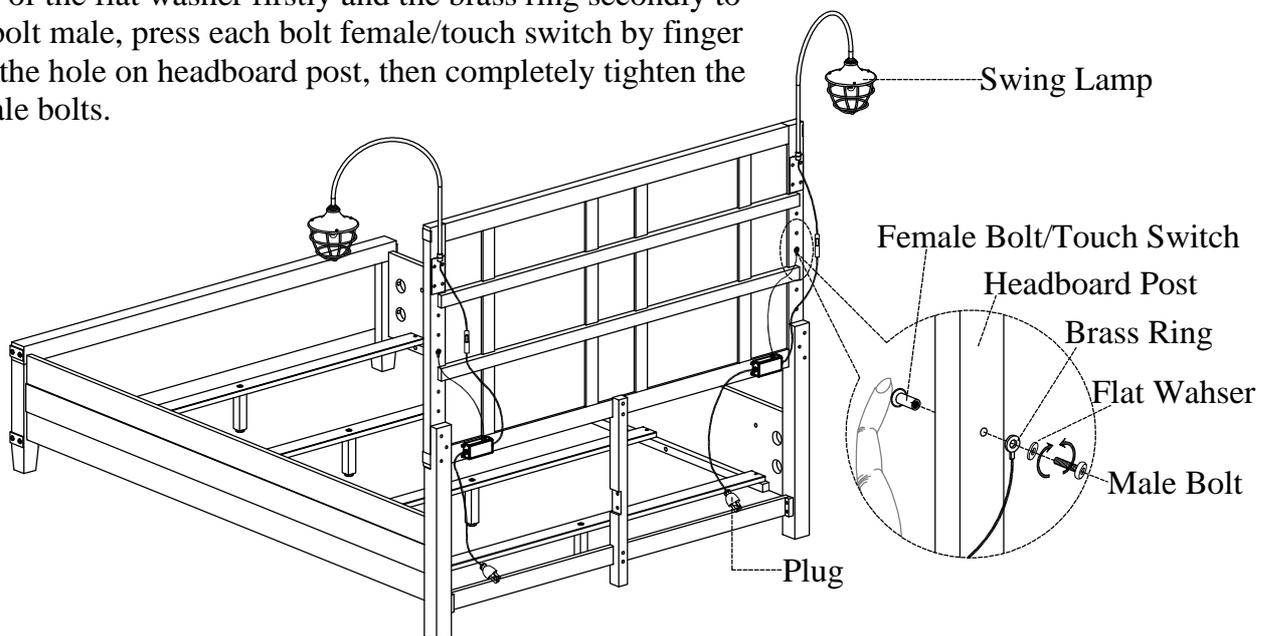




ITEM NO: I349-412-WST
I349-402-WST
I349-403-WST

Queen Panel HB w/ 2 Lamps
Queen Rails
Queen Low Profile FB

STEP 5: Insert the plugs to the socket, lift (do not push or drag) the bed assembly to the desired location and rotate the swing lamps to the desired angle.


Note: adjust the small bolts using the allen wrench ("D" on the hardware bag for swing lamp) as shown right when the swingable metal arm is too loose / tight.

Swingable Metal Arm

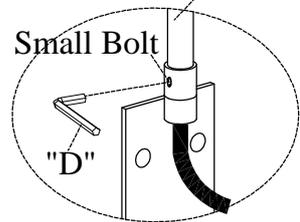


FUNCTIONALITY INSTRUCTION

OPTION 1:

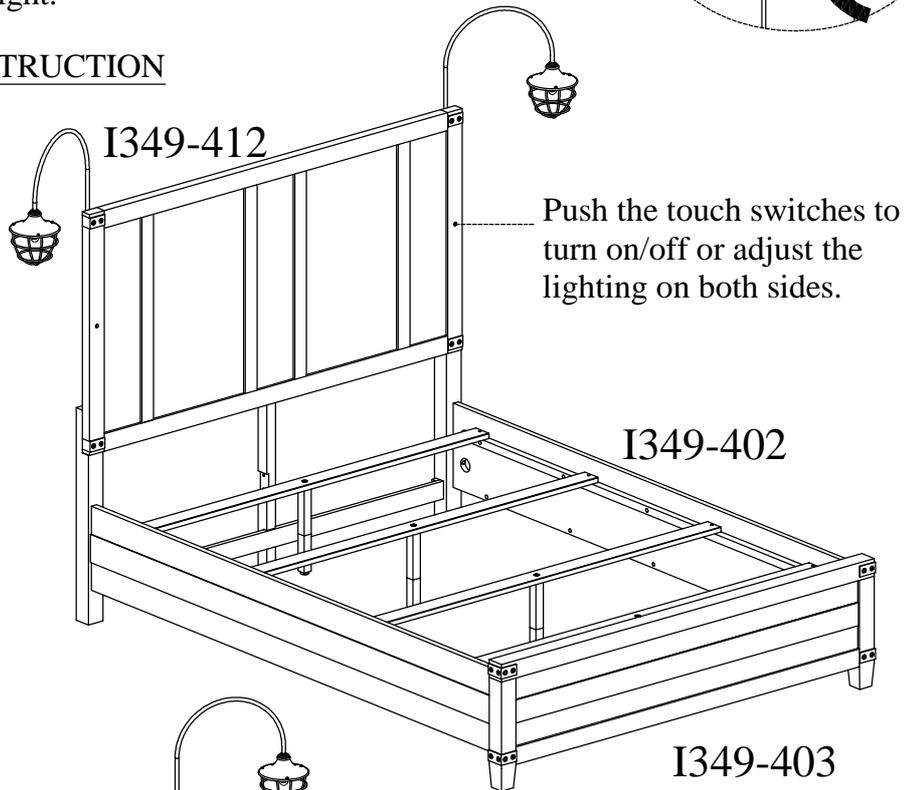

OPTION 2:

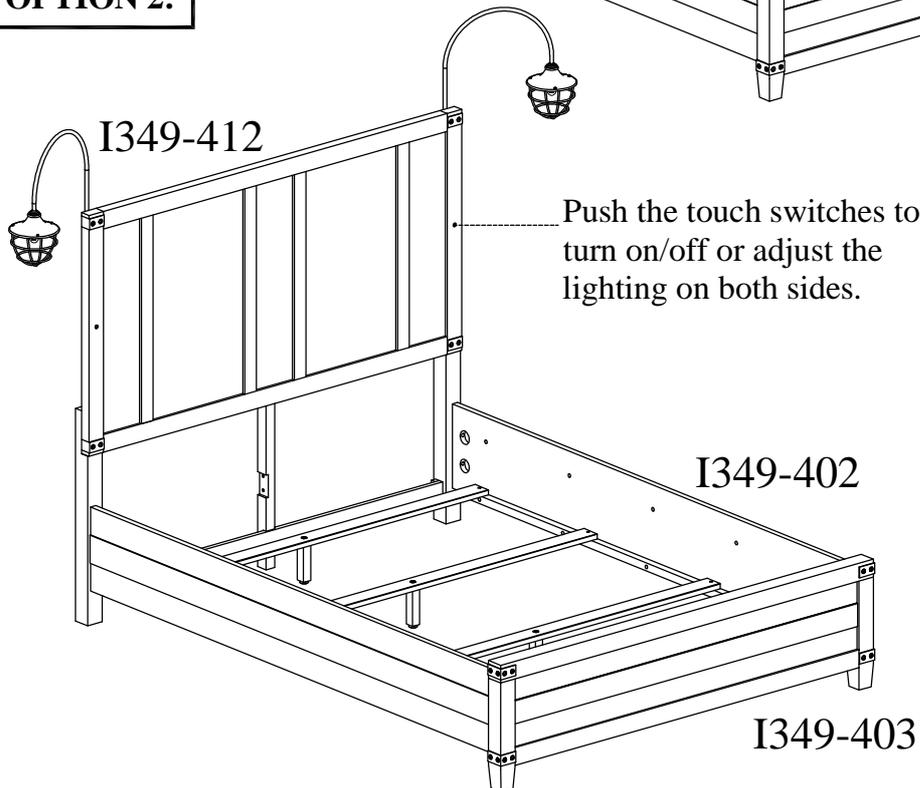




ITEM NO: I349-415-WST
I349-407-WST
I349-406-WST
I349-410-WST

King Panel HB w/ 2 Lamps
King Low Profile FB
King Rails
Cal King Rails

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.




UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

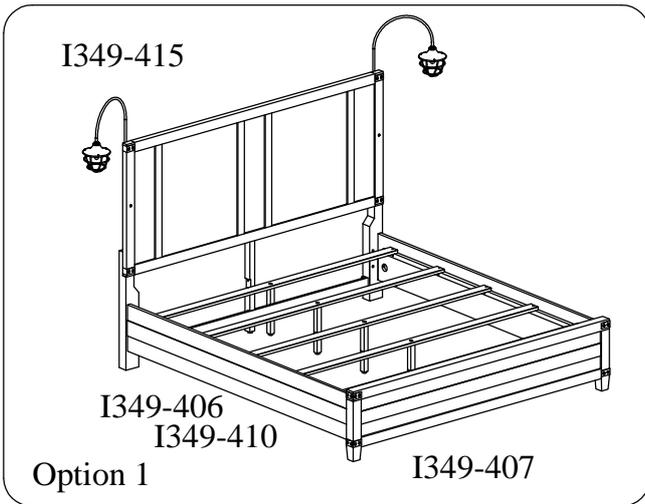


All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER

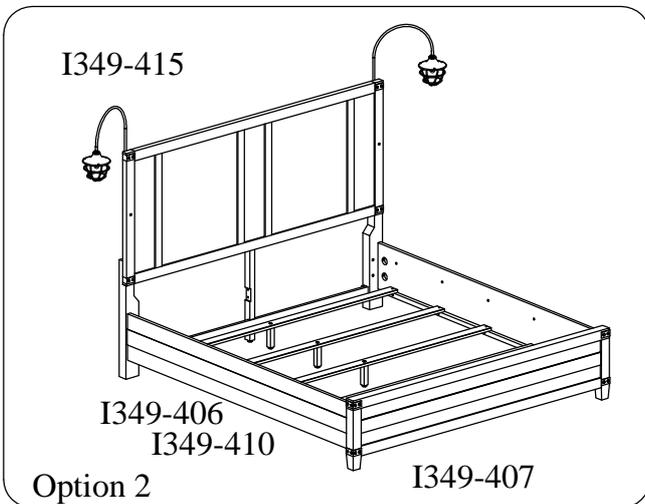

Swing Lamp

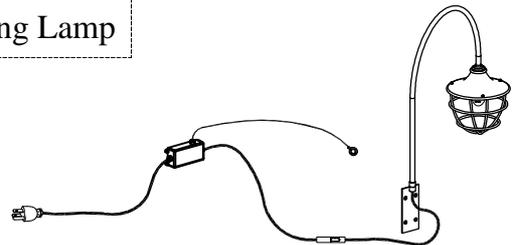

Assembly instructions for the Swing Lamps are in the Lamp package. Follow the below instructions when attaching the swing lamps to this headboard.

BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.
Save these instructions for future reference.

FOR INDOOR USE ONLY



ITEM NO: I349-415-WST
I349-407-WST
I349-406-WST
I349-410-WST

King Panel HB w/ 2 Lamps
King Low Profile FB
King Rails
Cal King Rails

HARDWARE LIST: I349-415			
No.	Description	Sketch	Quantity
A	Bolt Ø15/16" x 1-3/4"(18)		5 PCS
B	Bolt Ø5/16" x 2"(18)		6 PCS
C	Lock Washer Ø5/16"		11 PCS
D	Flat Washer Ø5/16" x 3/4"		11 PCS
E	Allen Wrench 4mm		1 PC

HARDWARE LIST: I349-406/410			
No.	Description	Sketch	Quantity
F	Hanger Bolt Ø5/16"x3-1/8"(18)		8 PCS
G	Half Moon Washer Ø5/16"		8 PCS
H	Lock Washer Ø5/16"		8 PCS
I	Hex Nut Ø5/16"		8 PCS
J	Hex Wrench 12mm		1 PC
K	Wood Screw #4 x 1-1/4"		10 PCS
L	Wood Cap (only for 410)		8 PCS


COMPONENTS LIST: I349-415			
No.	Description	Sketch	Quantity
1	Headboard		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC
5	Center Support Leg		1 PC
6	Lamp		2 Sets

COMPONENTS LIST: I349-406			
No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		5 PCS

COMPONENTS LIST: I349-410			
No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		5 PCS
3	Center rail (Long)		1 PC

COMPONENTS LIST: I349-407			
No.	Description	Sketch	Quantity
1	Footboard		1 PC
2	Support Leg		5 Set

STEP 1: Lay the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 6 bolts(B), lock washers(C) and flat washers(D). Do not completely tighten bolts.

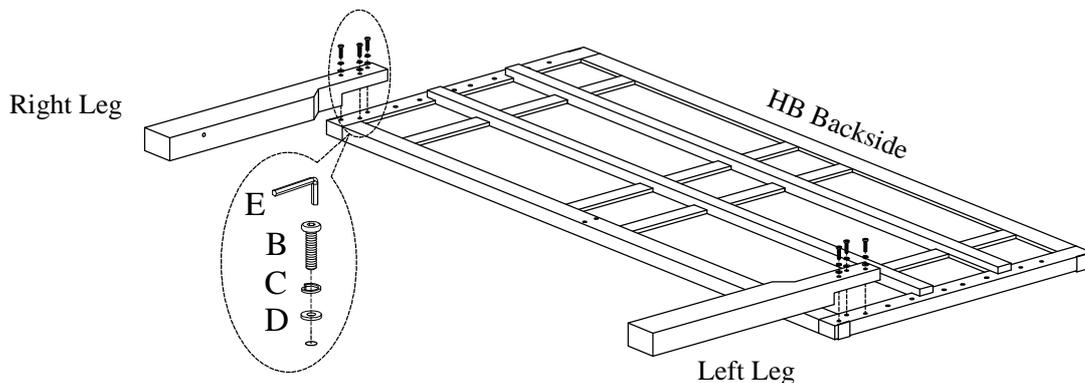





ITEM NO: I349-415-WST
 I349-407-WST
 I349-406-WST
 I349-410-WST

King Panel HB w/ 2 Lamps
 King Low Profile FB
 King Rails
 Cal King Rails

STEP 2: Attach the wood stretcher to the legs by using 2 bolts(A), lock washers(C) and flat washers(D). Completely tighten all bolts.

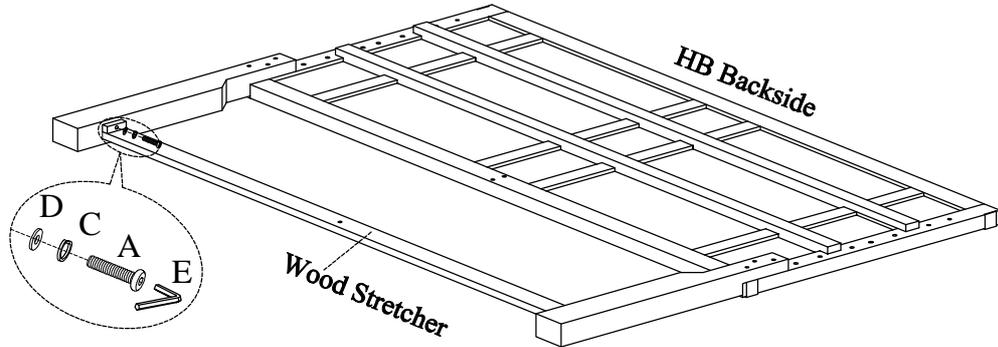


STEP 3: Attach the center support leg to headboard and wood stretcher by using 3 bolts(A), lock washers(C) and flat washers(D).

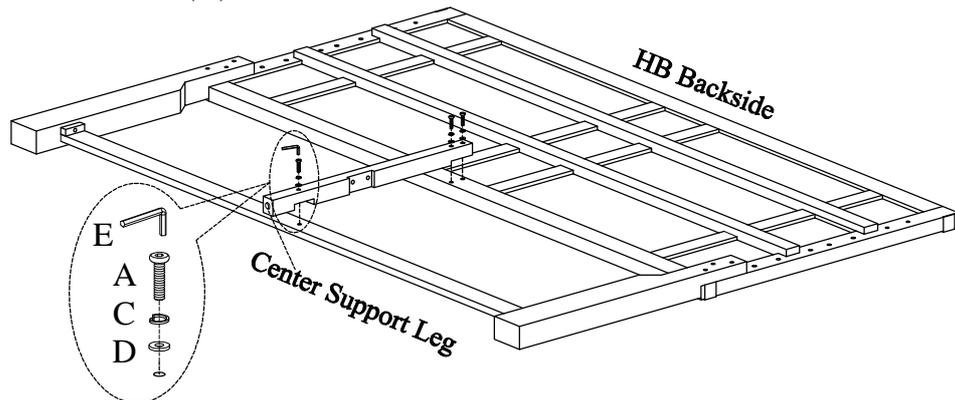

FOR OPTION 1:

STEP 4: Screw the bolts(F) into HB & FB. Make sure the slat bearer is in the position (b). Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using half moon Washers(G), Lock Washers(H) and hex nuts (I). Then use a hex wrench to tighten all the nuts.

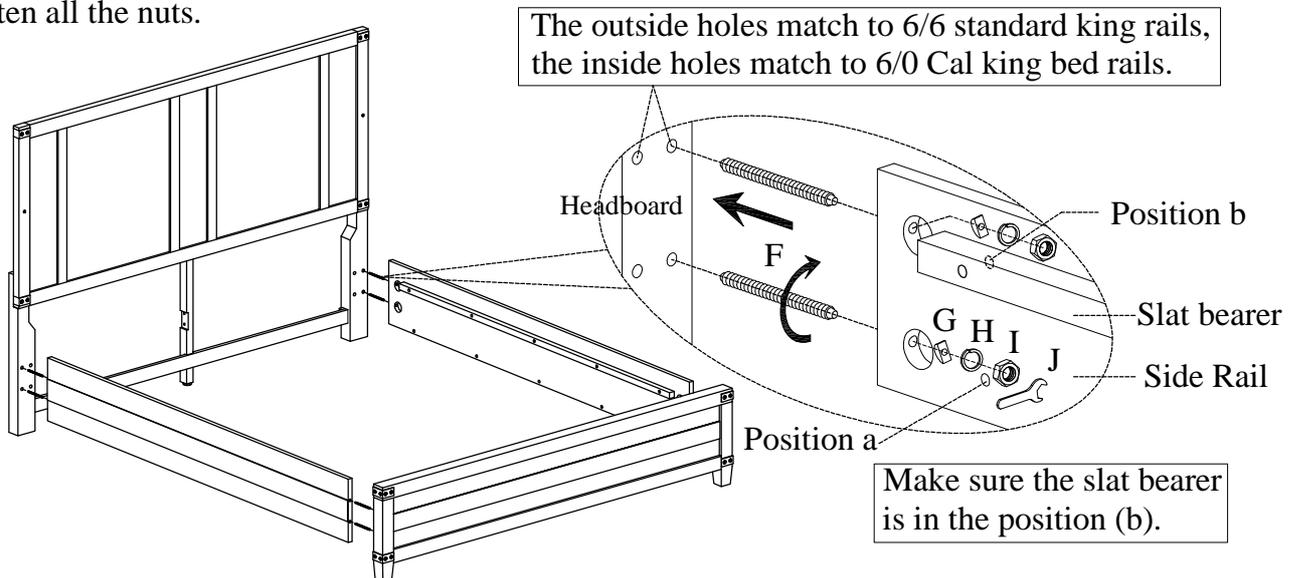





ITEM NO: I349-415-WST
 I349-407-WST
 I349-406-WST
 I349-410-WST


King Panel HB w/ 2 Lamps
 King Low Profile FB
 King Rails
 Cal King Rails

STEP 5: Attach the support legs with leveler to the slats.
 Adjust the levelers on bottom of support legs when necessary.

STEP 6: Arrange the slats on the slat bearers equally and attach to the slat bearers with wood screws (K).

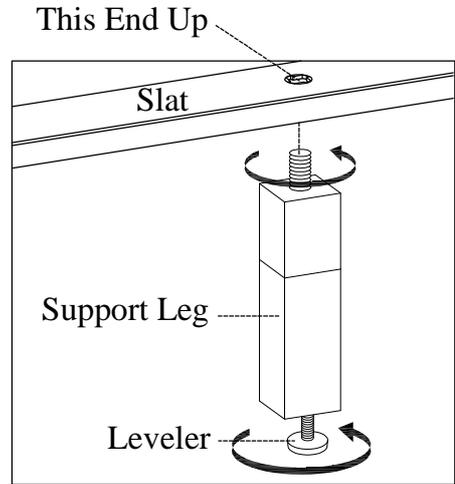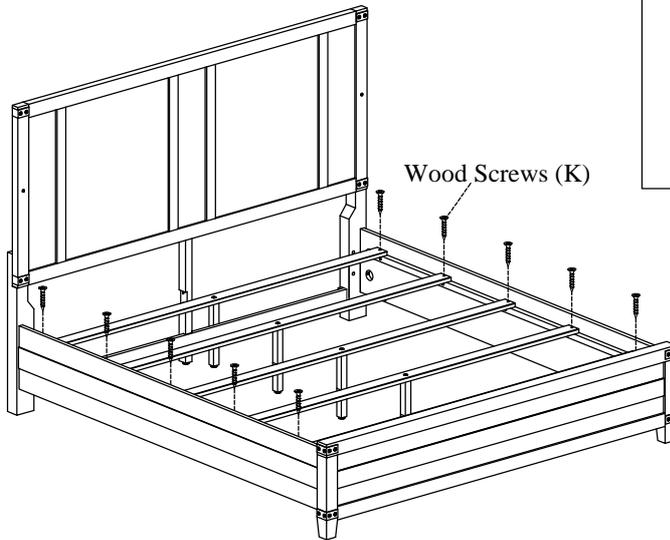


STEP 7: For Cal King bed, insert wood caps into the holes on headboard and footboard. For regular King bed, skip this step.

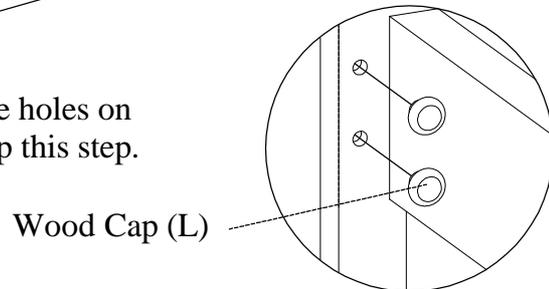

FOR OPTION 2:

STEP 4: The slat bearers have been attached in position (b) approximately 2" from the top of the side rails for use with a storage footboard. The slat bearers must be moved into position (a) based on this bed configuration. Remove the bolts from the slat bearers and side rails as shown below. Then re-attach the slat bearers to the side rails in desired position (a) with bolts, lock washers, flat washers. **Caution: Do not over tighten bolts as this may loosen the threaded inserts in the side rails.**

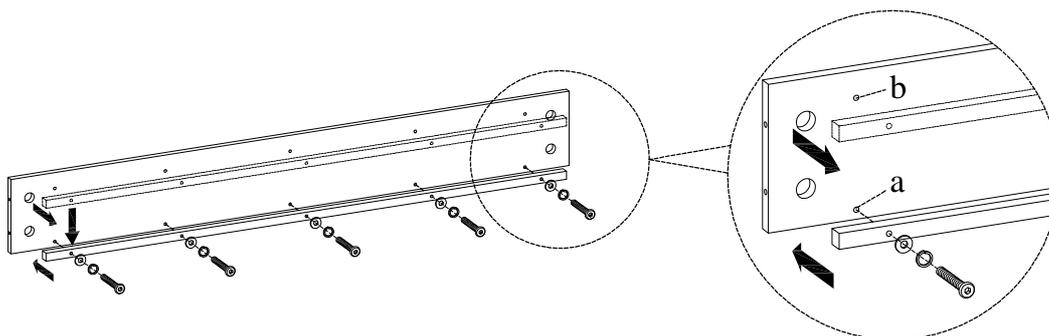




ITEM NO: I349-415-WST
 I349-407-WST
 I349-406-WST
 I349-410-WST



King Panel HB w/ 2 Lamps
 King Low Profile FB
 King Rails
 Cal King Rails

STEP 5: Screw the bolts(F) into HB & FB. Make sure the slat bearer is in the position (a). Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using half moon Washers(G), Lock Washers(H) and hex nuts (I). Then use a hex wrench to tighten all the nuts.

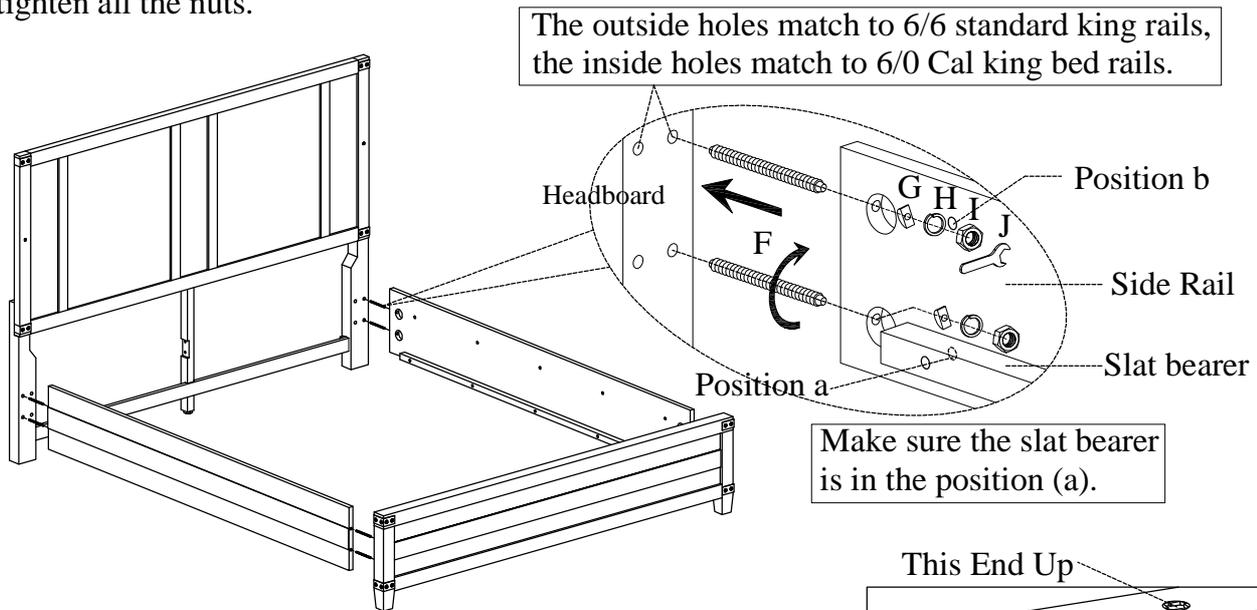


STEP 6: Remove the support legs (top) as shown in the picture to the right. Attach the support legs with leveler to the slats. Adjust the levelers on bottom of support legs when necessary.

STEP 7: Arrange the slats on the slat bearers equally and attach to the slat bearers with wood screws (K).

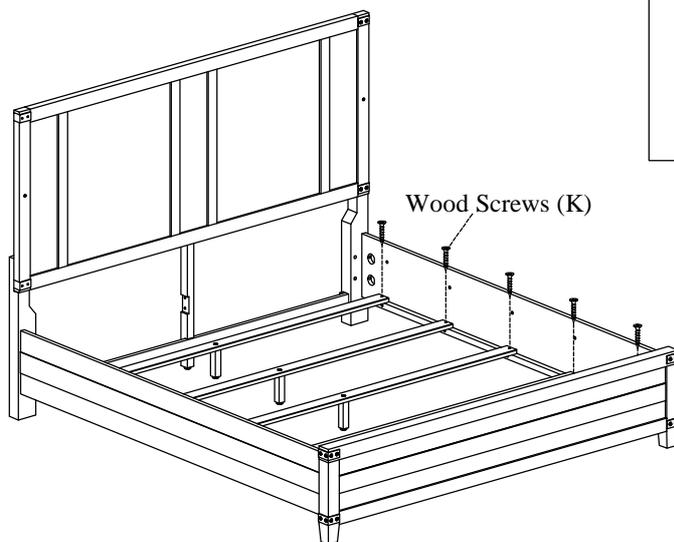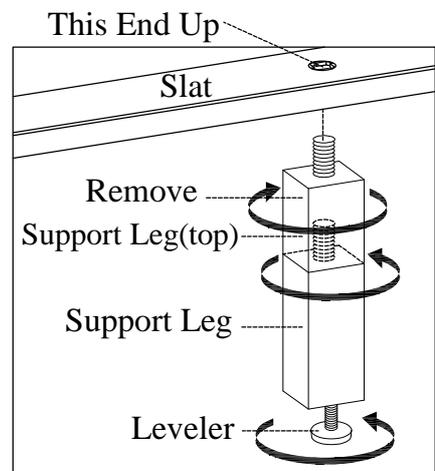

STEP 8: For Cal King bed, insert wood caps into the holes on headboard and footboard. For regular King bed, skip this step.

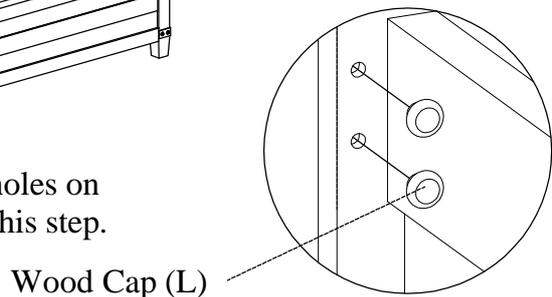



ITEM NO: I349-415-WST
 I349-407-WST
 I349-406-WST
 I349-410-WST


King Panel HB w/ 2 Lamps
 King Low Profile FB
 King Rails
 Cal King Rails

FOR SWING LAMP ASSEMBLY:


STEP 1: Attach each of the swing lamp ("1" on the component list for swing lamp) to the back of the headboard with 4 flat head wood screws ("A" on the hardware bag for swing lamp) as shown below.

STEP 2: Attach each of the control box w/wires ("2" on the component list for swing lamp) to the back of headboard with 4 pan head wood screws ("B" on the hardware bag for swing lamp) as shown below.

STEP 3: Plug the male connectors into the female connectors as shown below.

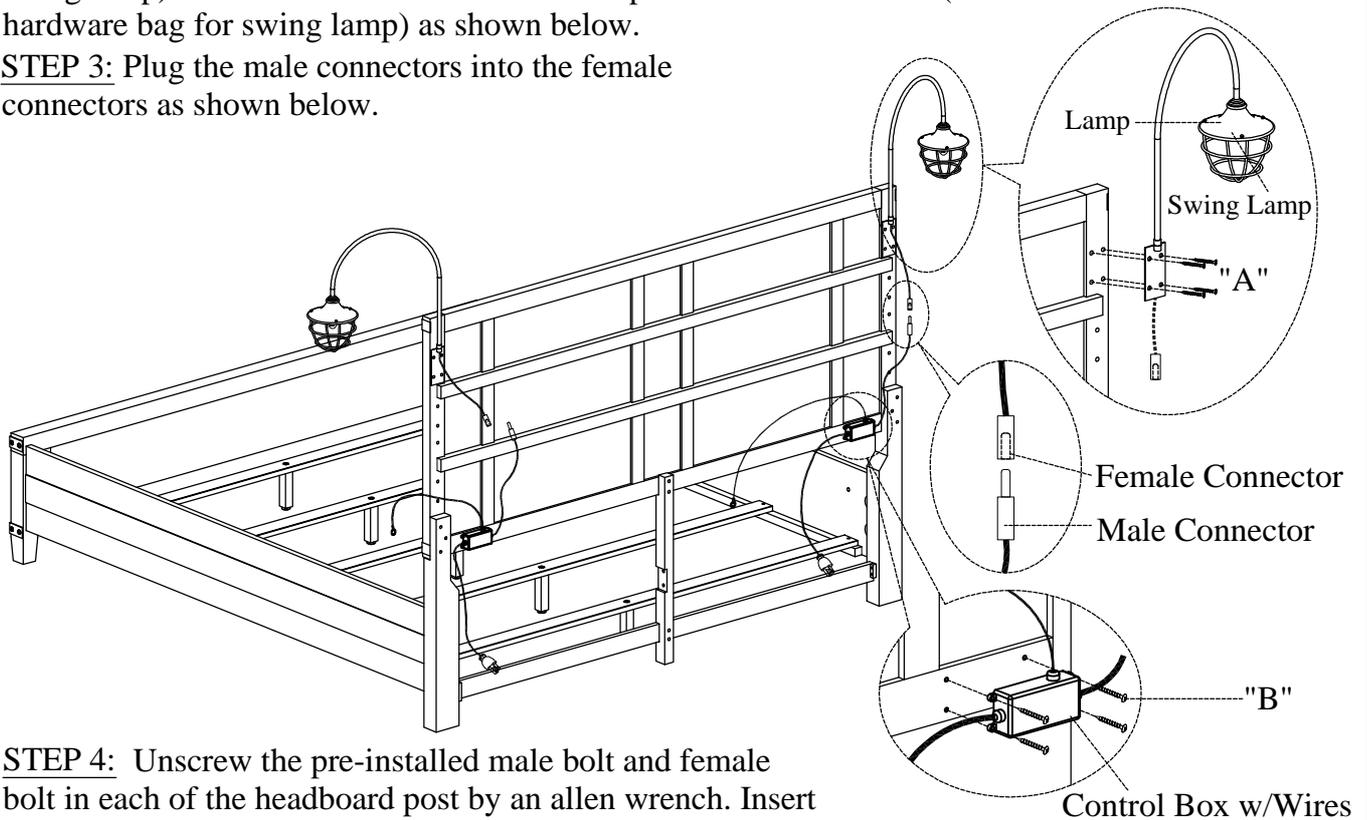

STEP 4: Unscrew the pre-installed male bolt and female bolt in each of the headboard post by an allen wrench. Insert each of the flat washer firstly and the brass ring secondly to the bolt male, press each bolt female/touch switch by finger into the hole on headboard post, then completely tighten the 2 male bolts.

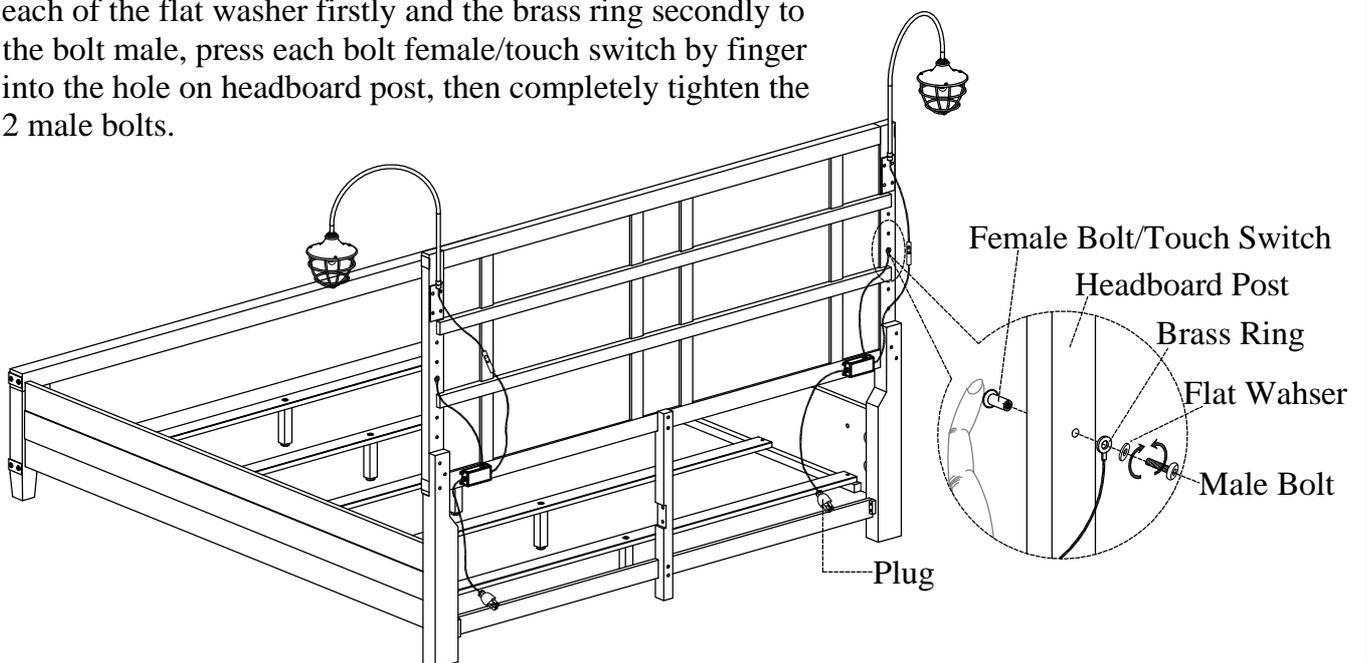




ITEM NO: I349-415-WST
 I349-407-WST
 I349-406-WST
 I349-410-WST

King Panel HB w/ 2 Lamps
 King Low Profile FB
 King Rails
 Cal King Rails


STEP 5: Insert the plugs to the socket, lift (do not push or drag) the bed assembly to the desired location and rotate the swing lamps to the desired angle.

Note: adjust the small bolts using the allen wrench ("D" on the hardware bag for swing lamp) as shown right when the swingable metal arm is too loose / tight.

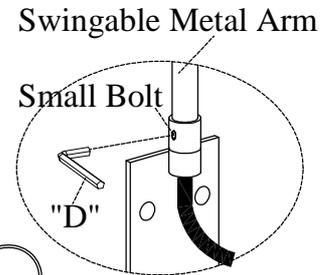


FUNCTIONALITY INSTRUCTION

OPTION 1:

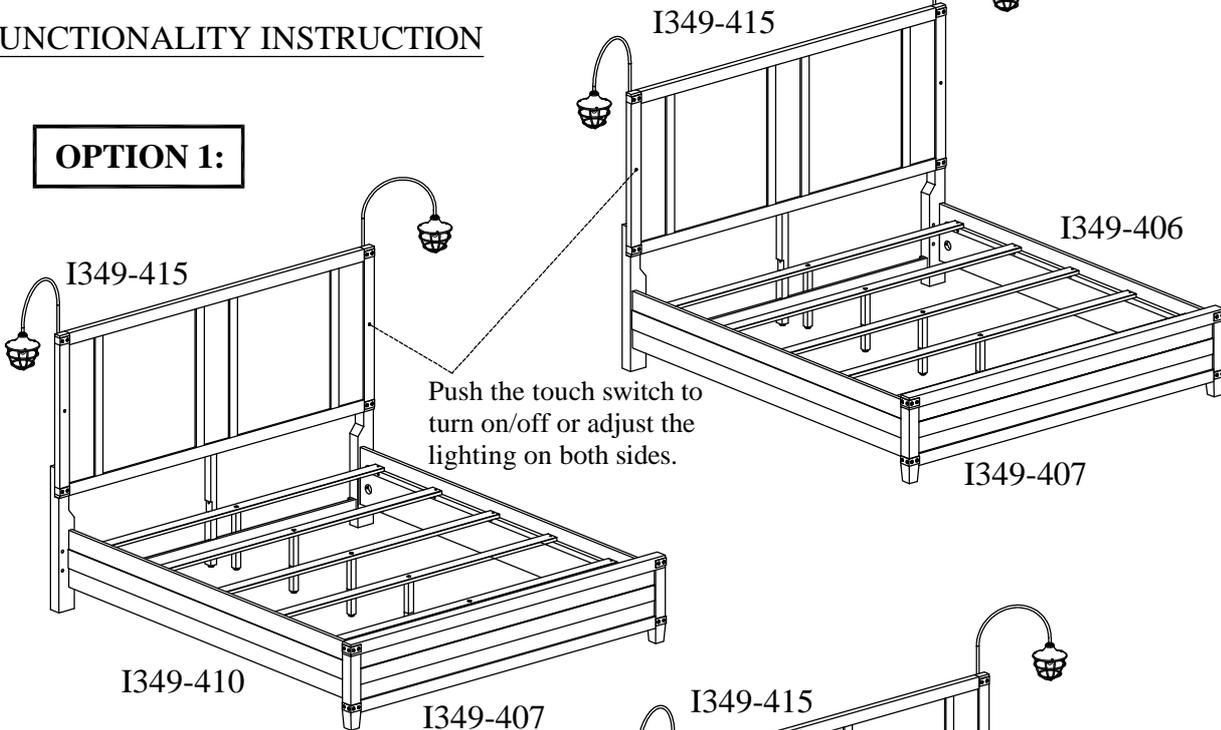

OPTION 2:

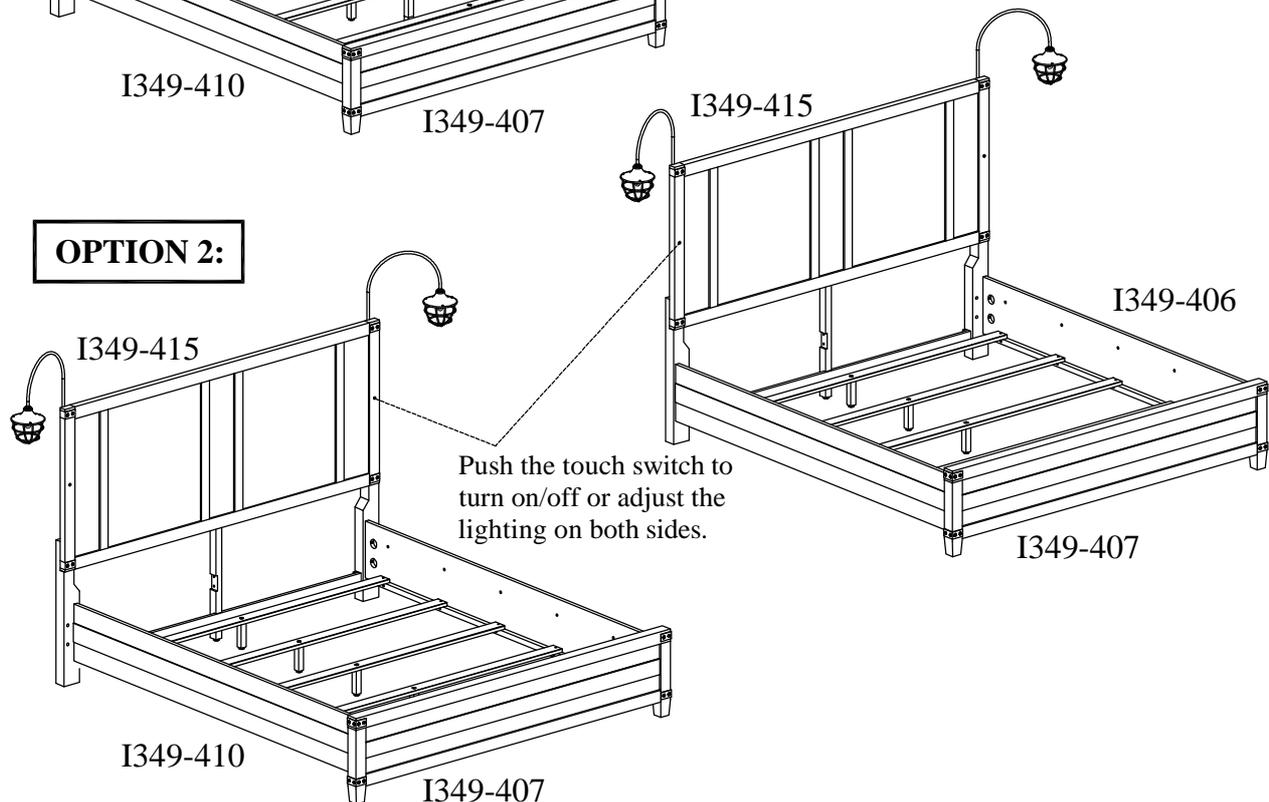




ITEM NO: I349-415-WST King Panel HB w/ 2 Lamps
 I349-407D-WST King Storage FB
 I349-406-WST King Rails
 I349-410-WST Cal King Rails

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.




UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

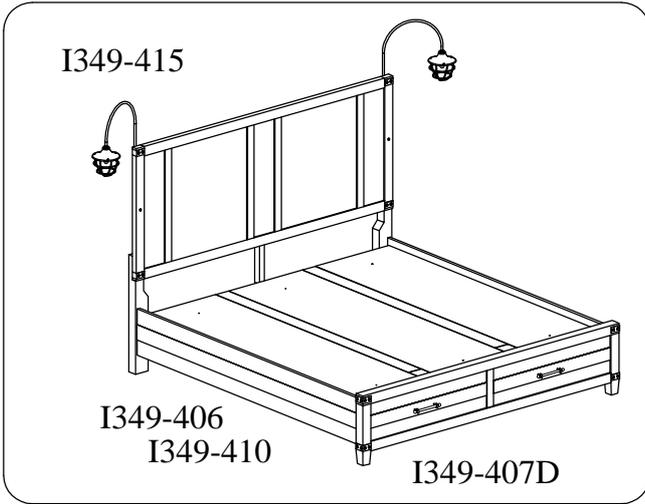

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

TOOLS REQUIRED (NOT PROVIDED)
PHILLIPS SCREWDRIVER

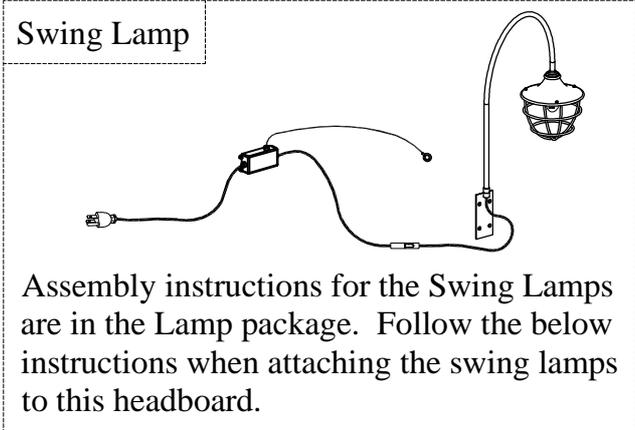

BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.
 Save these instructions for future reference.

FOR INDOOR USE ONLY



ITEM NO: I349-415-WST
I349-407D-WST
I349-406-WST
I349-410-WST

King Panel HB w/ 2 Lamps
King Storage FB
King Rails
Cal King Rails

HARDWARE LIST: I349-415			
No.	Description	Sketch	Quantity
A	Bolt Ø5/16" x 1-3/4"(18)		5 PCS
B	Bolt Ø5/16" x 2"(18)		6 PCS
C	Lock Washer Ø5/16"		11 PCS
D	Flat Washer Ø5/16" x 3/4"		11 PCS
E	Allen Wrench 4mm		1 PC

HARDWARE LIST: I349-406/410			
No.	Description	Sketch	Quantity
F	Hanger Bolt Ø5/16"x3-1/8"(18)		8 PCS
G	Half Moon Washer Ø5/16"		8 PCS
H	Lock Washer Ø5/16"		8 PCS
I	Hex Nut Ø5/16"		8 PCS
J	Hex Wrench 12mm		1 PC
K	Wood Screw #4 x 1-1/4"		10 PCS
L	Wood Cap (only for 410)		8 PCS

HARDWARE LIST: I349-407D			
No.	Description	Sketch	Quantity
M	Bolt Ø1/4" x 1-3/8"(20)		8 PCS
N	Lock Washer Ø1/4"		8 PCS
O	Flat Washer Ø1/4" x 3/4"		8 PCS
P	Allen Wrench 4mm		1 PC
Q	Wood Screw #4 x 1"		10 PCS


COMPONENTS LIST: I349-415			
No.	Description	Sketch	Quantity
1	Headboard		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC
5	Center Support Leg		1 PC
6	Lamp		2 Sets

COMPONENTS LIST: I349-406			
No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		5 PCS

COMPONENTS LIST: I349-410			
No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		5 PCS
3	Center rail (Long)		1 PC

COMPONENTS LIST: I349-407D			
No.	Description	Sketch	Quantity
1	Footboard		1 PC
2	Support Leg (for center rail)		2 PCS
3	Decking		3 PCS
4	Center rail (Short)		1 PC
5	Filler		2 PCS
6	Support Leg (for footboard)		3 PCS


STEP 1: Lay the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 6 bolts(B), lock washers(C) and flat washers(D). Do not completely tighten bolts.

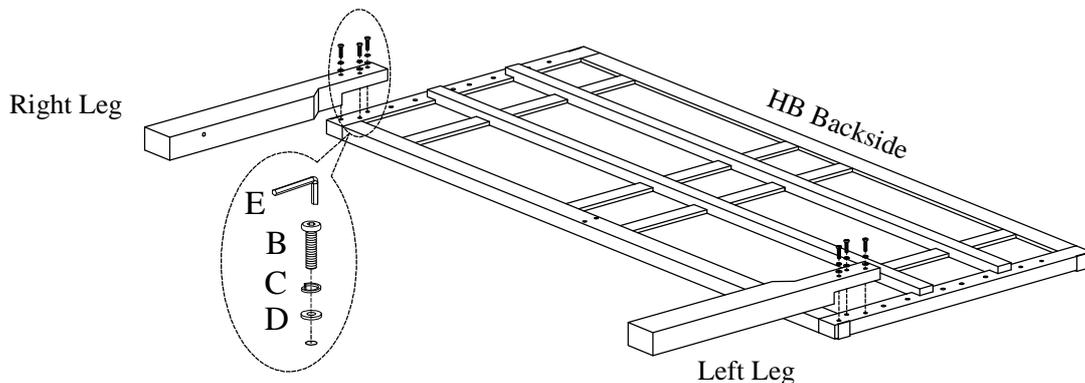




ITEM NO: I349-415-WST King Panel HB w/ 2 Lamps
 I349-407D-WST King Storage FB
 I349-406-WST King Rails
 I349-410-WST Cal King Rails


STEP 2: Attach the wood stretcher to the legs by using 2 bolts(A), lock washers(C) and flat washers(D). Completely tighten all bolts.

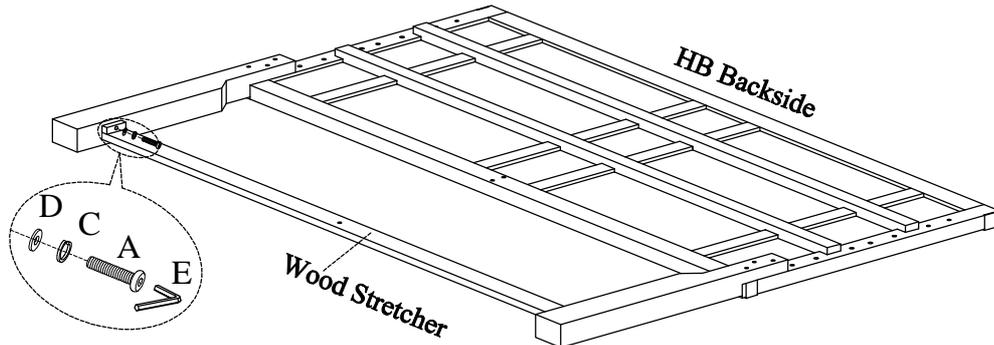

STEP 3: Attach the center support leg to headboard and wood stretcher by using 3 bolts(A), lock washers(C) and flat washers(D).

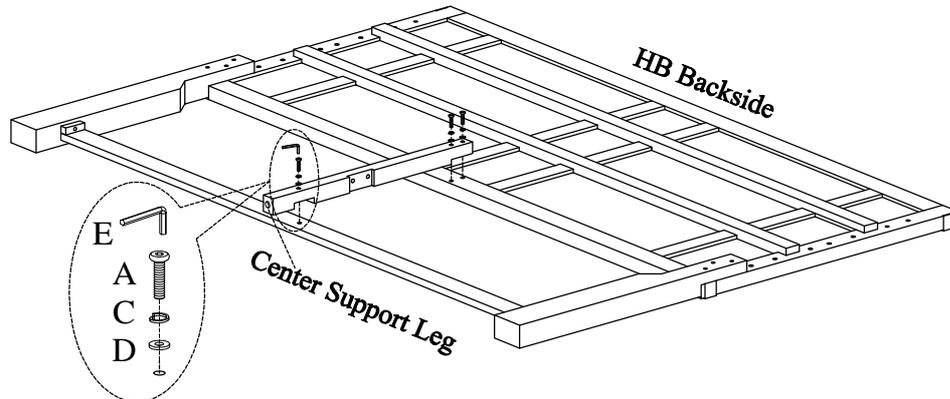

STEP 4: Put the footboard face down on a soft surface. Attach the support legs (for footboard) to the footboard as shown below.

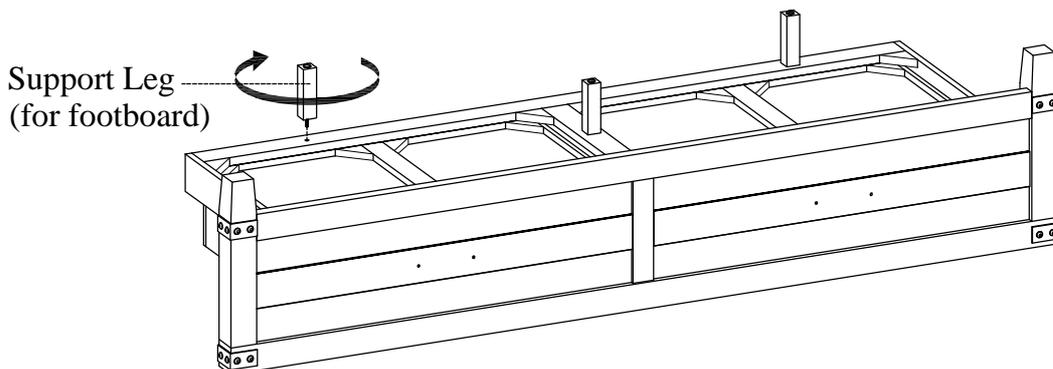





ITEM NO: I349-415-WST
 I349-407D-WST
 I349-406-WST
 I349-410-WST

King Panel HB w/ 2 Lamps
 King Storage FB
 King Rails
 Cal King Rails


STEP 5: Screw the bolts(F) into HB & FB. Make sure the slat bearer is in the UPPER position. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using half moon Washers(G), Lock Washers(H) and hex nuts (I). Then use a hex wrench to tighten all the nuts.

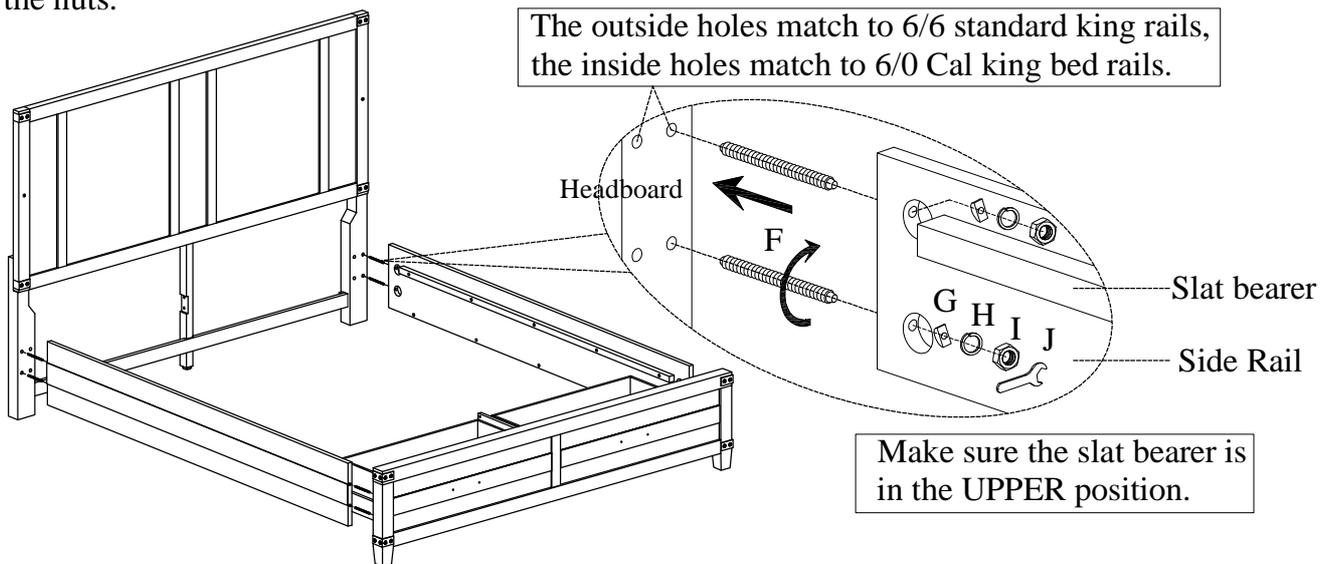

STEP 6: The standard king center rail(short) is in the Storage Footboard carton, and the Cal king center rail (long) is in the Cal King side rail carton. Attach the appropriate center rail to the footboard and center support leg of headboard using 4 bolts(M), lock washers(N) and flat washers(O).

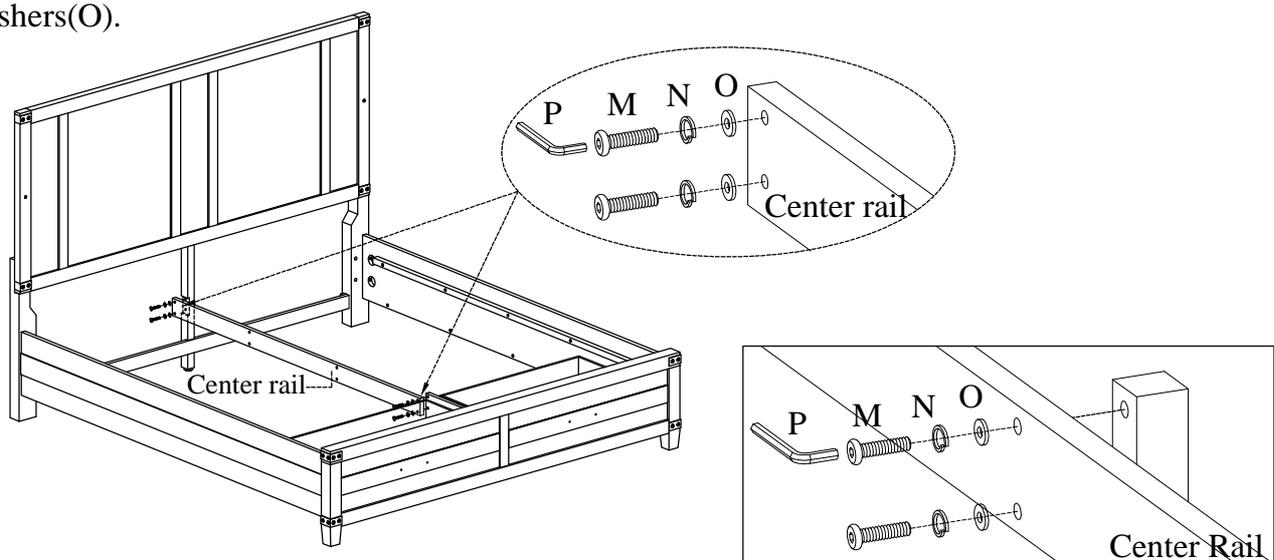

STEP 7: Attach 2 support legs (for center rail) to the center rail using 4 bolts(M), lock washers(N) and flat washers(O). Use the Allen Wrench(P) to tighten all of the bolts.

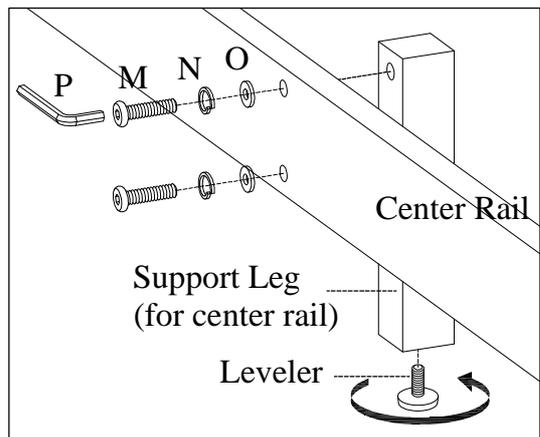





ITEM NO: I349-415-WST
 I349-407D-WST
 I349-406-WST
 I349-410-WST

King Panel HB w/ 2 Lamps
 King Storage FB
 King Rails
 Cal King Rails


STEP 8: Arrange slats on the slat bearers and then lay the decking on top of the slats. Make sure the top and bottom slats are situated underneath the pre-drilled holes as shown below in STEP 10. Remove the decking and attach slats to the slat bearers with wood screws (K).

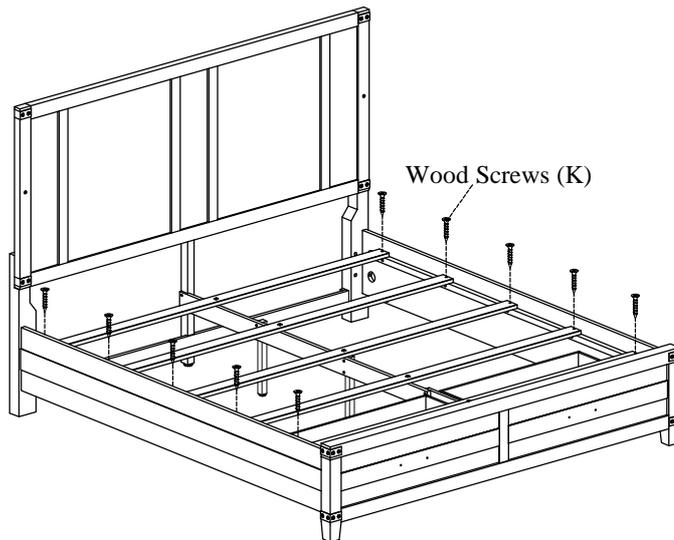

STEP 9: For the Cal King bed, both filler boards are notched. Using a utility knife only cut off the small piece at the notch on one of the filler boards. This cut off filler board will be placed at the foot of the bed going from left to right as shown on the right side below in STEP 10. For the standard King bed, skip this step and arrange the decking boards as shown below.

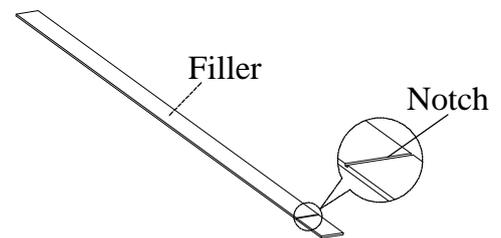

STEP 10: Put the deckings and fillers over the slats, secure deckings to the slats with wood screws (Q) through the pre-drilled holes in the deckings as shown below.

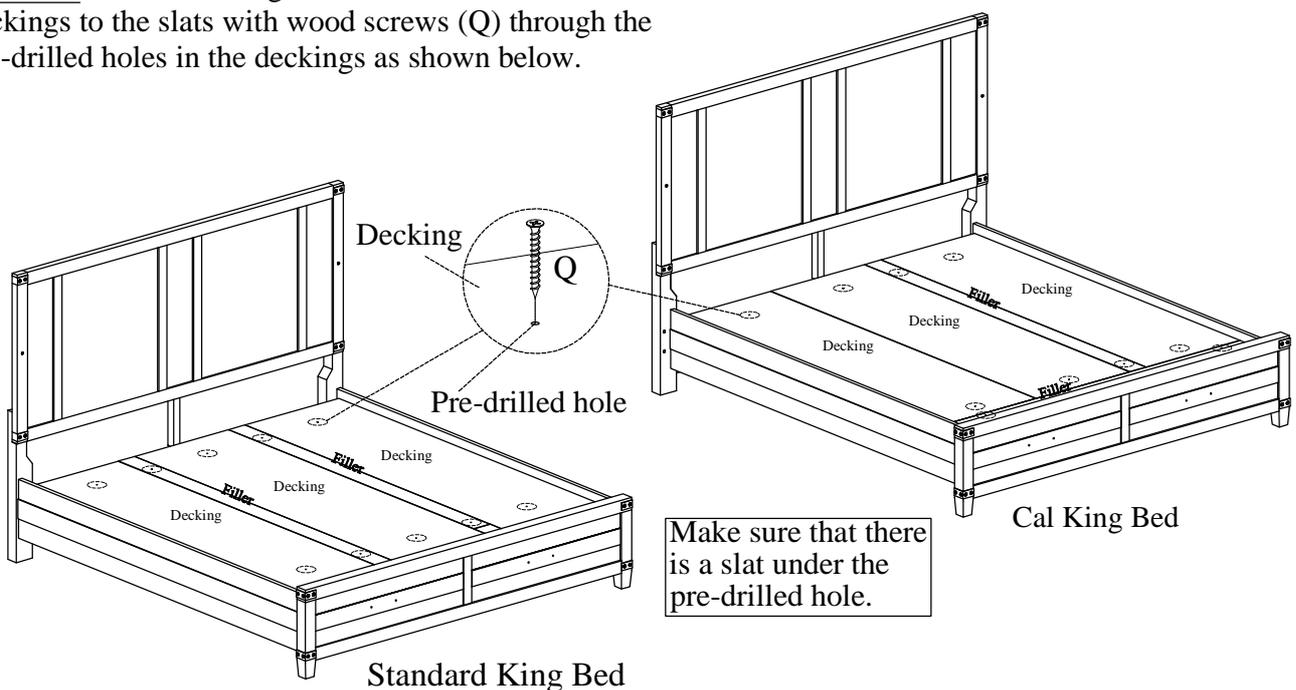




ITEM NO: I349-415-WST
 I349-407D-WST
 I349-406-WST
 I349-410-WST

King Panel HB w/ 2 Lamps
 King Storage FB
 King Rails
 Cal King Rails

STEP 11: For Cal King bed, insert wood caps into the holes on headboard and footboard. For regular King bed, skip this step.

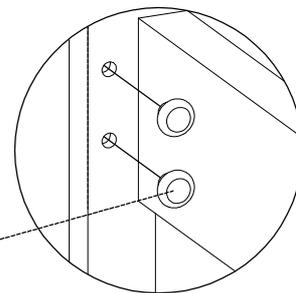


Wood Cap (L)

FOR SWING LAMP ASSEMBLY:


STEP 1: Attach each of the swing lamp ("1" on the component list for swing lamp) to the back of the headboard with 4 flat head wood screws ("A" on the hardware bag for swing lamp) as shown below.

STEP 2: Attach each of the control box w/wires ("2" on the component list for swing lamp) to the back of headboard with 4 pan head wood screws ("B" on the hardware bag for swing lamp) as shown below.

STEP 3: Plug the male connectors into the female connectors as shown below.

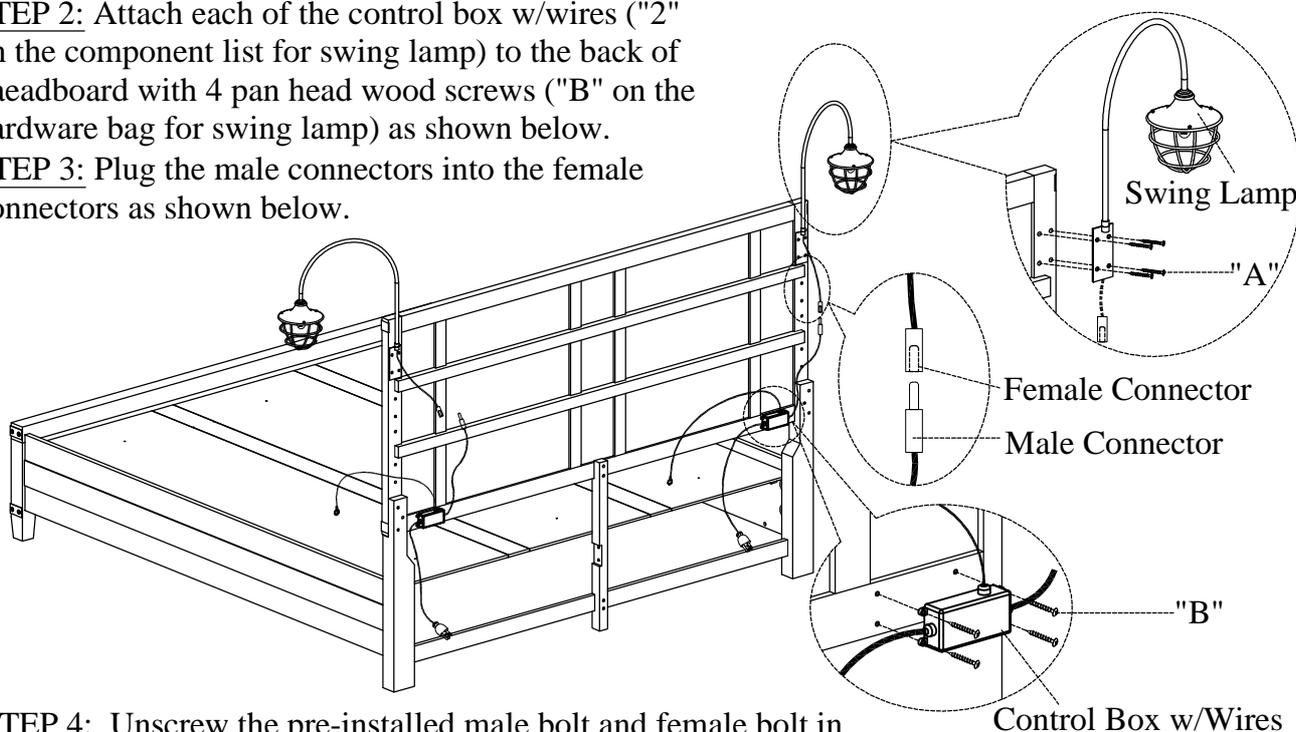

STEP 4: Unscrew the pre-installed male bolt and female bolt in each of the headboard post by an allen wrench. Insert each of the flat washer firstly and the brass ring secondly to the bolt male, press each bolt female/touch switch by finger into the hole on headboard post, then completely tighten the 2 male bolts.

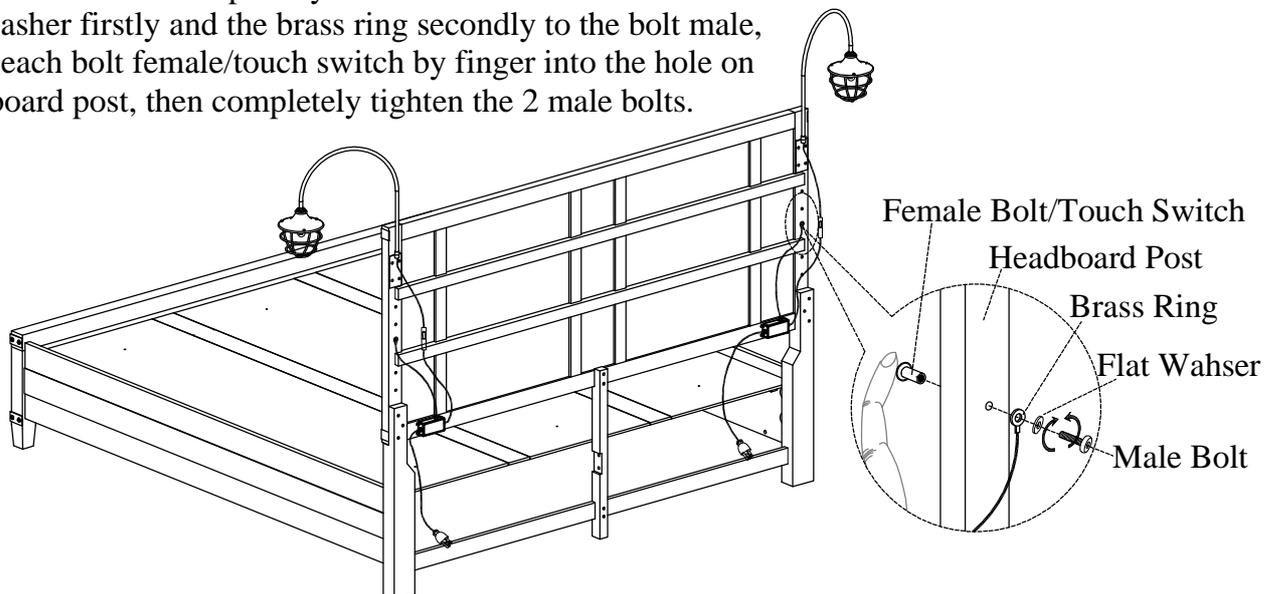




ITEM NO: I349-415-WST
 I349-407D-WST
 I349-406-WST
 I349-410-WST


King Panel HB w/ 2 Lamps
 King Storage FB
 King Rails
 Cal King Rails

STEP 5: Insert the plugs to the socket, lift (do not push or drag) the bed assembly to the desired location and rotate the swing lamps to the desired angle.

Note: adjust the small bolts using the allen wrench ("D" on the hardware bag for swing lamp) as shown right when the swingable metal arm is too loose / tight.

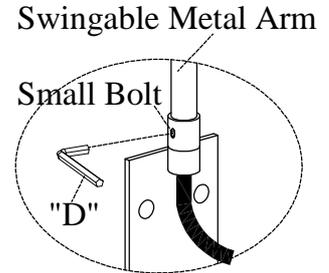


FUNCTIONALITY INSTRUCTION

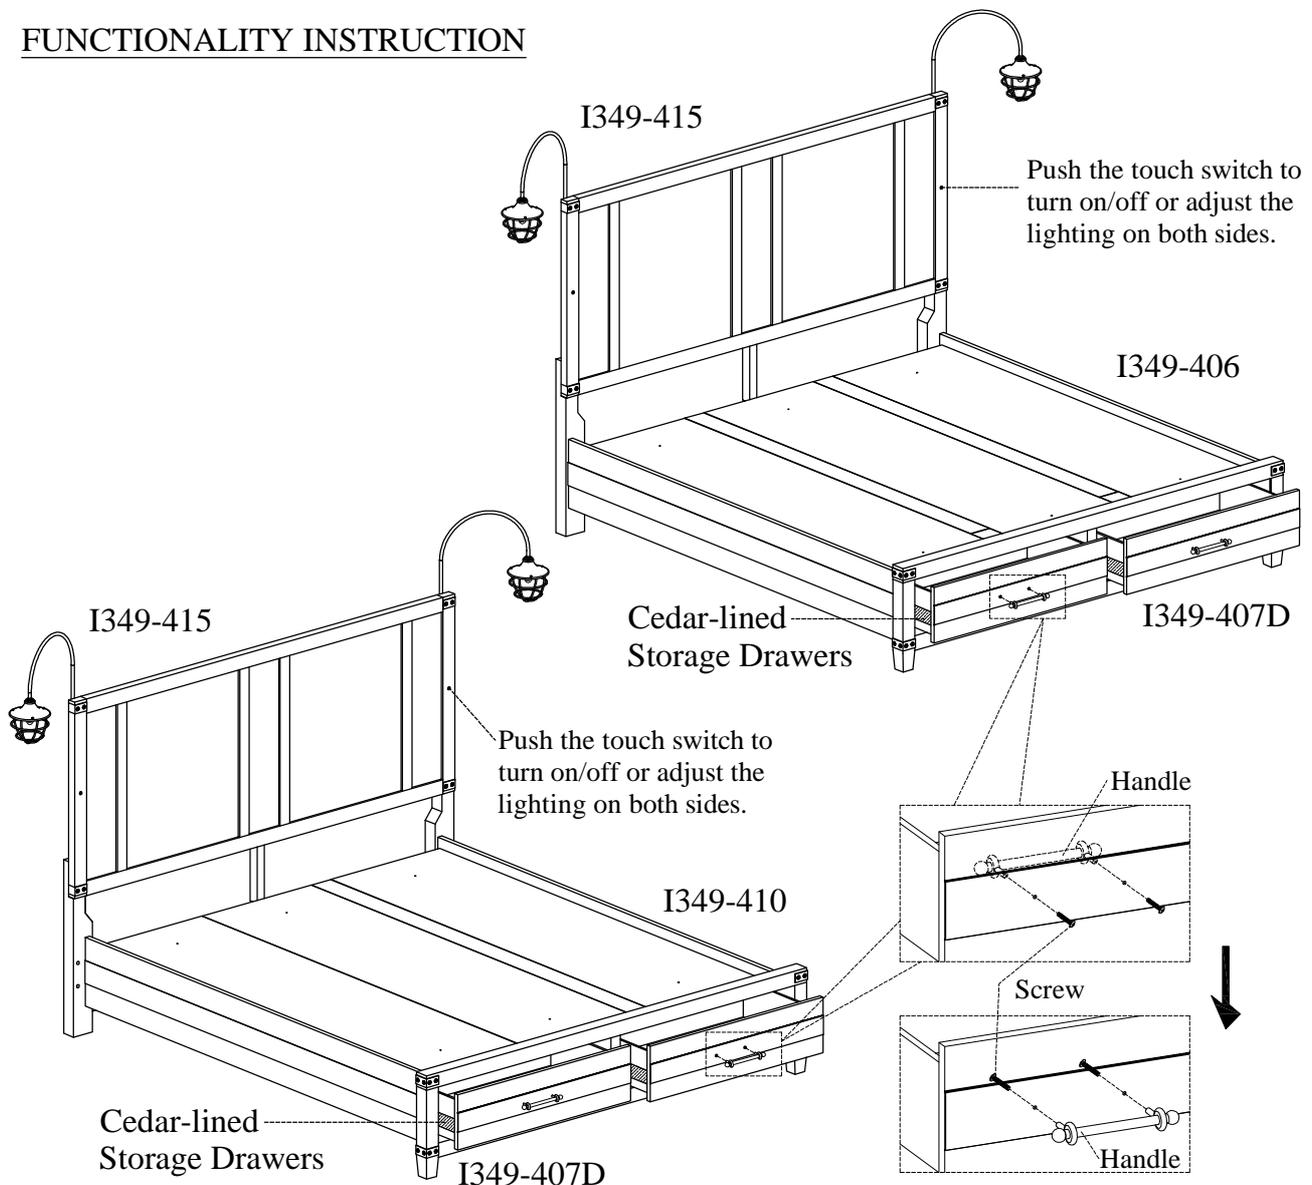

Reverse each handle by removing the screws while each drawer is open and attach all handles to the front of the drawers with screws as shown.

Swing Lamp Assembly Instructions

QTY: 2 Sets/Ctn

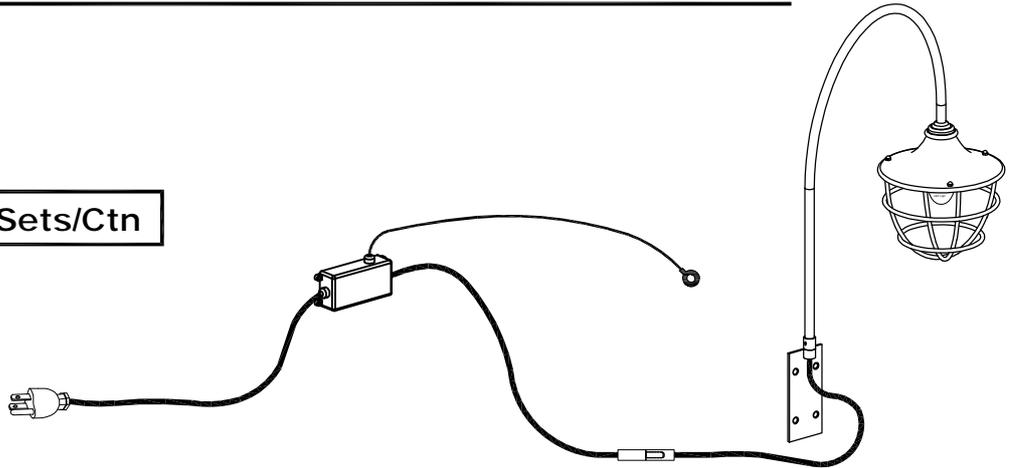

Safety Warning

- Designed to be used with Aspenhome Lamp only.
- The manufacturer is not liable for damage or injury caused by incorrect assembly or use.
- Keep the assembly instruction for future reference.


Important Safety Instructions

INSTRUCTIONS PERTAINING TO A RISK OF FIRE, ELECTRIC SHOCK, EXPOSURE TO EXCESSIVE UV RADIATION, OR INJURY TO PERSONS

Lighted Lamp is HOT


WARNING - To reduce the risk of FIRE, ELECTRIC SHOCK, EXPOSURE TO EXCESSIVE UV RADIATION, OR INJURY TO PERSONS:

1. Turn off /unplug and allow to cool before replacing LED bulb (lamp).
2. LED bulb (lamp) gets HOT quickly! Only contact switch/plug when turning on.
3. Do not touch hot LED bulb, metal grid or lampshade.



4. Do not remain in light if skin feels warm.
5. Do not look directly at lighted LED bulb (lamp).
6. Keep lamp away from materials that may burn.
7. Use only with a 6 watt (max. 60 watt) LED bulb (lamp).
8. Do not touch the LED bulb (lamp) at any time. Use a soft cloth. Oil from skin may damage LED bulb (lamp).
9. Do not operate the portable luminaire with a missing or damaged guard, lamp containment barrier, or UV filter.

Component List/set

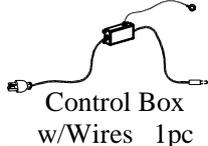①		②	 Control Box w/Wires 1pc
		③	 6W(2700K) LED Bulb 1pc

Hardware List/set


No.	Description	Sketch	Quantity
A	Flat Head Wood Screw #4 x 5/8"		4 PCS
B	Pan Head Wood Screw #4 x 3/4"		4 PCS
C	Hex Wrench 8mm		1 PC
D	Allen Wrench 2mm		1 PC

Swing Lamp Assembly Instructions

STEP 1: Unscrew 3 cap bolts attached on the lampshade by a hex wrench (C) and take out the metal grid as the diagram shown below. Save hardware to replace the metal grid in STEP 3.

STEP 2: Install the LED bulb in the lampshade as the diagram shown below.


STEP 3: Insert the metal grid into the holes on lampshade and attach the metal grid to lampshade by 3 cap bolts using a hex wrench(C) to tighten them completely.

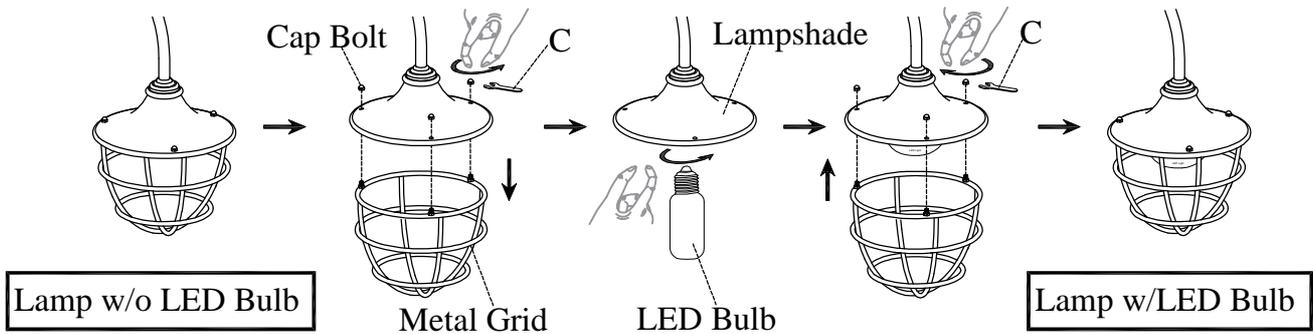

NOTE: When the LED bulb gets damaged, please follow up with the above step 1, 2 & 3 for the replacement as well.

Specification

- Electrical Rating: 120V ac, 60 Hz
- Lamp Rating:
 - ◆ Normal use bulb is 6W(2700K) LED bulb
 - ◆ Maximum 60W Incandescent Bulb
- Lamp is swingable 135° by the Metal Arm.
- 3-Way Touch Switch Function on Brass Ring:
 - a. Touch the 1st time: low brightness
 - b. Touch the 2nd time: middle brightness
 - c. Touch the 3rd time: high brightness
 - d. Touch the 4th time: off

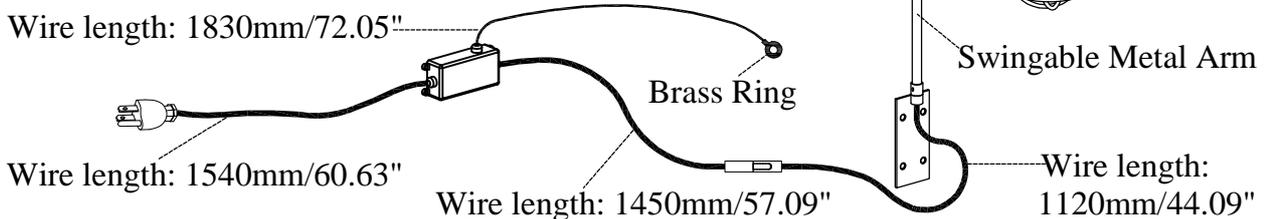

Caution

- a. Use only insulated staples or plastic ties to secure cords;
- b. Route and secure cords so that they will not be pinched or damaged when the headboard is pushed to the wall;
- c. DO NOT conceal wires where damage to insulation may go unnoticed. To prevent fire danger, do not run cords behind walls, ceilings, soffits, or beds where it may be inaccessible for examination. Cords should be visually examined periodically and immediately replaced when any damage is noted.