




ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

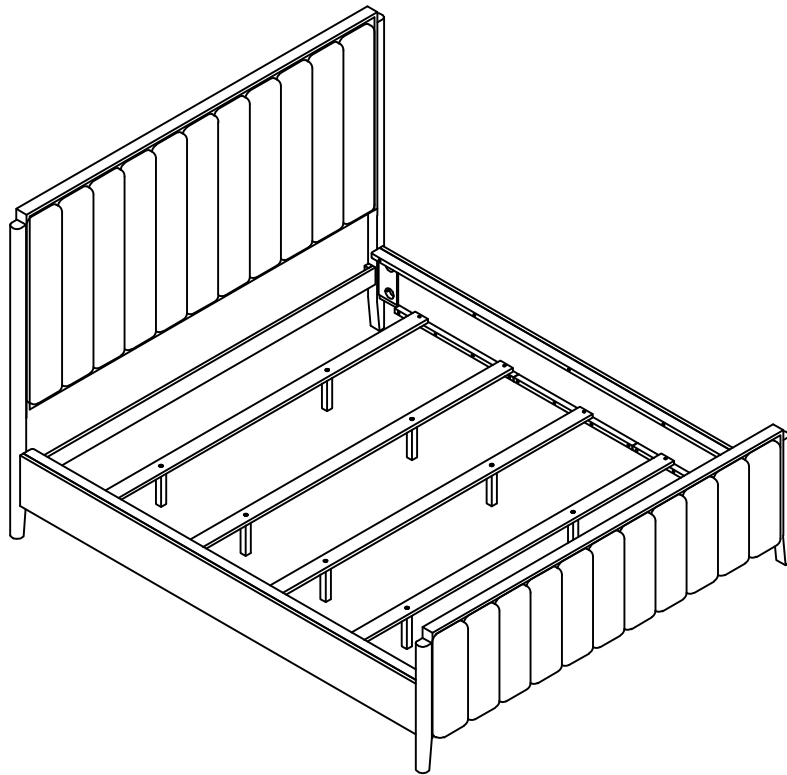

Fine Furniture for every stage of life

224710KW(B1-B3)
California King Bed

ITEM: 224710KW(B1-B3)

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!



- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A HEADBOARD
PANEL

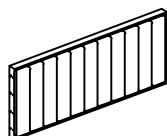

1PC

B HEADBOARD
BOTTOM RAIL




1PC

C RIGHT
HEADBOARD LEG



1PC


D LEFT
HEADBOARD LEG



1PC

B2 (BOX 2)

E FOOTBOARD

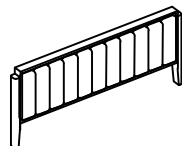

1PC

B3 (BOX 3)

F BED RAIL



2PCS

G BED SLAT



4PCS


H BED SLAT SUPPORT
WITH LEVELER



8PCS

HB


224710KW (B1)
FROM BOX 1
HEADBOARD
COMPLETE

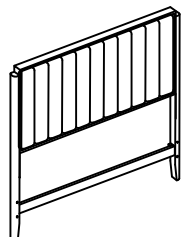

1PC

FB

224710KW (B2)
FROM BOX 2
FOOTBOARD

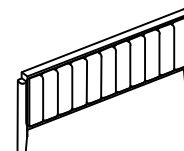

1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 224710KW(B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.





WARNING!








- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 224710KW (B1)

| | | | | | | | |
|---|-------------------------------------|---|-------|---|--|---|-------|
| 1 | BOLT (5/16" x 38mm - BLK) |  | 10PCS | 3 | FLAT WASHER (5/16" x 19 x 1.5mm - BLK) |  | 10PCS |
| 2 | LOCK WASHER (5/16" - BLK) |  | 10PCS | 4 | ALLEN WRENCH (74 x 30 x 4mm - BLK) |  | 1PC |

Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 224710KW (B3)

| | | | | | | | |
|---|---|---|------|---|--|---|-----|
| 5 | THREADED BOLT (5/16" x 75mm - RBW) |  | 8PCS | 8 | WRENCH (13MM - RBW) |  | 1PC |
| 6 | U-SQUARE WASHER (25 x 15 x 2mm - RBW) |  | 8PCS | 9 | FLAT HEAD SCREW (4 x 32mm - RBW) |  | 8PC |
| 7 | HEX NUT (5/16" x 17mm - RBW) |  | 8PCS | | | | |

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **224710KW(B1-B3)**


ASSEMBLY INSTRUCTIONS



STEP 1

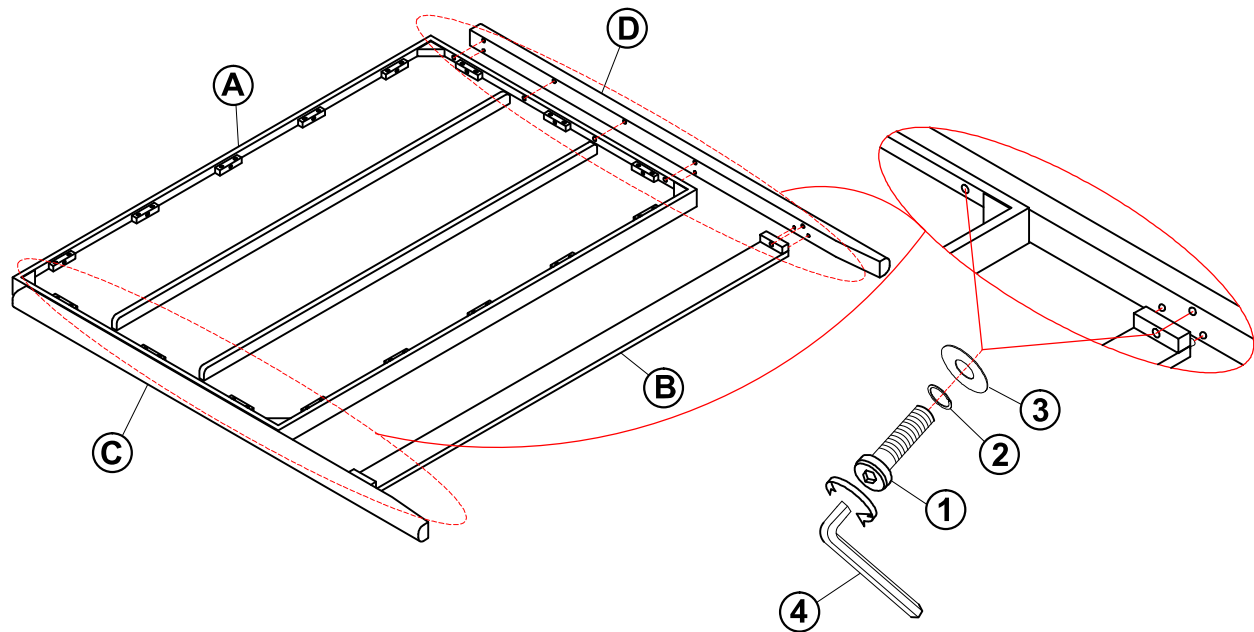

STEP 2

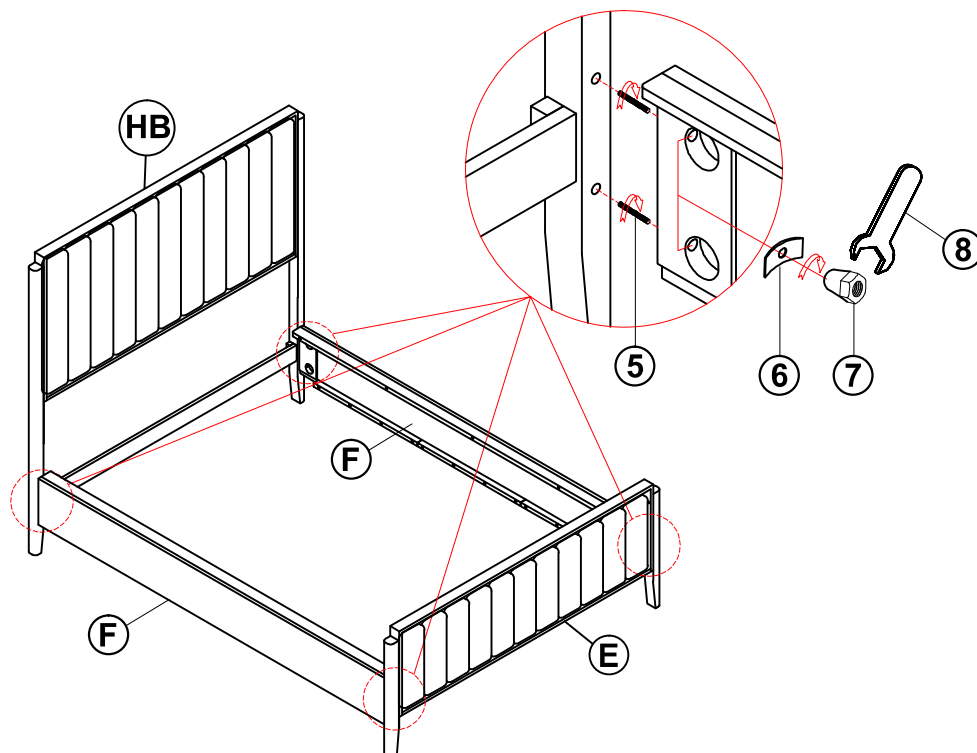


ITEM: **224710KW(B1-B3)**


ASSEMBLY INSTRUCTIONS





STEP 3

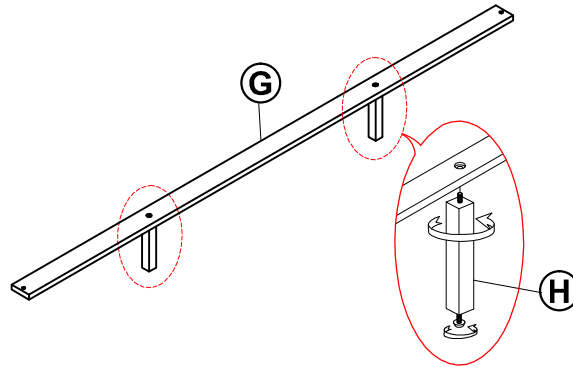

STEP 4

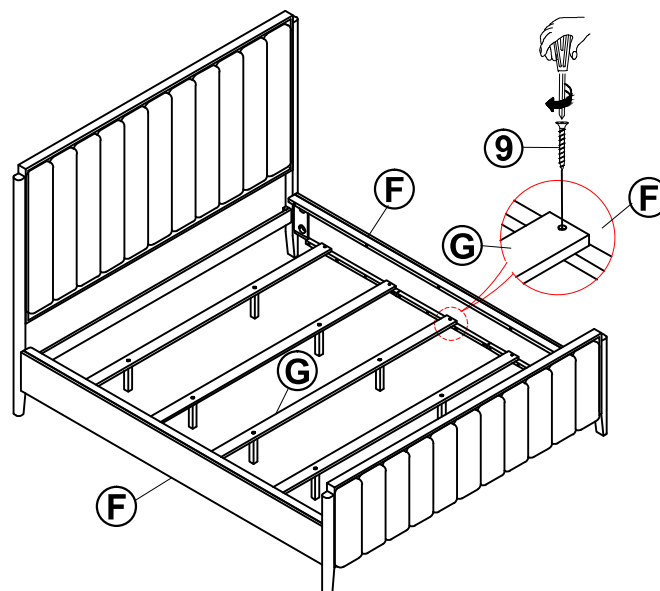


STEP 5 COMPLETE

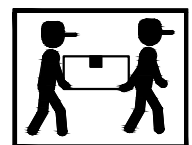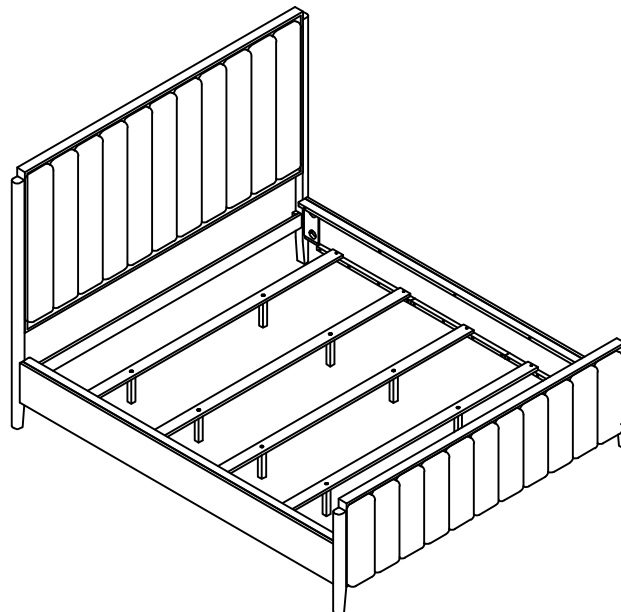

ITEM: **224710KW(B1-B3)**



Inner Size : 85.00"W x 76.75"D

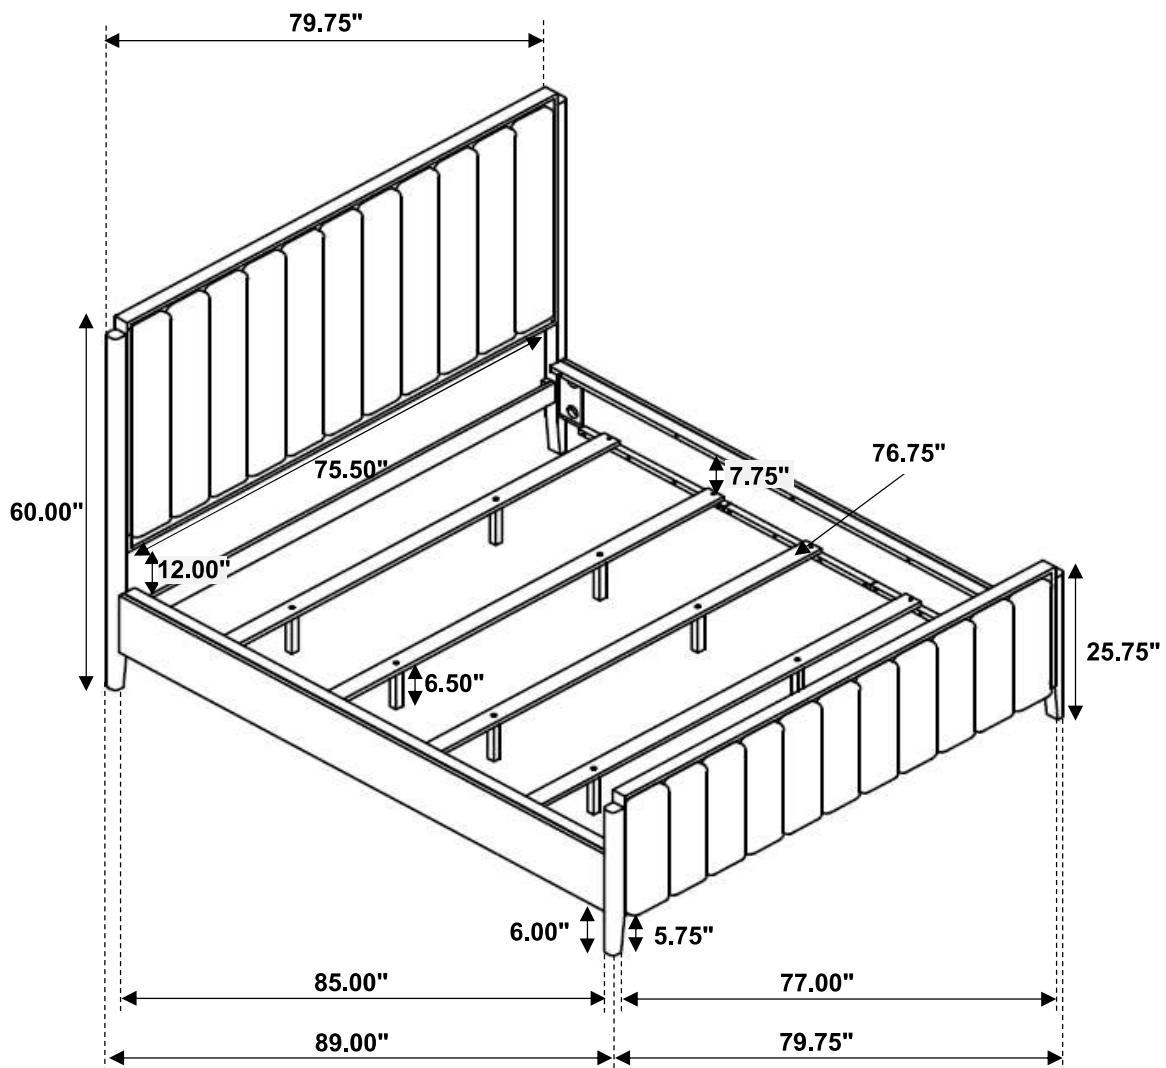

Note : Dimension tolerance $\pm 5\%$