


# ASSEMBLY INSTRUCTION

## MODEL : TALIA

### Description : Head Board with LED

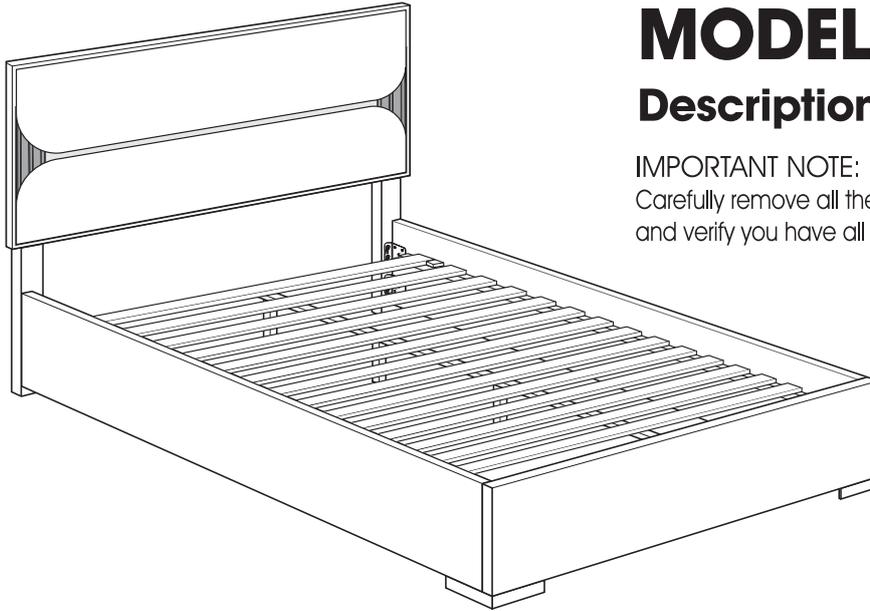


#### IMPORTANT NOTE:


Carefully remove all the parts from the box. Arrange on a flat surface and verify you have all of the following parts and hardware.

### PARTS LIST

A. Headboard (1 pc)

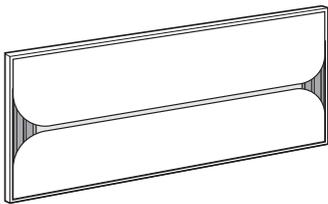

B. Headboard Post (L/R) 2pcs

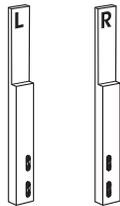


### No HARDWARE LIST

1	Bolt M8 40mm (6pcs)	
2	Flat Washer (6 pcs)	
3	Spring Washer (6 pcs)	
4	M8 Hex Key (1 pc)	
5	AC/DC Adapter (1 PC)	

Hardware Located in Headboard Box

F. Headboard Post (L/R) 2pcs

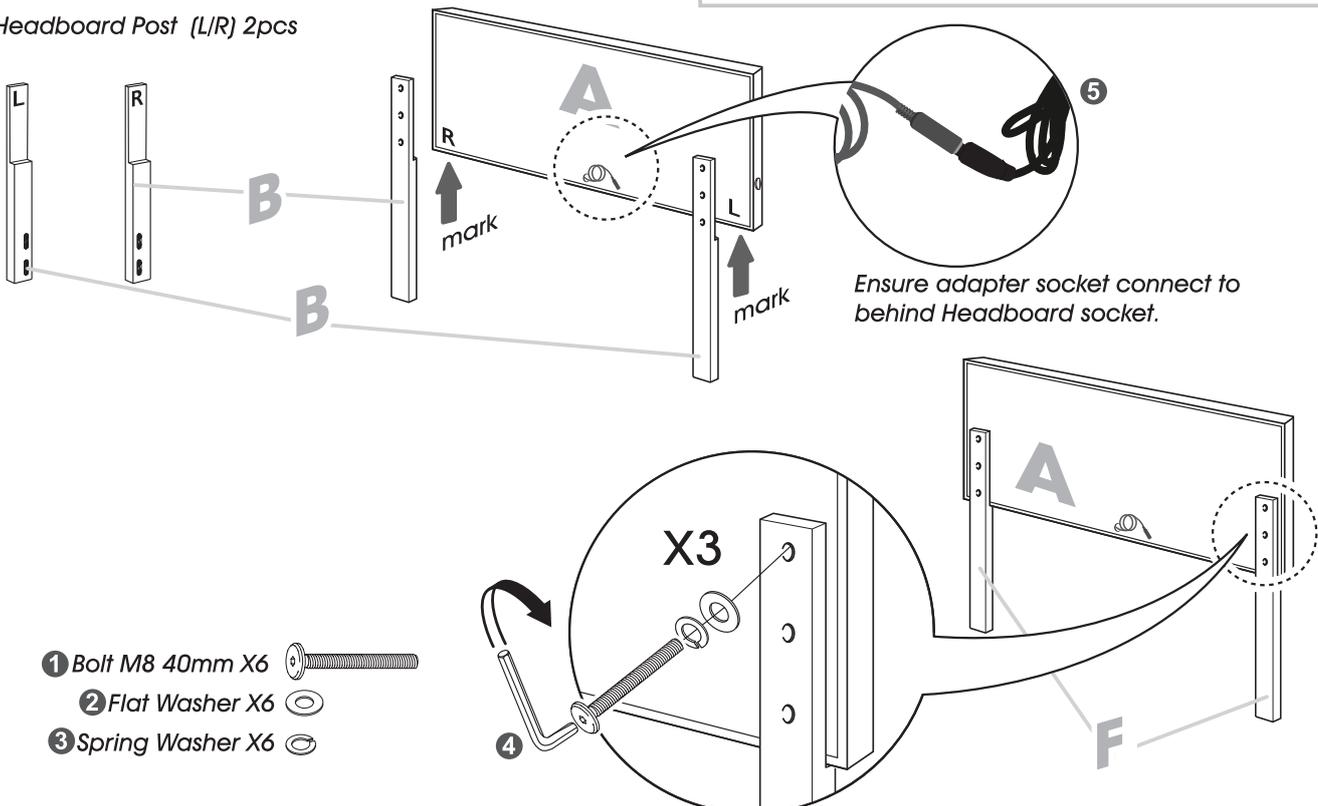

# ASSEMBLY INSTRUCTION


## MODEL : TALIA

### Description :

### QUEEN BED FOOTBOARD SIDERAILS


#### IMPORTANT NOTE:

Carefully remove all the parts from the box. Arrange on a flat surface and verify you have all of the following parts and hardware.

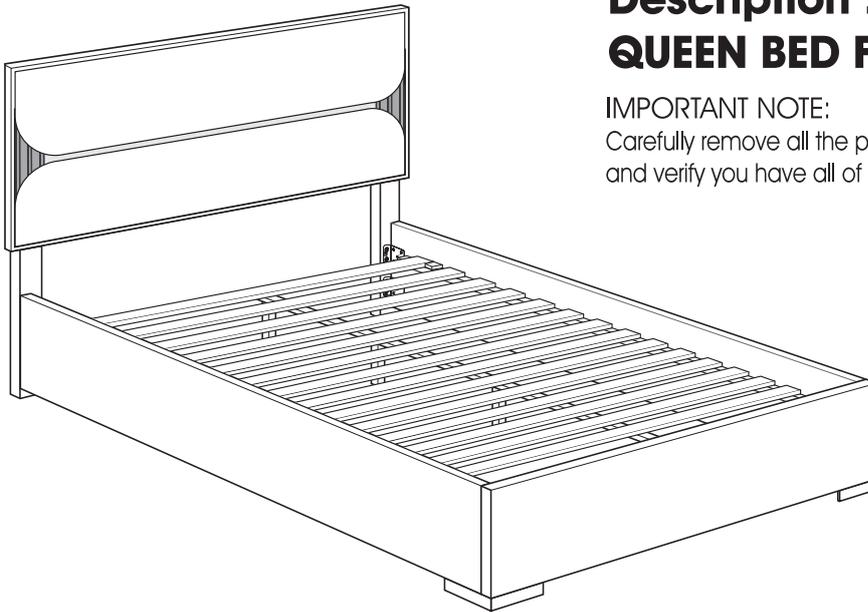


## PARTS LIST


A. Side Rails (L/R) 2pcs

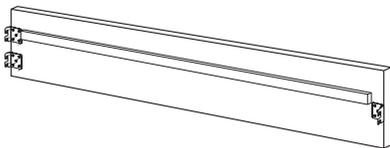

B. Footboard (1 pc)

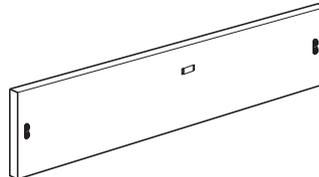

C. Center Support (1 pc)



D. Footboard Leg (4 pcs)



Sticker A, B, C, D

E. Center Leg (4 pcs)




No		HARDWARE LIST		No	
1	Bolt M6 30mm(12 pcs)		5	Screw 32mm (8 pcs)	
2	Bolt M8 20mm(4 pcs)		6	Adjuster (4 pcs)	
3	Flat Washer (12 pcs)		7	M6 Hex Key (1 pc)	
4	Spring Washer (12 pcs)				

Hardware Located in Footboard Box

# Step 1


A. Side Rails (L/R) 2pcs

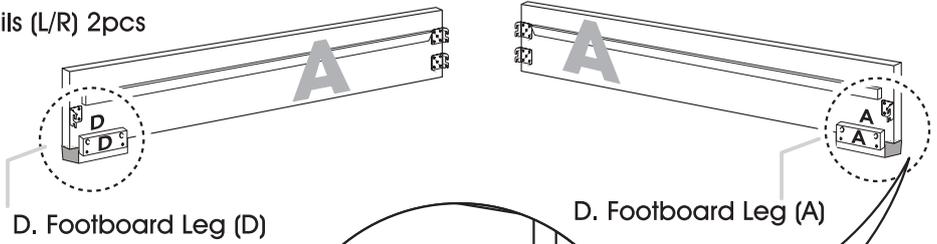

- 1 Bolt M6 30mm X4 
- 3 Flat Washer X4 
- 4 Spring Washer X4 


# Step 2

B. Footboard

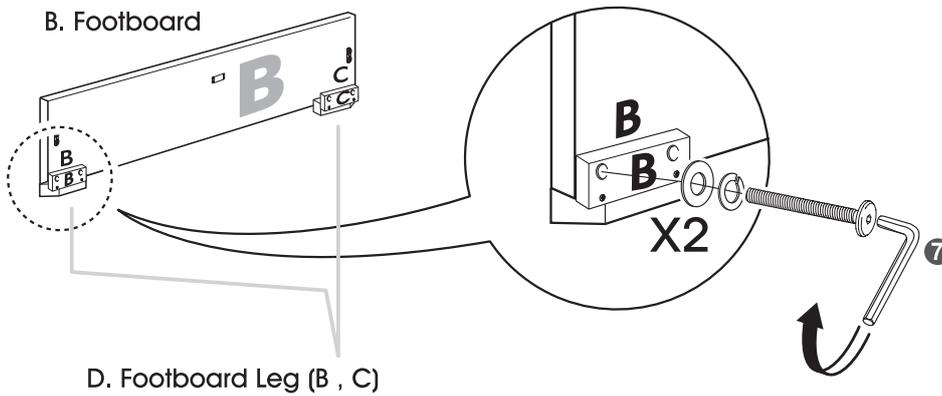


- 1 Bolt M6 30mm X4 
- 3 Flat Washer X4 
- 4 Spring Washer X4 


# Step 3

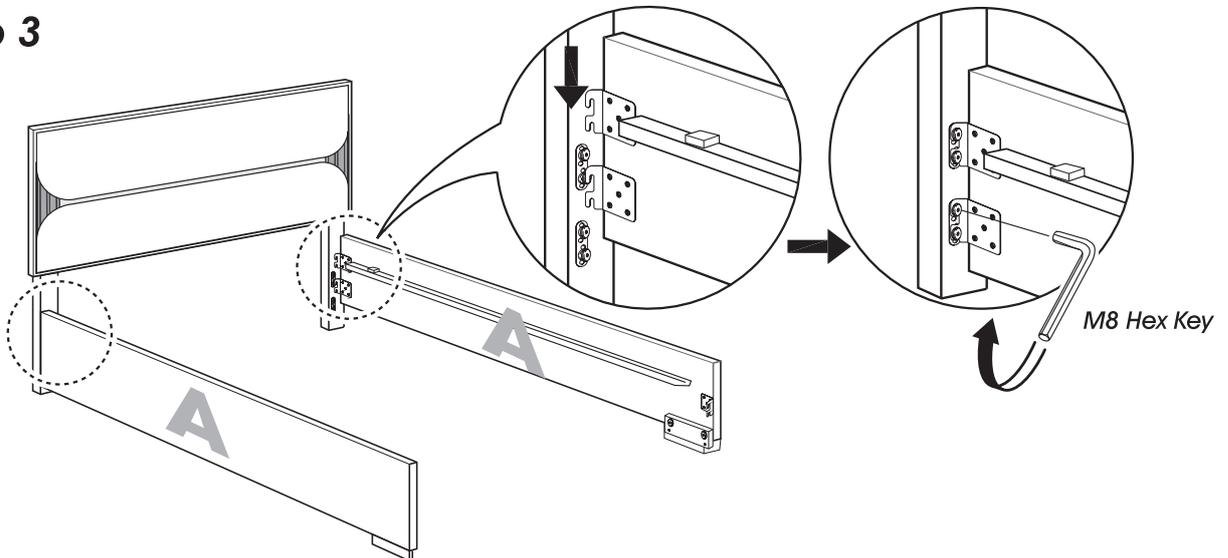

### Step 4

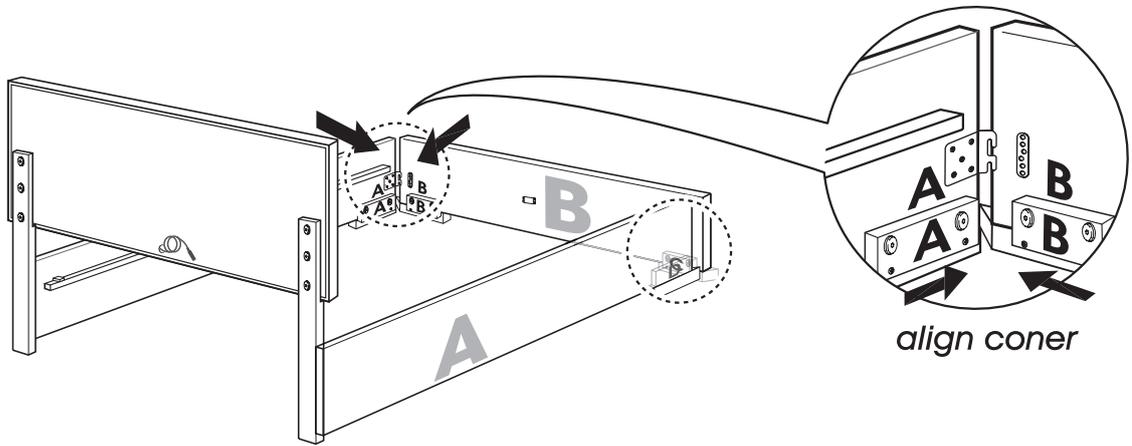


### Step 5

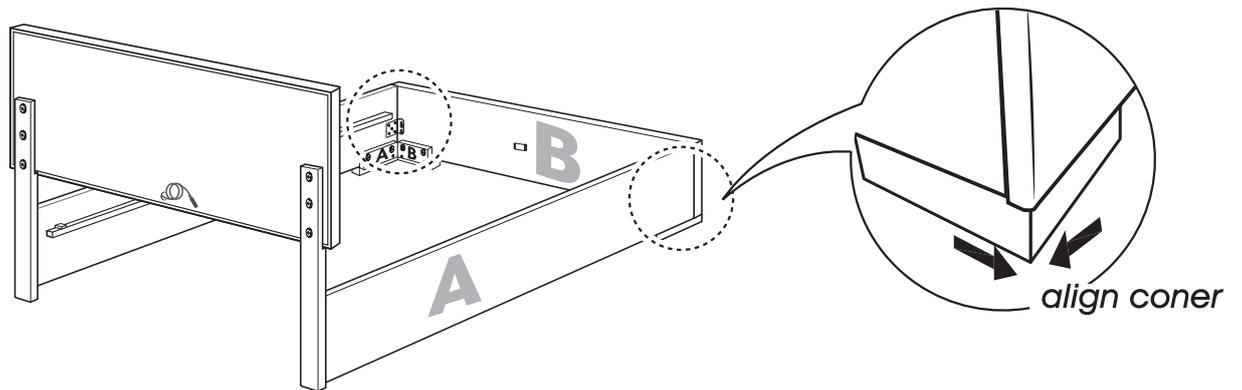


Make sure the coner are aligned and locked.


### Step 6

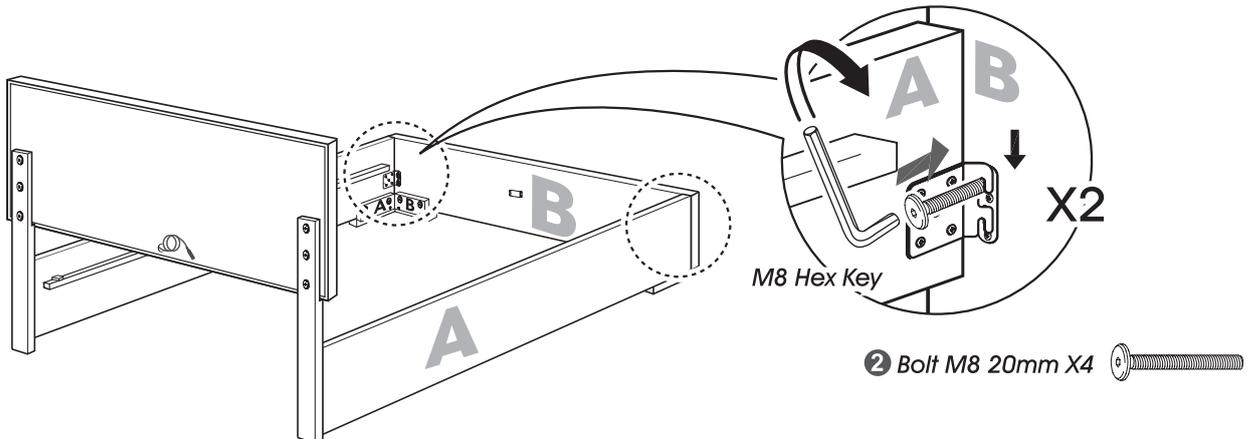


### Step 7

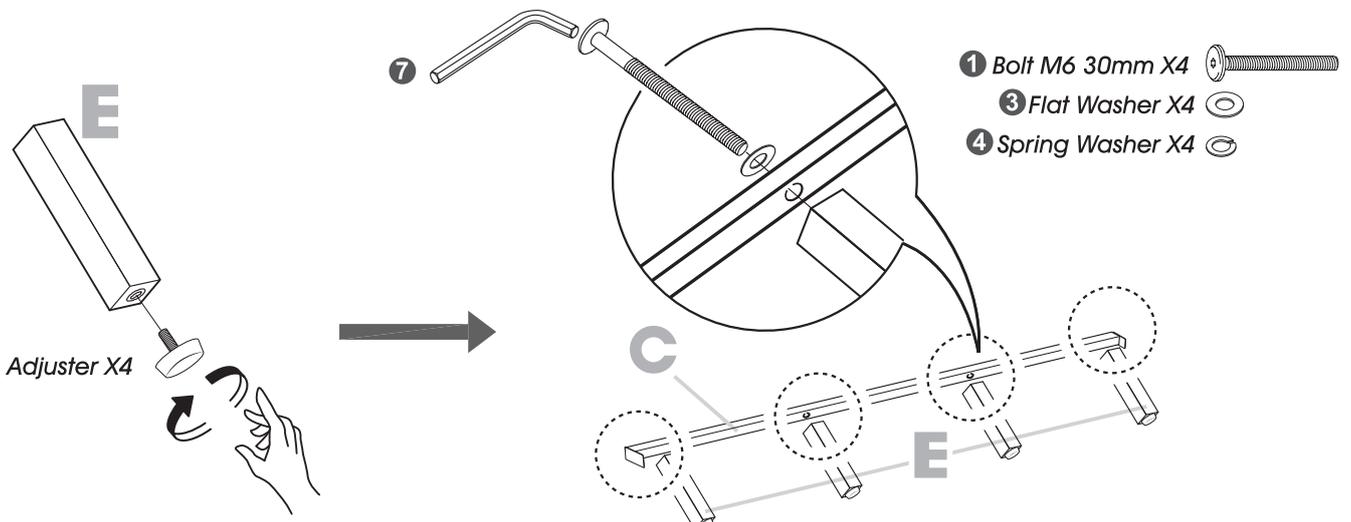

### Step 8

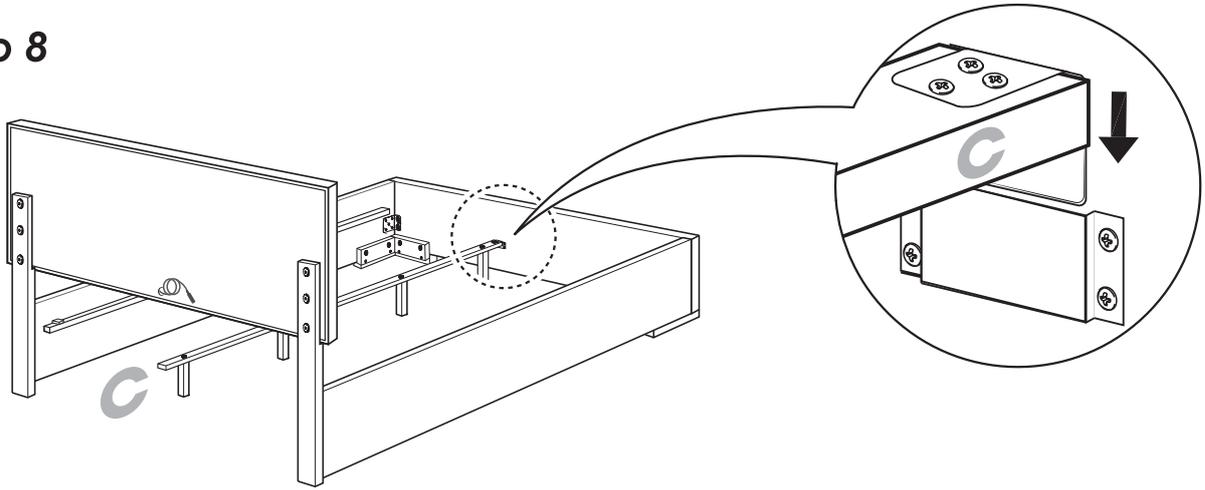

### Step 9

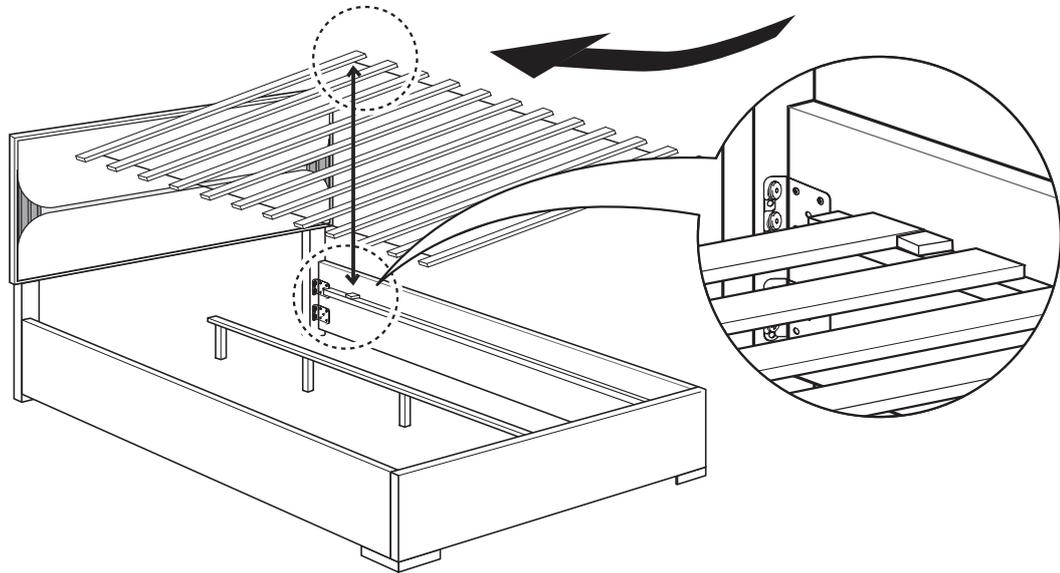

### Step 10

