



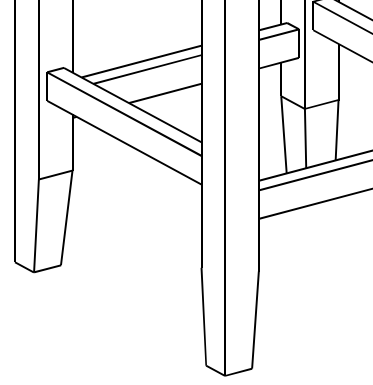


CROSLEY



FURNITURE

Square Uphol

PART LIST

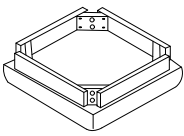
A2	B2	C2
		
Seat Frame 2 PCS	Leg (L & R) 8 PCS	Side Stretcher 8 PCS

HARDWARE LIST

#1	#2	#3	#4	#5
				
M6 x 60mm				M4 x 38mm
Bolt 16 PCS (Extra 1)	Spring Washer 16 PCS (Extra 1)	Flat Washer 16 PCS (Extra 1)	Allen Wrench 1PC	Screw 16 PCS (Extra 1)

ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Step 1. Attach legs (part B2) to seat frame (part A2) using bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #4).


NOTE: Do not tighten bolts at this time.

NOTE: The legs (part B2) are marked "R" for right and "L" for left."

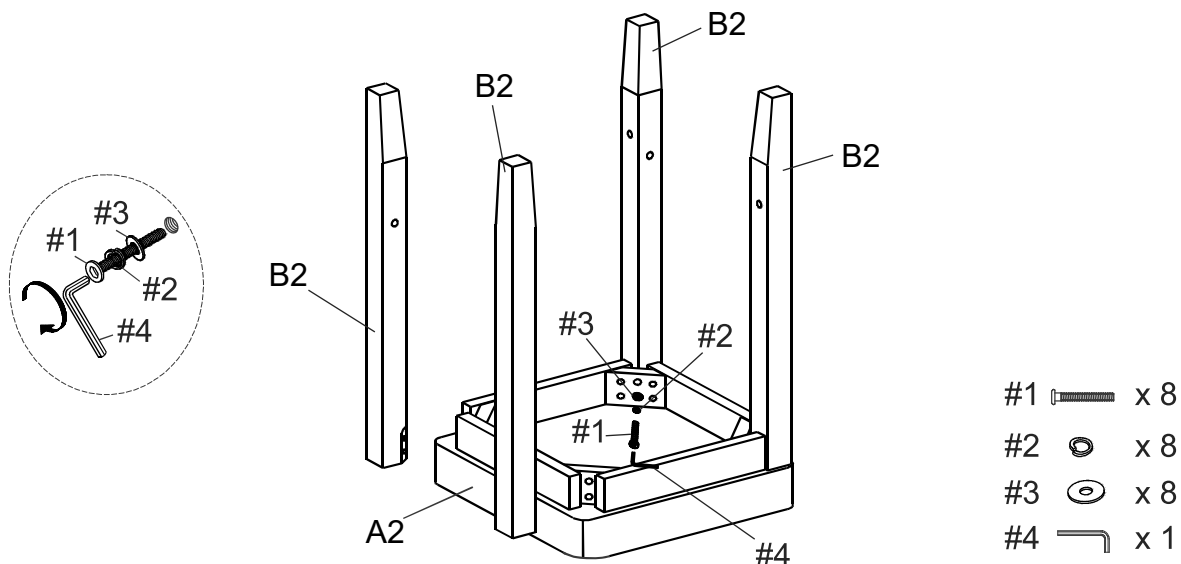


Step 2. Insert side stretchers (part C2) into legs (part B2) using screws (part #5) and phillips head screwdriver.

NOTE: Please fully tighten all bolts at this time.

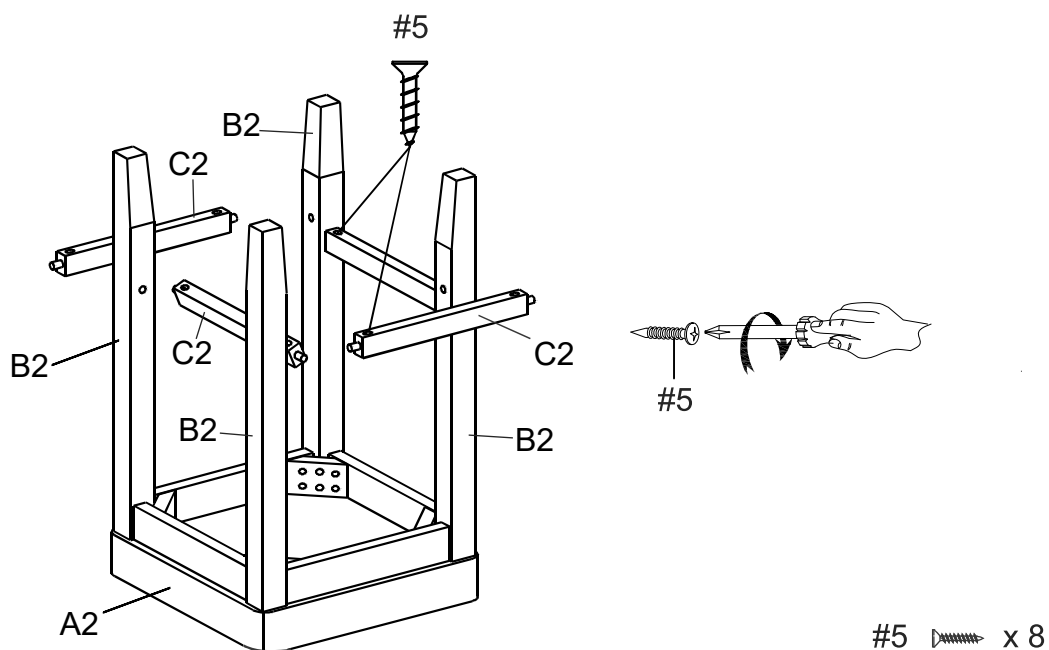

Step 3. Carefully turn unit upright. Repeat steps 1-2 to assemble remaining stool.

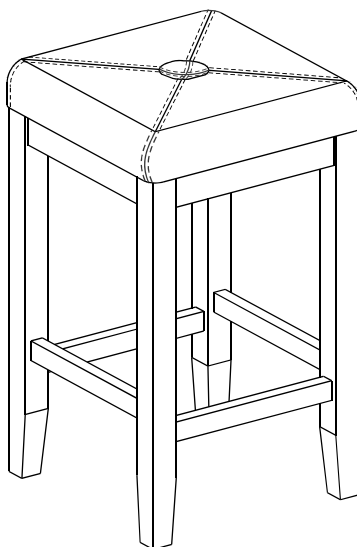

PO#
MODEL#
CF500524/CF500529
MADE IN MALAYSIA