




ASSEMBLY INSTRUCTION FOR





QUEEN BED


B.18110.QH / B.18110.QF / B.18110.QKP / B.18110.QKR

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PARTS LIST				
NO.	PART DESC.	PART	CODE	QTY
A	HEADBOARD		B.18110.QH	1 pc
B	HB - LEFT POST		PB.18110.HBPOS1	1 pc
C	HB - RIGHT POST		PB.18110.HBPOS2	1 pc

HARDWARE LIST					
NO.	HARDWARE DESC.	PART	SIZE	CODE	QTY
1	ALLEN BOLT		M6 x 40mm	P.18110.KBHW	8 pcs
2	SPRING WASHER		M8		8 pcs
3	FLAT WASHER		M8 x 18mm		8 pcs
4	ALLEN KEY		M4		1 pc

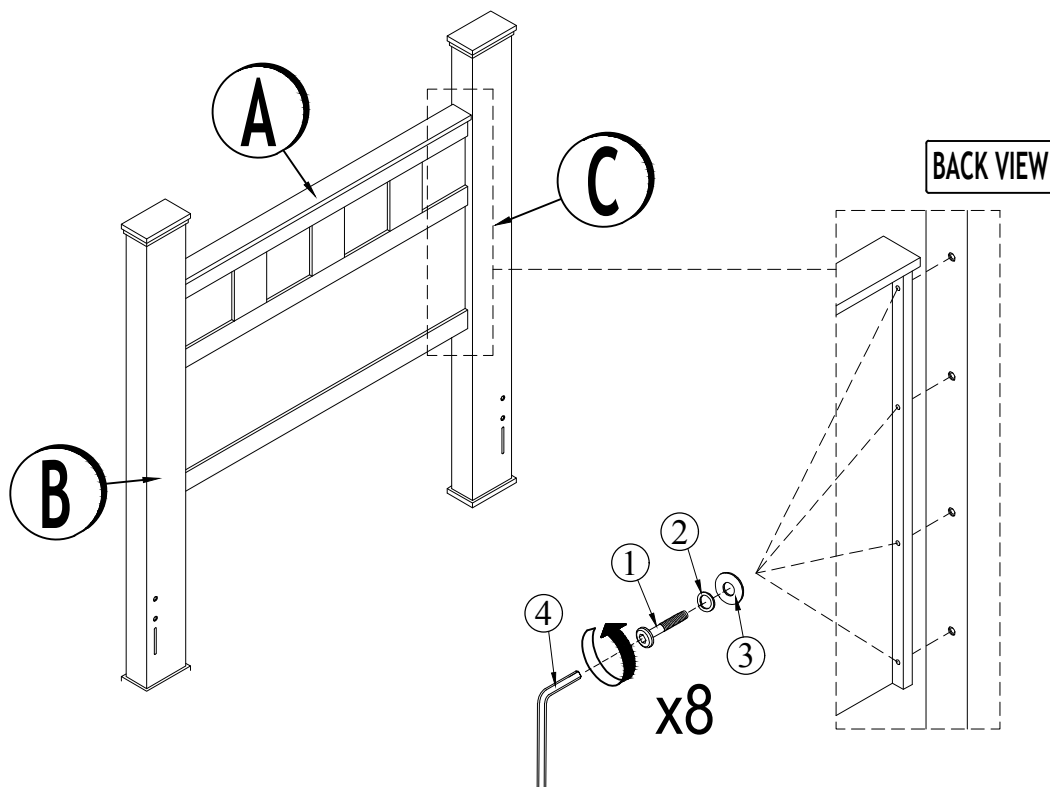

STEP 1 : Assembly the Headboard Post L/R

First attached the Headboard Post Left (B) and Headboard Post Right (C) to the Headboard (A) Using Allen Key (4) to tight Flat Washer (3), Spring Washer (2) and Allen Bolt (1).






ASSEMBLY INSTRUCTION FOR





QUEEN BED


B.18110.QH / B.18110.QF / B.18110.QKP / B.18110.QKR

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.


1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PARTS LIST				
NO.	PART DESC.	PART	CODE	QTY
A	HEADBOARD		B.18110.QH	1 pc
B	FOOTBOARD		B.18110.QF	1 pc
C	SIDE RAIL		B.18110.QKR	2 pcs
D	SLAT		PB.18110.QBSLT	4 pcs
E	VERTICAL LEG (29 x 29 x 219mm)		PB.18110.BDSPL	4 pcs

HARDWARE LIST					
NO.	HARDWARE DESC.	PART	SIZE	CODE	QTY
1	ALLEN BOLT		M8 x 20mm	PB.18110.KBHW	8 pcs
2	FLAT WASHER		M8 x 18mm		8 pcs
3	ALLEN KEY		M5		1 pc
4	PH. RATTAN SCREW		M4 x 25mm		8 pcs

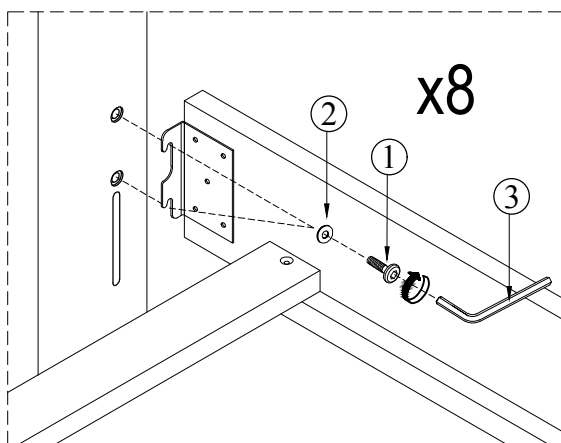

STEP 2 : Attached Side Rails (C) to Headboard (A) and Footboard (B) by using the Flat Washer (2), Allen Bolt (1), and tighten with Allen Key (3).

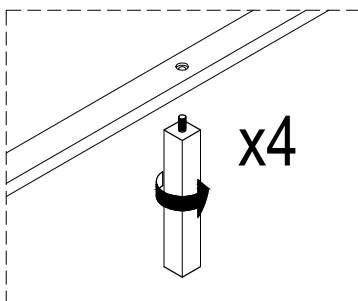

STEP 3 : Attached Vertical Leg (E) to Slat (D).

STEP 4 : Attached Slat (D) to Side Rail (C) PH. Rattan Screw (4), and tighten with Screw Driver.

