


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

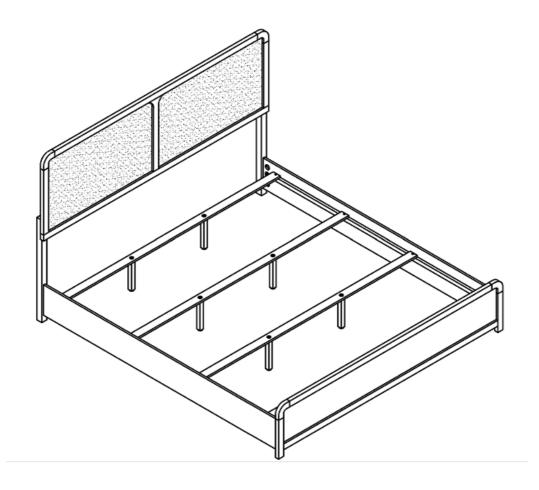

Fine Furniture for every stage of life

223661KE (B1&B2) Eastern King Bed

REVISION 0: 08/05/2024

PAGE 1 OF 6

COASTERFURNITURE.COM

COASTER

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:


- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

HARDWARE IDENTIFICATION

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments



ASSEMBLY TIME

20 MINUTES

PART IDENTIFICATION

B1 (BOX 1)

A	HEADBOARD PANEL		1PC	D	BED SLAT	4PCS
В	FOOTBOARD		1PC	E	BED SLAT SUPPORT WITH LEVELER	8PCS
С	HEADBOARD LEG	<u>"."</u>	2PCS			

B2 (BOX 2)

F BED RAIL



NOTE:



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

\triangle

WARNING!

HARDWARE IDENTIFICATION

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 223661KE (B1)


1	BOLT (M6 x 50mm - BLK)	9	4PCS	7	FLAT HEAD SCREW (M4 x 25mm)		8PCS
2	WOOD DOWEL (M10Ø x 40mm)		10PCS	8	SMALL ALLEN WRENC (M4 x 100mm - BLK)	CH	∍ 1PC
3	THREADED BOLT (M6 x 60mm)		8PCS	9	FLAT WASHER (1/4" x 19 Ø)	o	4PCS
4	HEX NUT (M6)		8PCS	10	LOCK WASHER (1/4" x 12 Ø)		4PCS
5	HALF ROUND NUT (Ø7.5mm)	$\left[\begin{array}{c} \bullet \\ \bullet \end{array} \right]$	8PCS	11	WRENCH (M6 x 10mm)	5	1PC
6	U-SQUARE WASHER		8PCS				


NOTE:

COASTER

ASSEMBLY INSTRUCTIONS

STEP 1

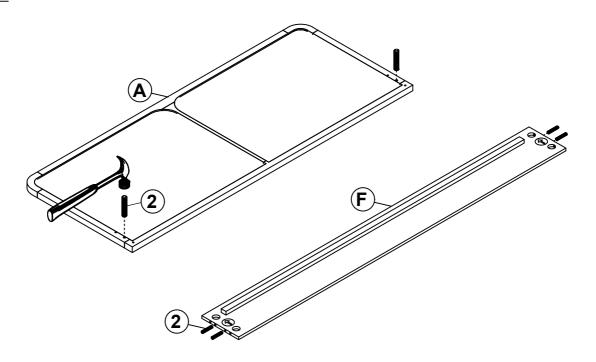


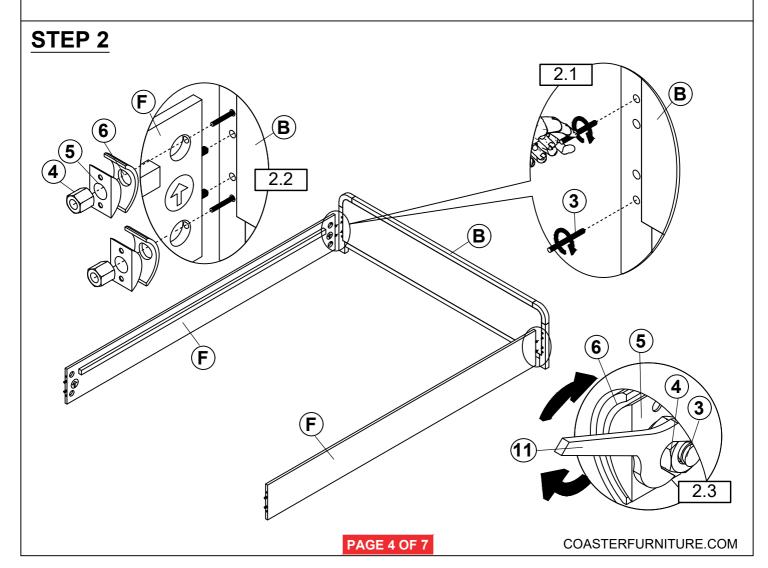


COASTER

ASSEMBLY INSTRUCTIONS

STEP 3

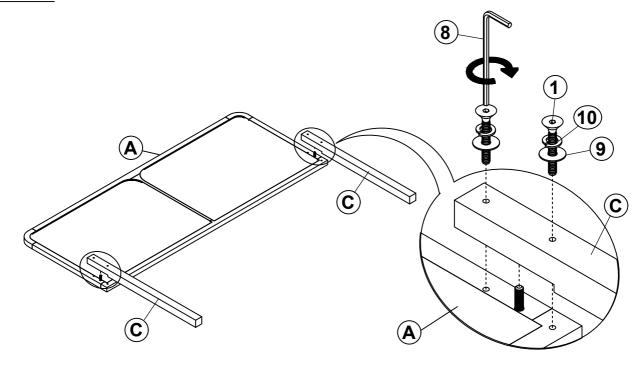


STEP 4

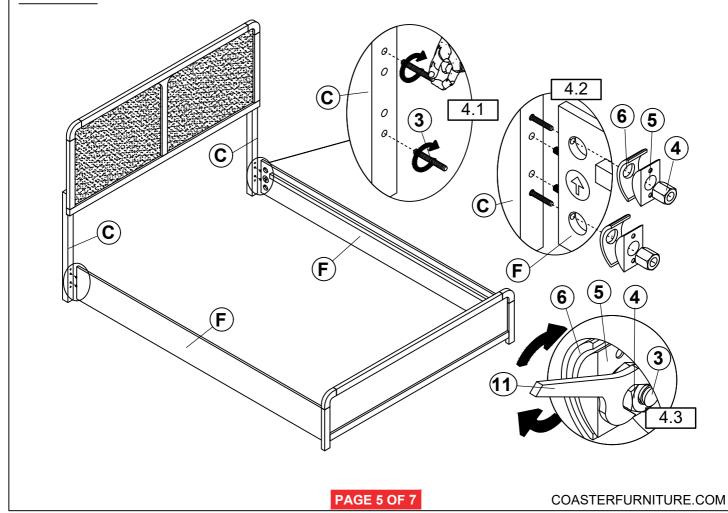


COASTER

ASSEMBLY INSTRUCTIONS

STEP 5

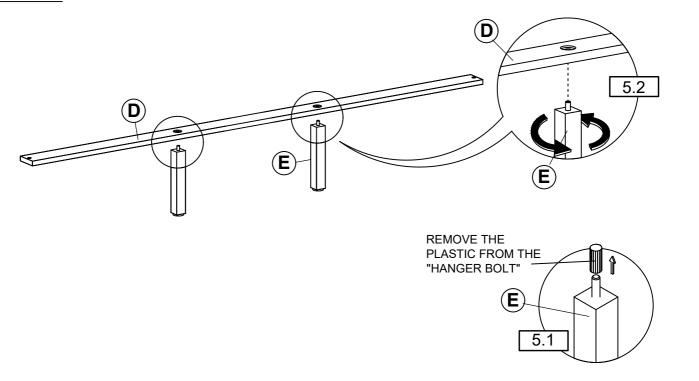

STEP 6

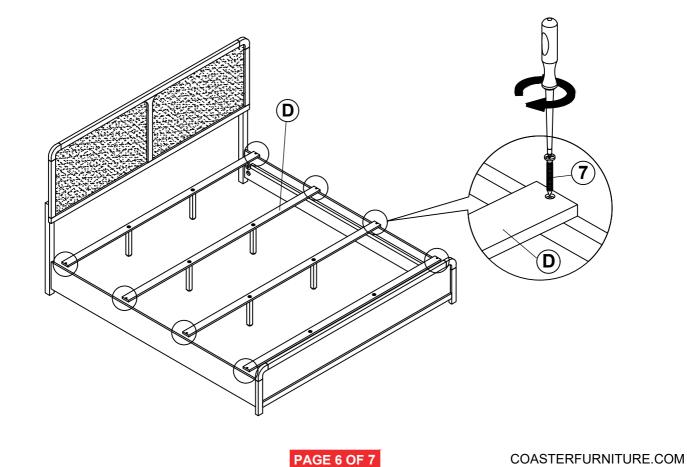


COASTER*

ASSEMBLY INSTRUCTIONS


STEP 7

COMPLETE

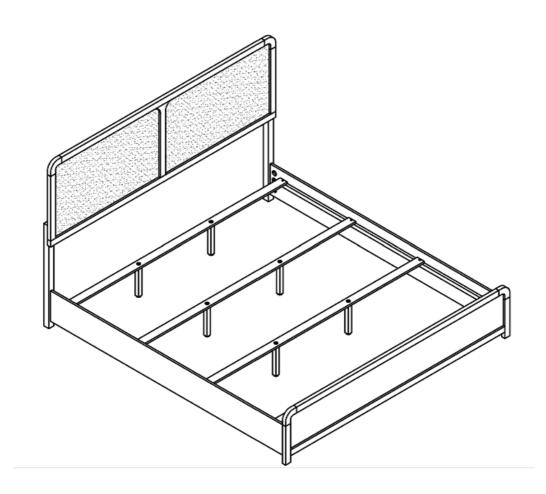



Inner size: 76.50"W X 82.00"D

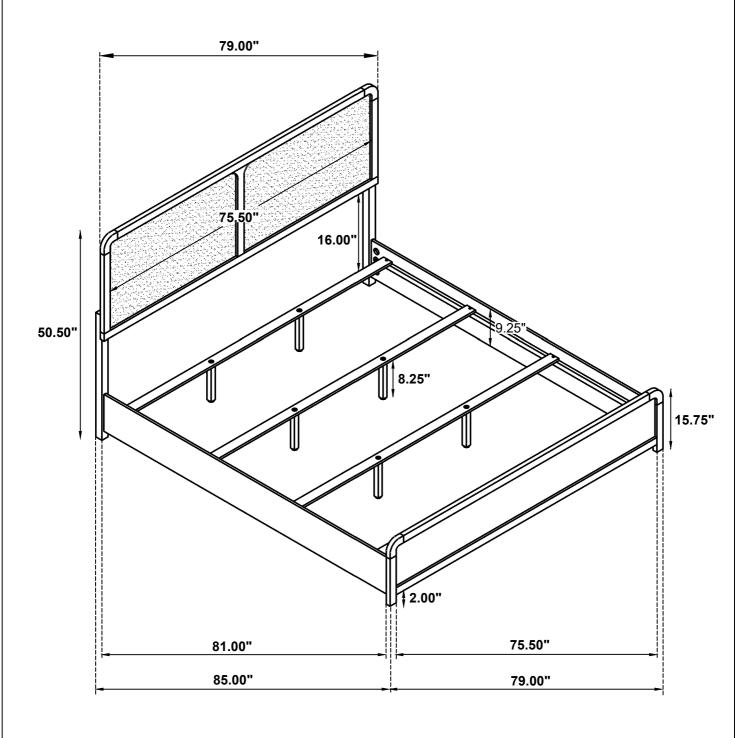

Note: Dimension tolerance ±5%



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

223662 Nightstand

REVISION 0: 08/05/2024

PAGE 1 OF 3

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A NIGHTSTAND

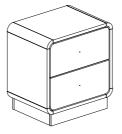


1PC

NOTE:


ASSEMBLY INSTRUCTIONS



STEP 1

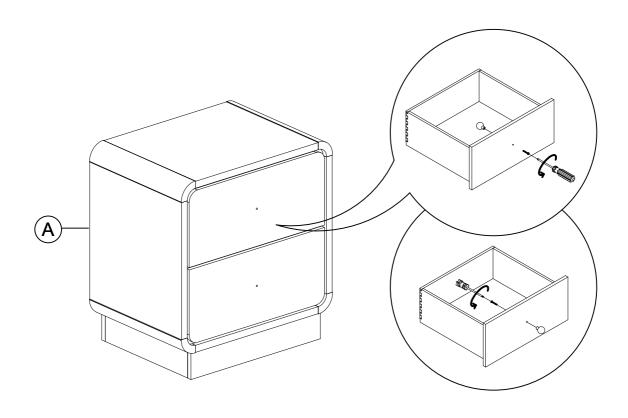


STEP 2 COMPLETE

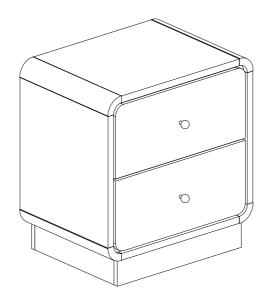





Inner Size of Drawer: 15.75"W X 12.25"D X 5.00"H X 0.50"T

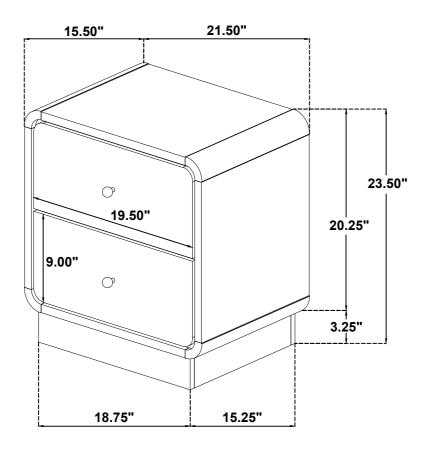

Note: Dimension tolerance ±5%



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

223663 *Dresser*

REVISION 0: 08/05/2024

PAGE 1 OF 4

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A DRESSER




1PC

NOTE:


ASSEMBLY INSTRUCTIONS

COASTER®

STEP 1

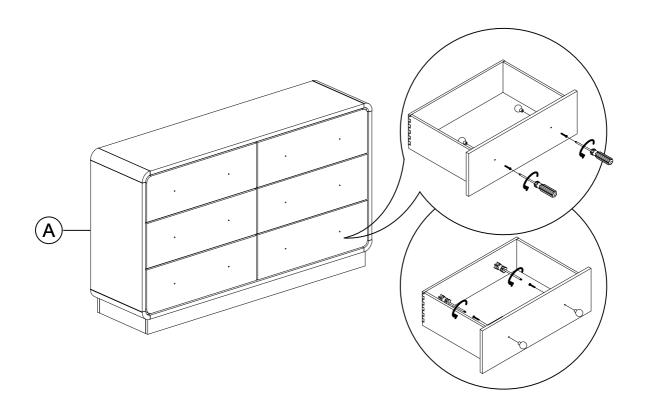

STEP 2 COMPLETE

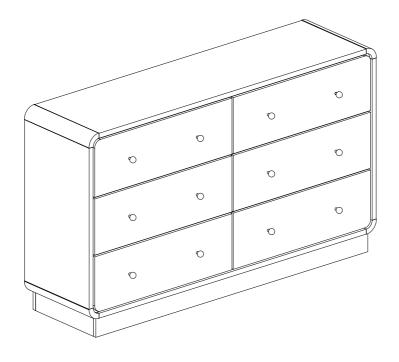





ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


- 1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
- 2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
- 3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
- 4. Attach the bracket over the plastic wall anchor using the long screw.
- 5. Place the unit against the wall, both brackets need to be facing each other.
- 6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
- 7. Ensure that the restraint strap is securely laced and locked.

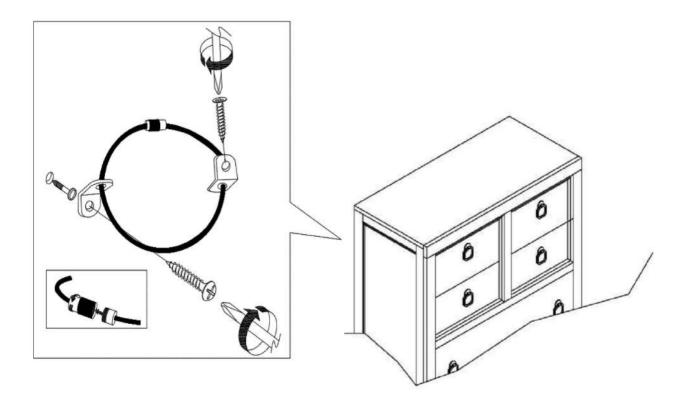





Inner Size of Drawer: 24.75"W X 12.25"D X 5.00"H X 0.50"T

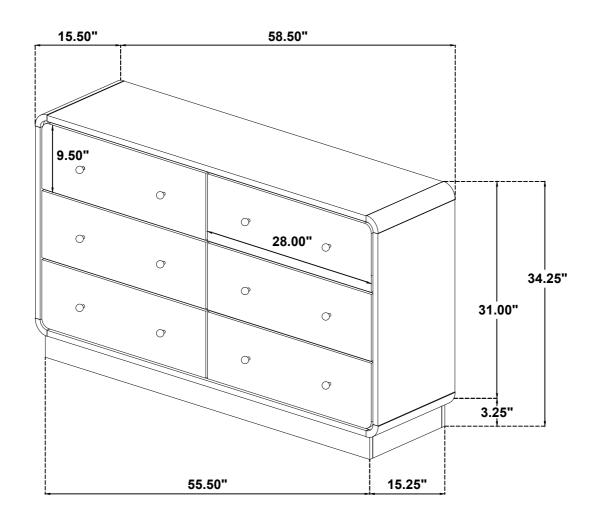

Note: Dimension tolerance ±5%



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

223664 *Mirror*

REVISION 0: 08/05/2024

PAGE 1 OF 3

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A MIRROR

MIRROR SUPPORT
(PACKED WITH MIRROR)

2PCS

C DRESSER
*FROM BOX ITEM 223663

HARDWARE IDENTIFICATION


1	BOLT (M6 x 40mm - RBW)	8PCS
2	LOCK WASHER (1/4" x 13ø - RBW)	8PCS
3	FLAT WASHER (1/4" x 19ø - RBW)	8PCS
4	ALLEN WRENCH (M4 x 110mm - BLK)	1PC

NOTE:


ASSEMBLY INSTRUCTIONS

STEP 1



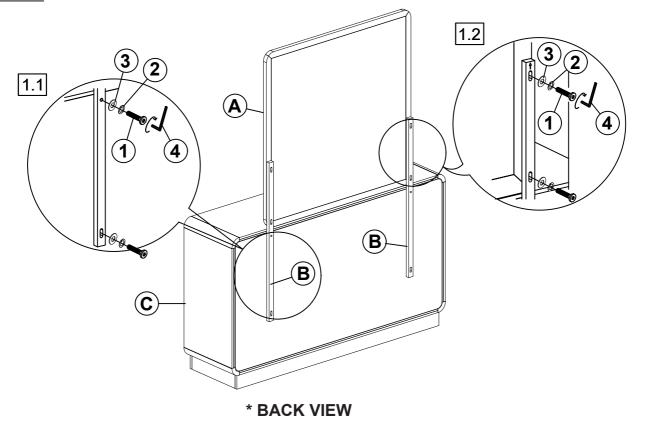


STEP 2 COMPLETE

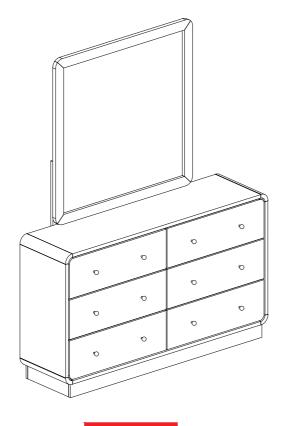





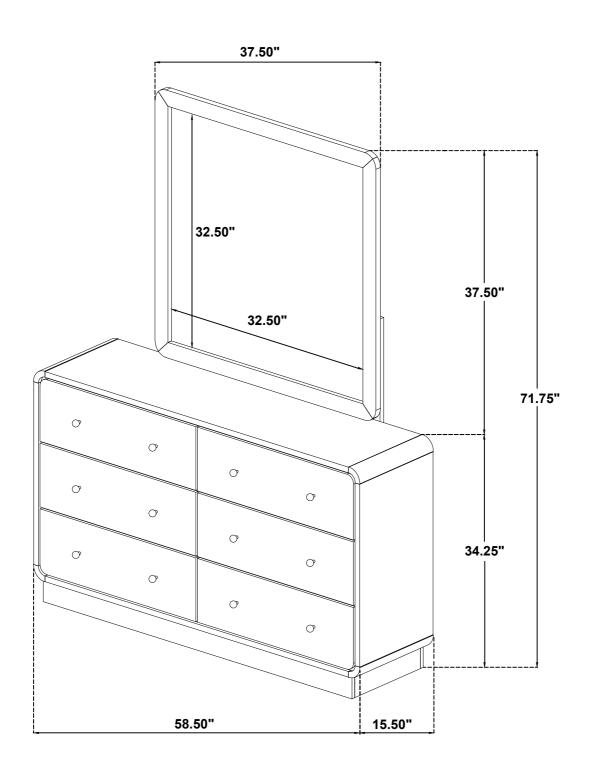

Note: Dimension tolerance ± 5%



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

223665 Chest

REVISION 0: 08/05/2024

PAGE 1 OF 4

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A CHEST




1PC

NOTE:


ASSEMBLY INSTRUCTIONS

COASTER*

STEP 1

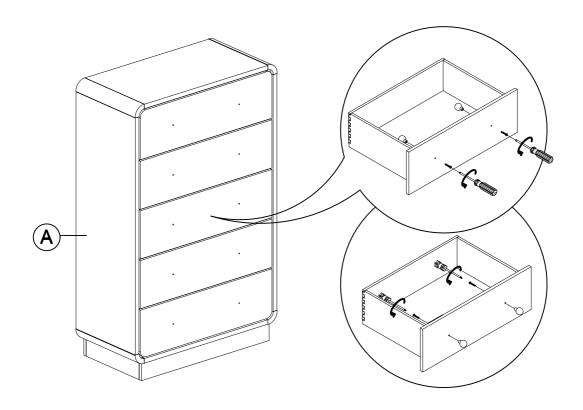

STEP 2 COMPLETE

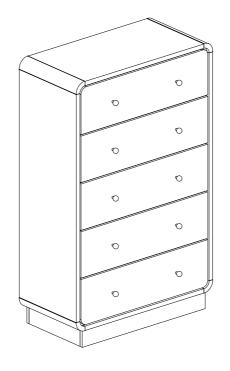





ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
- 2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
- 3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
- 4. Attach the bracket over the plastic wall anchor using the long screw.
- 5. Place the unit against the wall, both brackets need to be facing each other.
- 6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
- 7. Ensure that the restraint strap is securely laced and locked.

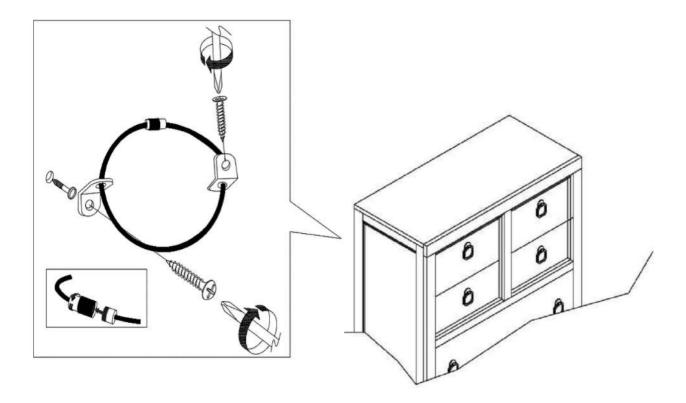








Inner Size of Drawer: 26.00"W X 12.25"D X 5.00"H X 0.50"T

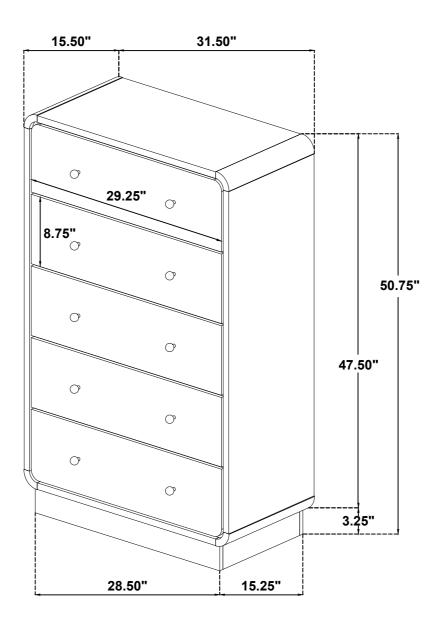

Note: Dimension tolerance ±5%