



#### **BOX** #1

A. HEADBOARD : 1 PC

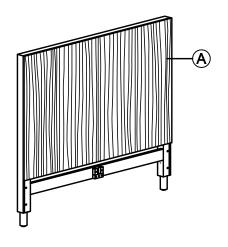


### **BOX #2**

B. FOOTBOARD : 1 PC C. SLAT ROLL : 1 SET BED HARDWARE BOX \*

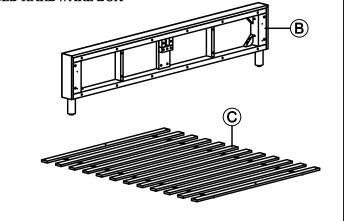

### **BOX #3**

D. SIDERAIL : 2 PCS E. CENTER SLAT : 1 PC F. SUPPORT LEG : 3 PCS

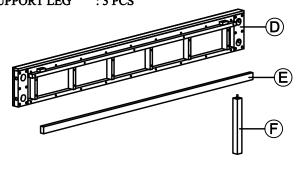

#### HARDWARE PACKED IN BOX #2


1	ALL-THREAD BOLT (M8x70)		8PCS
2	SPRING WASHER (M8)		8PCS
3	HALF MOON WASHER (M8)	<b>D</b>	8PCS
4	HEX NUT (M8)	<b>6</b>	8PCS
5	SPANNER	S	1PC
6	ALLEN KEY		1PC
7	WOOD SCREW (M4x30)	<b>Danish</b>	6PC

TOOL REQUIRED : PHILLIPS HEAD SCREW DRIVER (NOT PROVIDED)

YOUR BOX MAY CONTAIN EXTRA HARDWARE




#### **ASSEMBLY COMPLETE**

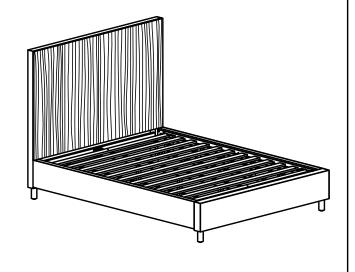


PAGE 1 OF 6




### STEP #1:

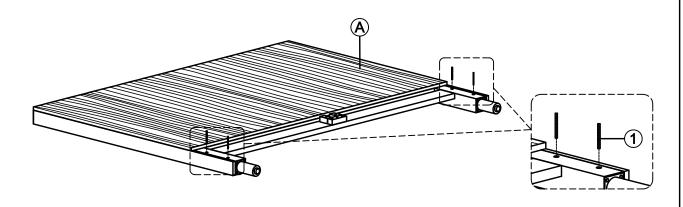

### STEP #2:

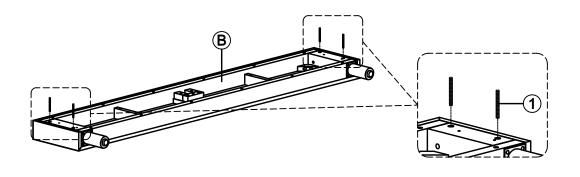


### STEP #3:

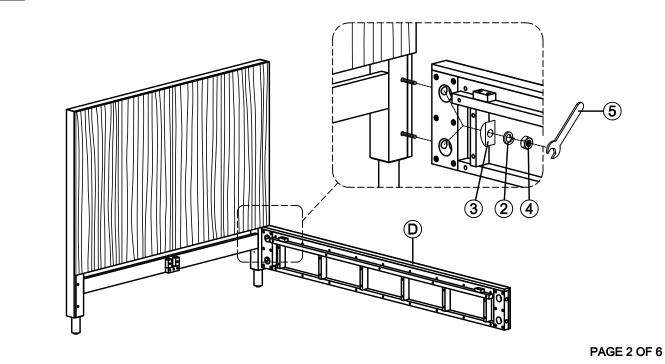




## STEP #4:

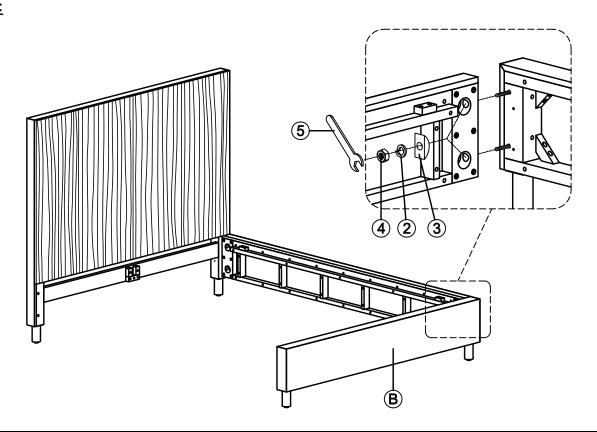

## STEP #5:

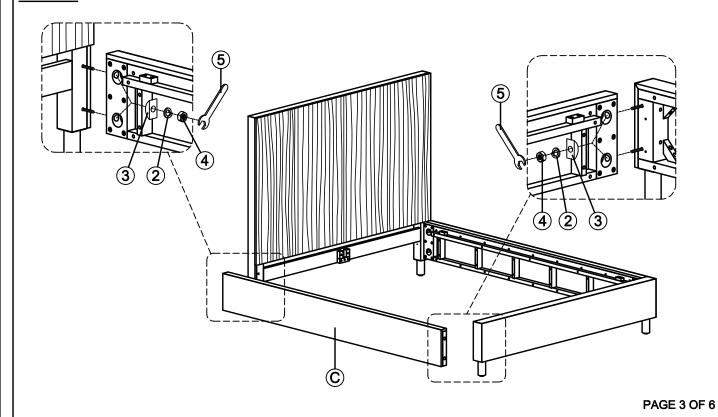







#### **STOP**

- \* IF USING BED FRAME WITH ADJUSTABLE MATTRESS BASE, SKIP TO APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- \* IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION CONTINUE TO STEP 6.


#### **STEP #6:**

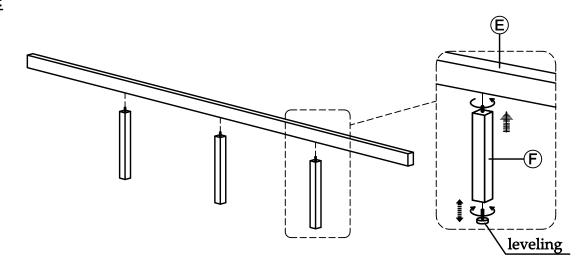

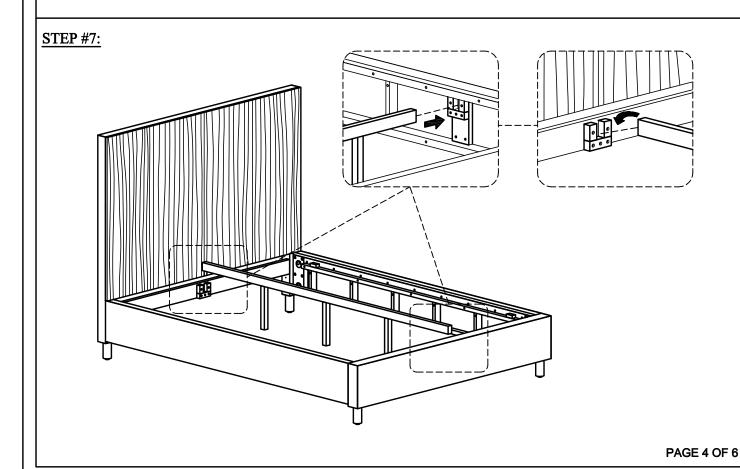




**STEP #8:** 

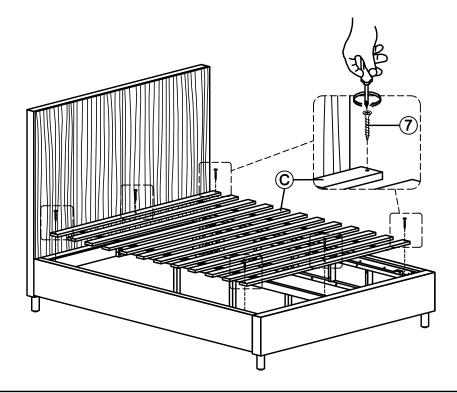

## ASSEMBLY COMPLETE.

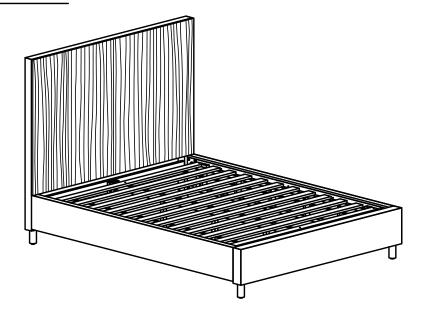

#### **INSTRUCTIONS FOR ADJUSTING LEVELER:**

- Position the bed in your space and locate the leveler under each support leg.
- Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.
- Adjust each leveler until each support leg is applying equal, upward pressure on the bed support slat.



#### **MAINTENANCE INSTRUCTION:**

- Remove box spring and mattress before moving your bed.
- Lift your bed when moving it.

  Dragging can damage the leg support.
- Readjust levelers after moving your bed.

PAGE 5 OF 6





AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.

PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

E. CENTER SLAT 1 PC 7. WOOD SCREW (M4x30mm) 6 PCS


F. SUPPORT LEG 3 PCS \* ALLEN BOLT (M6X40mm)

C. SLAT ROLL 1 SET - FULL 10PCS - QUEEN 10PCS

- KING 10PCS

#### **STEP #1:**

USE ALLEN KEY (6) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

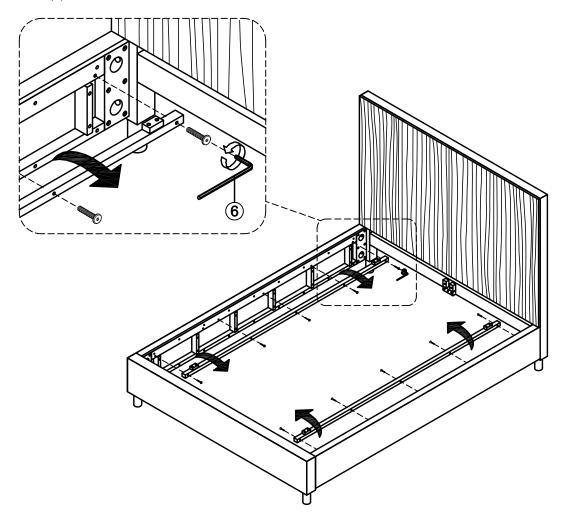


NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.

PAGE 6 OF 6




#### **BOX** #1

A. HEADBOARD : 1 PC

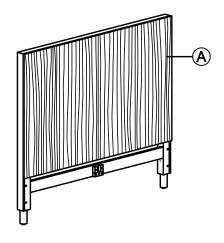

### **BOX #2**

B. FOOTBOARD : 1 PC C. SLAT ROLL : 1 SET BED HARDWARE BOX \*

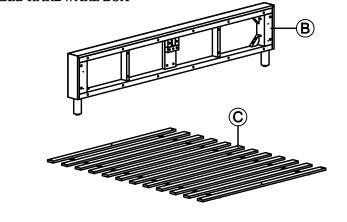

### **BOX #3**

#### HARDWARE PACKED IN BOX #2


1	ALL-THREAD BOLT (M8x70)		8PCS		
2	SPRING WASHER (M8)		8PCS		
3	HALF MOON WASHER (M8)		8PCS		
4	HEX NUT (M8)		8PCS		
5	SPANNER	S	1PC		
6	ALLEN KEY		1PC		
7	WOOD SCREW (M4x30)	<b>Danish</b>	6PC		
8	ALLEN BOLT (M6x60)		14PC		

TOOL REQUIRED : PHILLIPS HEAD SCREW DRIVER (NOT PROVIDED)

YOUR BOX MAY CONTAIN EXTRA HARDWARE




#### **ASSEMBLY COMPLETE**

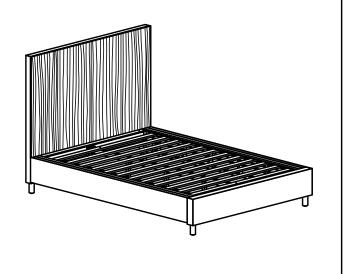


PAGE 1 OF 7



### STEP #1:

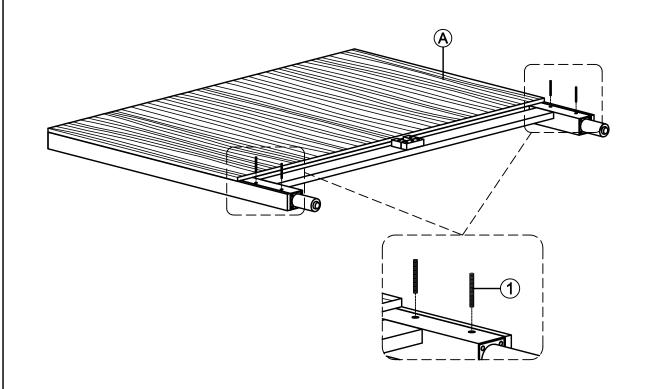


### STEP #2:

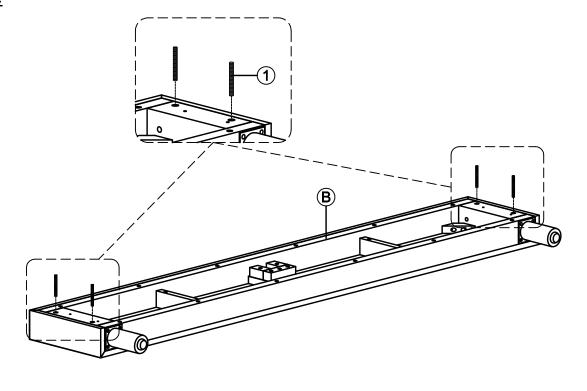


PAGE 2 OF 7



### STEP #3:

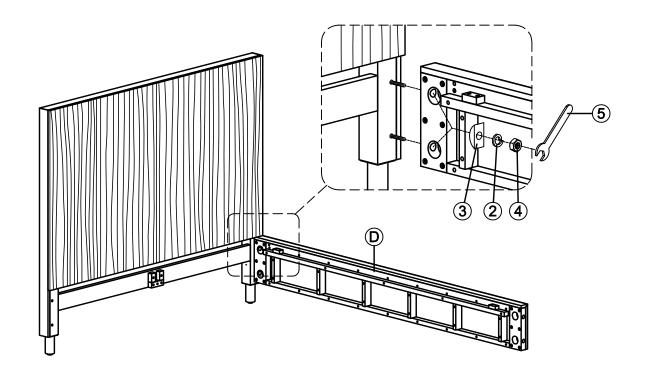


### STEP #4:

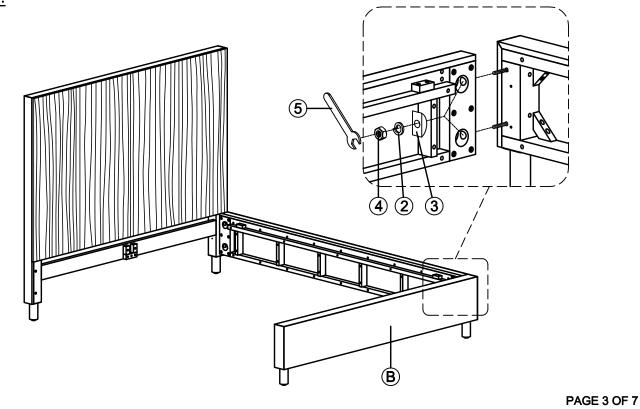



#### **STEP #5:**

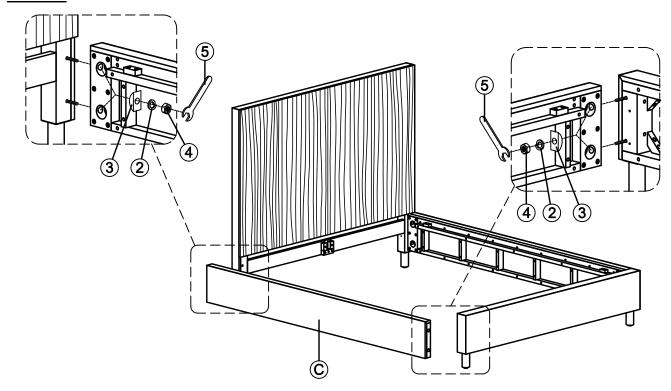




#### **STOP**

- \* IF USING BED FRAME WITH ADJUSTABLE MATTRESS BASE, SKIP TO APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- \* IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION CONTINUE TO STEP 6.


#### **STEP #6:**

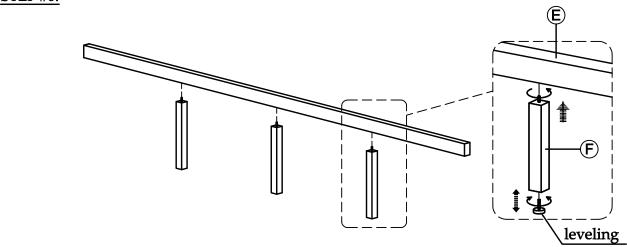


PAGE 4 OF 7





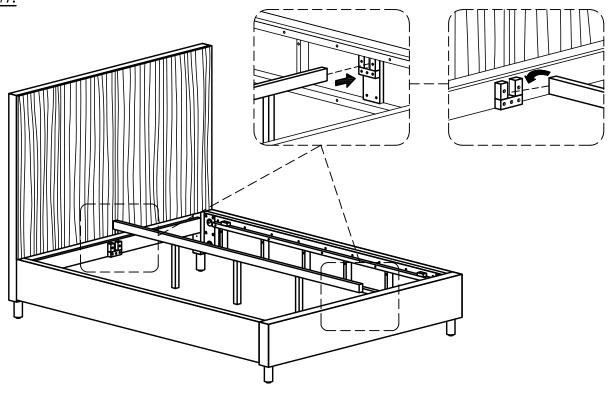


### STEP #8:

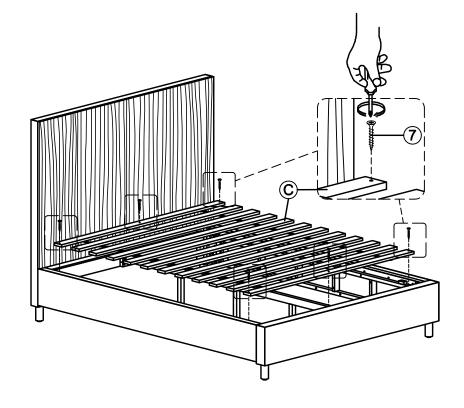


PAGE 5 OF 7



### STEP #9:

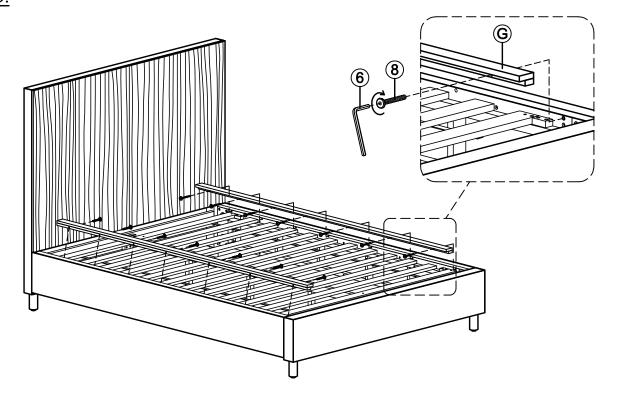

### ASSEMBLY COMPLETE.

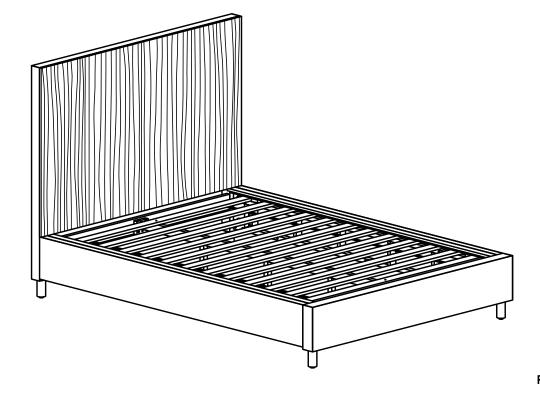

PAGE 6 OF 7





AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.

PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.


THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:


E. CENTER SLAT 1 PC 7. WOOD SCREW (M4x30mm) 6 PCS F. SUPPORT LEG 3 PCS \*ALLEN BOLT (M6X40mm) 14PCS

C. SLAT ROLL 1 SET

#### **STEP #1:**

USE ALLEN KEY (6) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

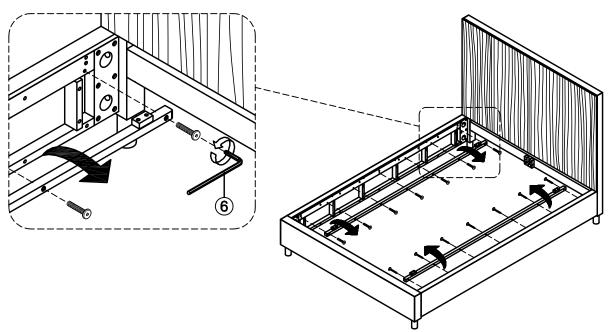

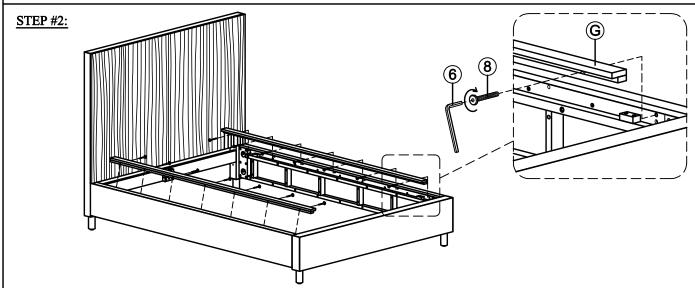

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.

PAGE 7 OF 7