



INDUSTRIAL ASSEMBLY INSTRUCTIONS


ZIND-7001 - INDUSTRIAL QUEN HEADBOARD

ZIND-7002 - INDUSTRIAL QUEN FOOTBOARD AND SLATS

ZIND-7003 - INDUSTRIAL QUEN RAILS


HARDWARE FOR CAL KING STORAGE RAILS

Part #	DESCRIPTION	QTY
1	Screw Ø4*30 mm 	10 PCS

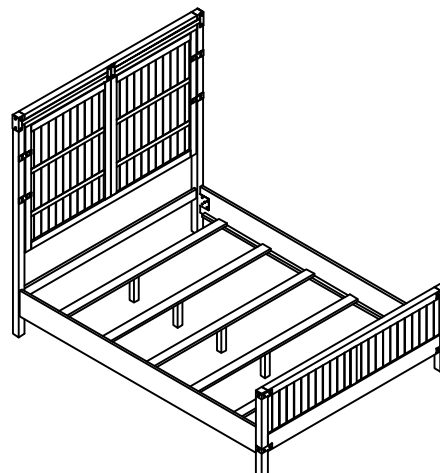


PARTS DESCRIPTION

A. Headboard

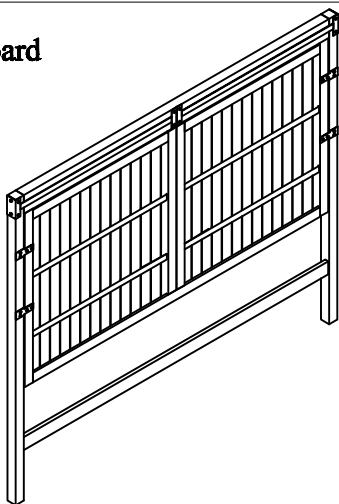


1 PC.

B. Footboard

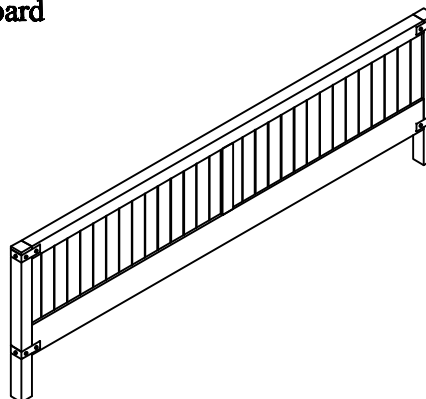


1 PC.

C. Side Rails

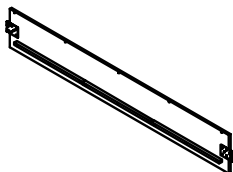


2 PCS.

D. Slats

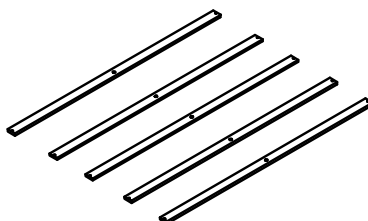

5 PCS


E. Support Legs



5 PCS.


Thank you for choosing Legends Furniture!

Step 1:

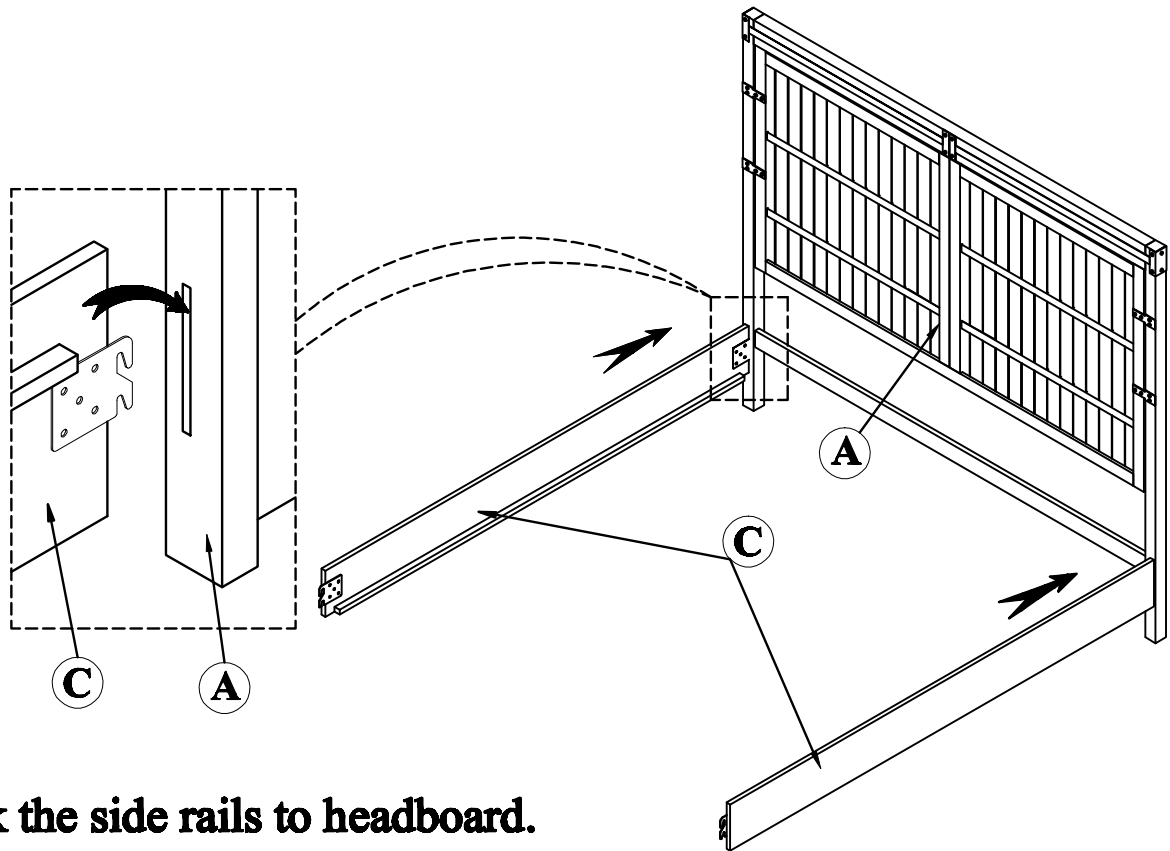


1. Hook the side rails to headboard.

Step 2:

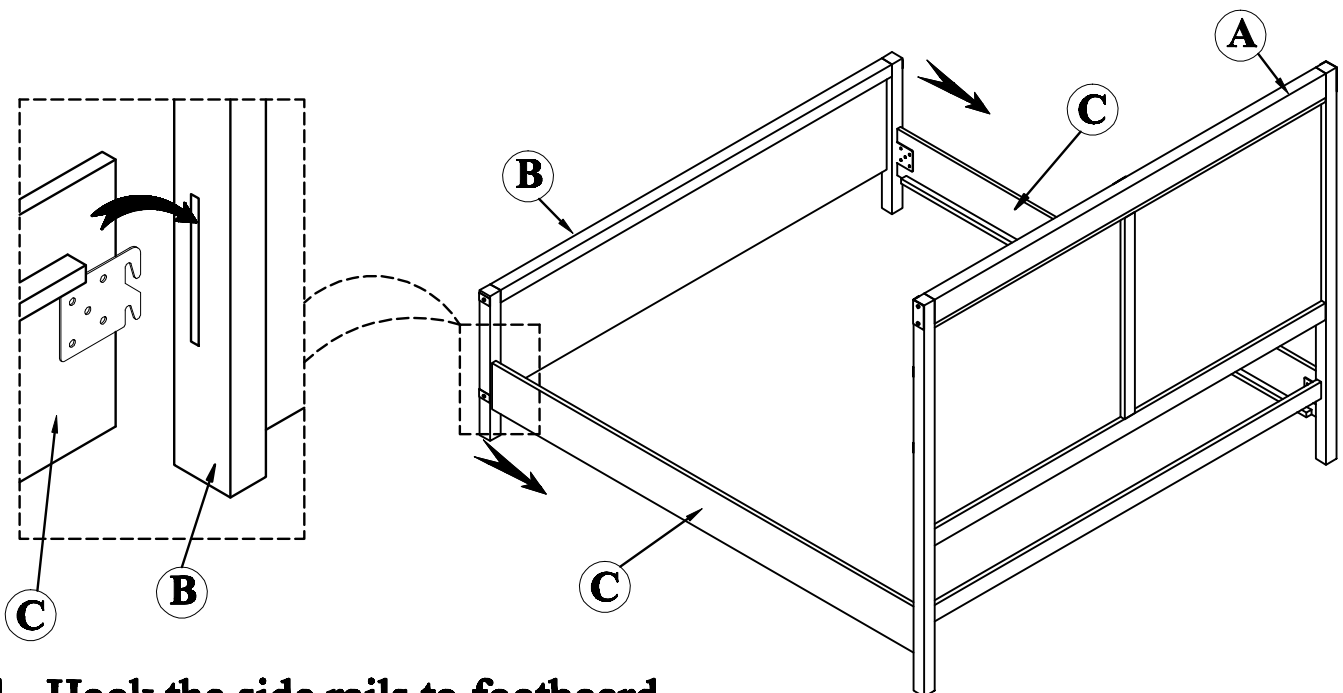


1. Hook the side rails to footboard.

Step 3:

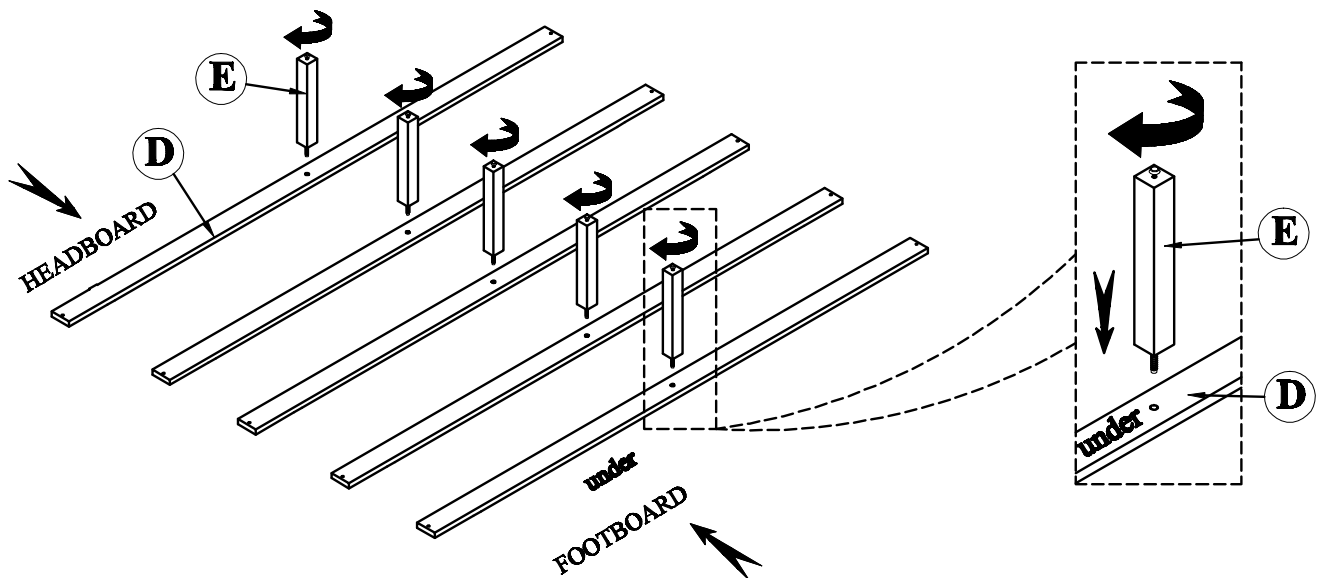

1. Connect support legs (E) to slats (D).

Step 4:

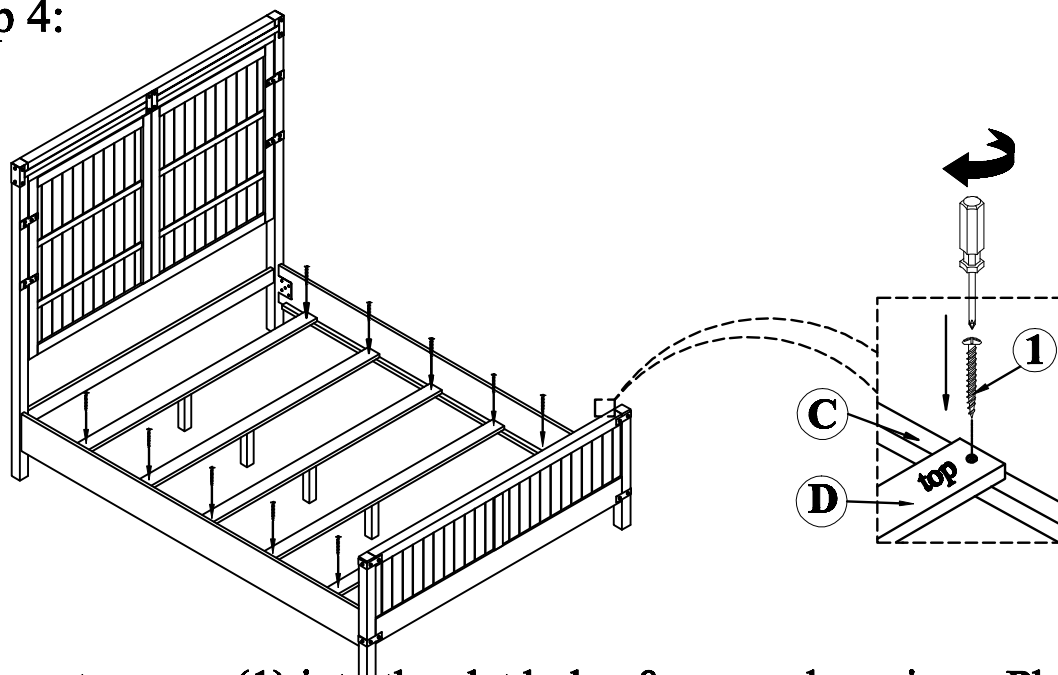

1. Insert screws (1) into the slat holes & secure by using a Philip's Head Screwdriver. (Not included).



INDUSTRIAL ASSEMBLY INSTRUCTIONS


ZIND-7004 - INDUSTRIAL KING HEADBOARD

ZIND-7005 - INDUSTRIAL KING FOOTBOARD AND SLATS

ZIND-7003 - INDUSTRIAL KING RAILS


HARDWARE FOR CAL KING STORAGE RAILS

Part #	DESCRIPTION	QTY
1	Screw Ø4*30 mm 	10 PCS

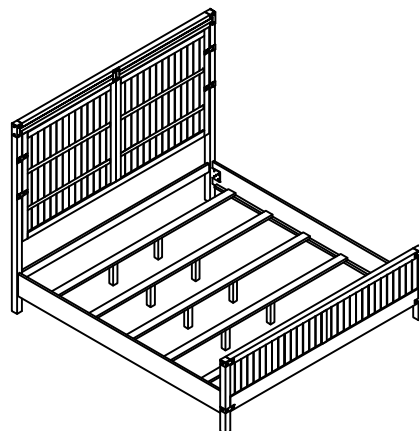


PARTS DESCRIPTION

A. Headboard

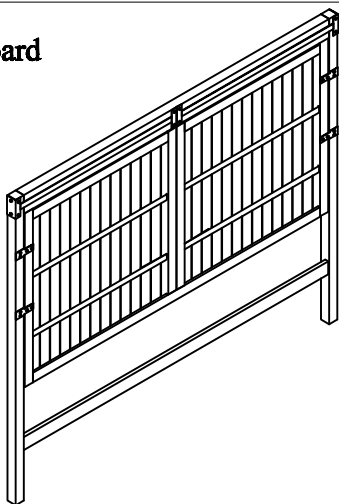


1 PC.

B. Footboard

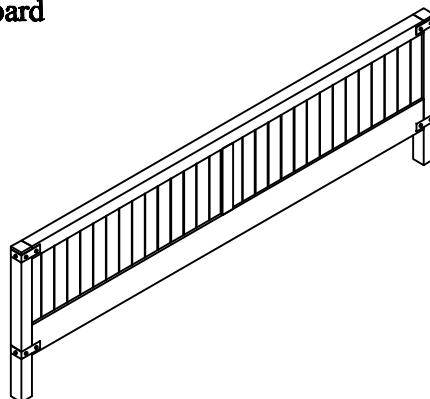


1 PC.

C. Side Rails

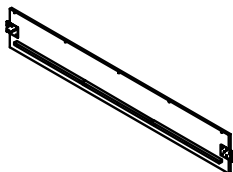


2 PCS.

D. Slats

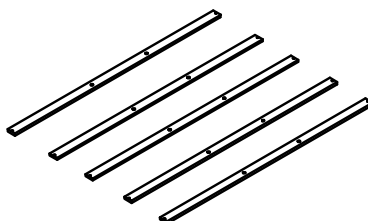

5 PCS


E. Support Legs



10 PCS.


Thank you for choosing Legends Furniture!

Step 1:

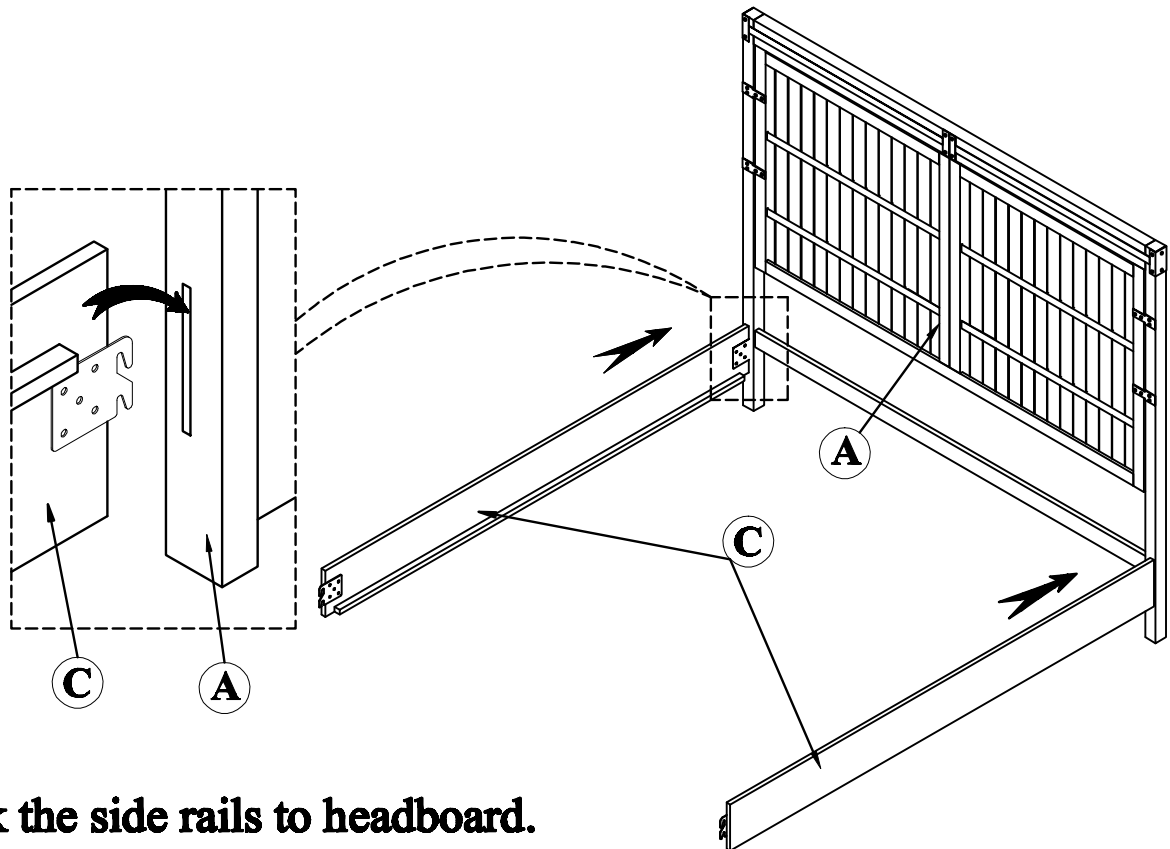


1. Hook the side rails to headboard.

Step 2:

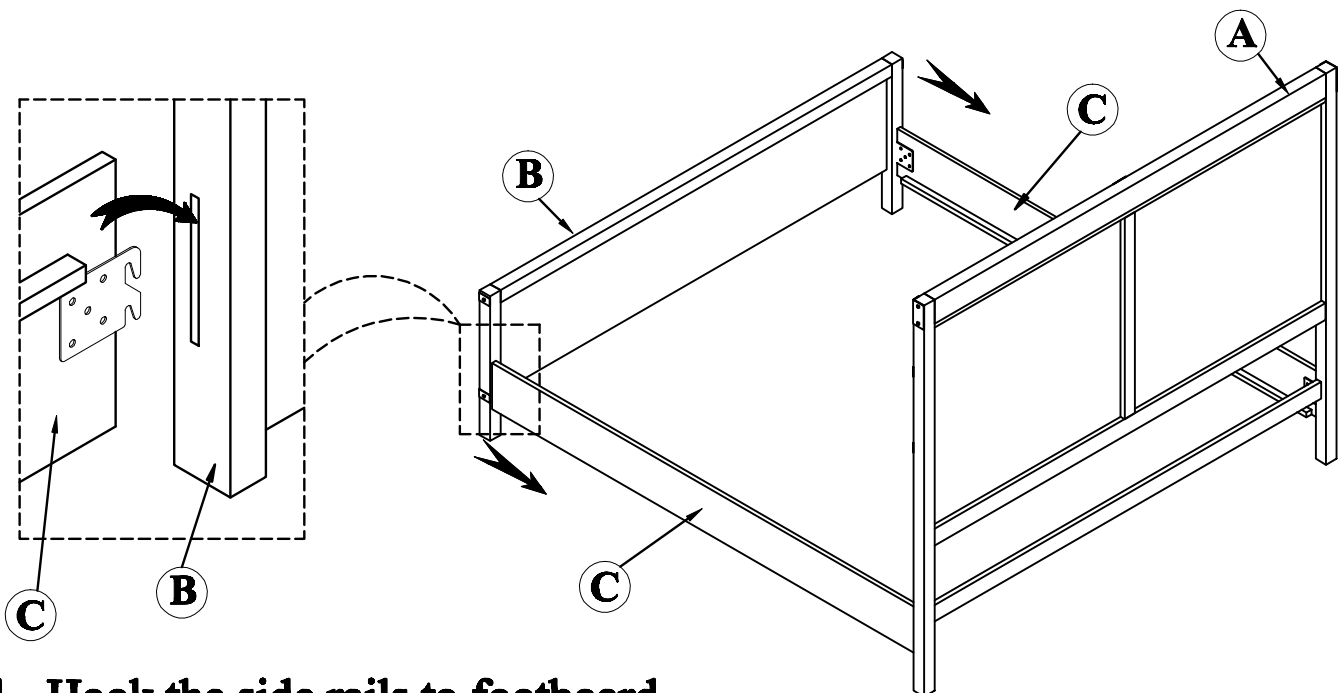


1. Hook the side rails to footboard.

Step 3:

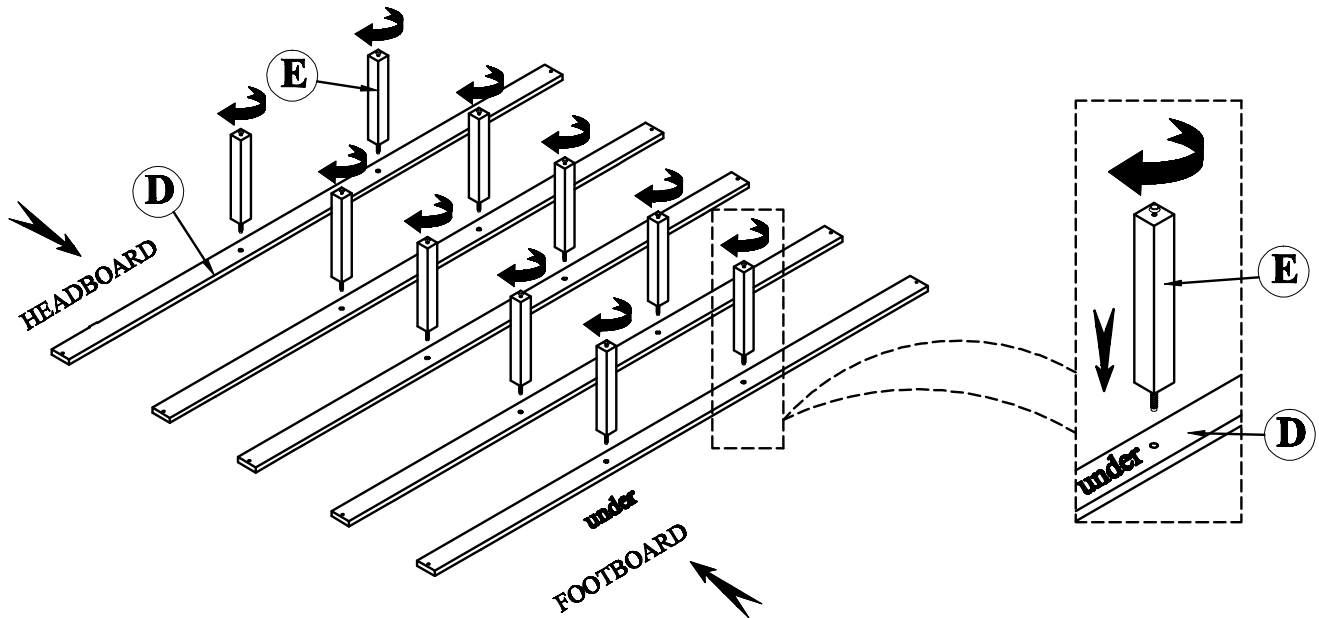


1. Connect support legs (E) to slats (D).



Step 4:

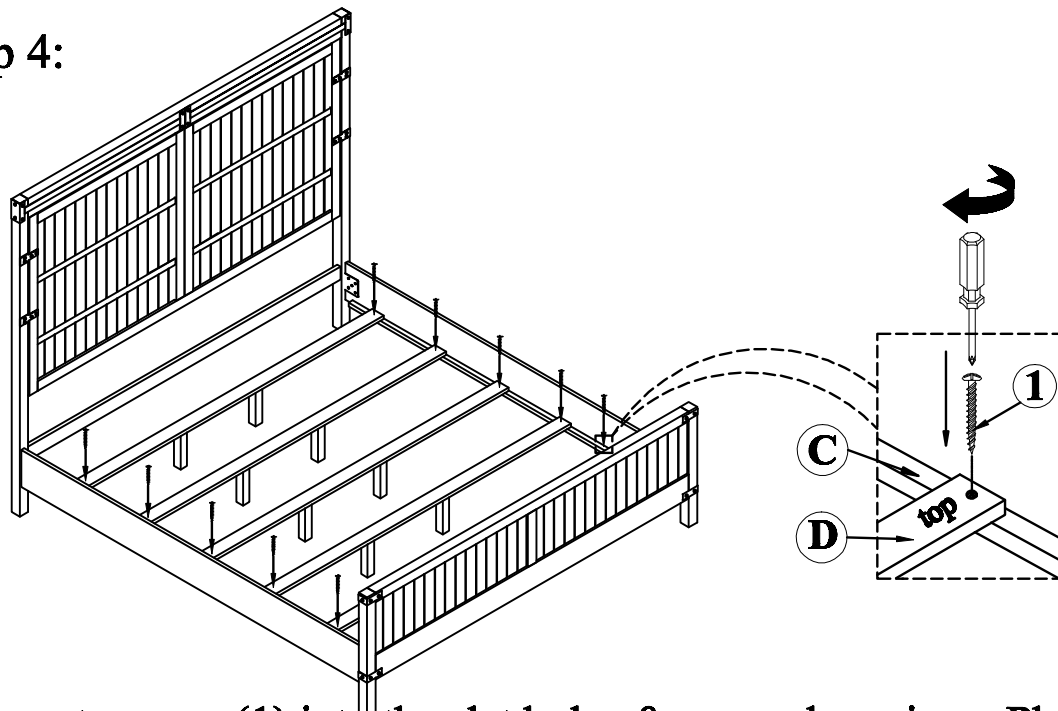

1. Insert screws (1) into the slat holes & secure by using a Philip's Head Screwdriver. (Not included).

HARDWARE FOR CAL KING STORAGE RAILS			
Part #	DESCRIPTION		QTY
1	Screw Ø4*30 mm		10 PCS


Part #	DESCRIPTION		QTY
A	Industrial Cal King Rails		2 PCS

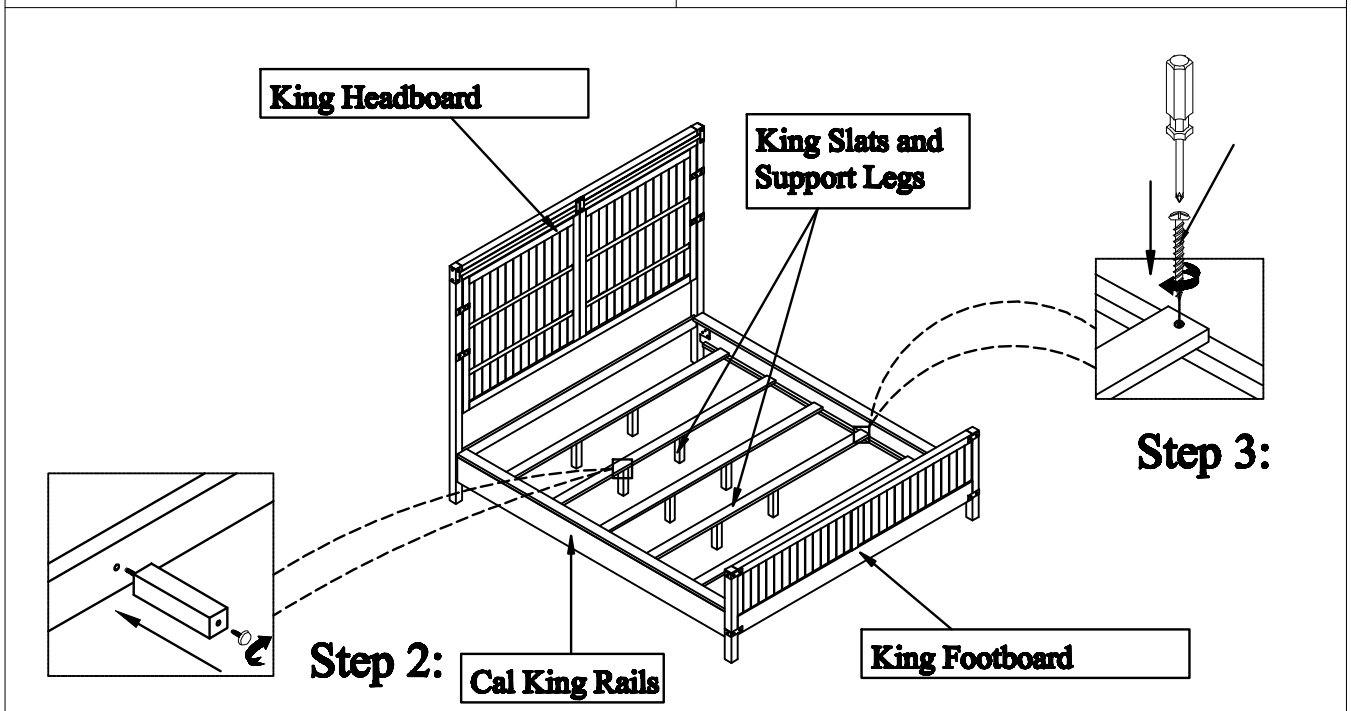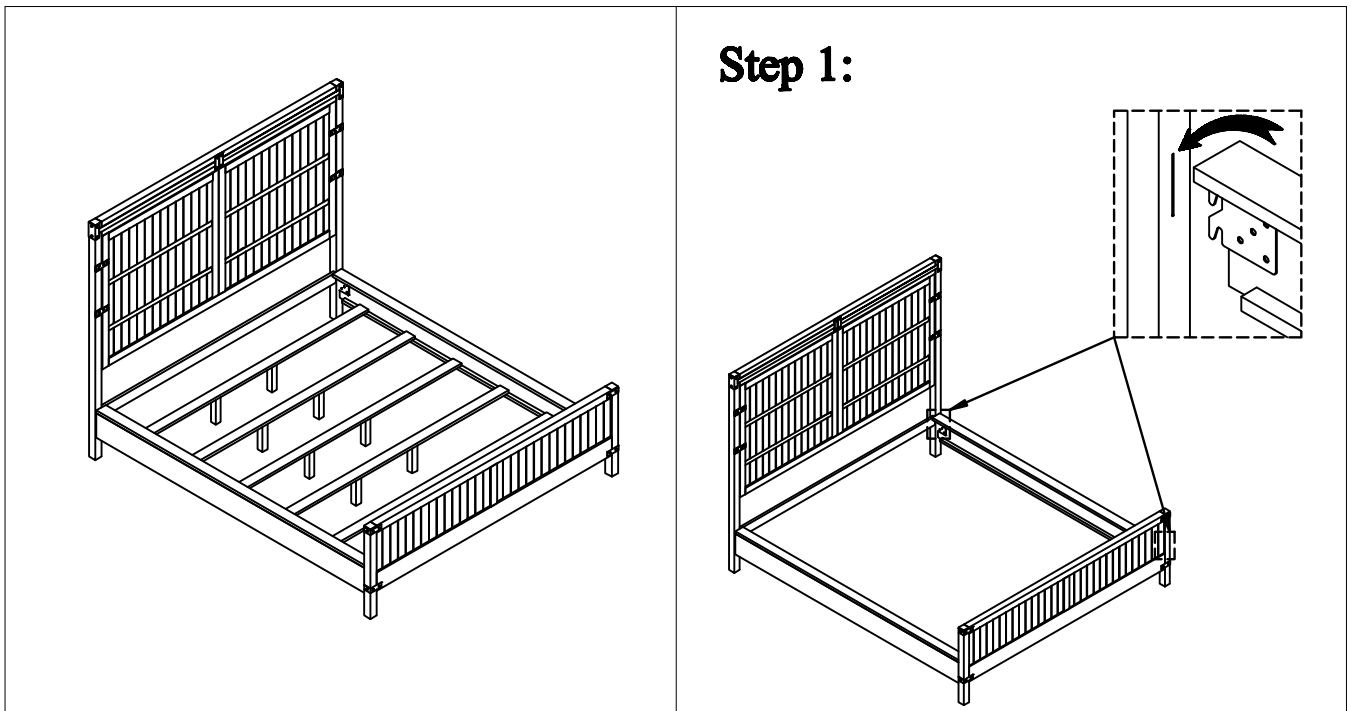


HARDWARE FOR MIRROR AND DRESSER

Part #	DESCRIPTION		QTY
1	Flat Washer 5/16" x 19 mm		8PCS
2	Spring washer 5/16" x 13 mm		8PCS
3	Allen Bolt 5/16" x 38 mm		8PCS
4	Allen key		1 PC
	Straight Allen Key		1 PC
5	Tipping restraint		1 SET

Part #	DESCRIPTION		QTY
A	Dresser		1PC
B	Mirror		1PC
C	Mirror Support		2PCS

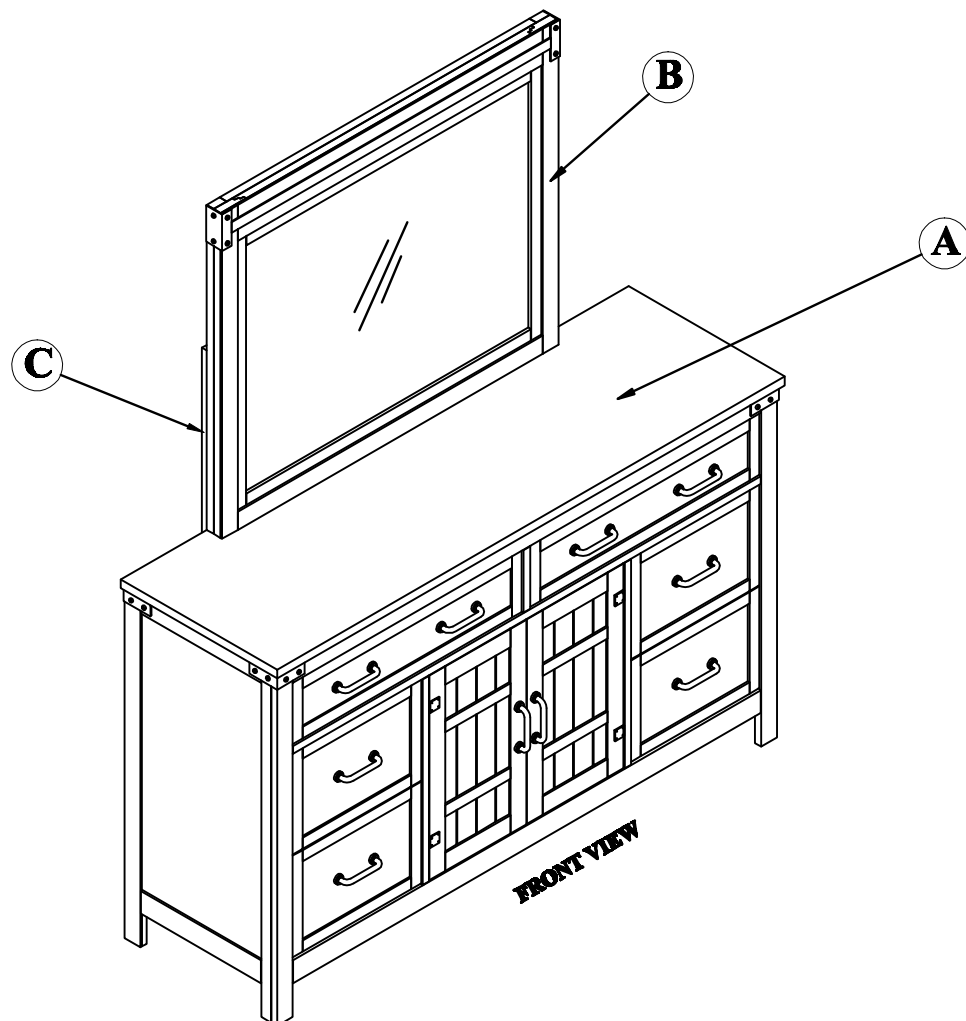


Step 1:

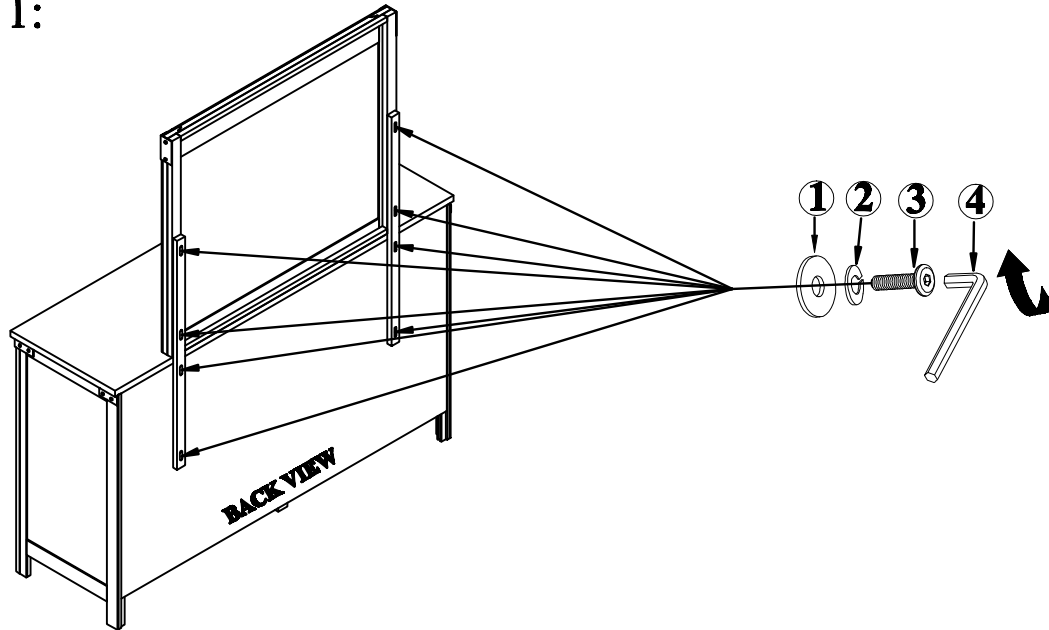


Attach Mirror Support to Dresser back and Mirror on Dresser using Flat Washer (1), Spring Washer (2), Allen Bolt (3), Allen key (4).

Step 2:

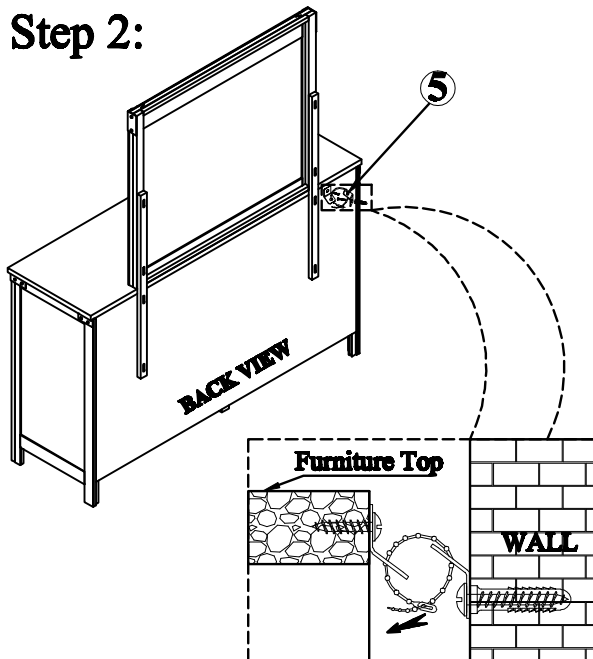

Step 3:

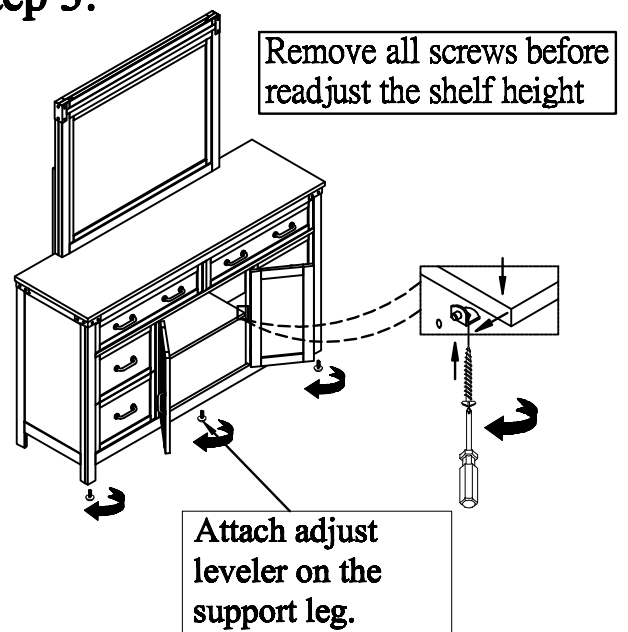

For your safety, please install tipping restraint by following instructions inside of the bag.

Thank you for choosing Legends Furniture!




INDUSTRIAL ASSEMBLY INSTRUCTIONS


ZIND-7015- INDUSTRIAL NIGHTSTAND

HARDWARE FOR MIRROR AND DRESSER			
Part #	DESCRIPTION		QTY
1	Tipping restraint		1 SET

Part #	DESCRIPTION		QTY
A	Nightstand		1PC

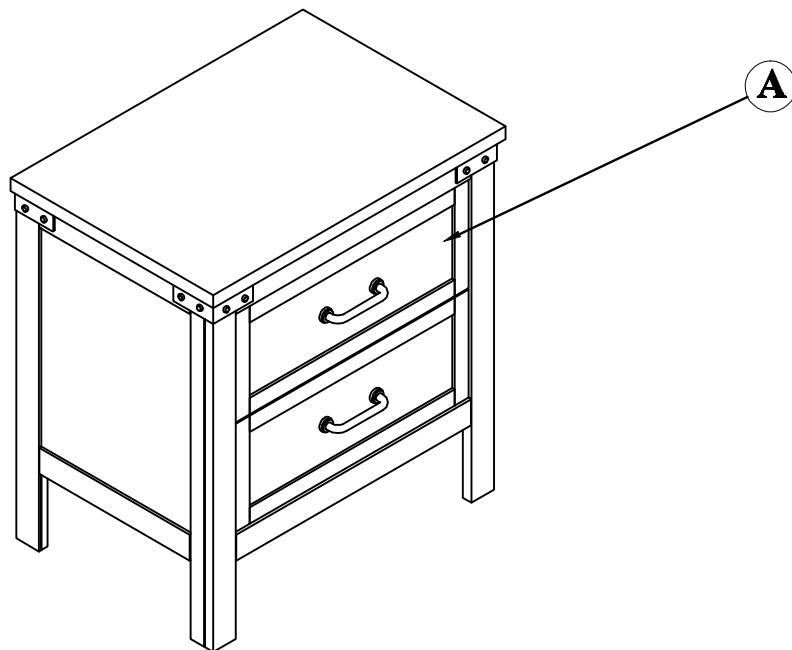

Step 1:

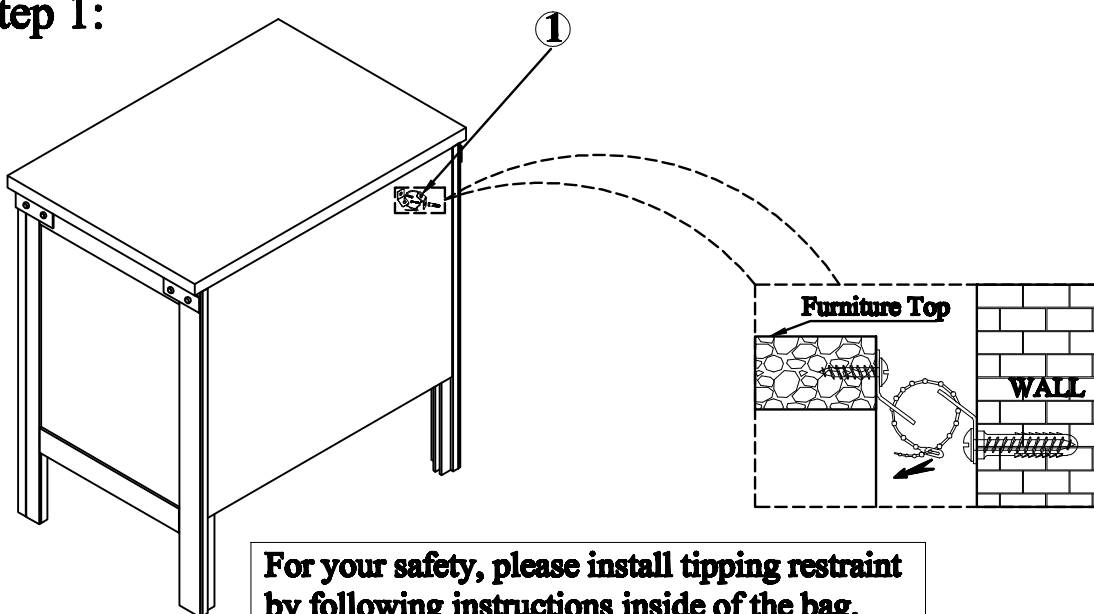

For your safety, please install tipping restraint by following instructions inside of the bag.



Thank you for choosing Legends Furniture!




INDUSTRIAL ASSEMBLY INSTRUCTIONS

ZIND-7016 - INDUSTRIAL CHEST


HARDWARE FOR MIRROR AND DRESSER			
Part #	DESCRIPTION		QTY
1	Flat Washer 5/16" x 19 mm		4PCS
2	Spring washer 5/16" x 13 mm		4PCS
3	Hex. Nut 14x13x13 mm		4PCS
4	Allen Bolt 5/16" x 28 mm		4PCS
5	Allen key		1 PC
	Straight Allen Key		1 PC
6	Open Wrench 13mm		1 PC
7	Tipping restraint		1 SET

Part #	DESCRIPTION		QTY
A	Chest		1PC
B	Door		1PC
C	Pulley		2PCS

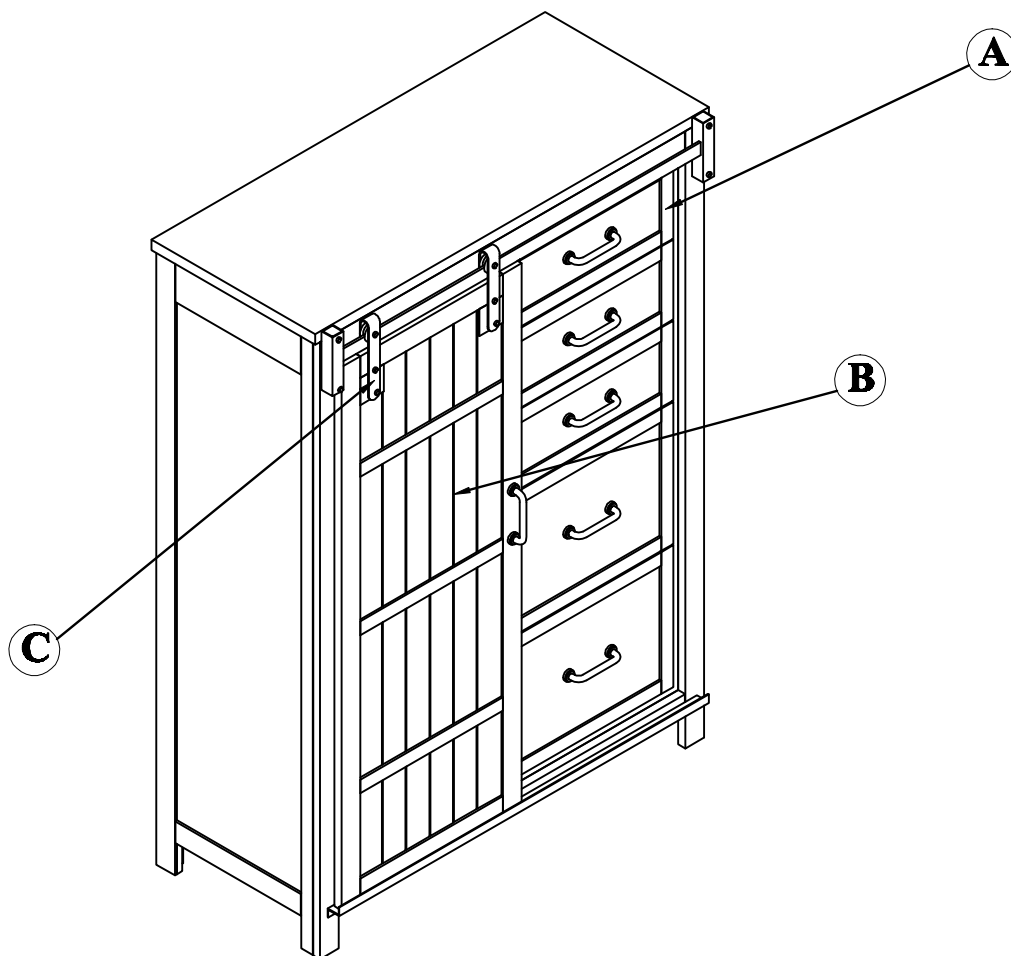


Thank you for choosing Legends Furniture!

Step 1:

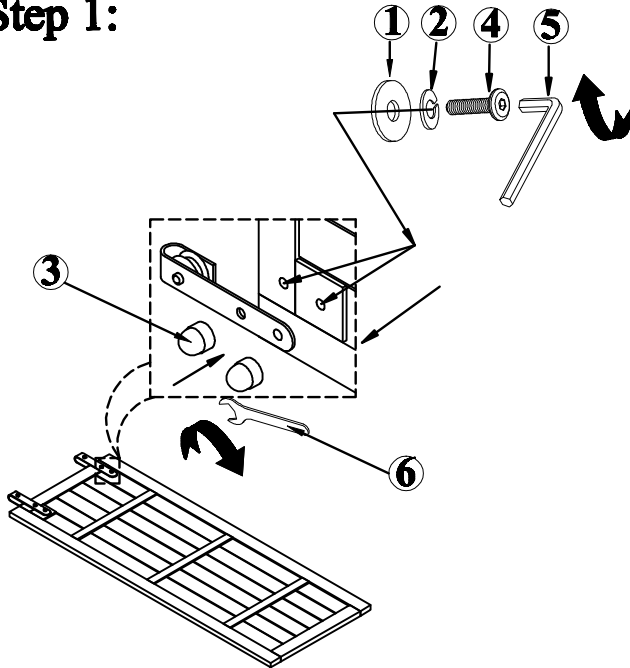


Attach pulley to door using Flat Washer (1), Spring Washer (2), Allen Bolt (4), Allen key (5) and Hex. Nut (3), Open wrench (6).

Step 2:

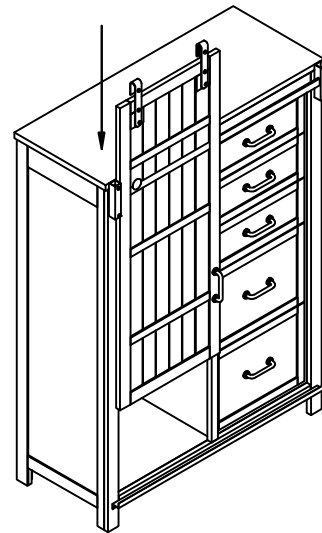

Attach door to chest.

Step 3:

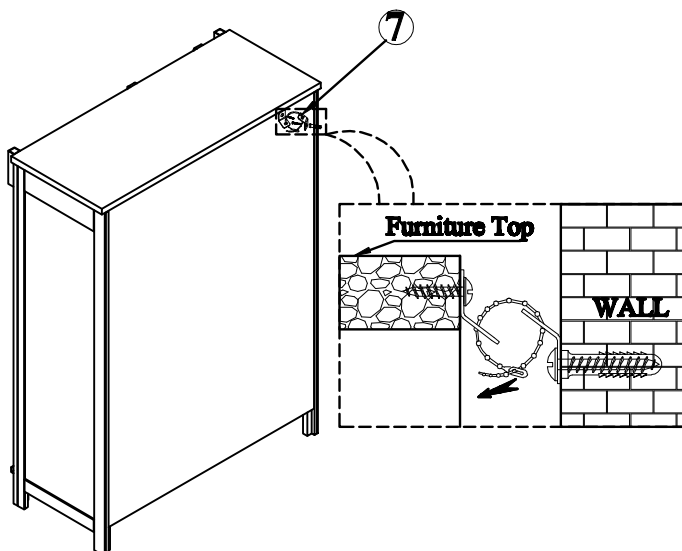

For your safety, please install tipping restraint by following instructions inside of the bag.

Step 4:

Remove all screws before readjust the shelf height

