## Assembly Instruction For

## **LOVESEAT**

U-13430-10466-200/ U-13430-10490-200/ U-13430-11050-200

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.


- 1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
- 2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
- 3. Please do not over tighten screws or bolts.
- 4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PART LIST						
No.	Part Desc	Sketch	Code	Q'ty		
А	Sofa Base			1		
В	Back Cushion		PU-13430-10466-BAC PU-13430-10490-BAC PU-13430-11050-BAC	2		
С	Leg		PU-13430-LEG 1	4		
D	Middle Leg	<b></b>	PU-13430-LEG 2	1		

HARDWARE LIST						
No.	Hardware Desc	Sketch	Code	Q'ty		
Е	Screw (4x25mm)	•		16		
F	Allen bolt (6x30mm)	0		8		
G	Spring washer Ø18mm	0	PU-13430-HW	8		
Н	Flat washer Ø18mm	0		8		
ı	Allen key M4	<u></u>		1		

↑ Only tighten all bolts when all bolts aligned with bolt inserts.

STEP 1

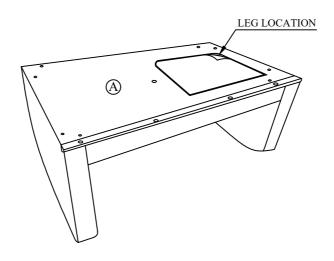

MADE IN VIETNAM


PAGE 1 OF 2

## Assembly Instruction For


## **LOVESEAT**

U-13430-10466-200/ U-13430-10490-200/ U-13430-11050-200


STEP 2

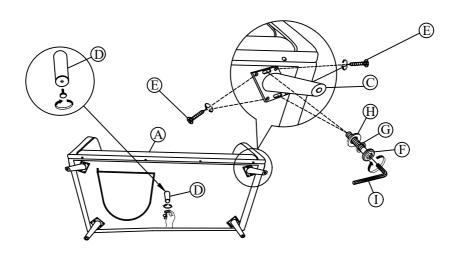

STEP 3

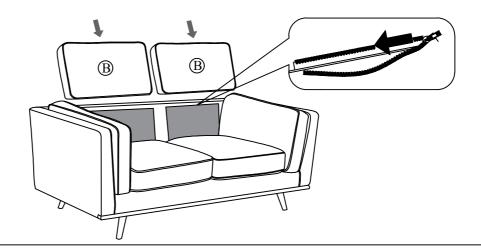

COMPLETED

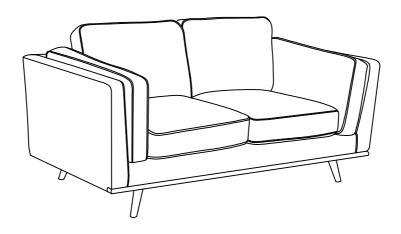

MADE IN VIETNAM

PAGE 2 OF 2