email: <u>info@riverside-furniture.com</u>


Vogue Home Office Assembly Instructions

Page 2 of 2


Made in Viet Nam

46238 Upholstered Desk Chair



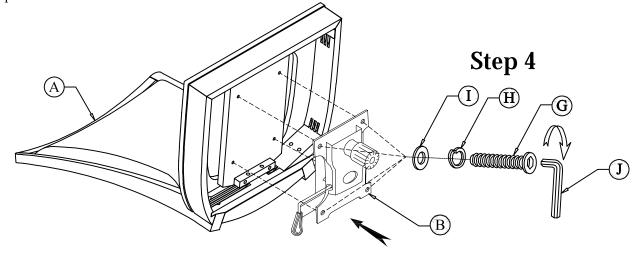

Step 5

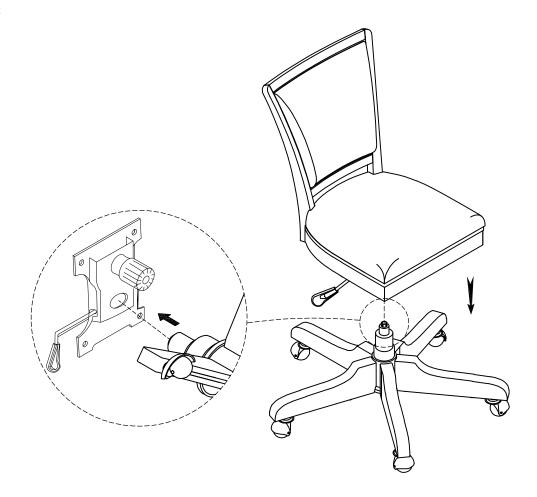

Note: To prevent possible damage to some types of flooring, never roll casters on unprotected hardwood or vinyl flooring. The lift mechanism is in a locked position for shipping. To unlock, pull straight out on the handle, and then the lift cylinder can be activated by lifting the handle.