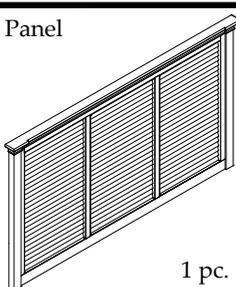
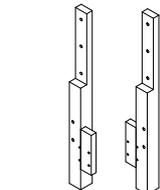
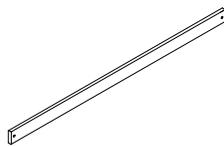


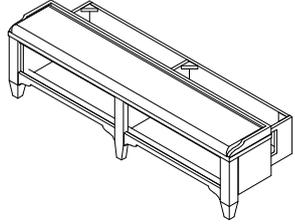



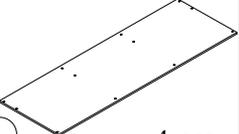







Hardware and Parts packed with the Headboard

<p>Headboard Panel</p>  <p>(H-A) 1 pc.</p>	<p>Headboard Post</p>  <p>(H-B) One Left & One Right</p>	<p>Headboard Stretcher</p>  <p>(H-C) 1 pc.</p>	
<p>M5/16"-18 x 1-3/4" Long Allen Head Bolt</p>  <p>(H-D) 8 pcs.</p>	<p>M5/16" Spring Washer</p>  <p>(H-E) 8 pcs.</p>	<p>M5/16" x 19*2mm Flat Washer</p>  <p>(H-F) 8 pcs.</p>	<p>5mm Allen Wrench</p>  <p>(H-G) 1 pc.</p>





Hardware and Parts packed with the Footboard

<p>Storage Footboard Frame</p>  <p>(F-A) 1 pc.</p>	<p>Drawer</p>  <p>(F-B) 2 pcs.</p>	<p>Drawer Box Support Leg 9"-1/4 long with leveler</p>  <p>(F-C) 2 pcs.</p>	<p>6/6 Wood Slat 77" long</p>  <p>(F-D) 4 pcs.</p>	
<p>Panel Support Leg 13-1/2" long with leveler</p>  <p>(F-E) 8 pcs.</p>	<p>6/6 Wood Panel with blocks 77" x 20-1/4"</p>  <p>(F-F) 4 pcs.</p>	<p>M5/16"-18 x 1-1/2" Long Allen Head Bolt</p>  <p>(F-G) 4 pcs.</p>	<p>M5/16" Spring Washer</p>  <p>(F-H) 4 pcs.</p>	<p>M5/16" x 19*2mm Flat Washer</p>  <p>(F-I) 4 pcs.</p>
<p>5mm Allen Wrench</p>  <p>(F-J) 1 pc.</p>	<p>#8 x 1" Wood Screw</p>  <p>(F-K) 28 pcs.</p>			



Hardware and Parts packed with the Bed Rails
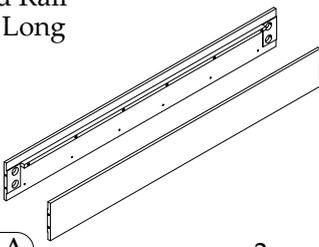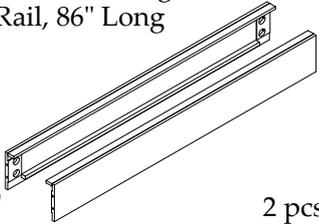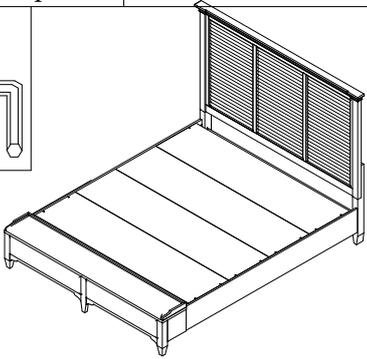
<p>Bed Rail 81" Long</p>  <p>(R-A) 2 pcs.</p>	<p>M5/16"-18 x 3-1/2" Long All-Thread Bolt</p>  <p>(R-B) 8 pcs.</p>	<p>5/16-18 x L17 Hex Nut</p>  <p>(R-C) 8 pcs.</p>	<p>M5/16" Spring Washer</p>  <p>(R-D) 8 pcs.</p>	<p>M5/16" x 16*2mm Flat Washer</p>  <p>(R-E) 8 pcs.</p>
<p>6/0 California King Bed Rail, 86" Long</p>  <p>(R-A) 2 pcs.</p>	<p>ø50mm Arc-Washer</p>  <p>(R-F) 8 pcs.</p>	<p>12mm Open Wrench</p>  <p>(R-G) 1 pc.</p>	<p>4mm Allen Wrench</p>  <p>(R-H) 1 pc.</p>	
<p>6/0-6/6 King Storage Bed</p> <p>59380-59480 6/0-6/6 LOUVER HEADBOARD 59385-59485 6/0-6/6 UPH BENCH STORAGE FOOTBOARD 59373-59473 5/0-6/6 BED RAILS 59383-59483 6/0 BED RAILS</p>				




Hardware and Parts packed with the Headboard
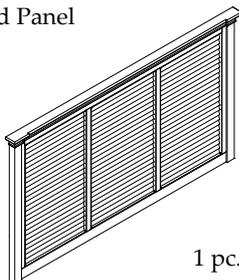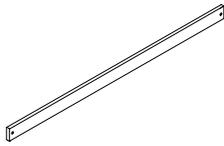
<p>Headboard Panel</p>  <p>(H-A) 1 pc.</p>	<p>Headboard Post</p>  <p>(H-B) One Left & One Right</p>	<p>Headboard Stretcher</p>  <p>(H-C) 1 pc.</p>	
<p>M5/16" -18 x 1-3/4" Long Allen Head Bolt</p>  <p>(H-D) 8 pcs.</p>	<p>M5/16" Spring Washer</p>  <p>(H-E) 8 pcs.</p>	<p>M5/16" x 19*2mm Flat Washer</p>  <p>(H-F) 8 pcs.</p>	<p>5mm Allen Wrench</p>  <p>(H-G) 1 pc.</p>

Hardware and Parts packed with the Footboard

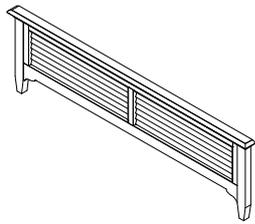
<p>Low Footboard Frame</p>  <p>(F-A) 1 pc.</p>	<p>6/6 Wood Slat 77" long</p>  <p>(F-B) 4 pcs.</p>	<p>Slat Support Leg 7-1/2" long with leveler</p>  <p>(F-C) 8 pcs.</p>	<p>#8 x 1" Wood Screw</p>  <p>(F-D) 8 pcs.</p>
--	---	---	---

Hardware and Parts packed with the Bed Rails
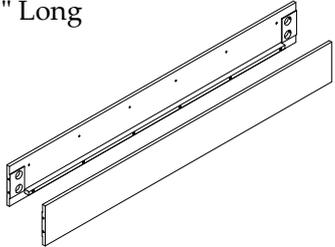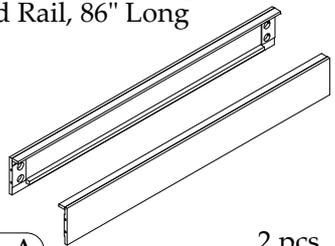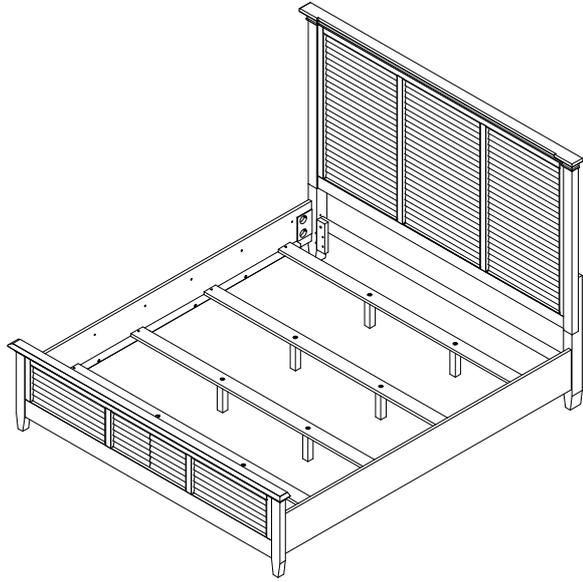
<p>Bed Rail 81" Long</p>  <p>(R-A) 2 pcs.</p>	<p>M5/16" -18x 3-1/2" Long All-Thread Bolt</p>  <p>(R-B) 8 pcs.</p>	<p>5/16-18 x L17 Hex Nut</p>  <p>(R-C) 8 pcs.</p>	<p>M5/16" Spring Washer</p>  <p>(R-D) 8 pcs.</p>	<p>M5/16" x 16*2mm Flat Washer</p>  <p>(R-E) 8 pcs.</p>
<p>6/0 California King Bed Rail, 86" Long</p>  <p>(R-A) 2 pcs.</p>	<p>Ø50mm Arc-Washer</p>  <p>(R-F) 8 pcs.</p>	<p>12mm Open Wrench</p>  <p>(R-G) 1 pc.</p>	<p>4mm Allen Wrench</p>  <p>(R-H) 1 pc.</p>	

6/0-6/6 King Bed


- 59380-59480 6/0-6/6 LOUVER HEADBOARD
- 59381-59481 6/0-6/6 FOOTBOARD
- 59373-59473 5/0-6/6 BED RAILS
- 59383-59483 6/0 BED RAILS

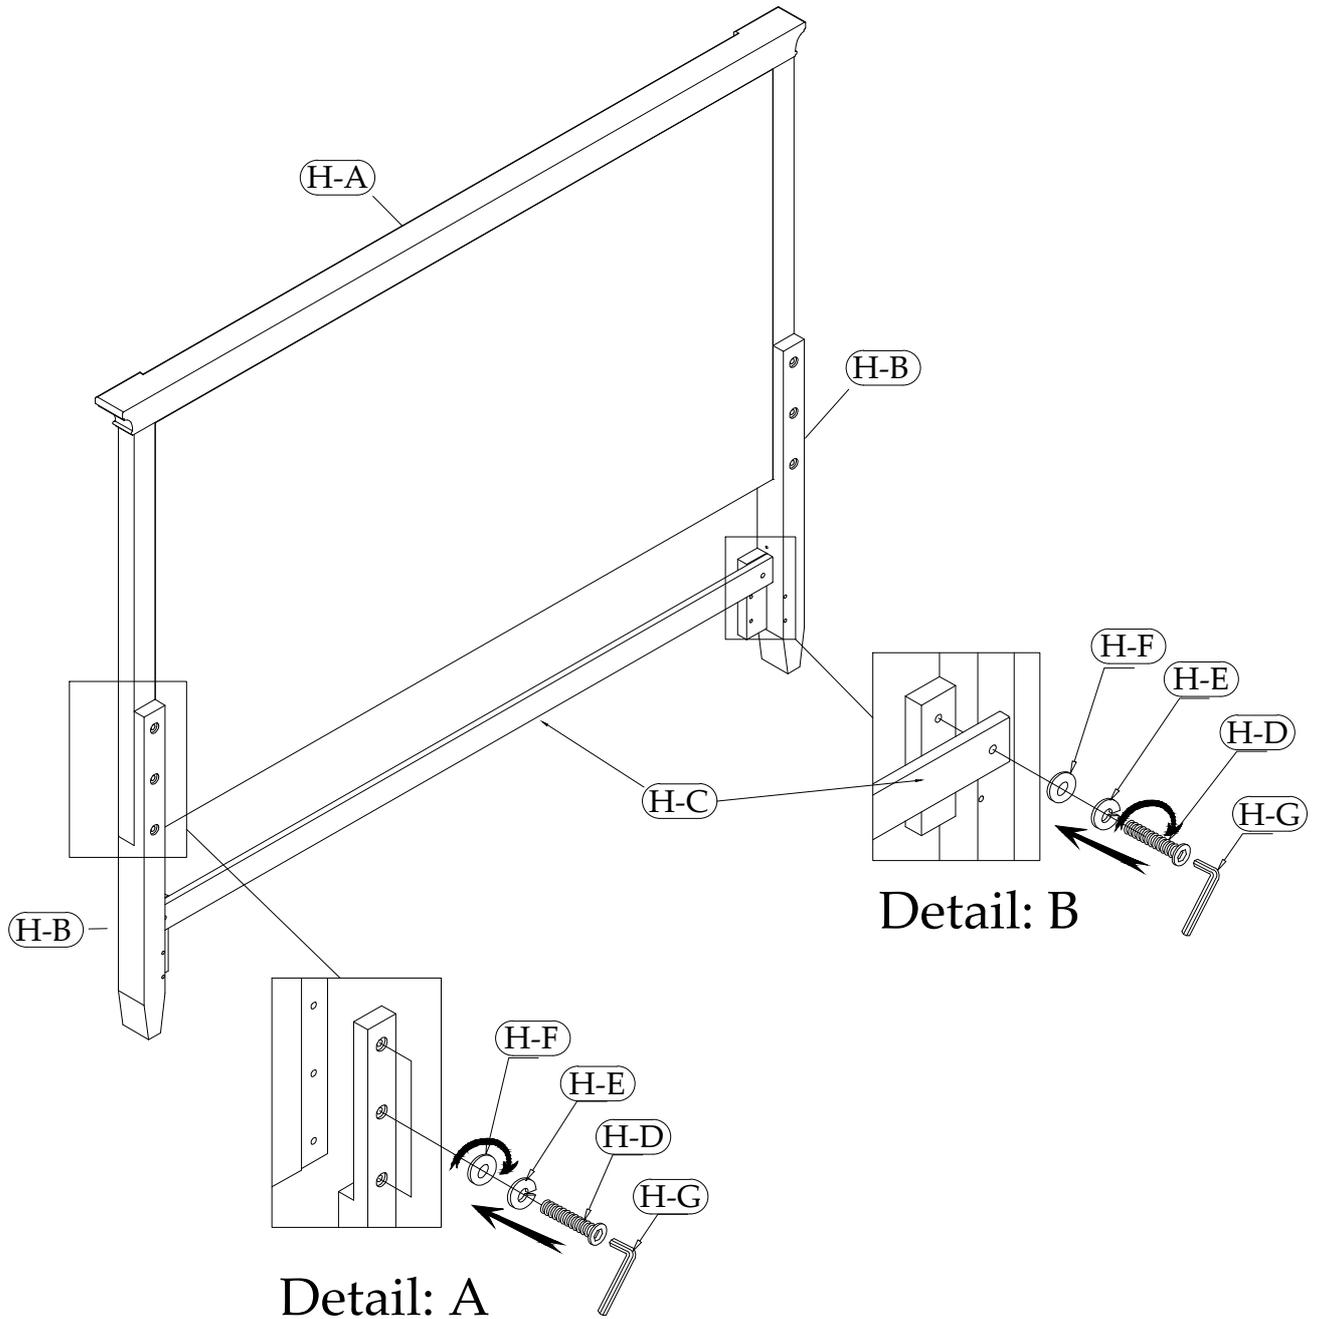

ASSEMBLY STEPS :



1. Place the Headboard Panel (H-A) face down on a clean and soft surface.
2. Attach the Left and Right Headboard Posts (H-B) to the back of the Headboard Panel, using the Flat Washers (H-F), Spring Washers (H-E) and Bolts (H-D). Do not fully tighten until after next step. (see Detail A).
3. Attach the Back Stretcher (H-C) to the Headboard Posts by using the same Washers and Bolts as previous step. (See Detail B). Fully Tighten all the bolts with the Allen Wrench (H-G).

Gently lean the back of the assembled Headboard against the wall where the Bed will be located in the room.

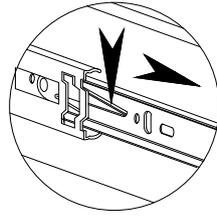

To remove the drawer:

- A. Pull the drawer fully open so the black latch is visible in the inside channel of the guides.
- B. Release the latches by simultaneously pushing one lever up and the other down.
- C. At the same time, pulling the drawer forward until the slides release.

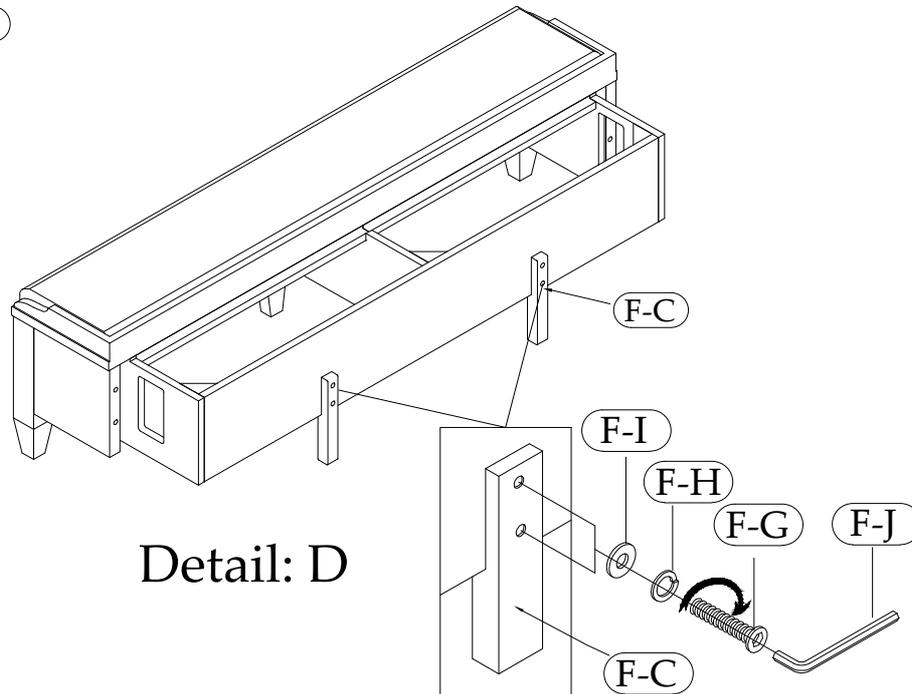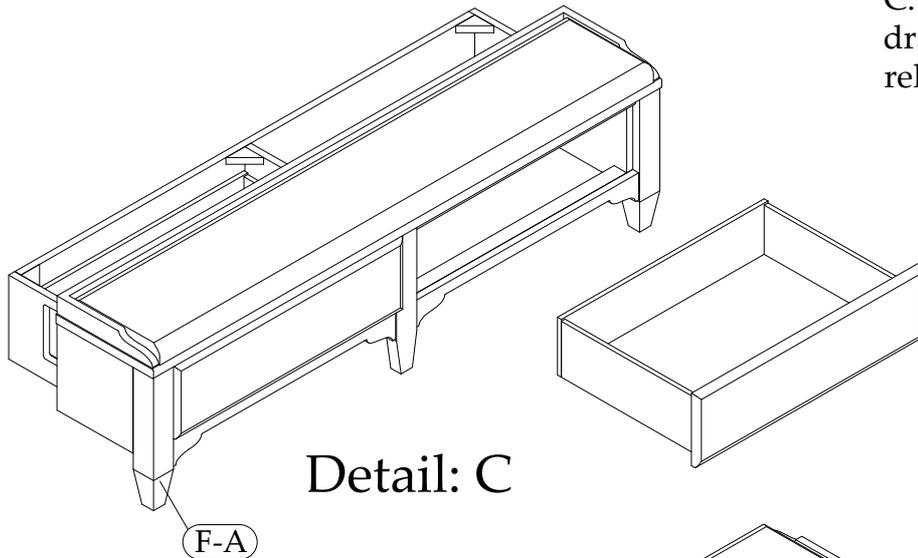



ASSEMBLY STEPS :

1. Remove both drawers from the Storage Footboard. Refer to the steps above.
2. Place the Storage Footboard (F-A) face down on a clean and soft surface.
3. Attach the Support Legs (F-C) to the storage footboard by using the Flat Washers (F-I), Spring Washers (F-H) and Bolts (F-G). Tighten with the Allen Wrench (F-J).

ASSEMBLY STEPS :

To prevent possible damage to furniture and personal injury, it is recommended that two people are used to perform the following steps.


4. Install All-Thread Bolts (R-B) into the Headboard (H-A) and the Storage Footboard (F-A) before Carefully position one end of one Bed Rail (R-A) onto the All-thread Bolts on the Headboard and connect using the Arc Washers (R-F), Flat Washers (R-E), Spring Washers (R-D), and Hex Nut (R-C). Do not fully tighten the Nuts until the Footboard has been connected. As shown in **(Detail E)**
5. Carefully align the Storage Footboard and headboard to be 'square' with the Side Rails. Fully tighten all the hex nut (R-C) by using the open wrench (R-G). As shown in **(Detail E)**.
6. Attach the eight Slat Support Legs (F-E) to the bottom side of four Wood Slats (F-D). (See Detail F).
7. Using one of the Support Panels (F-F) as a gauge, locate and position the four Slats so there is a Slat underneath, centered at the edge of each Support Panel. Attach using the Wood Screws (F-K).
8. Reinstall the Drawers into the Footboard by aligning the metal channels of the guides and push back into the Footboard.

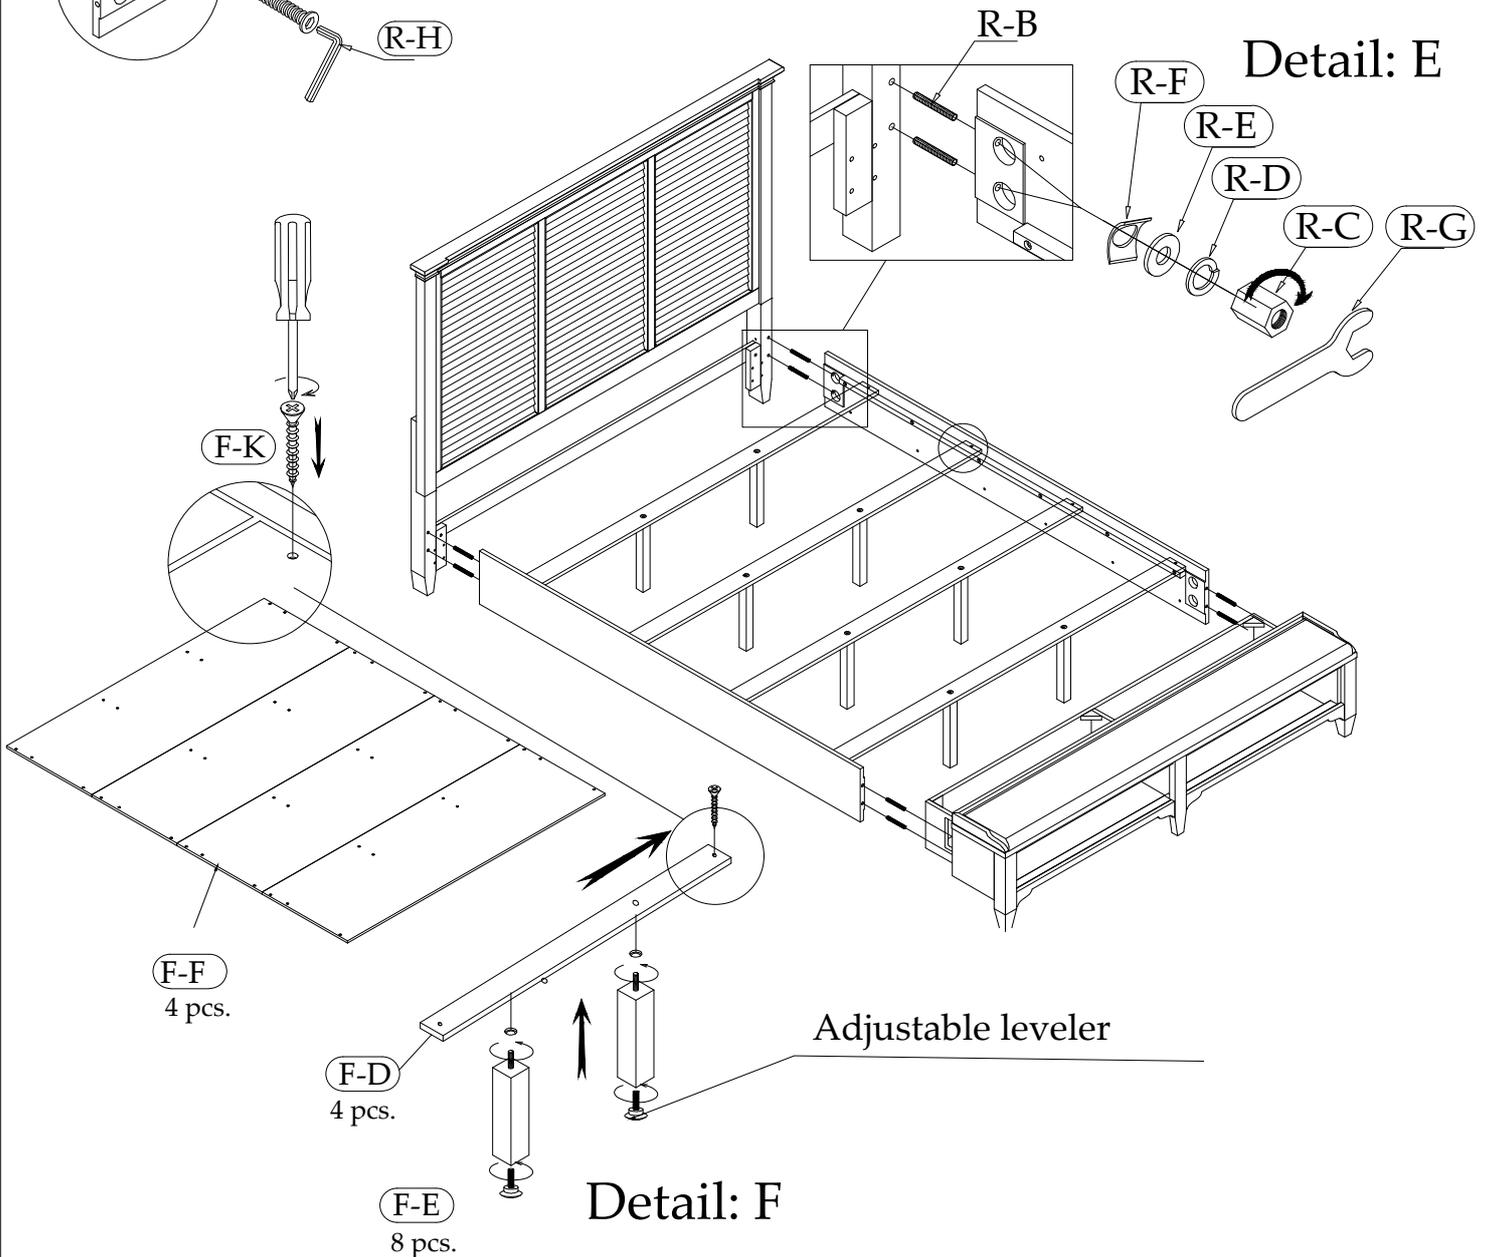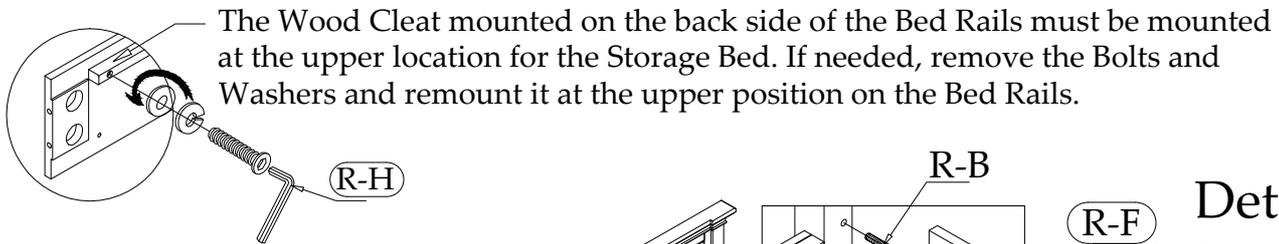

ASSEMBLY STEPS :

To prevent possible damage to furniture and personal injury, it is recommended that two people are used to perform the following steps.

4. Install All-Thread Bolts (R-B) into the Headboard (H-A) and the Footboard (F-A) before Carefully position one end of one Bed Rail (R-A) onto the All-thread Bolts on the Headboard and connect using the Arc Washers (R-F), Flat Washers (R-E), Spring Washers (R-D), and Hex Nut (R-C). Do not fully tighten the Nuts until the Footboard has been connected. As shown in **(Detail E)**
5. Carefully align the Footboard and headboard to be 'square' with the Side Rails. Fully tighten all the hex nut (R-C) by using the open wrench (R-G). As shown in **(Detail E)**.
6. Attach the eight Slat Support Legs (F-C) to the bottom side of four Wood Slats (F-B). (See Detail F).
7. Position and attach the Slats to the Bed Rails using the Wood Screws (F-D).

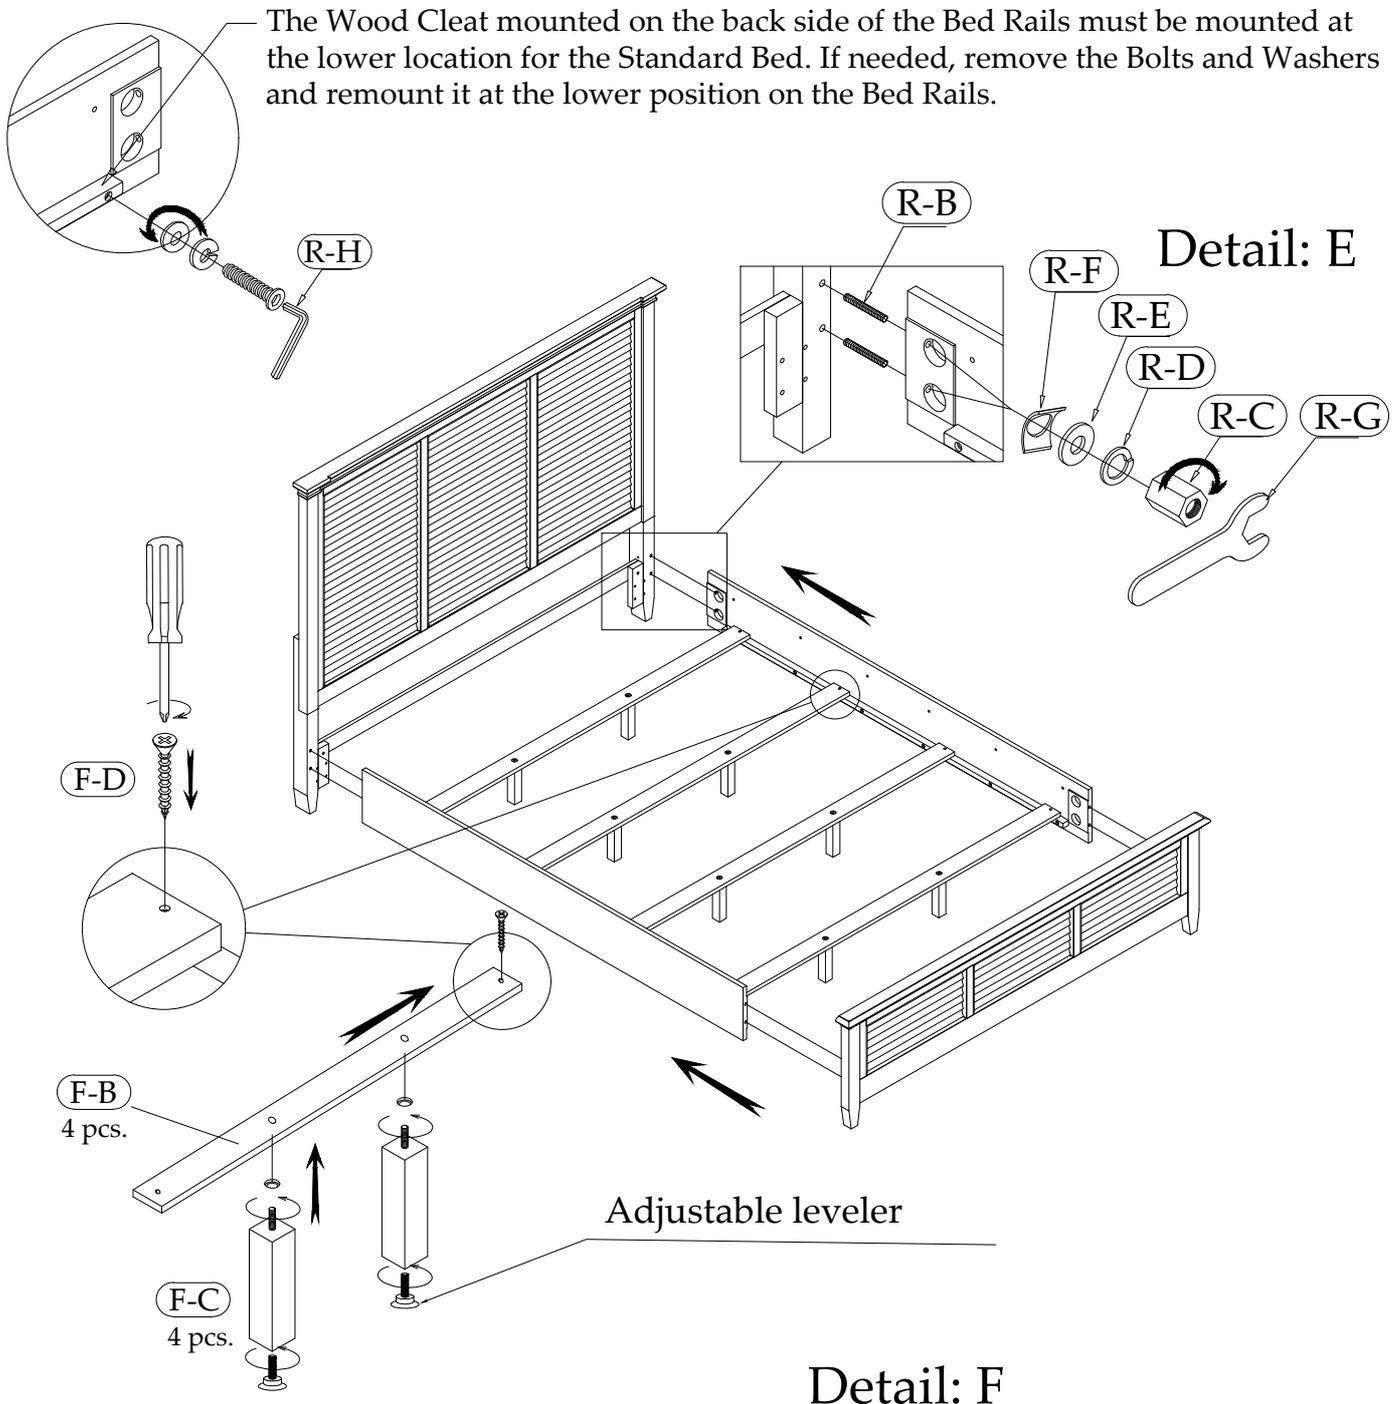

6/0-6/6 King Storage Bed

- 59380-59480 -- 6/0-6/6 Louver Headboard
- 59385-59485 -- 6/0-6/6 Uph Bench Storage Footboard
- 59373-59473 -- 6/0-6/6 Bed Rails
- 59383-59483 -- 6/0 Bed Rails

6/0-6/6 King Standard Bed

- 59380-59480 -- 6/0-6/6 Louver Headboard
- 59373-59473 -- 5/0-6/6 Bed Rails
- 59381-59481 -- 6/0-6/6 Louver Footboard with Slats
- 59383-59483 -- 6/0 Bed Rails

*The Headboard may be used alone with
an Eastern or California King Size
Metal Bed Frame*



USE THESE HOLES FOR ATTACHING WOOD SIDE RAILS.
ALL HARDWARE IS INCLUDED WITH THE SIDE RAILS

USE THESE HOLES FOR ATTACHING A CALIFORNIA
KING SIZE (6/0) METAL BED FRAME

CUSTOMER TO PROVIDE 5/16 X 1-1/2" LONG BOLTS, NUTS
& WASHERS TO CONNECT THE METAL BED FRAME

USE THESE HOLES FOR ATTACHING AN EASTERN KING SIZE (6/6)
METAL BED FRAME

CUSTOMER TO PROVIDE 5/16 X 3-1/2" LONG BOLTS, NUTS &
WASHERS TO CONNECT THE METAL BED FRAME

