










ASSEMBLY INSTRUCTION FOR ACME FURNITURE

MODEL#LV02596








Thank you for purchasing the quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the cation during shipment. Seperate, identify and count all parts and metal hardware. Compare with all parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.


*** Do not fully tighten screws until fully assembled ***

COMPONENT PARTS


DESCRIPTION	PART NAME	QTY (PCS)	DESCRIPTION	PART NAME	QTY (PCS)
①	LARGE TOP FRAME 	1	⑥	SHORT LEG 	3
②	SMALL TOP FRAME 	1	⑦	FOOT 	6
③	LARGE BOTTOM FRAME 	1	⑧	LARGE MIRROR 	1
④	SMALL BOTTOM FRAME 	1	⑨	SMALL MIRROR 	1
⑤	LONG LEG 	3			

HARDWARE REQUIRED

①		ALLEN KEY		1 PC
②		WRENCH		1 PC
③		BOLT	φ1/4"*9mm	12 PCS
④		FULLY-THREADED BOLT	φ1/4"*89mm	6 PCS
⑤		NUT		6 PCS
⑥		PLUG	20mmSQ	6 PCS
⑦		CAP	φ3/4"	6 PCS

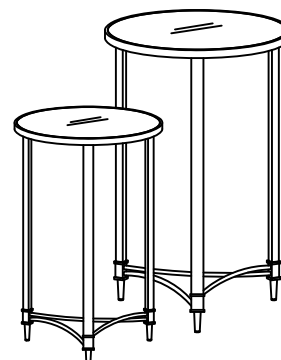

Attention


*** Assembly required: 2-people recommended. 

*** Some number parts listed on the instruction sheet may not be in parts bag as they may already be assembled. Carefully check parts and packing materials prior to ordering replacements.


How to assemble:

STEP 1

Please make sure this drain hole
on this location as drawing shown
during assembly.

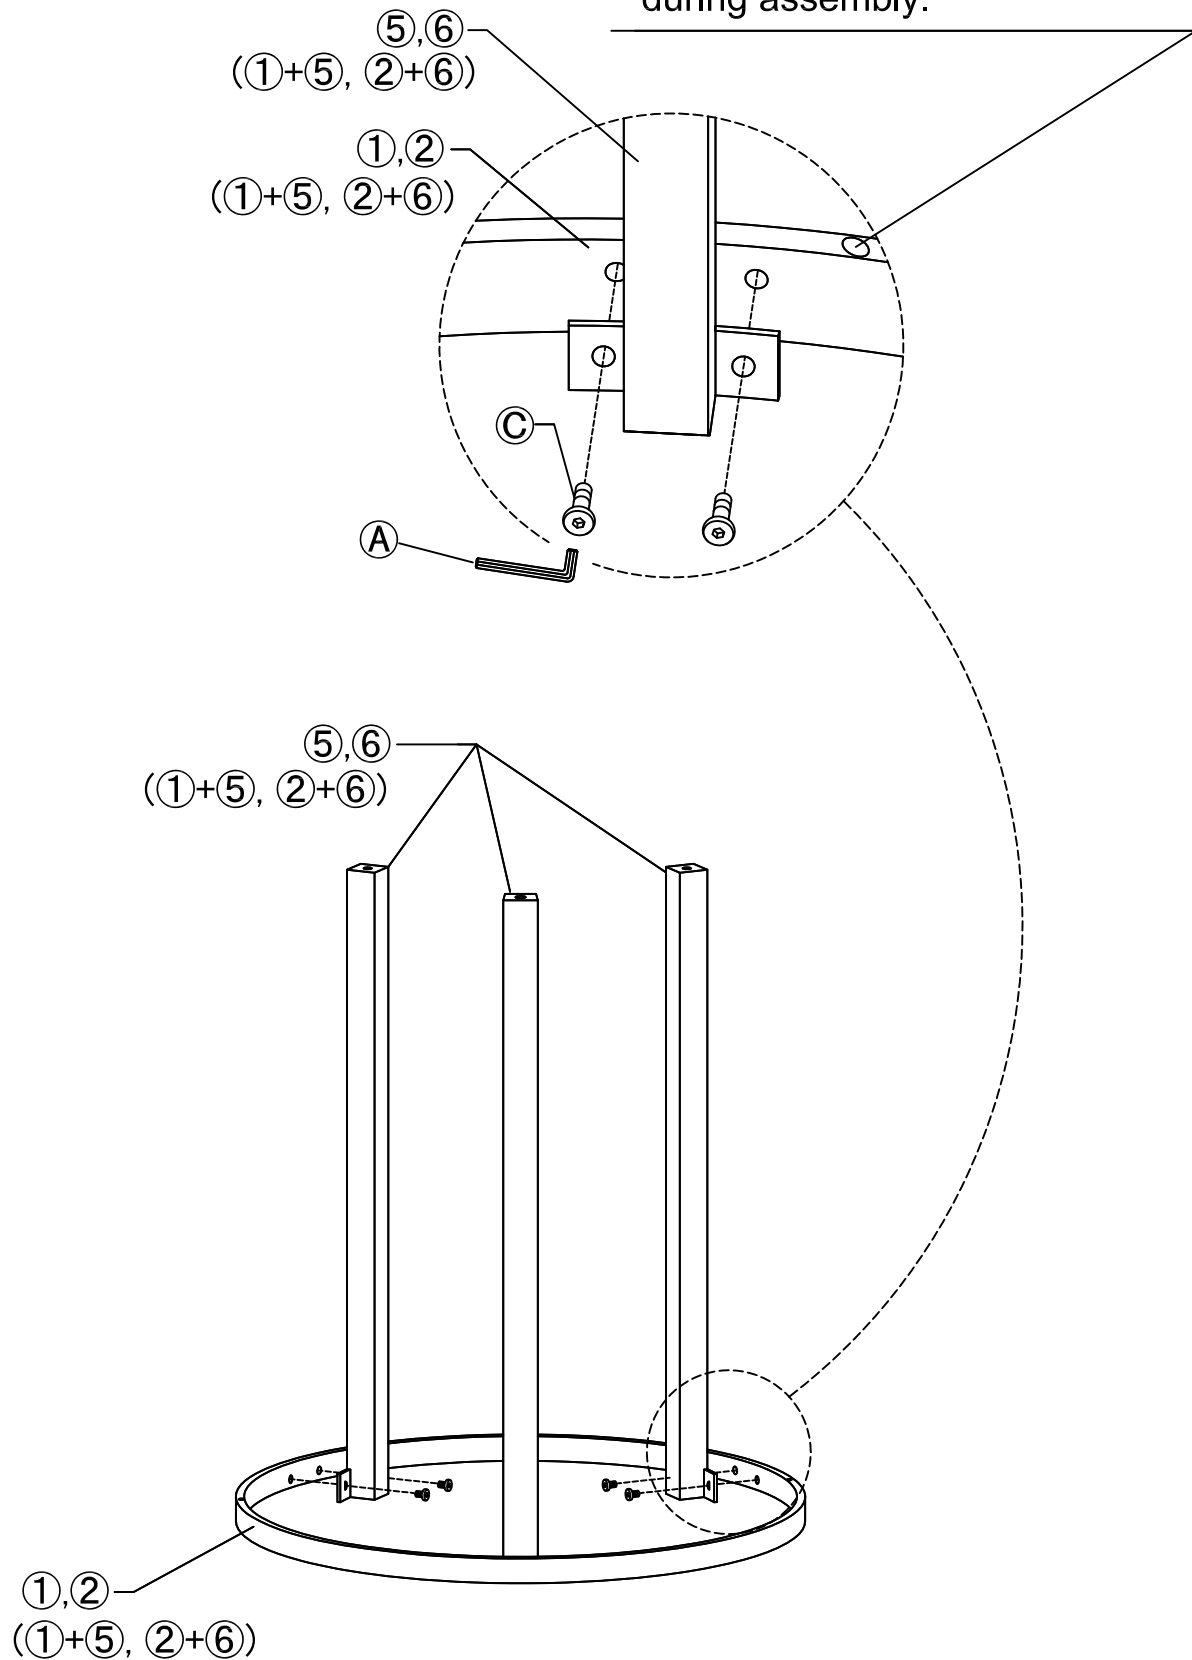

STEP 2

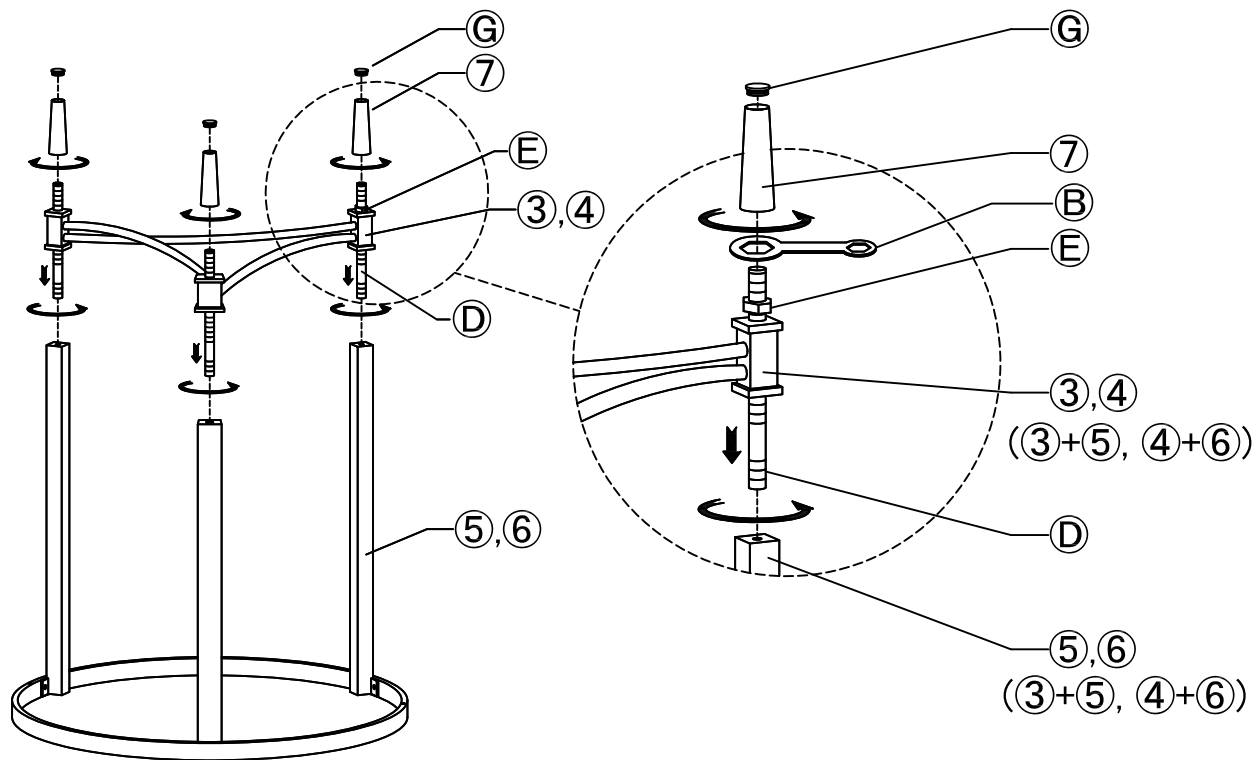

STEP 3

