




Parker Living
A Division of Parker House

Assembly Instructions


Alpine Sectional

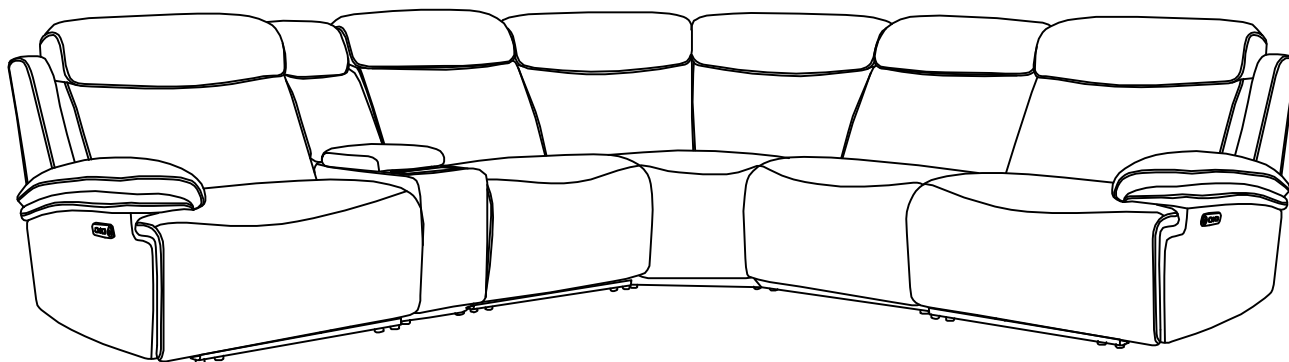

BEFORE ASSEMBLY


Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. Please take the time to read and follow the assembly instructions carefully.

Power Left Arm Facing Zero Gravity Recliner P2

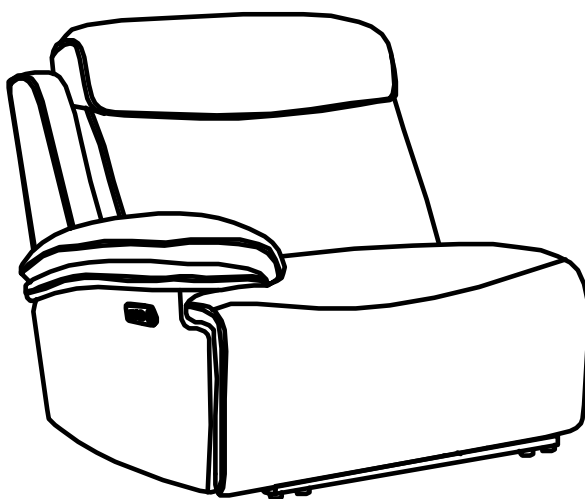


Part List

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:

NO	Description	Sketch	Qty
A	Body		1 PC
B	Back Cushion		1 PC
C	LAF Wing		1 PC
E	Plug Transformer		1 PC
F	Power Cord		1 PC


Step 1

1. Take out the LAF wing (C) from the bottom of the armrest.
2. Take out the power cord and the transformer from the plastic bag backside of the seat.

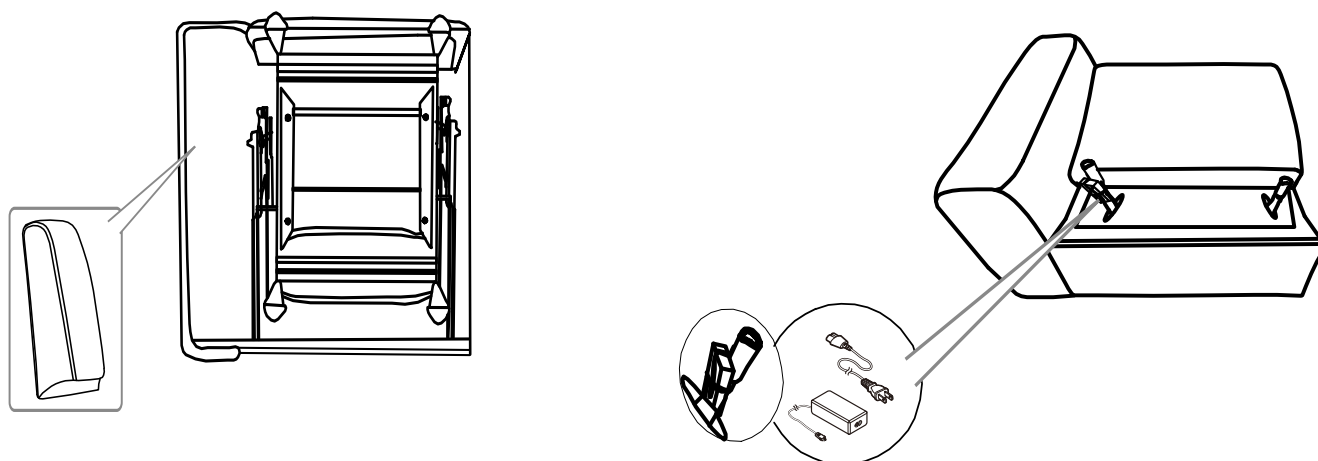


Step 2

1. Install the Back cushion(B) into the Body (A) by positioning the female metal receiver brackets over the male metal posts. Ensure that the female metal receives brackets on each side line up with the seat metal posts. Push the backrest down until each side is locked into place and an audible "click" is heard.
2. Connect the wires as shown.

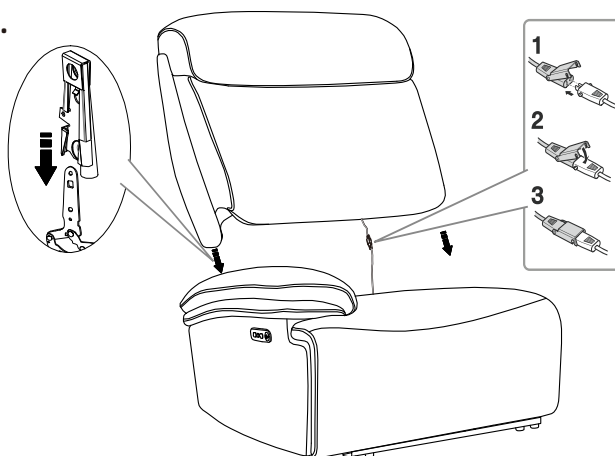


Step 3

Install the LAF Wing(C) by sliding wings in a downward motion along the side of the seat back to connect the brackets.

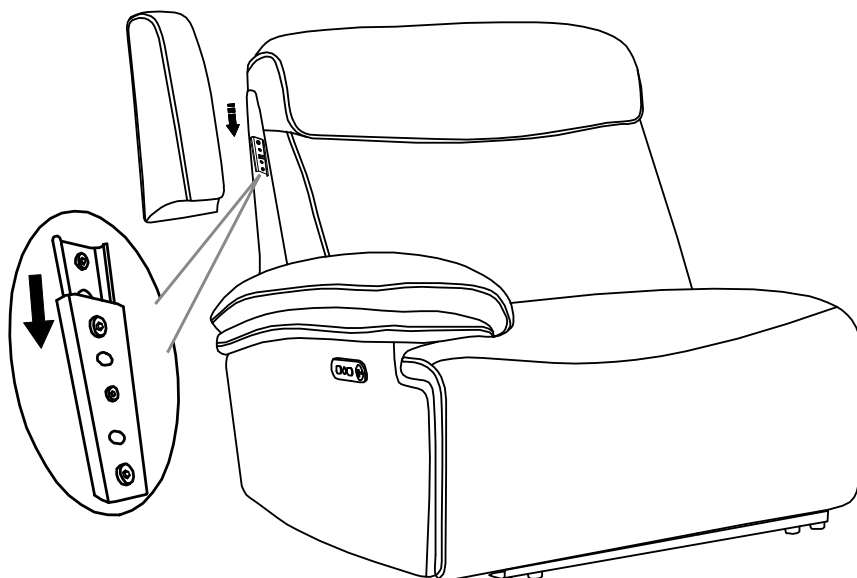

Assembly Instructions


Alpine Sectional

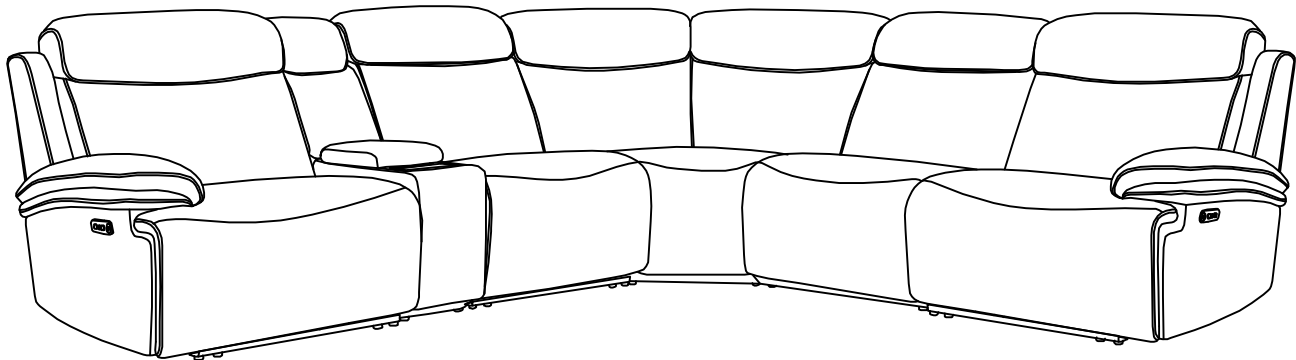

BEFORE ASSEMBLY

Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. Please take the time to read and follow the assembly instructions carefully.

Power Right Arm Facing Zero Gravity Recliner P2

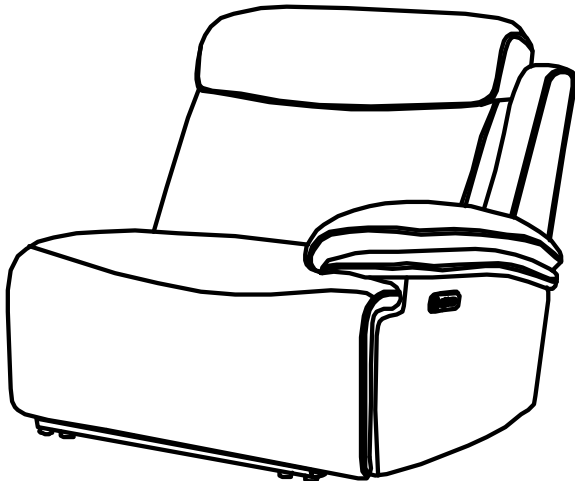


Part List

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:

No	Description	Sketch	Qty
A	Body		1 PC
B	Back Cushion		1 PC
C	RAF Wing		1 PC
D	Plug Transformer		1 PC
E	Power Cord		1 PC

Step 1


1. Take out the RAF wing (C) from the bottom of the armrest;
2. Take out the power cord and the transformer from the plastic bag backside of the seat.

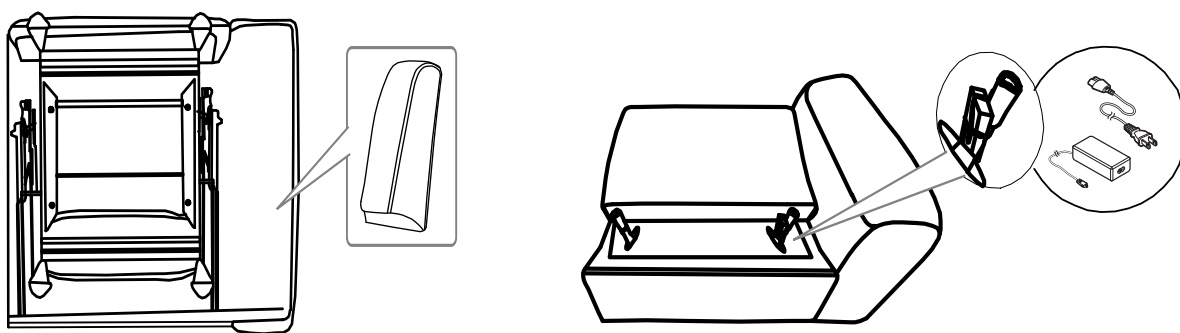

Step 2


1. Install the Back cushion(B) into the Body (A) by positioning the female metal receiver brackets over the male metal posts. Ensure that the female metal receives brackets on each side line up with the seat metal posts. Push the backrest down until each side is locked into place and an audible "click" is heard;

2. Connect the wires as shown

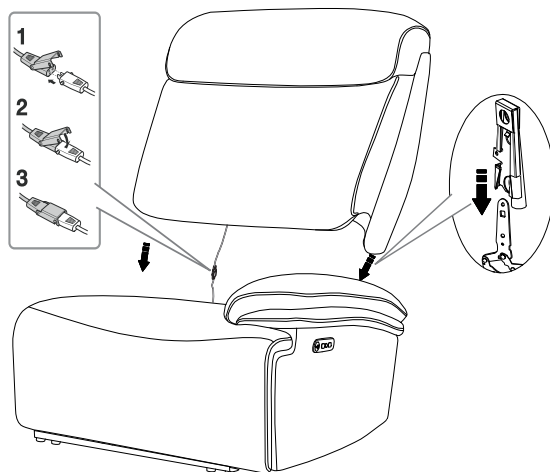


Step 3

Install the RAF Wing(C) by sliding wings in a downward motion along the side of the seatback to connect the brackets.

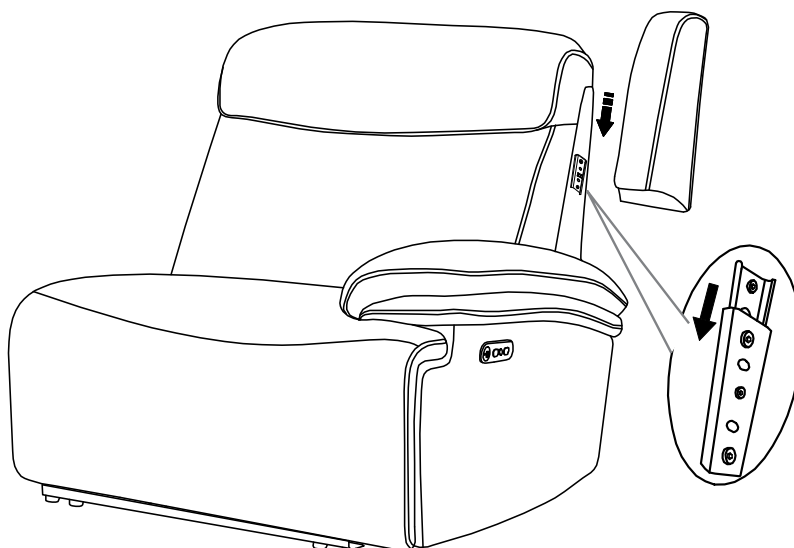

Assembly Instructions


Alpine Sectional

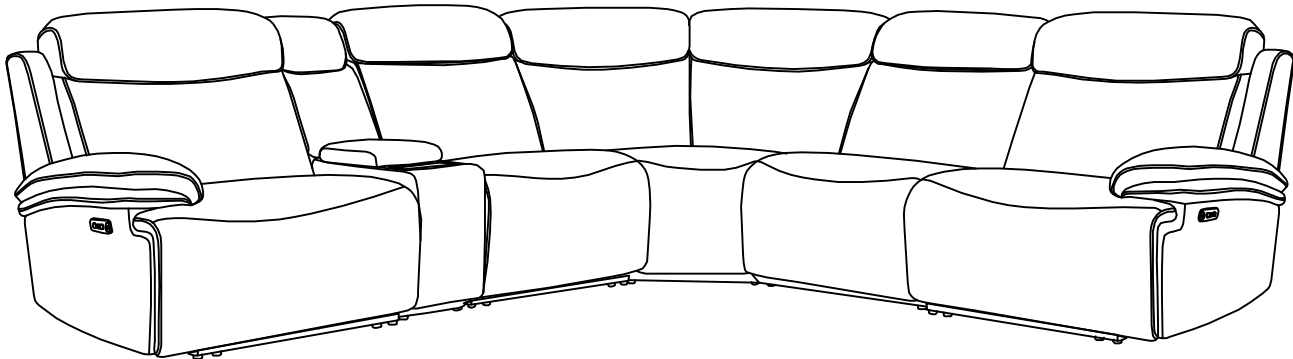

BEFORE ASSEMBLY



Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. Please take the time to read and follow the assembly instructions carefully.

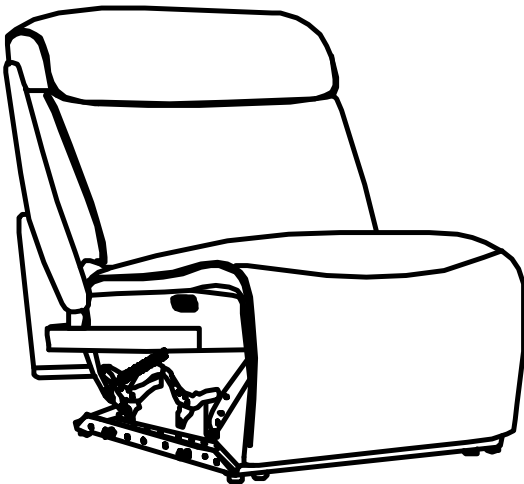Power Armless Zero Gravity Recliner P2




Part List

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:


No	Description	Sketch	Qty
A	Body		1 PC
B	Back Cushion		1 PC

Step 1

Install the Back cushion(B) into the Body (A) by positioning the female metal receiver brackets over the metal posts. Ensure that the female metal receives brackets on each side line up with the seat metal posts. Push the backrest down until each side is locked into place and an audible "click" is heard.

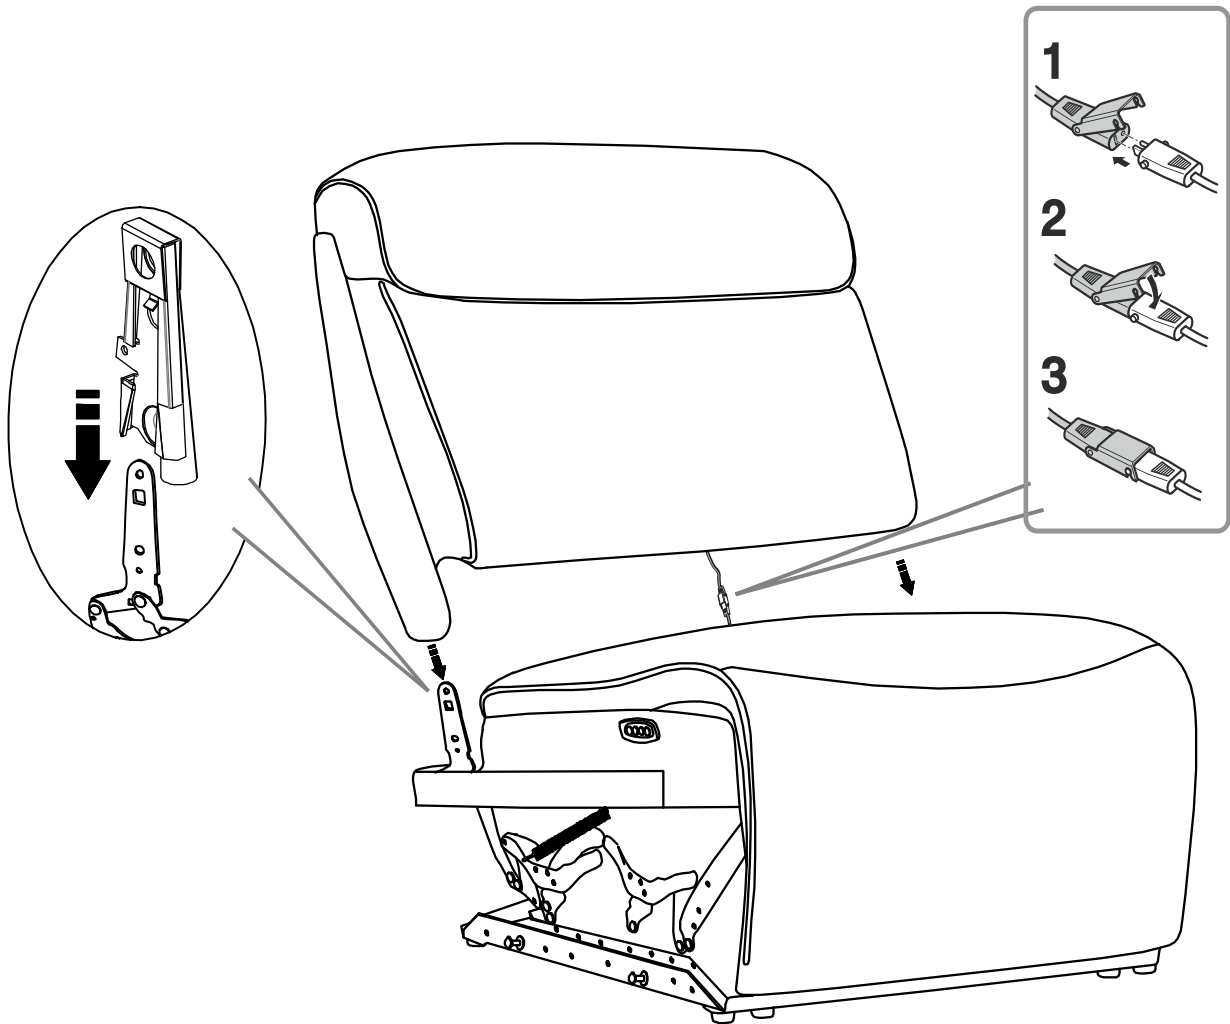


Assembly Instructions Alpine Sectional

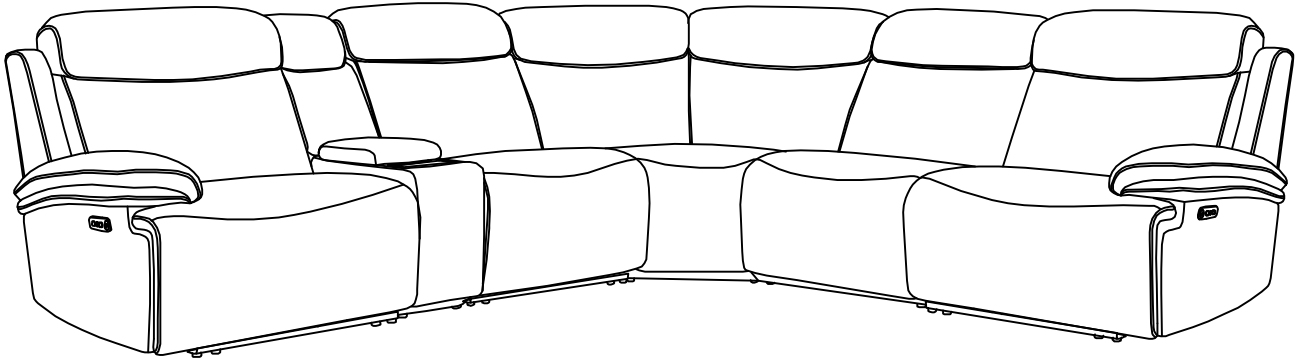

BEFORE ASSEMBLY



Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. Please take the time to read and follow the assembly instructions carefully.

Armless Chair with Drop Down Table

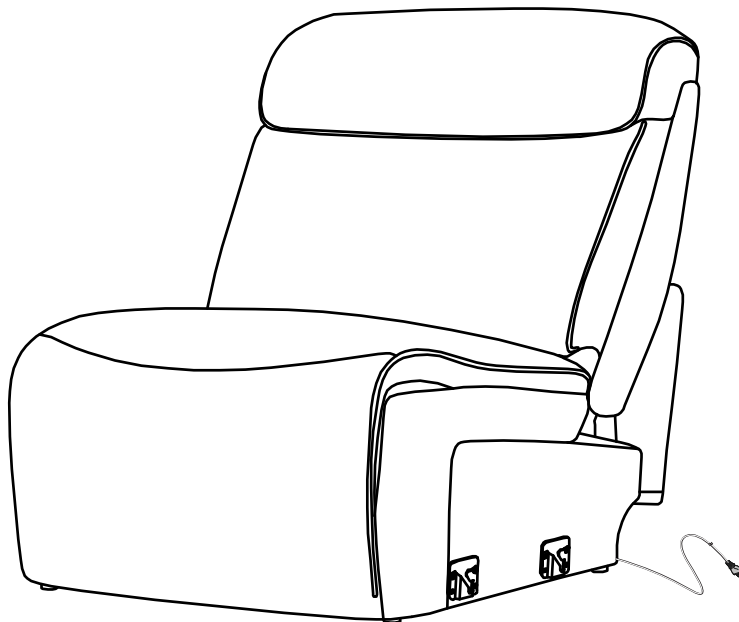


Part List

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:


No	Description	Sketch	Qty
A	Body		1 PC
B	Back Cushion		1 PC

Step 1

Install the Back cushion(B) into the Body (A) by positioning the female metal receiver brackets over the male metal posts. Ensure that the female metal receives brackets on each side line up with the seat metal posts. Push the backrest down until each side is locked into place and an audible "click" is heard.

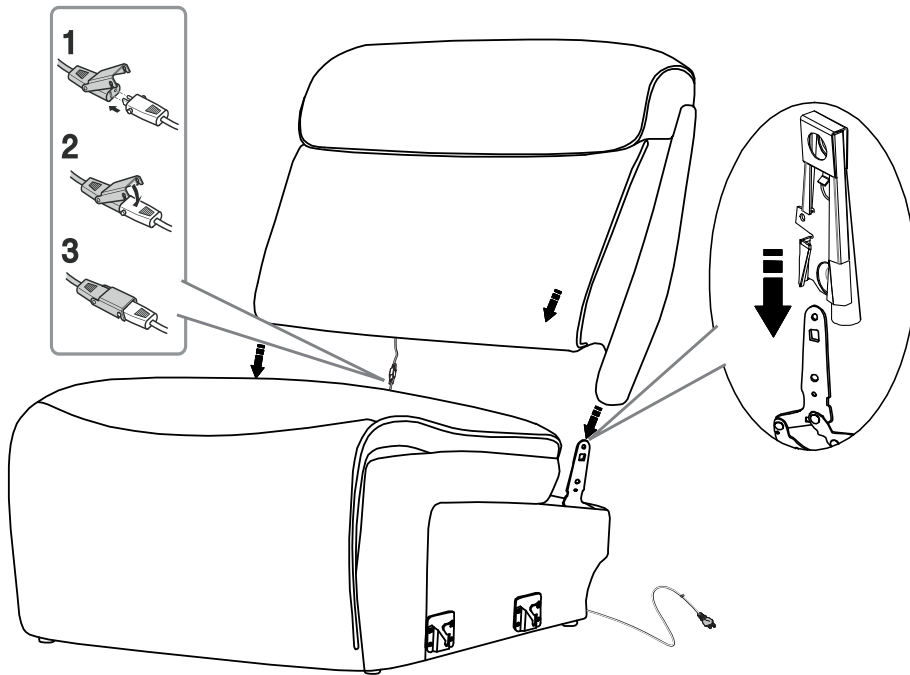


Assembly Instructions Alpine Sectional

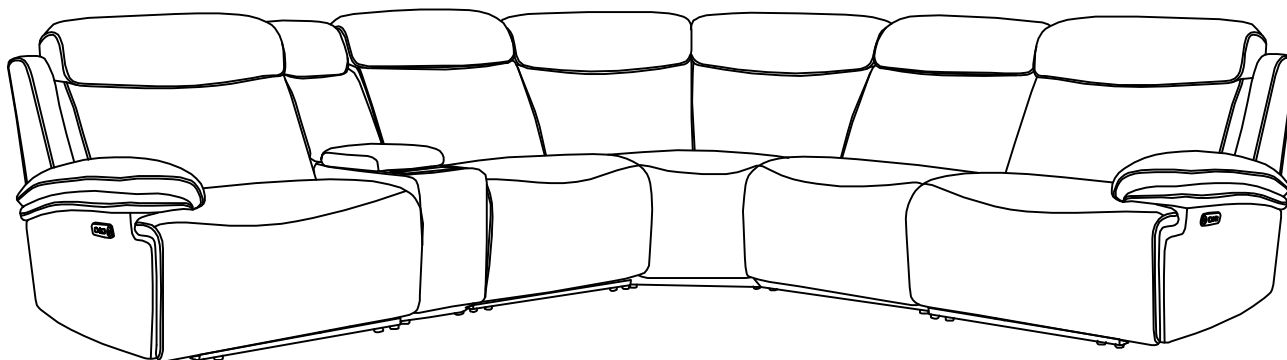

BEFORE ASSEMBLY




Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. Please take the time to read and follow the assembly instructions carefully.

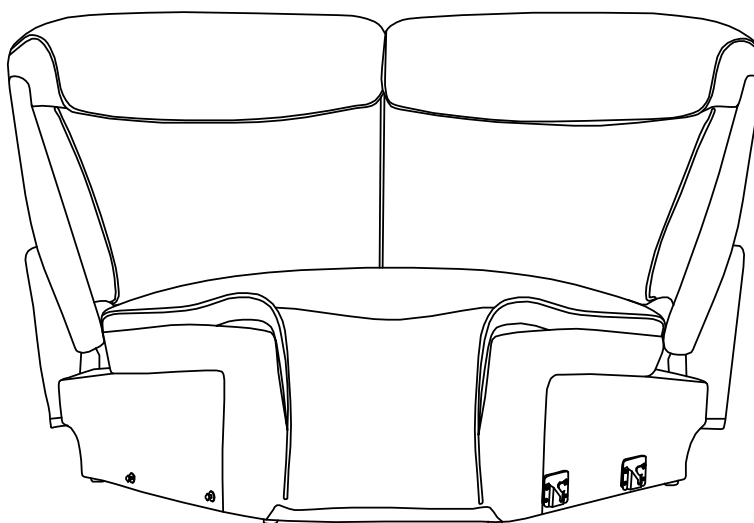Corner Wedge




Part List

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:

No	Description	Sketch	Qty
A	Body		1 PC
B	LAF Back Cushion		1 PC
C	RAF Back Cushion		1 PC


Step 1

1. Install the Backrest(B/C) into the Body(A) by positioning the female metal receiver brackets over the male metal posts. Ensure that female metal receiver brackets on each side of the backrest are line up with the seat metal posts. Push down the female brackets over male posts simultaneously until each side is locked into place and an audible “ click ” is heard .

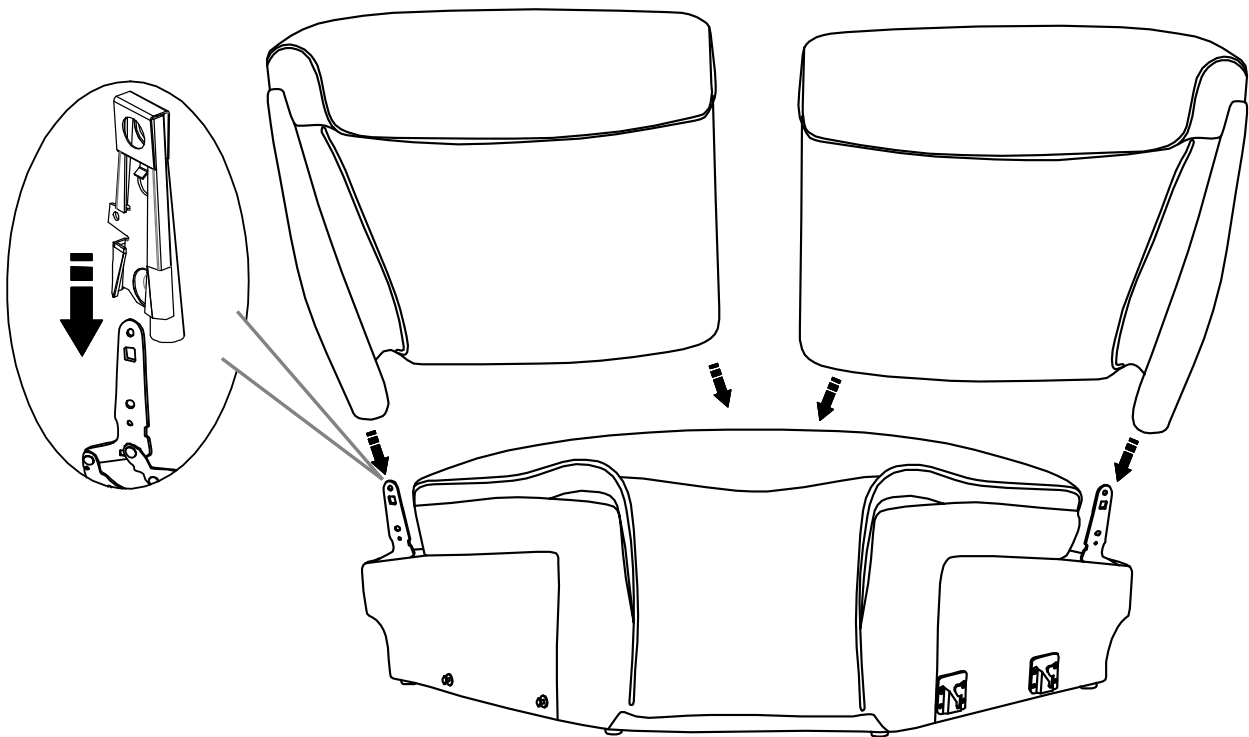

Assembly Instructions


Alpine Sectional

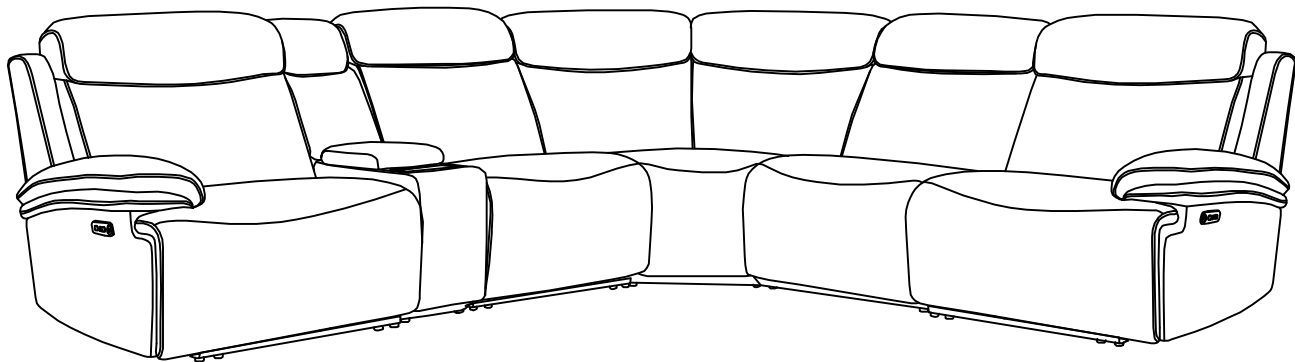

BEFORE ASSEMBLY



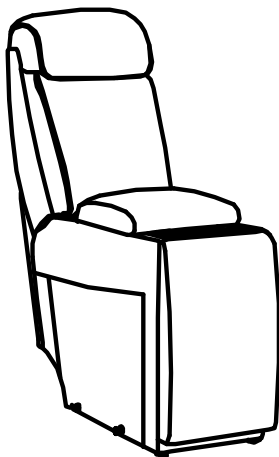


Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. Please take the time to read and follow the assembly instructions carefully.

Tilt Console with 3-Way Wireless Charger





Part List

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:


No	Description	Sketch	Qty
A	Body		1 PC
B	Back Cushion		1 PC
C	Plum wrench		2 PC
D	Washer		2 PC
E	Y Connection cable		1 PC

Step 1


1. Unzip the back of the Body(A), take out the Back cushion(B);
2. Unscrew the plum wrenches and take out the washers in an anticlockwise direction; and then install the Back Cushion by inserting plum wrenches into predrilled holes on Console Body. Screw up from bottom to attach the console back.

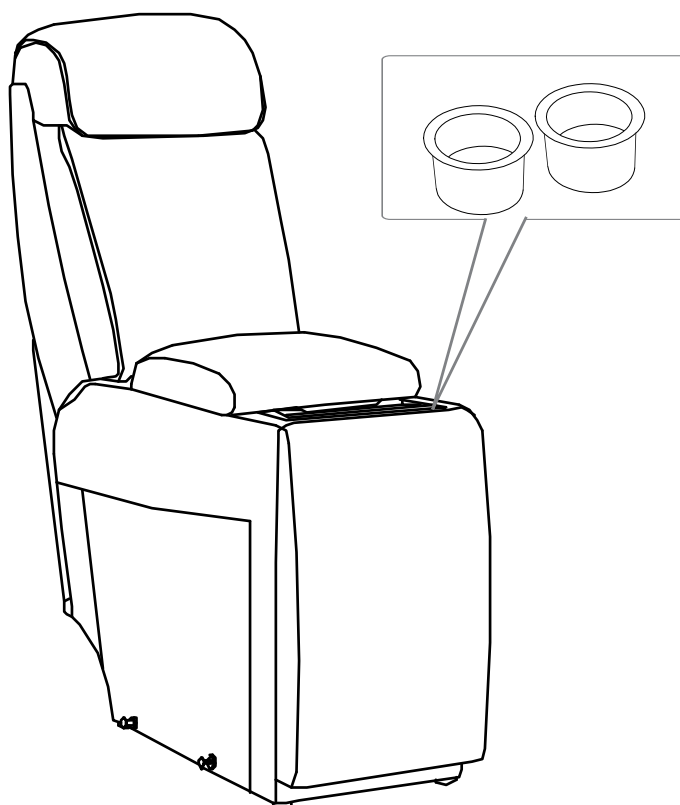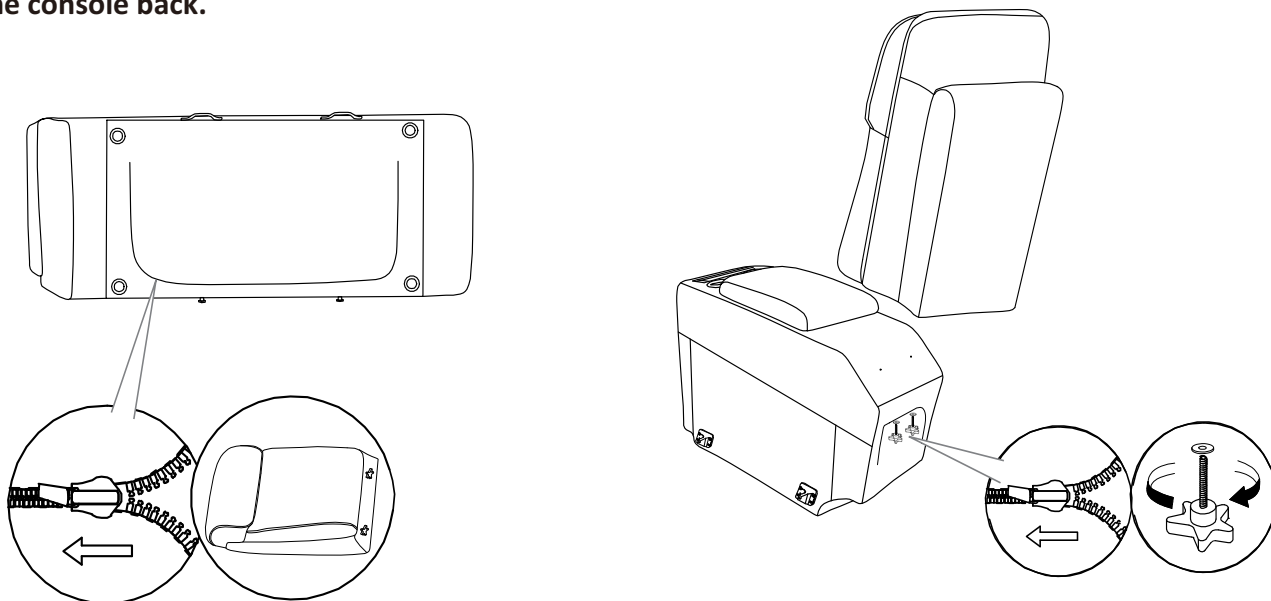


1. Begin sectional connection by placing the pieces in the desired location in the room. Connect the pieces together using the brackets on the sides of each piece.

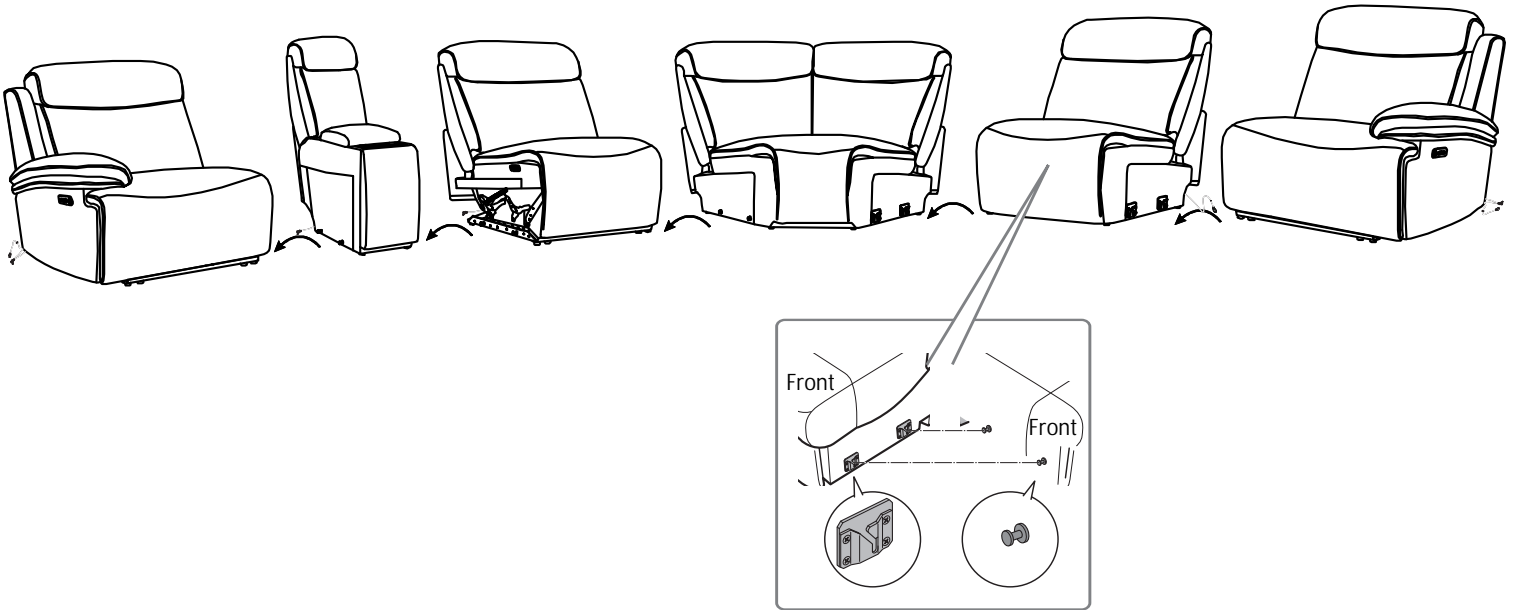


Connection#1:

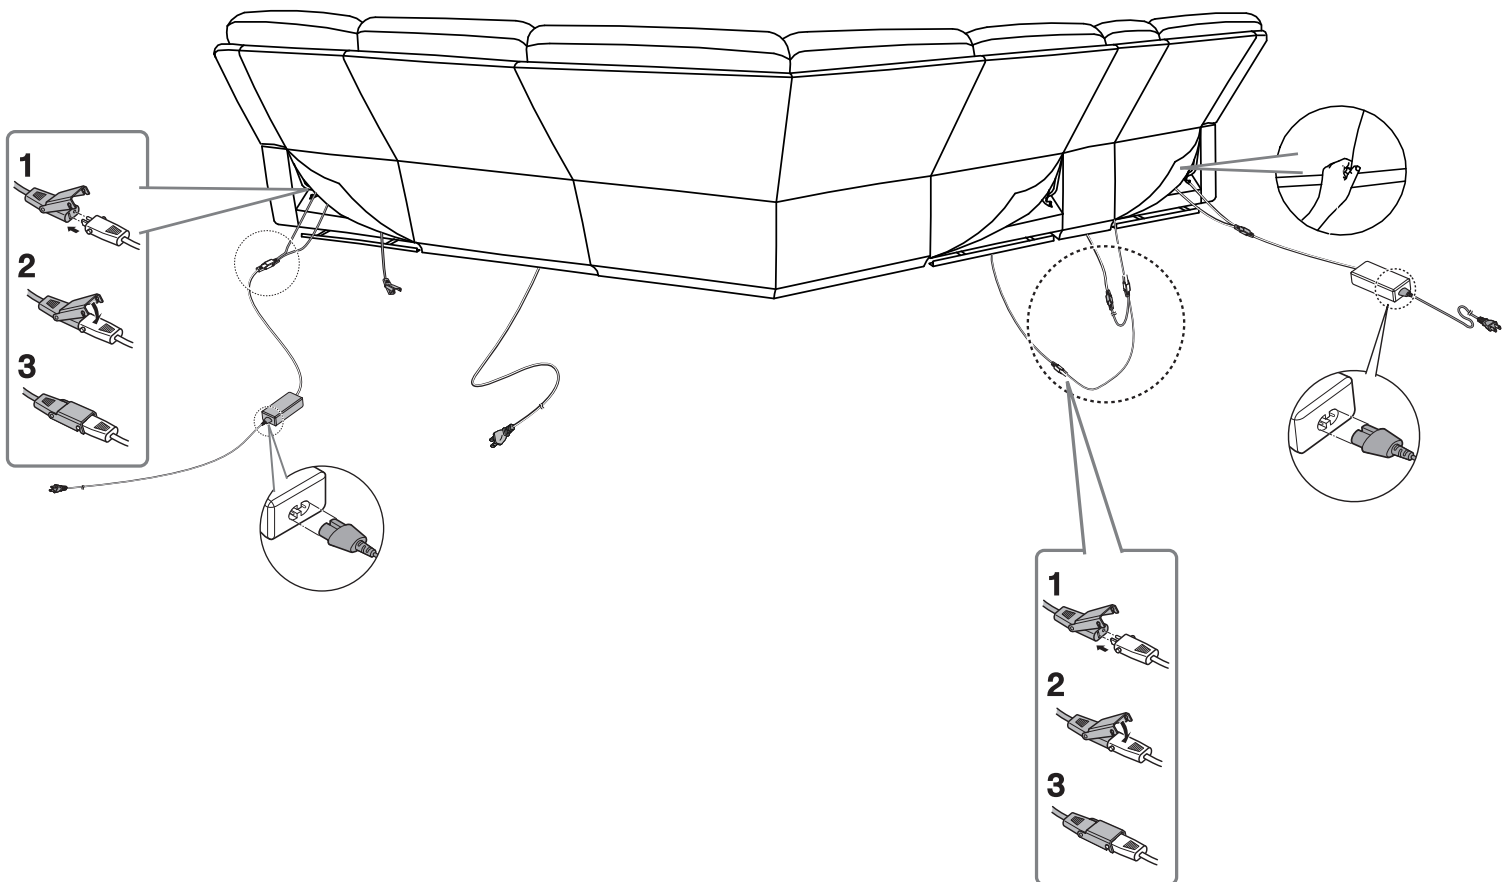


Connection#2:

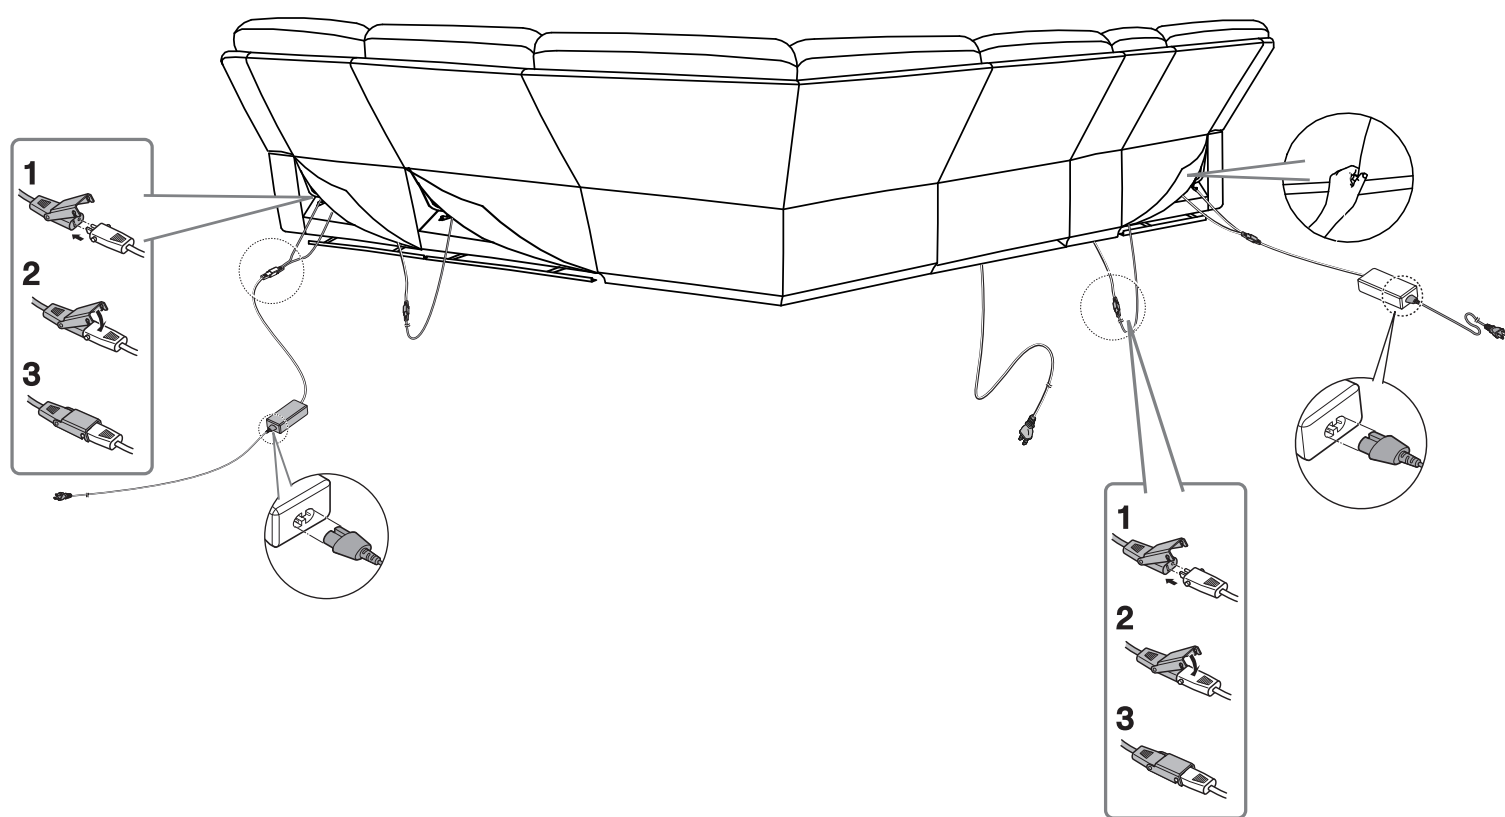

Connection#3:

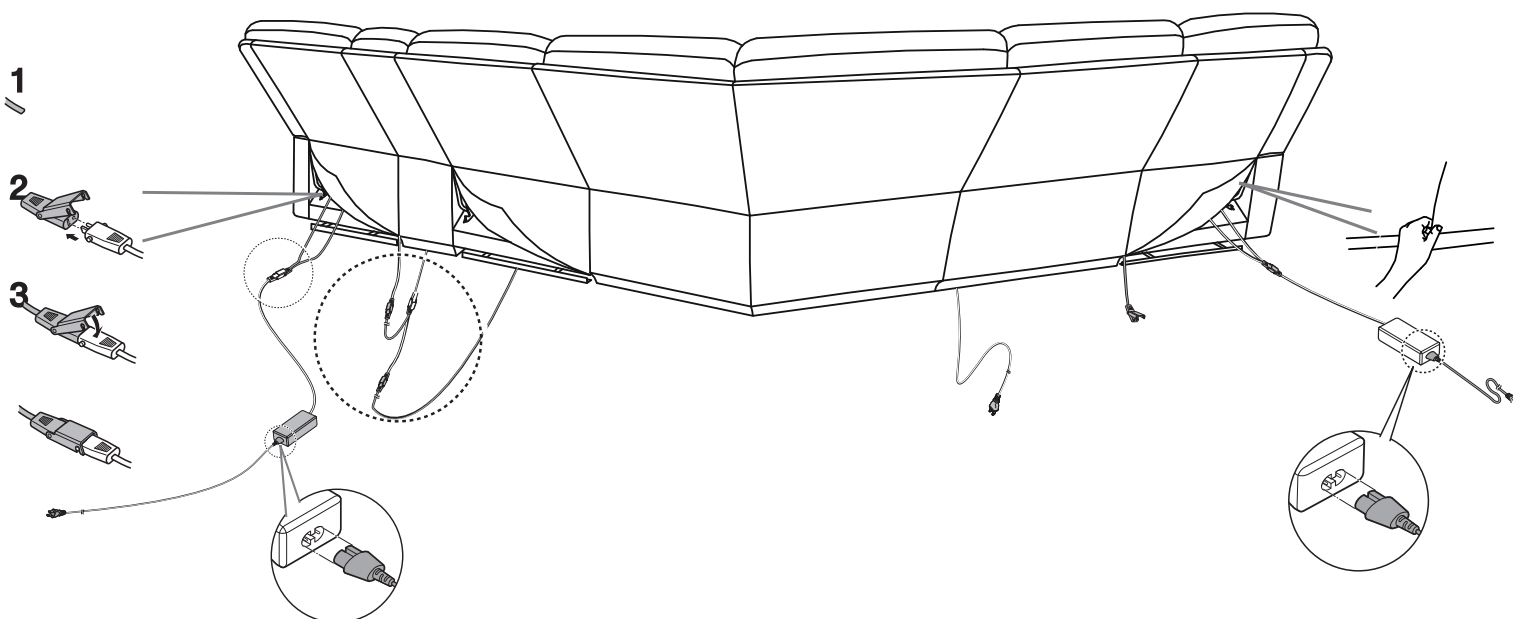



Connection#4:

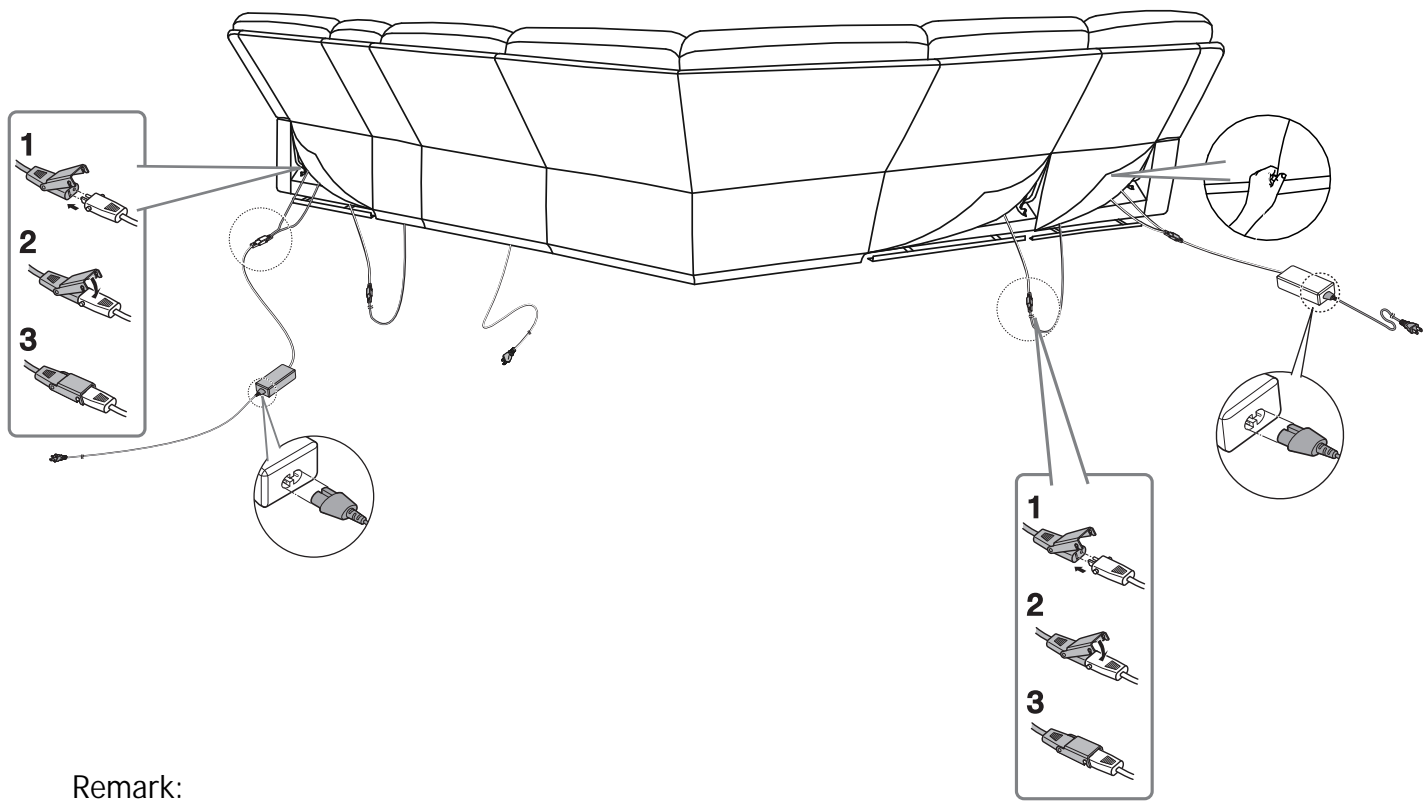

Remark:

- 1. Drop-down-table seat has a separate socket to the wall;
- 2. Two cables for LAF or RAF seat, one is for Adapter, one is for connection(no connection no use);
- 3. Y connection cable used when LAF or RAF seat connect to console and Power Armless chair;

3. Once the sectional wires have been connected together, connect your wall power cord to the DC Adapter block, then to the wall outlet, and enjoy!

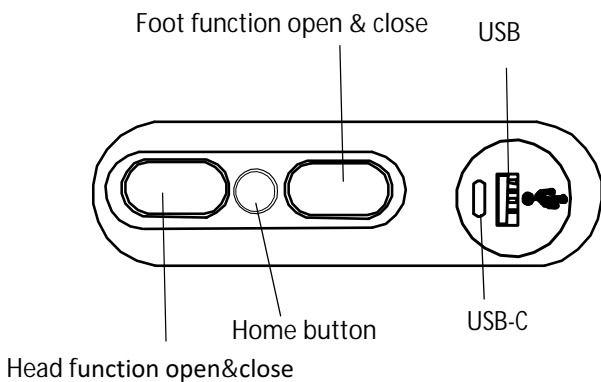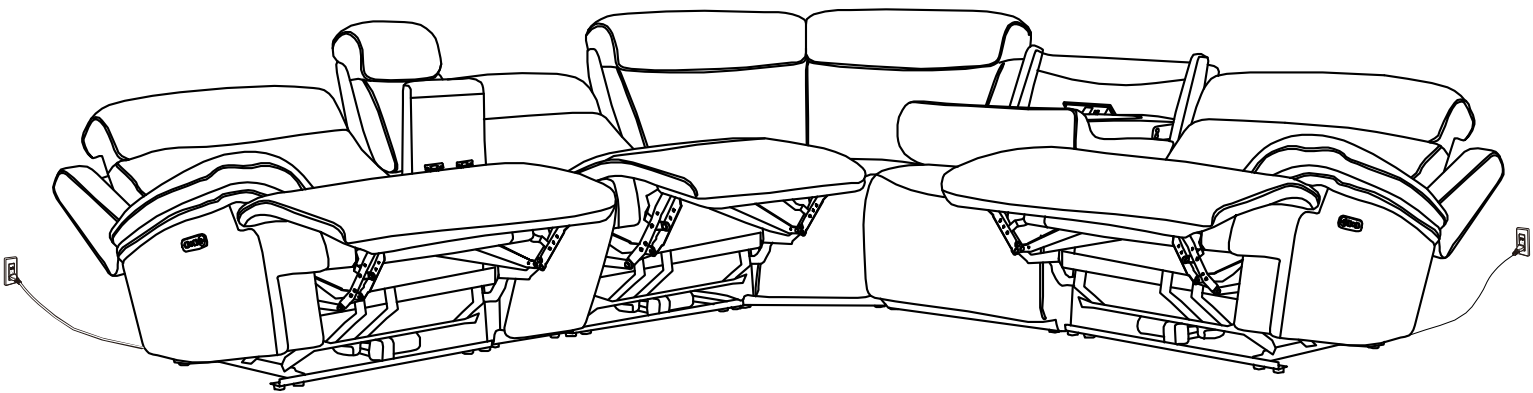

3-way Wireless Charger Instruction

