




## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

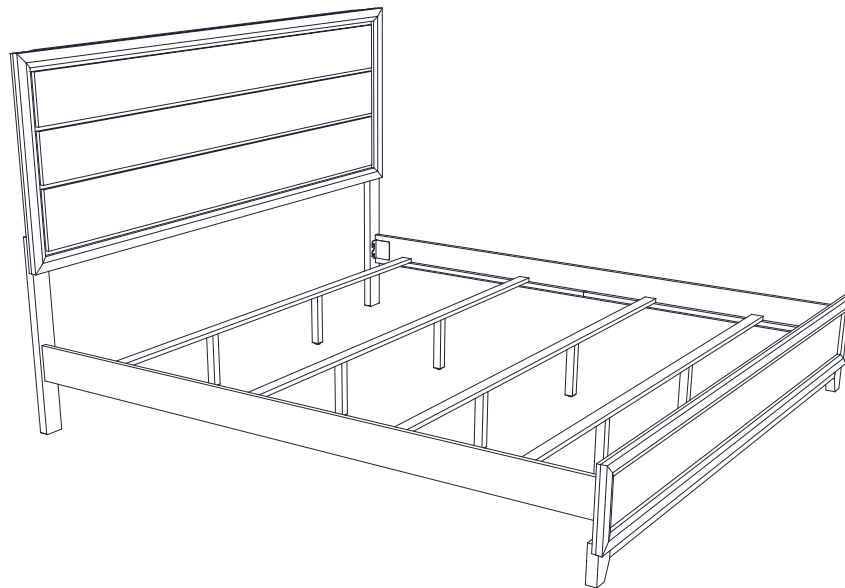

*Fine Furniture for every stage of life*

## **215911KE (B1&B2)** **Eastern King Bed**

# ITEM: 215911KE (B1&B2)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

20 MINUTES

## PARTS IDENTIFICATION

### B1 ( BOX 1)

A HEADBOARD  
PANEL

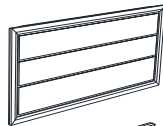

1PC

B FOOTBOARD




1PC

C RIGHT  
HEADBOARD LEG




1PC

D LEFT  
HEADBOARD  
LEG




1PC

E BED SLAT



4PCS

F BED SLAT  
SUPPORT WITH  
LEVELER



8PCS


### B2 ( BOX 2)

G BED RAIL




2PCS

HB 215911KE(B1)  
FROM BOX 1  
HEADBOARD  
COMPLETE

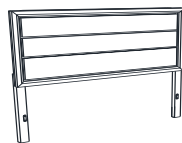

1PC

B 215911KE(B1)  
FROM BOX 1  
FOOTBOARD



1PC

## HARDWARE IDENTIFICATION

### Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 215911KE (B1)

1 BOLT  
(M6 x 30mm - BLK)



6PCS

2 LOCK WASHER  
(1/4" - BLK)



6PCS

3 FLAT WASHER  
(1/4"ID x 13mm - BLK)



6PCS

4 SMALL ALLEN  
WRENCH  
(M4 x 60mm - BLK)



1PC

5 BIG ALLEN  
WRENCH  
(M5 x 65mm - BLK)



1PC

6 FLAT HEAD  
SCREW  
(M4 x 32mm - RBW)



8PCS


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM: 215911KE (B1&B2)

## ASSEMBLY INSTRUCTIONS


### STEP 1

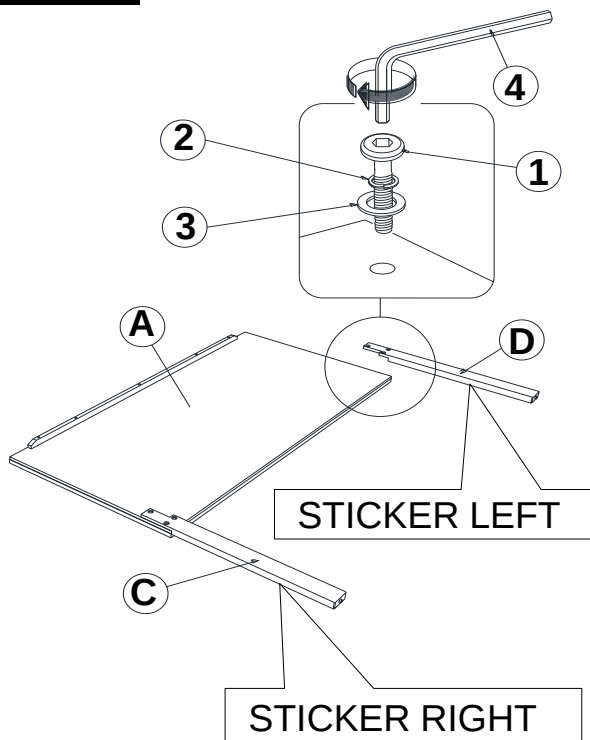


**\*\*BACK VIEW\*\***

**Note :** Please take note of the marking sticker (L & R) on the headboard legs.

### STEP 2

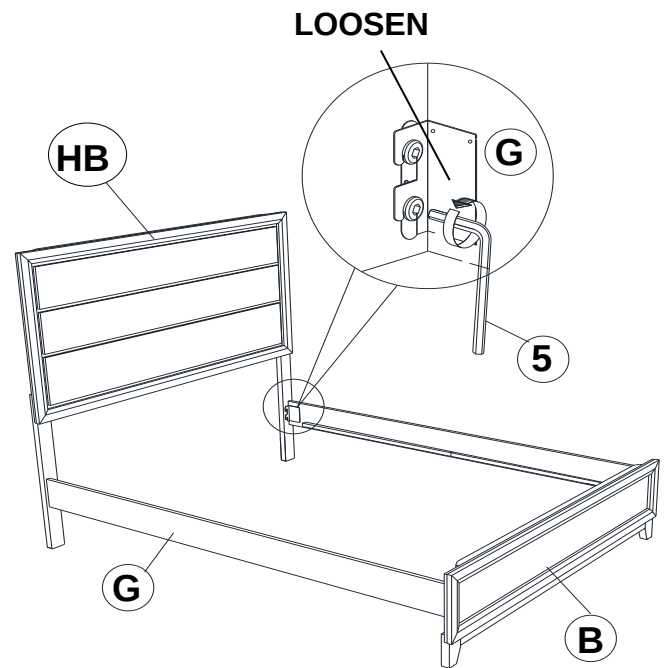


### STEP 3

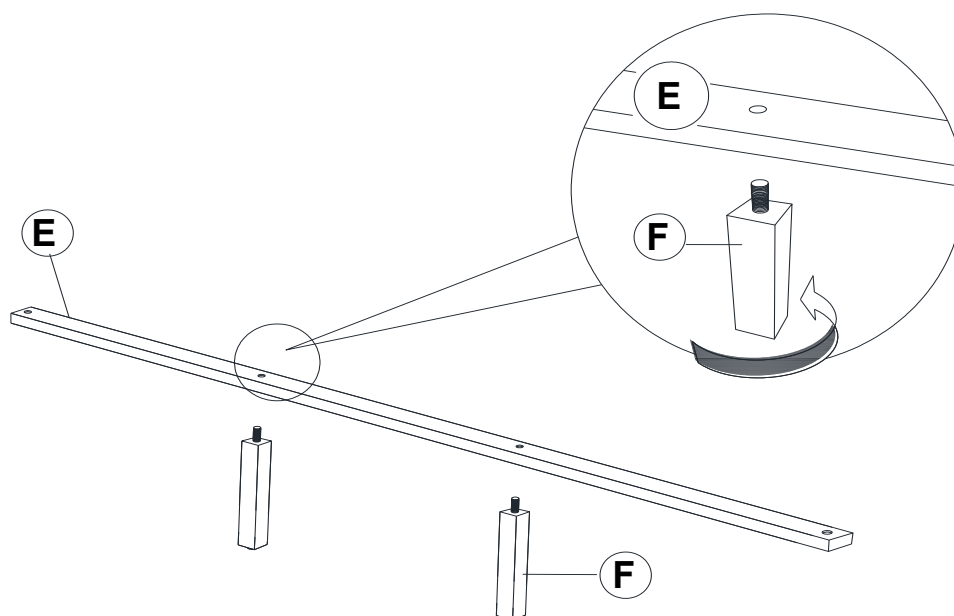

# ITEM: 215911KE (B1&B2)


## ASSEMBLY INSTRUCTIONS

### STEP 4

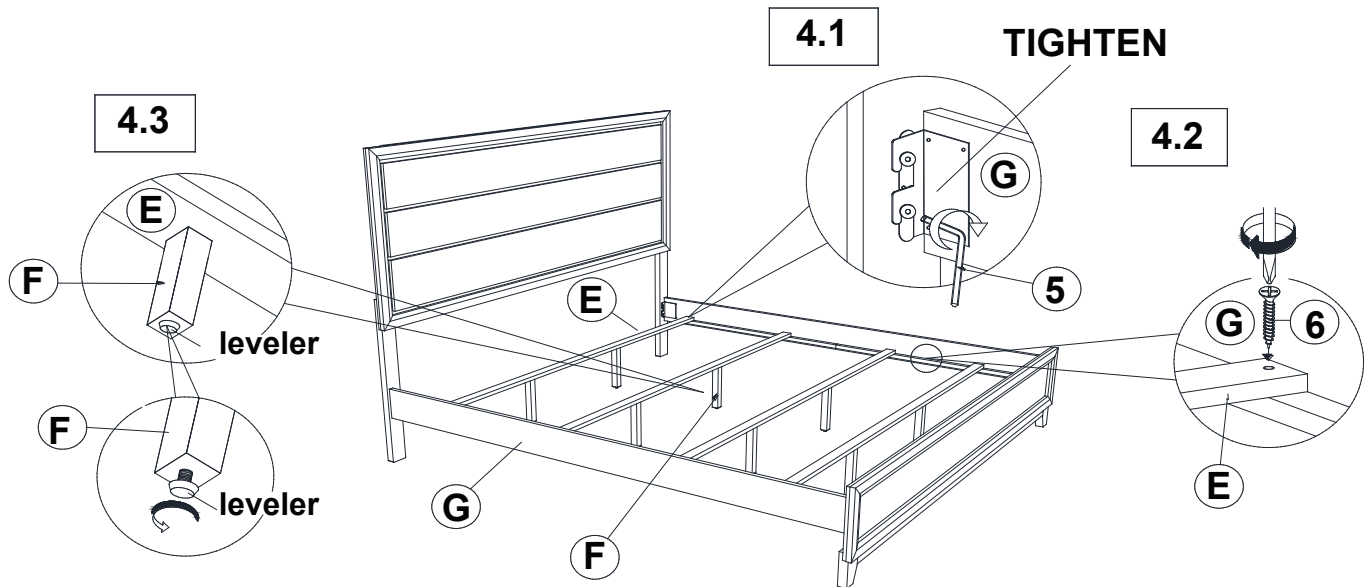


#### NOTE:

1. Push the side rail inward until the slats are flush and resting on the side rail support then fasten each slat to the side rail support using the provided screw.
2. The side rail warpage is a temporary condition, it will straighten out once the bed is fully assembled.

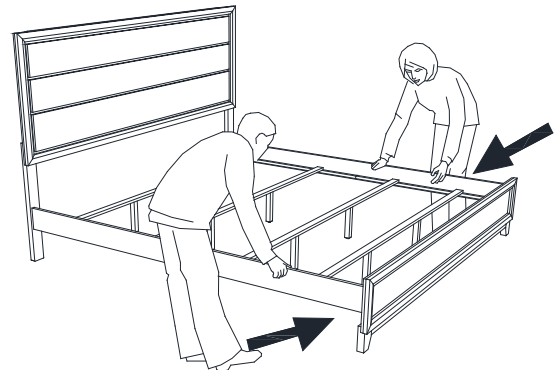


### STEP 5 **COMPLETE**

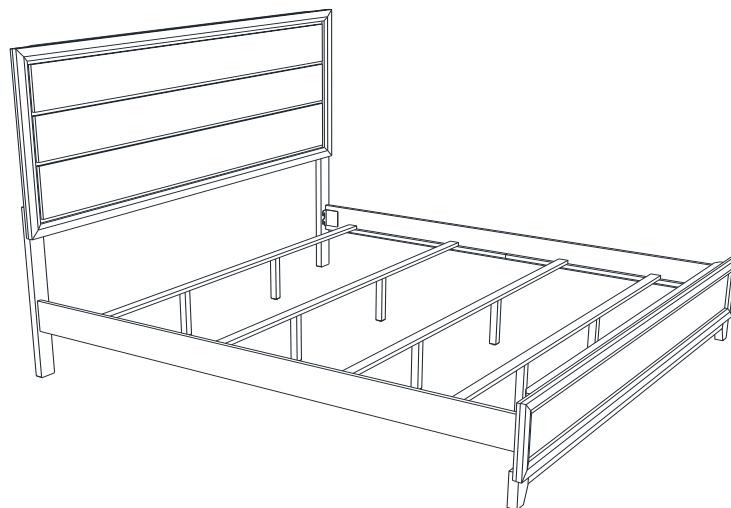

ITEM: **215911KE (B1&B2)**



Inner Size : 76.75"W X 81.00"D

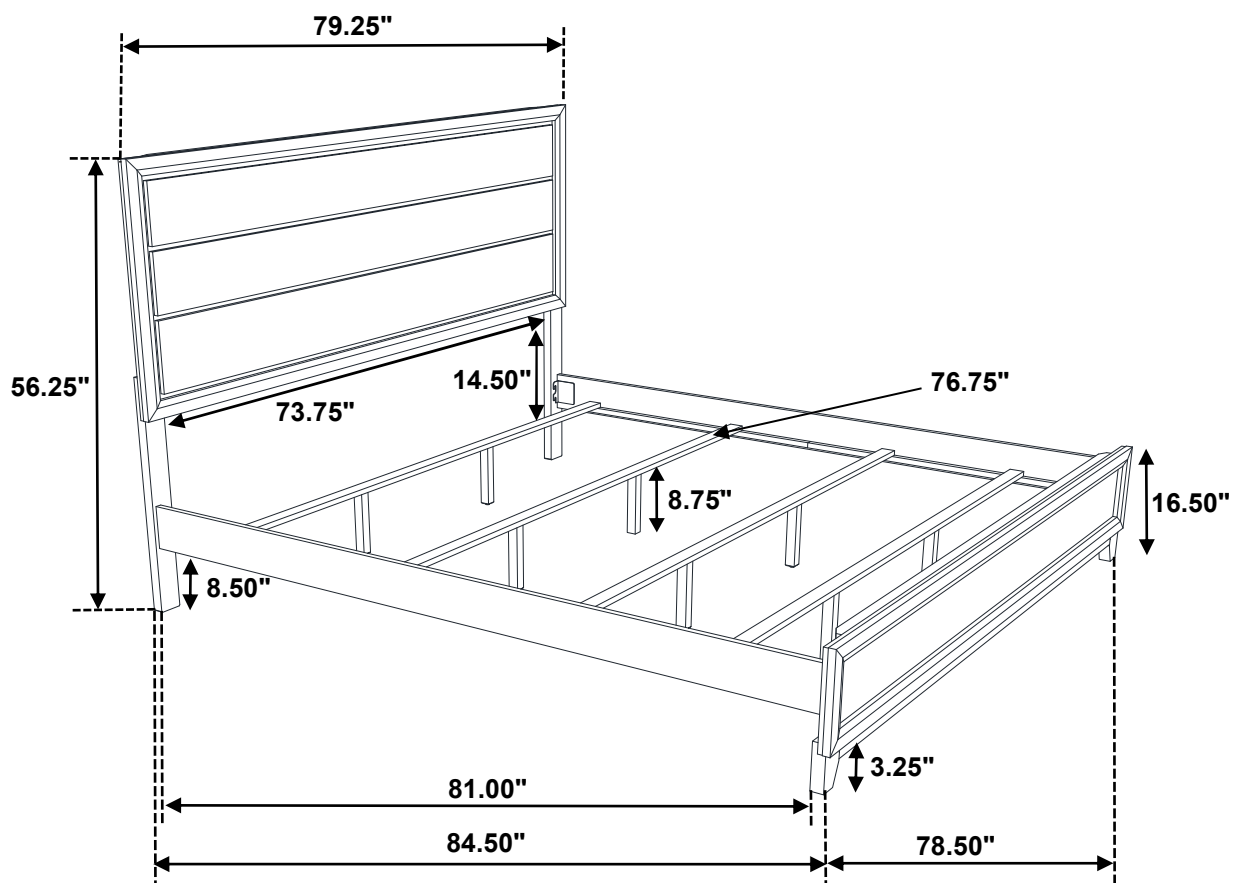

Note : Dimension tolerance  $\pm 5\%$

*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**215912**  
**Nightstand**

ITEM: **215912**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

## PARTS IDENTIFICATION

**A**      **NIGHTSTAND**

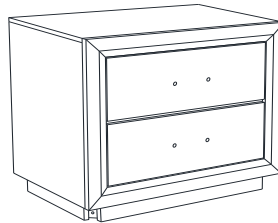

**1PC**

**B**      **LEG**



**4PCS**

## HARDWARE IDENTIFICATION

**1**      **BOLT**  
(M6 x 50mm - BLK)



**4PCS**

**2**      **LOCK WASHER**  
(1/4" - BLK)



**4PCS**

**3**      **FLAT WASHER**  
(1/4"ID x 19mm - BLK)



**4PCS**

**4**      **ALLEN WRENCH**  
(M4 x 60mm - BLK)



**1PC**


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **215912**

## ASSEMBLY INSTRUCTIONS


### STEP 1

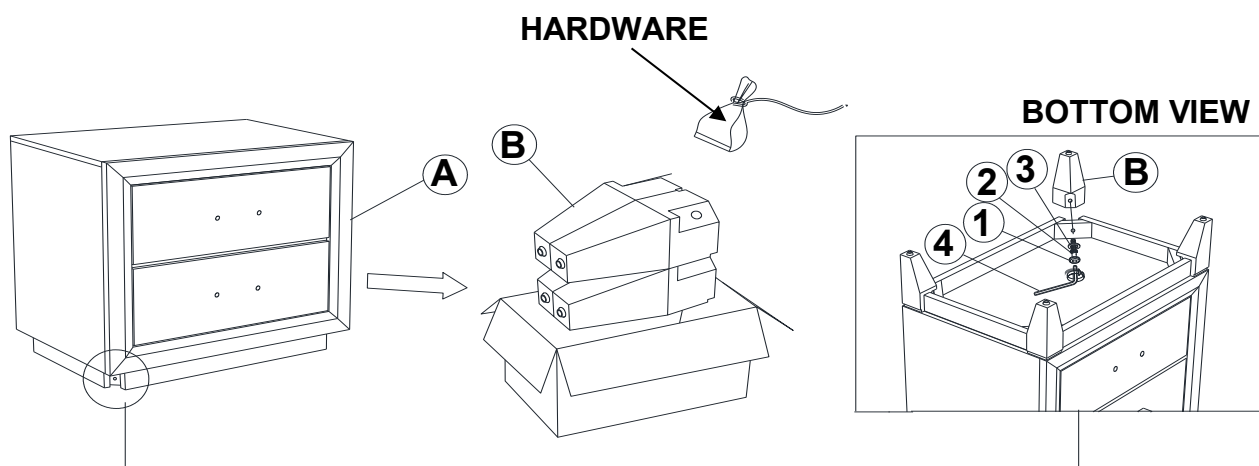

### STEP 2

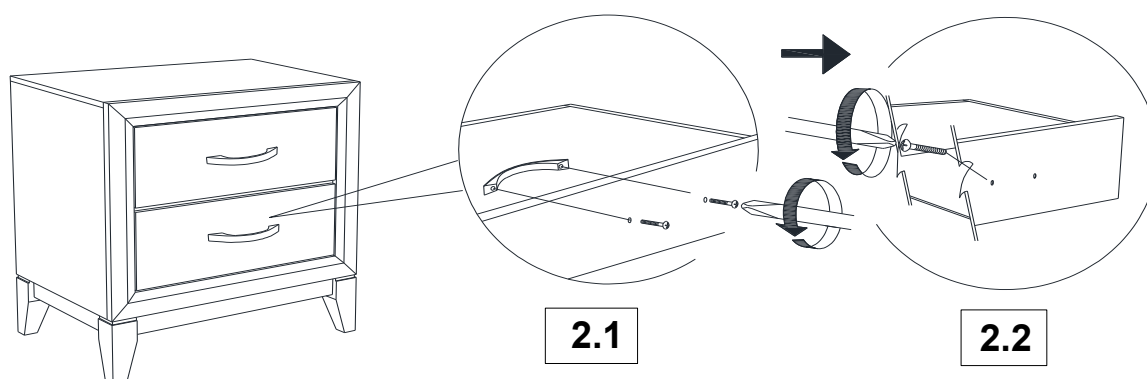


### STEP 3 COMPLETE

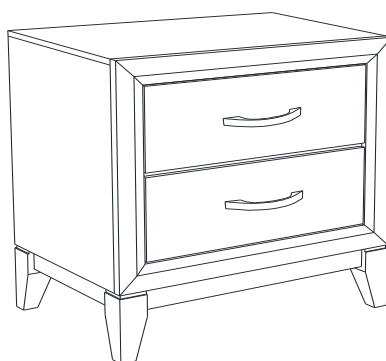

ITEM: **215912**



**Inner Size of Drawer : 17.00"W x 12.50"D x 4.00"H x 0.25"T**

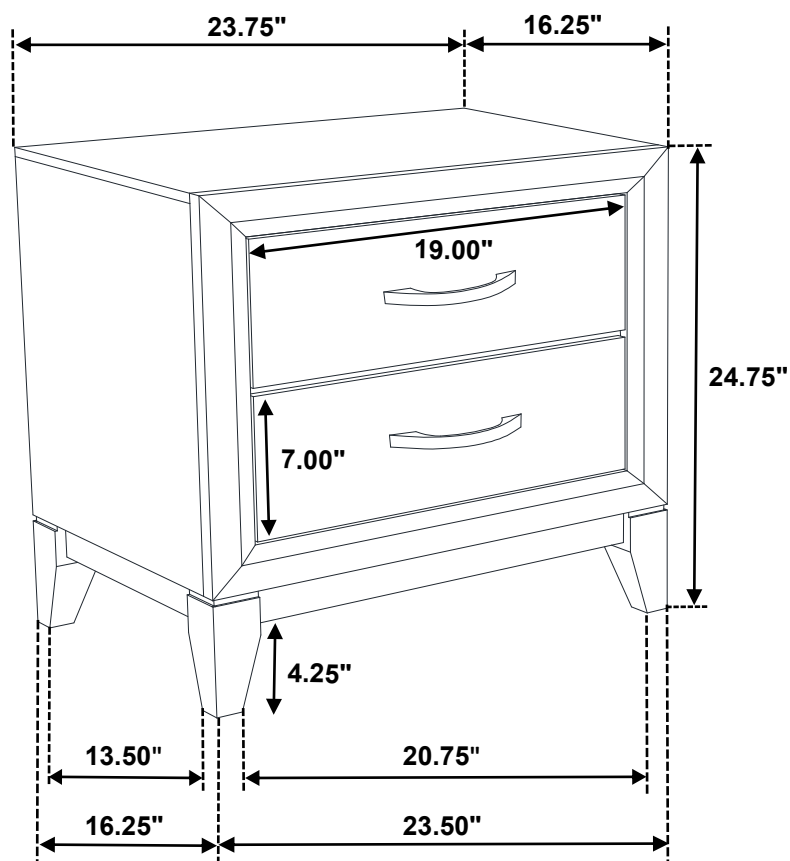

**Note : Dimension tolerance  $\pm 5\%$**

*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**215913**  
**Dresser**

ITEM: **215913**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

## PARTS IDENTIFICATION

A DRESSER

1PC

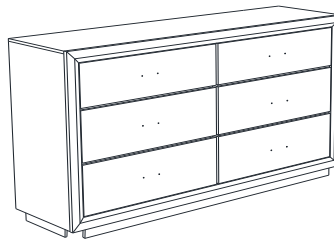

B LEG

4PCS



C CENTER SUPPORT LEG  
WITH LEVELER


1PC



## HARDWARE IDENTIFICATION

1 BOLT  
(M6 x 50mm - BLK)

4PCS



2 LOCK WASHER  
(1/4" - BLK)

4PCS




3 FLAT WASHER  
(1/4"ID x 19mm - BLK)

4PCS



4 ALLEN WRENCH  
(M4 x 60mm - BLK)

1PC




### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **215913**

## ASSEMBLY INSTRUCTIONS

### STEP 1

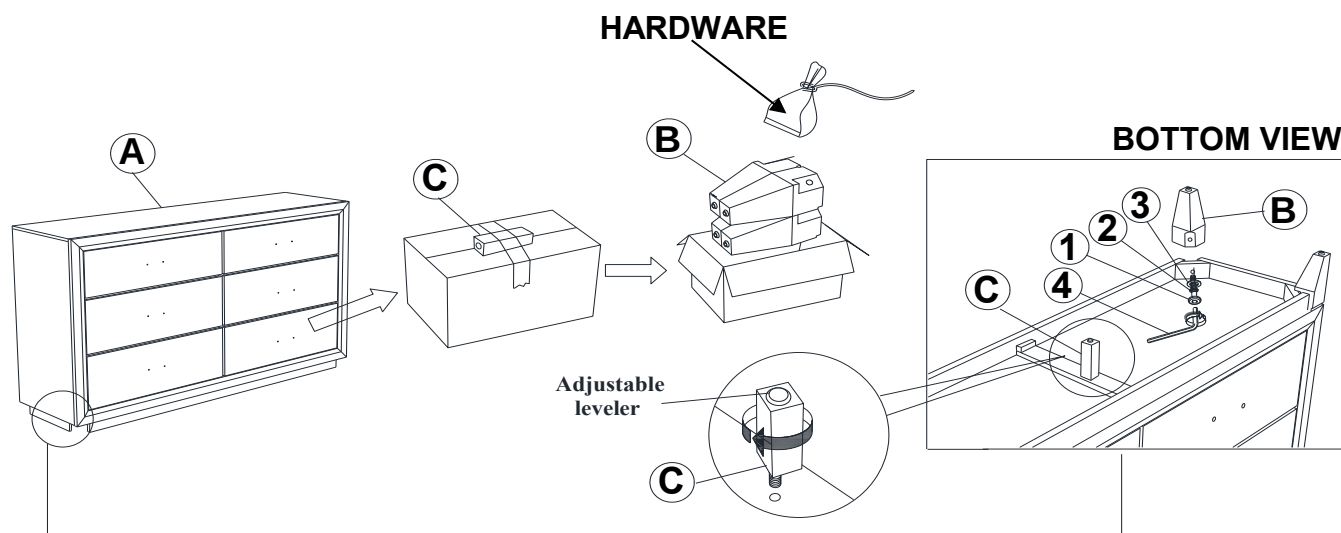

### STEP 2

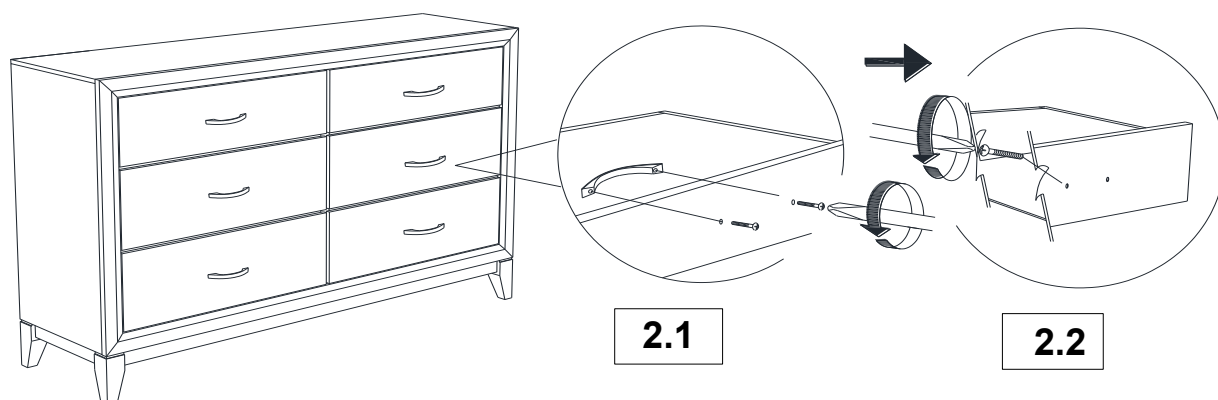


### STEP 3 **COMPLETE**



ITEM: **215913**



**Inner Size of Drawer : 23.25"W x 12.50"D x 5.00"H x 0.25"H**

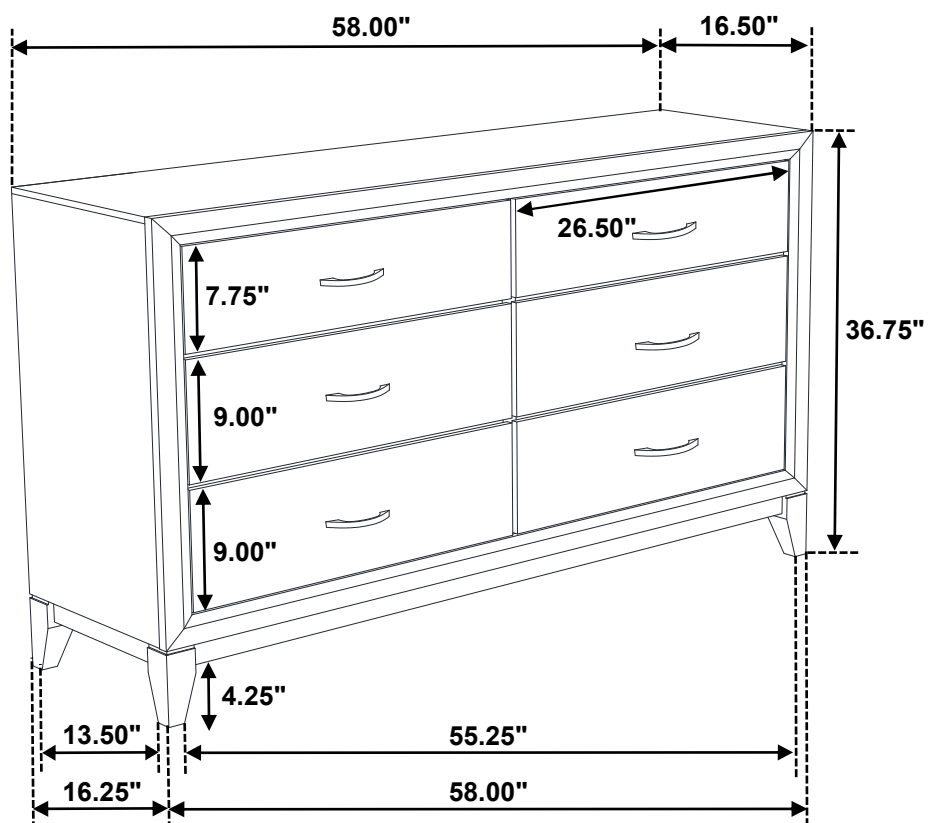

**Note : Dimension tolerance  $\pm 5\%$**

*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**215914**  
**Mirror**

ITEM: **215914**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES


## PARTS IDENTIFICATION

**A MIRROR**

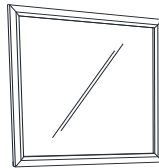


**1PC**

**B DRESSER FROM  
BOX ITEM #215913**

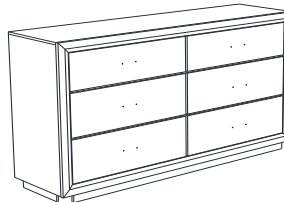

**1PC**

**C MIRROR SUPPORT  
(PACK WITH MIRROR)**



**2PCS**

## HARDWARE IDENTIFICATION

**1 FLAT HEAD SCREW  
(M4 x 32mm - RBW)**



**12PCS**


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **215914**

## ASSEMBLY INSTRUCTIONS

## STEP 1

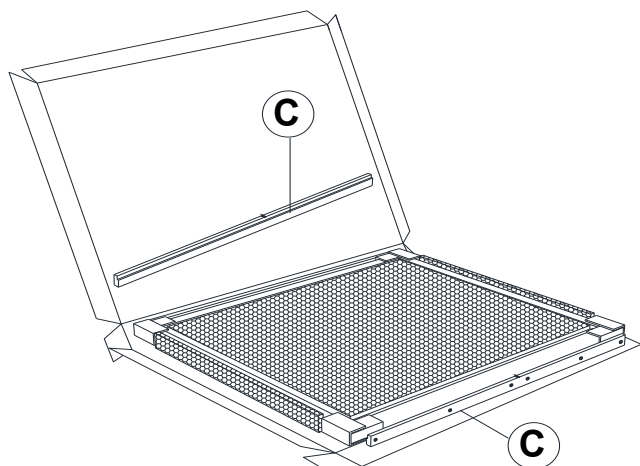


## STEP 2

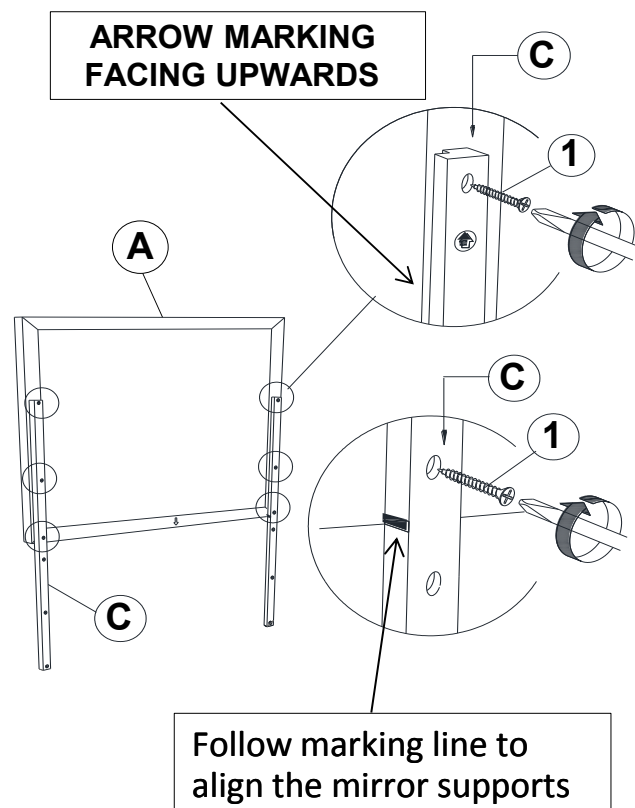

**\*\*BACK VIEW\*\***


### STEP 3

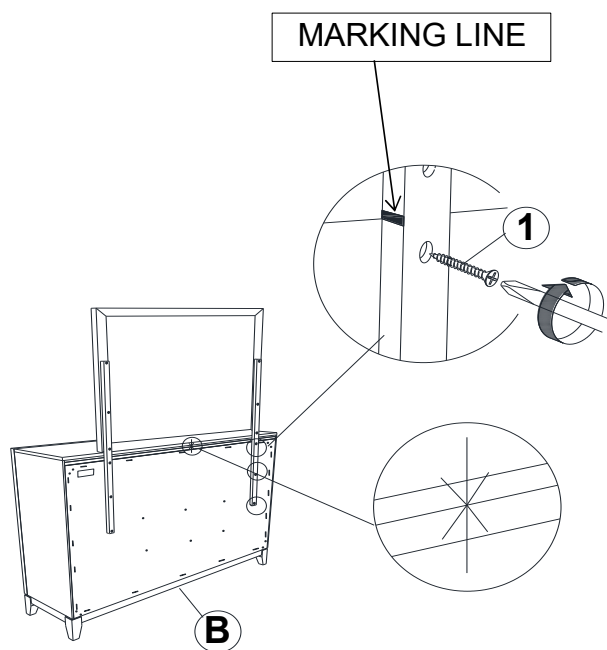


REMARK:  
ARROW MARKING MUST BE ALIGNED

## STEP 4

## COMPLETE

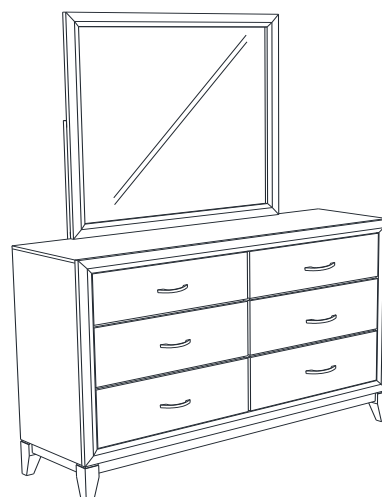

ITEM: **215914**

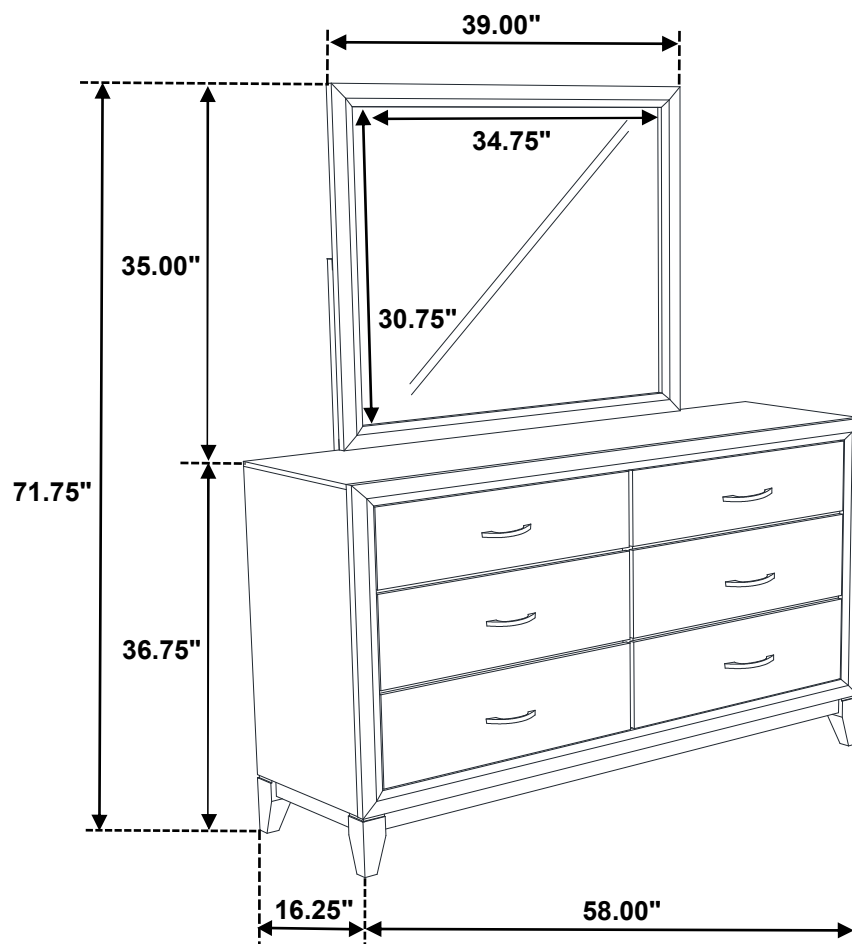

**Note : Dimension tolerance  $\pm 5\%$**