

# WINNERS ONLY®







## ASSEMBLY INSTRUCTIONS

PROD. NO : C1-CP452SG- -O





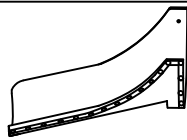

Thank you for purchasing this quality product . Be sure to check all packaging material carefully for small parts that may have come loose inside the carton during shipment .

"Hardware is attached underneath the seat bottom"

### Components List :

NO	DESCRIPTION	SKETCH	QTY
A	Back Rest		1pc
B	Cushion Seat		1pc
C	Front Legs		2pcs
D	Back Legs		2pcs
E	Velcro		1pc
F	Plastic Glide		4pcs

### Hardware List :

NO	DESCRIPTION	SIZE	SKETCH	QTY
1	Short Bolt	5/16" x38 mm		4pcs
2	Long Bolt	5/16" x57 mm		4pcs
3	Medium Bolt	5/16" x45 mm		4pcs
4	Spring Washer	5/16" x Ø12		12pcs
5	Flat Washer	5/16" x Ø19		12pcs
6	Allen Key	58x23x4 mm		1pc

#### Reminders

1. Use only the hardware supplied.
2. Once the chair is finished, level and tighten all the bolts.
3. Do not over-tighten bolts.
4. This item may require periodic tightening.

**NOTE :** Hardware Bag is located underneath the Wood Seat (B)

#### Step1:

- Attach the Front Legs (C) to Cushion Seat (B) by using Flat Washer (5) & Spring Washer (4) and Long Bolts (2) tighten with Allen key (6).
- Attach the Back Legs (D) to Cushion Seat (B) by using Flat Washer (5) & Spring Washer (4) and Medium Bolts (3) tighten with Allen key (6).


#### Step2:

- Attach the Cushion Seat (B) to Back Rets (A) by using Flat Washer (5), Spring Washer (4) and Short Bolt (1). Tighten with Allen Key (6)
- Attach the Velcro (E) to Cushion Seat (B)



Assembly is now complete

Thank you for purchasing this product.

#### STEP 1

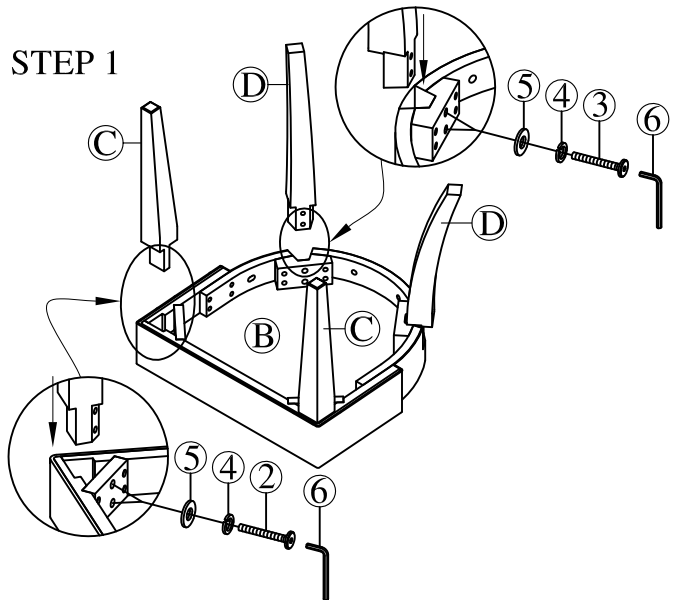

#### STEP 2

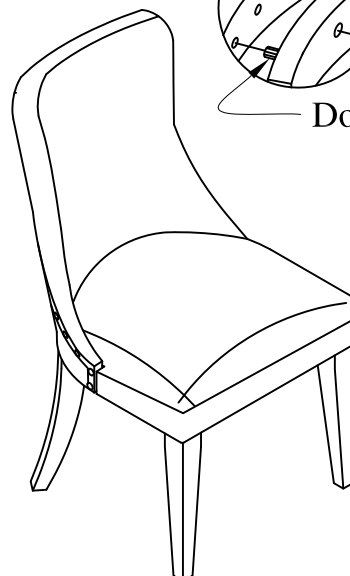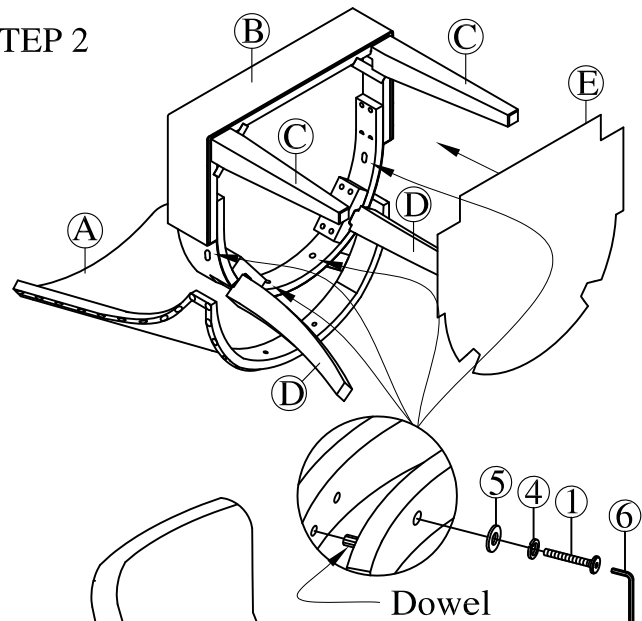

MADE IN VIETNAM