



Figure 1

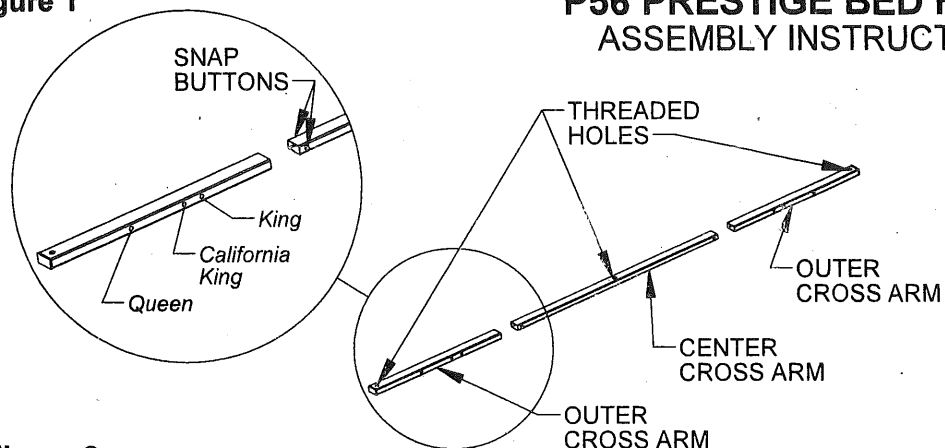

Step 1 Depress SNAP BUTTONS on CENTER CROSS ARM and slide into OUTER CROSS ARM until it locks in the appropriate holes as detailed in Figure 1. **Important: Make sure THREADED HOLES are facing the same direction.** Repeat until all cross arms are assembled.


Figure 2

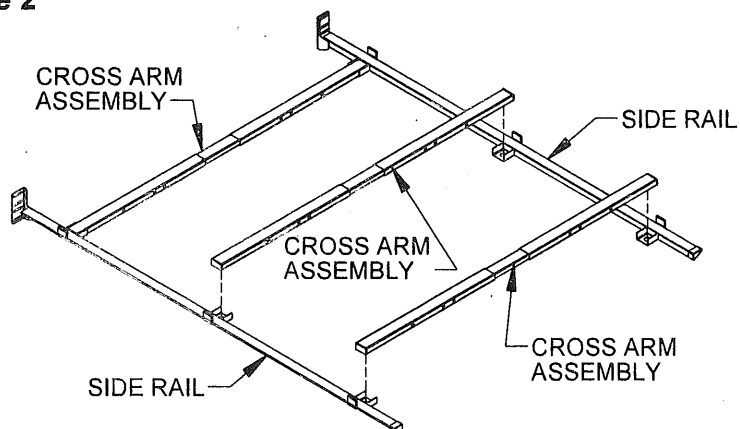


Step 2 Slide CROSS ARM ASSEMBLIES in place between SIDE RAILS as shown in Figure 2. *Note: Threaded holes should be underneath.*

Step 3 Screw LEGS into threaded holes of each CROSS ARM and tighten securely by hand. Slide GLIDES onto each LEG. See Figure 3.

Figure 3

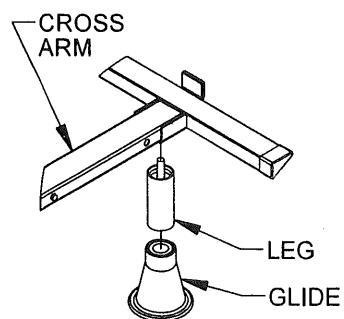

Assembled View

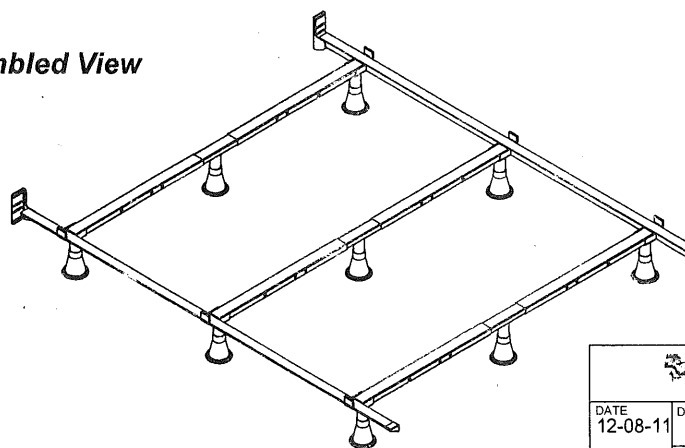

DATE 12-08-11	DWG. NO. 99301246
DO NOT SCALE DRAWING	SHEET 2 OF 4

Figure 1

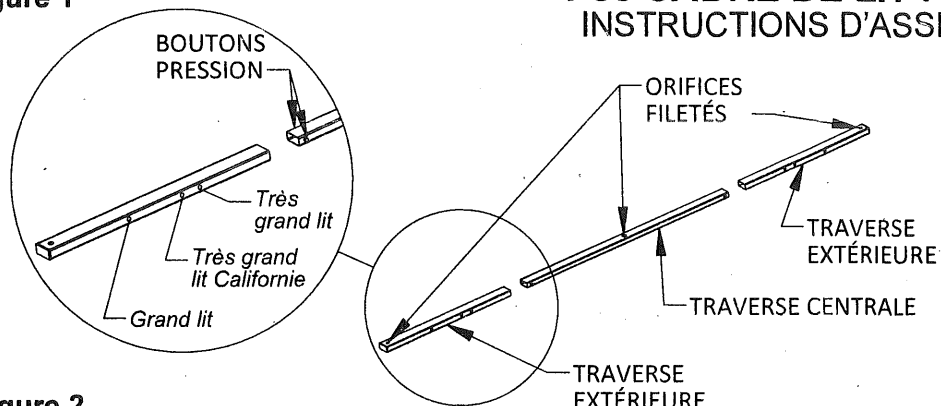


Figure 2


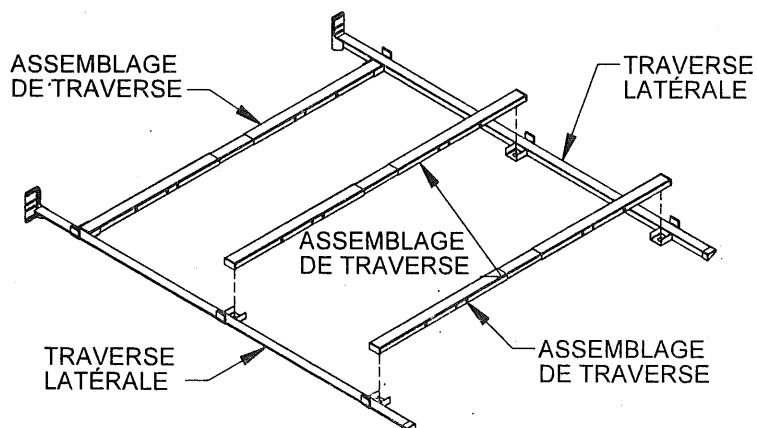


Figure 3

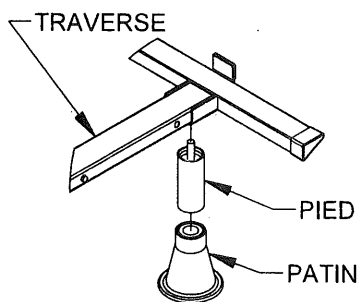


P56 CADRE DE LIT PRESTIGE INSTRUCTIONS D'ASSEMBLAGE

Étape 1 Appuyer sur les BOUTONS PRESSION sur la TRAVERSE CENTRALE et la glisser dans la TRAVERSE EXTÉRIEURE jusqu'à ce qu'elle s'enclenche dans les trous appropriés comme détaillé sur la Figure 1. **Important : Vérifier que les ORIFICES FILETÉS sont tournés dans le même sens.** Répéter jusqu'à ce que toutes les traverses soient assemblées.

Étape 2 Glisser les ASSEMBLAGES DE TRAVERSE en place entre les TRAVERSES LATÉRALES comme illustré à la Figure 2. *Remarque : Les orifices filetés doivent se trouver en dessous.*

Étape 3 Visser les PIEDS dans les orifices filetés de chaque TRAVERSE et bien serrer à la main. Glisser les PATINS sur chaque PIED. Voir la Figure 3.

**Complètement
assemblé**

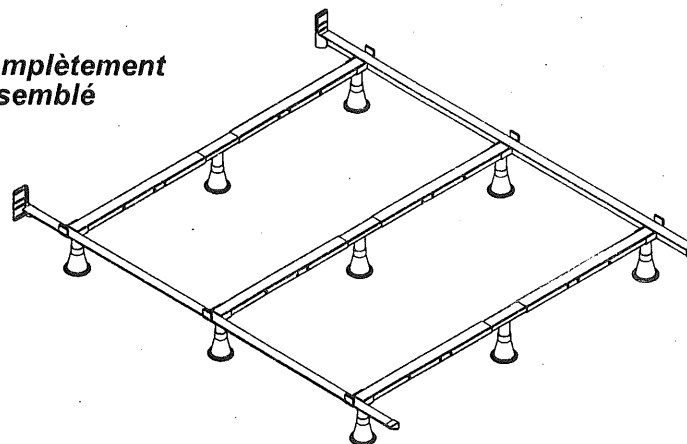

Reignett & Hill
MANUFACTURING

DATE
12-08-11

DWG. NO.

99301246

DO NOT SCALE DRAWING

SHEET 4 OF 4