



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life

205891KW (B1&B2)

California King Bed

REVISION 0 : 01/07/2020

ITEM: 205891KW (B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

14 MINUTES

PARTS IDENTIFICATION


B1 (BOX 1)

A HEADBOARD
PANEL

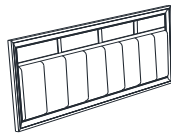


1PC

B FOOTBOARD

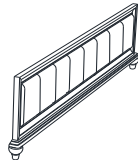


1PC

C RIGHT
HEADBOARD
LEG




1PC

D LEFT
HEADBOARD
LEG



1PC

E BED SLAT



4PCS


F BED SLAT
SUPPORT WITH
LEVELER



8PCS


B2 (BOX 2)

G BED RAIL




2PCS

HB 205891KW(B1)
FROM BOX 1
HEADBOARD
COMPLETE

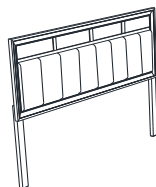

1PC

B 205891KW(B1)
FROM BOX 1
FOOTBOARD

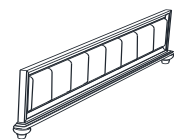

1PC

ITEM: 205891KW (B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 205891KW (B1)


1	BOLT (M6 x 30mm - BLK)		6PCS
2	LOCK WASHER (1/4" - BLK)		6PCS
3	FLAT WASHER (1/4"ID x 13mm - BLK)		6PCS
4	ALLEN WRENCH (M4 x 60mm - BLK)		1PC
5	FLAT HEAD SCREW (M4 x 32mm - RBW)		8PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ASSEMBLY INSTRUCTIONS


STEP 1

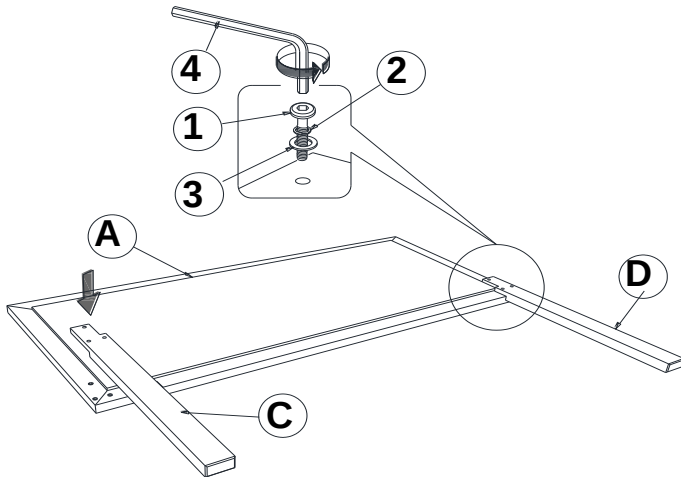

****BACK VIEW****


Note : Please take note of the marking sticker (L&R) on the leg.

STEP 2

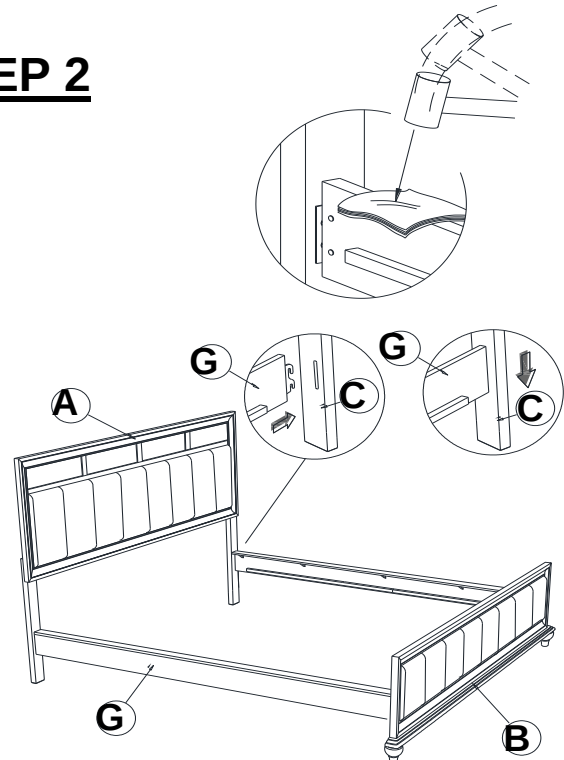


Note : Make sure the protective cloth is sufficient enough to protect bed rail(G) before hammering.

STEP 3

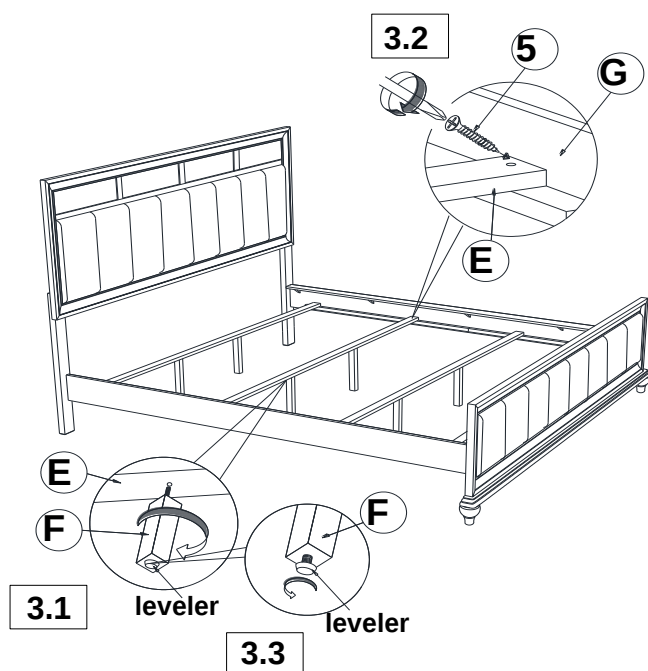


STEP 4 **COMPLETE**

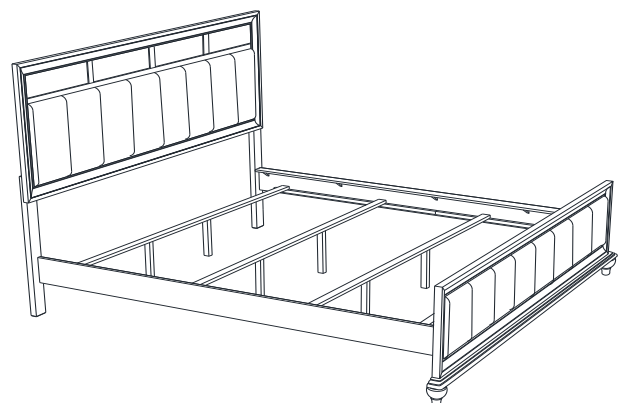

ITEM: **205891KW (B1&B2)**



Inner Size: 73.25"W X 86.00"D

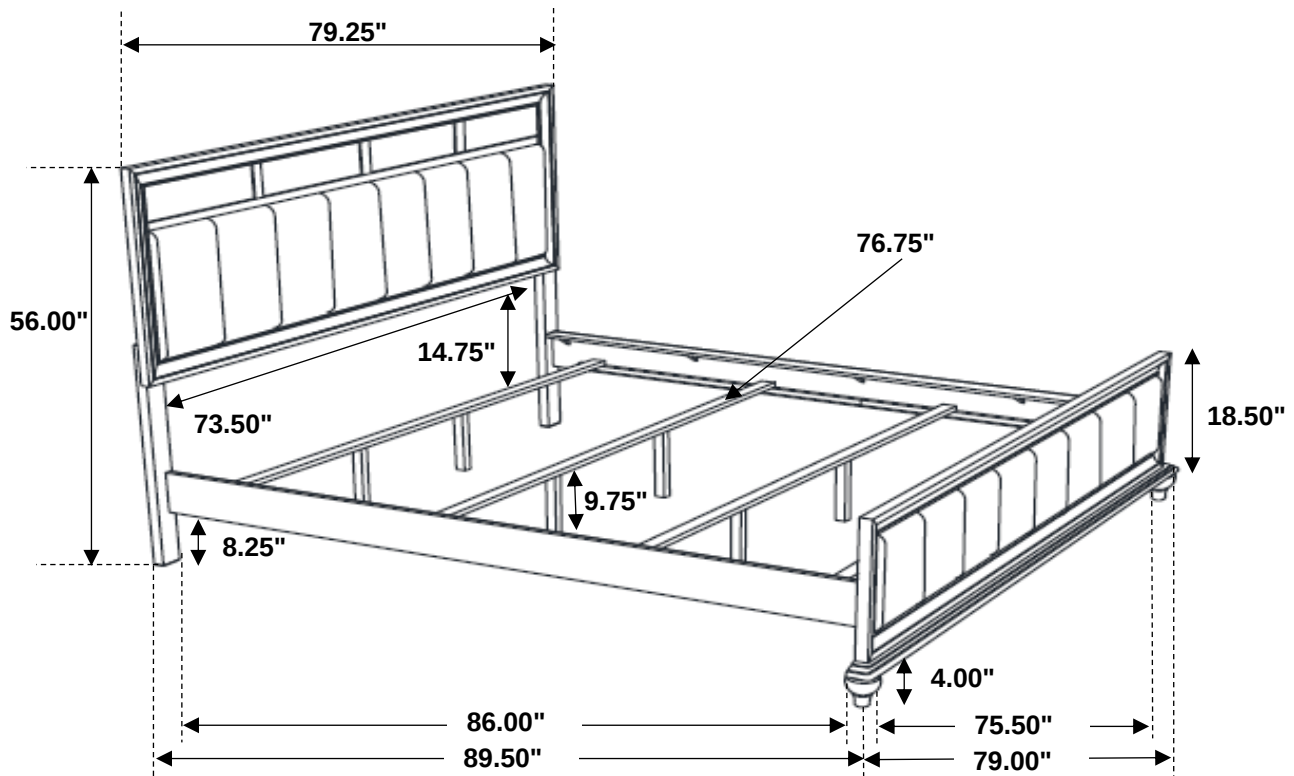

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

205892
Nightstand

ITEM: **205892**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A NIGHTSTAND

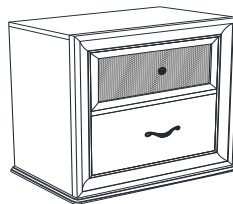

1PC

B BUN FOOT




4PCS

ITEM: **205892**

ASSEMBLY INSTRUCTIONS




STEP 1

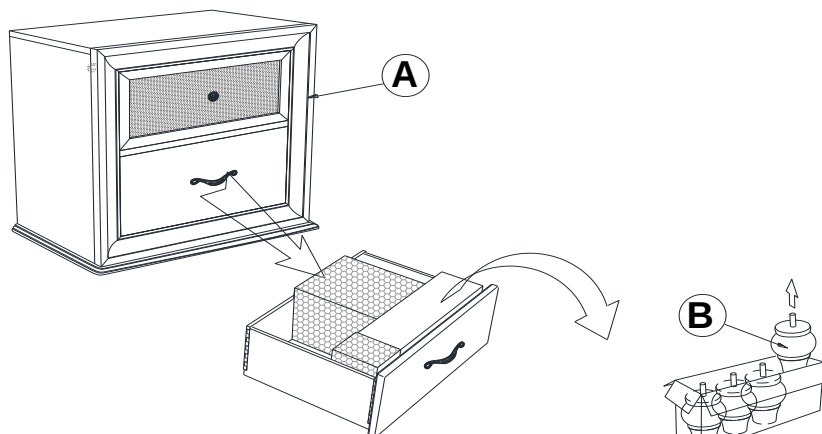


BOTTOM DRAWER BOX

STEP 2

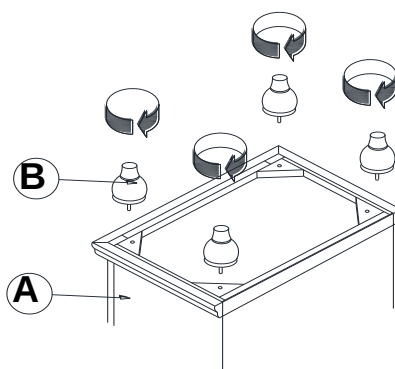


STEP 3 **COMPLETE**

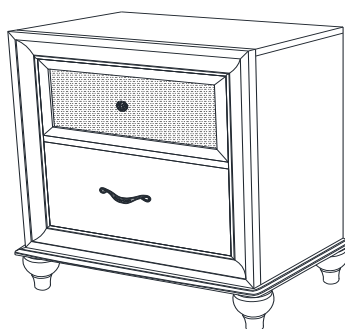

ITEM: **205892**



Inner Size of Drawer A : 19.00"W X 12.50"D X 5.00"H X 0.25"T
Inner Size of Drawer B : 19.00"W X 12.50"D X 5.00"H X 0.25"T

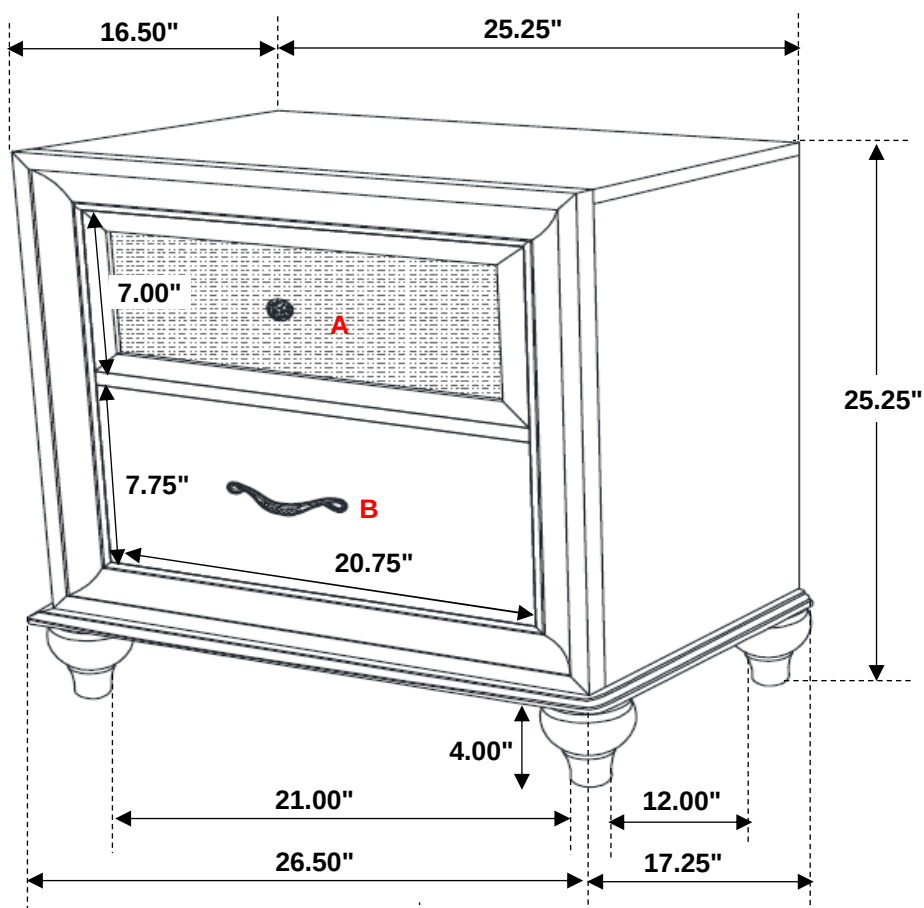

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

205893
Dresser

ITEM:205893



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A DRESSER

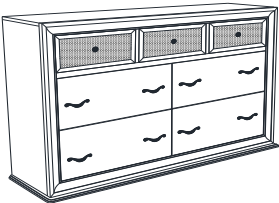

1PC

B BUN FOOT




4PCS

ITEM: **205893**

ASSEMBLY INSTRUCTIONS




STEP 1

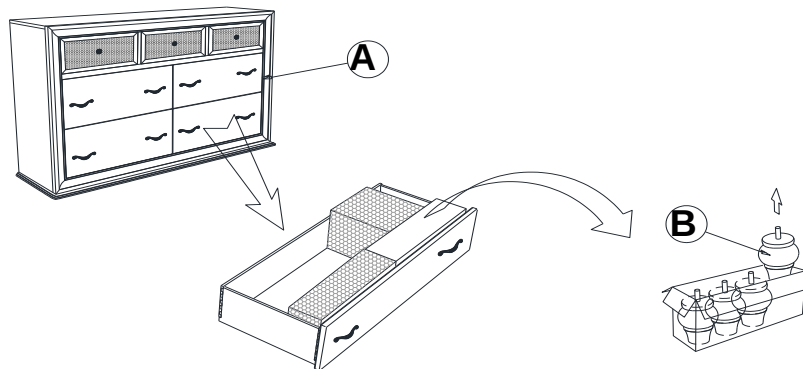

BOTTOM DRAWER BOX

STEP 2

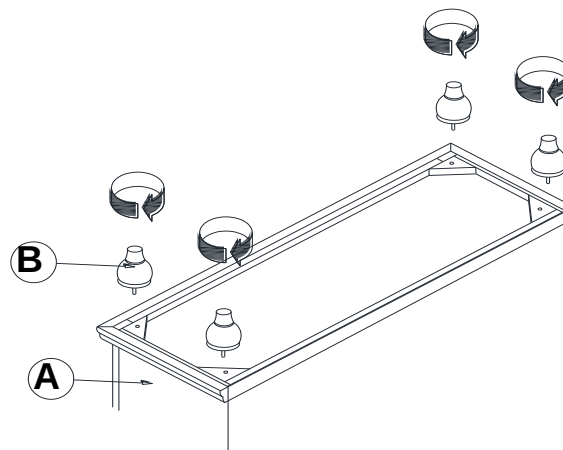


STEP 3 COMPLETE



ITEM: **205893**



Inner Size of Drawer A : 17.00"W X 12.50"D X 5.00"H X 0.25"T
Inner Size of Drawer B : 27.25"W X 12.50"D X 5.00"H X 0.25"T

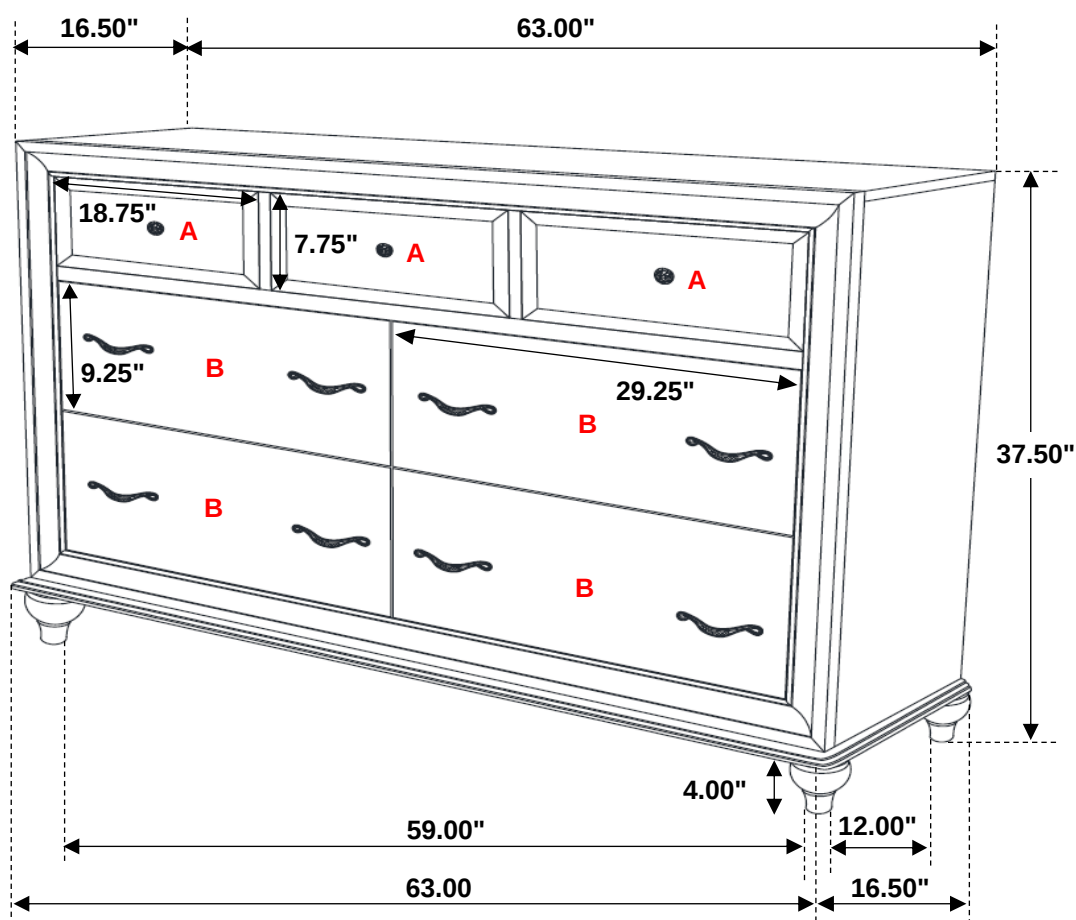

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

205894
Mirror

ITEM: **205894**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

8 MINUTES

PARTS IDENTIFICATION

A


MIRROR

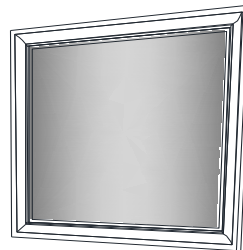

1PC

B


DRESSER
FROM BOX ITEM
#205893

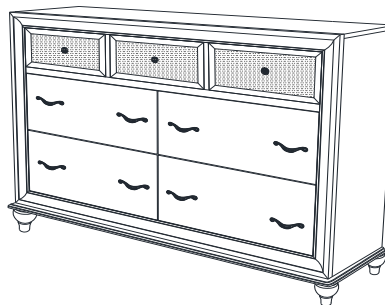

1PC

C

MIRROR SUPPORT
(PACKED WITH MIRROR)



2PCS

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

1	SHORT BOLT (M6 x 35mm - BLK)		4PCS
2	LONG BOLT (M6 x 40mm - BLK)		4PCS
3	LOCK WASHER (1/4" - BLK)		8PCS
4	FLAT WASHER (1/4"ID x 19mm - BLK)		8PCS
5	ALLEN WRENCH (M4 x 60mm - BLK)		1PC


ITEM: **205894**



ASSEMBLY INSTRUCTIONS


STEP 1

ARROW MARKING FACE UPWARD

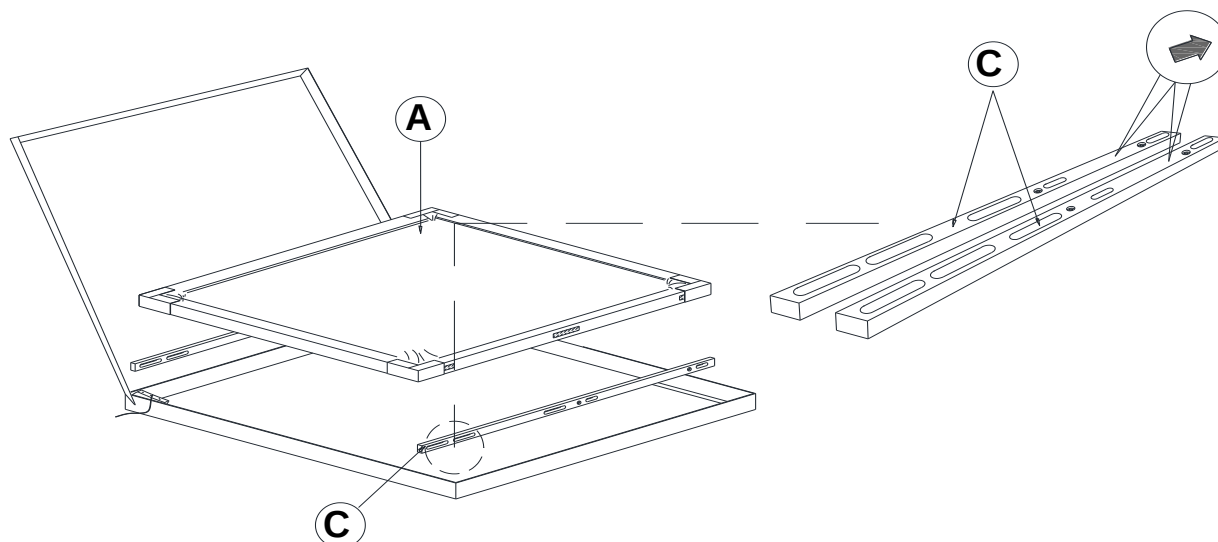

STEP 2

ARROW MARKING FACE UPWARD

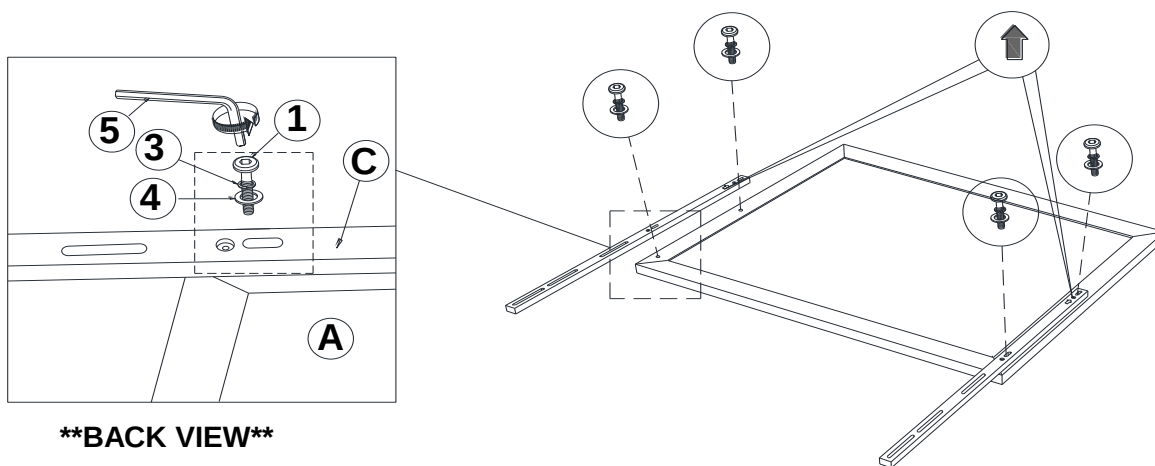


ITEM: **205894**




ASSEMBLY INSTRUCTIONS


STEP 3

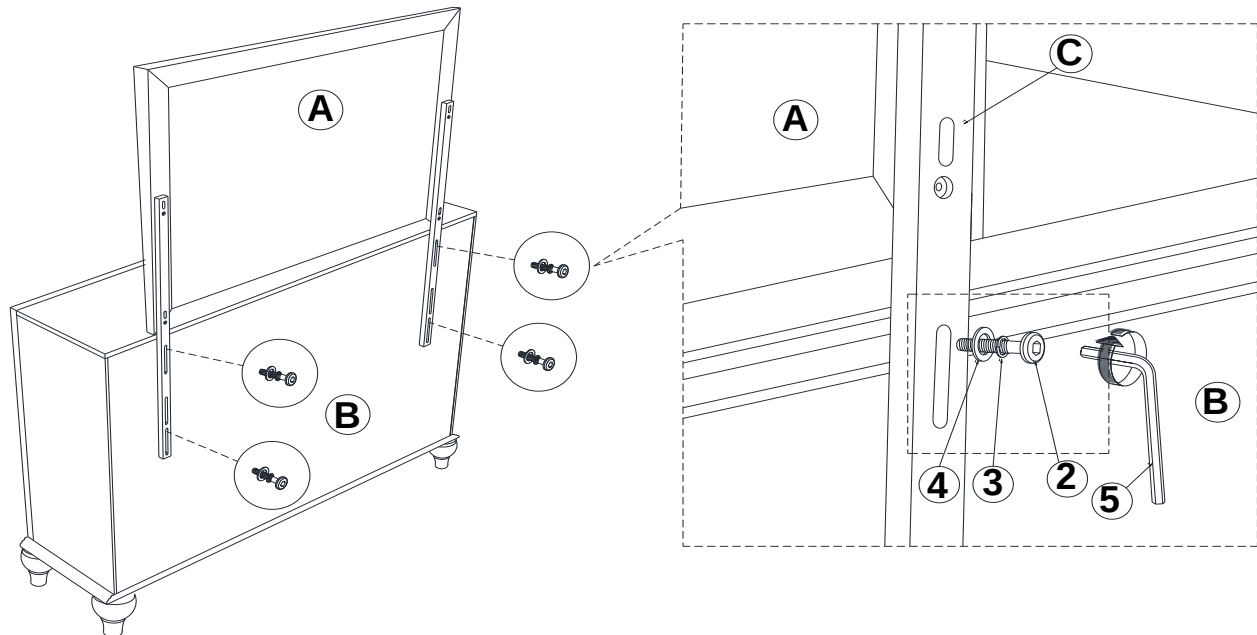

STEP 4 COMPLETE

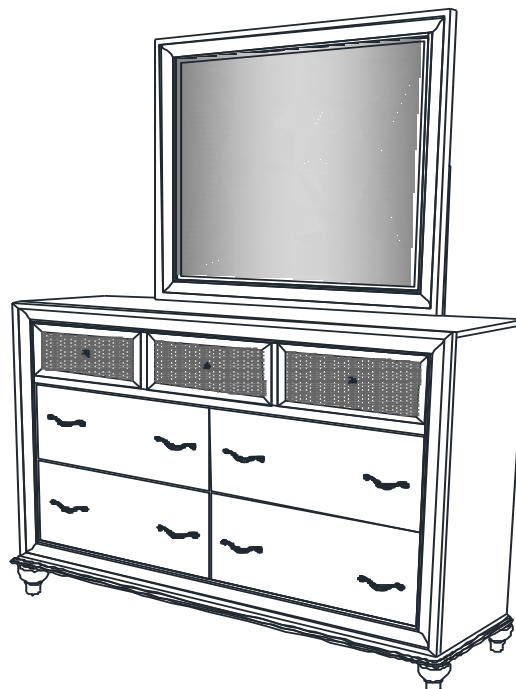

ITEM: **205894**

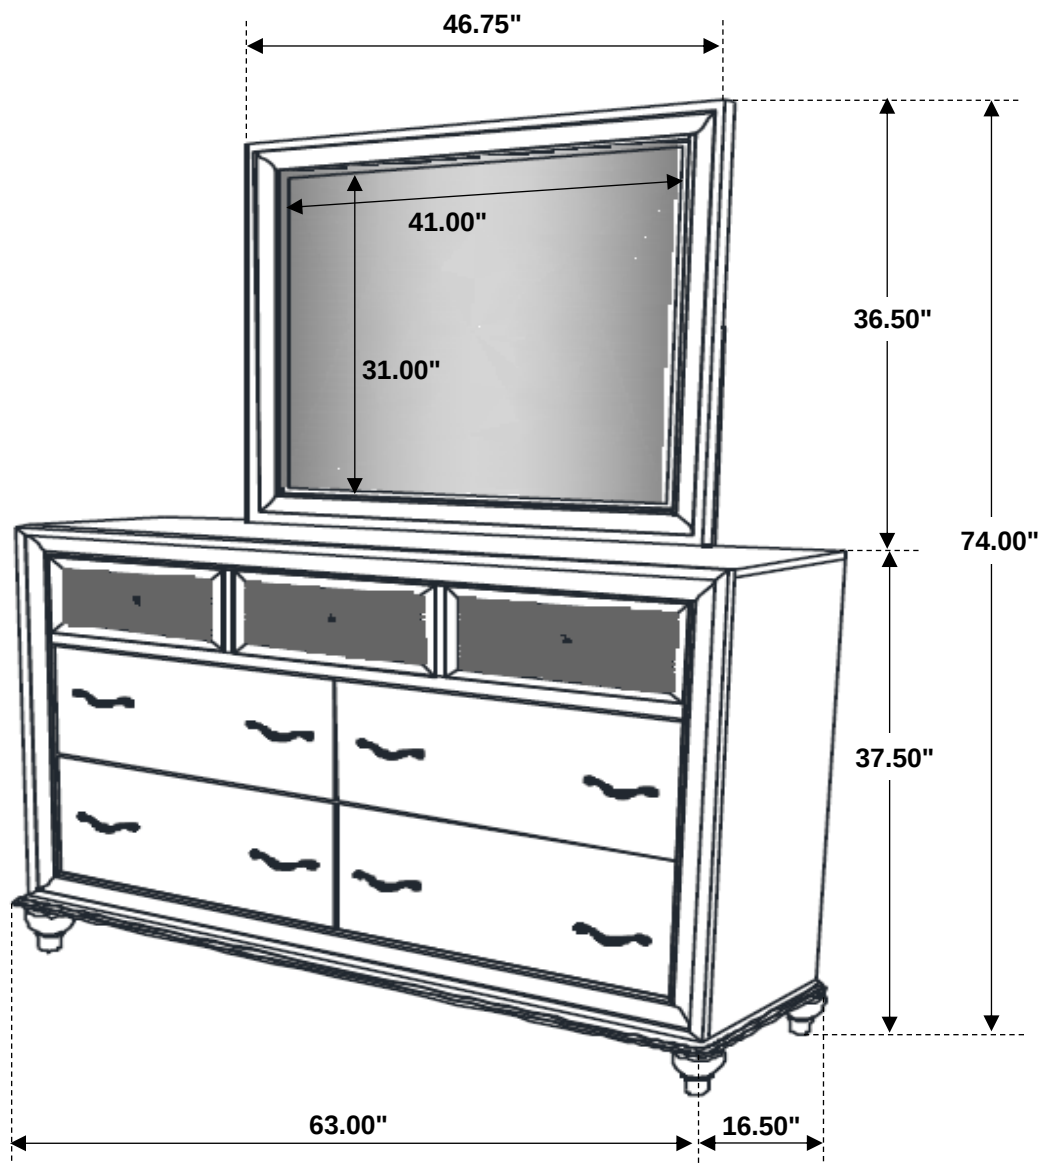

Note: Dimension tolerance $\pm 5\%$