

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life



REVISION 0 : 10/02/2023

PAGE 1 OF 3

ITEM: 707797 ASSEMBLY INSTRUCTIONS



COASTERFURNITURE.COM

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.

2. This product is for home use only and not intended for commercial establishments.



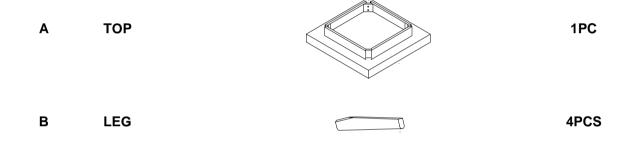

HARDWARE IDENTIFICATION


1	BOLT (M6 x 60mm - RBW)		8PCS
2	LOCK WASHER (M6 x 13mm - RBW)	\bigcirc	8PCS
3	FLAT WASHER (M6 x 19mm - RBW)		8PCS
4	ALLEN WRENCH (M4 x 65mm - BLK)		1PC


PAGE 2 OF 3

ITEM: 707797



ASSEMBLY INSTRUCTIONS

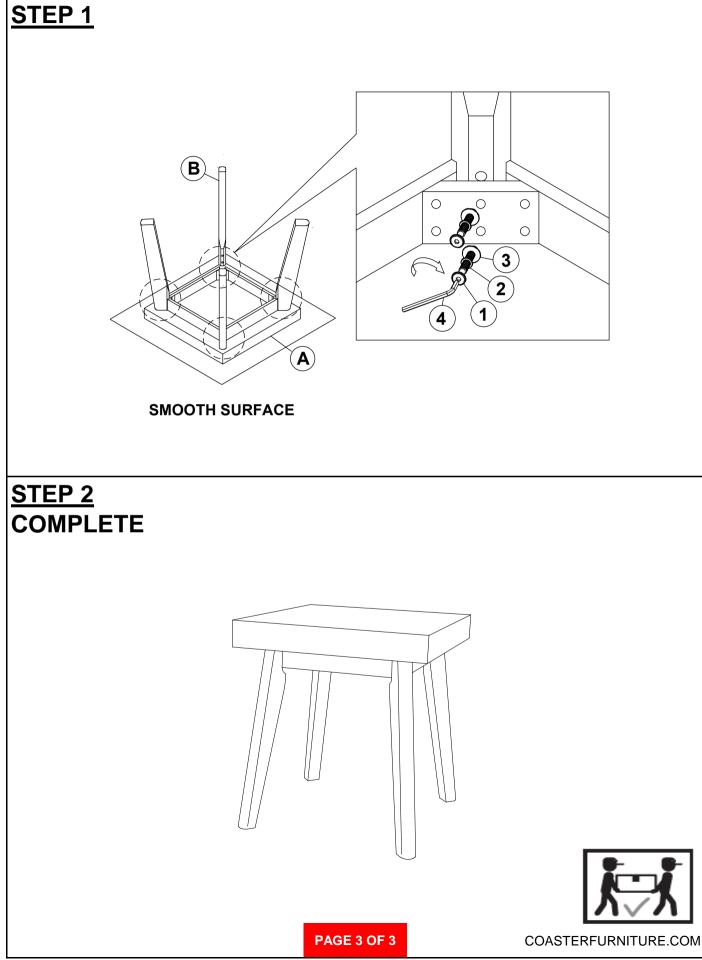

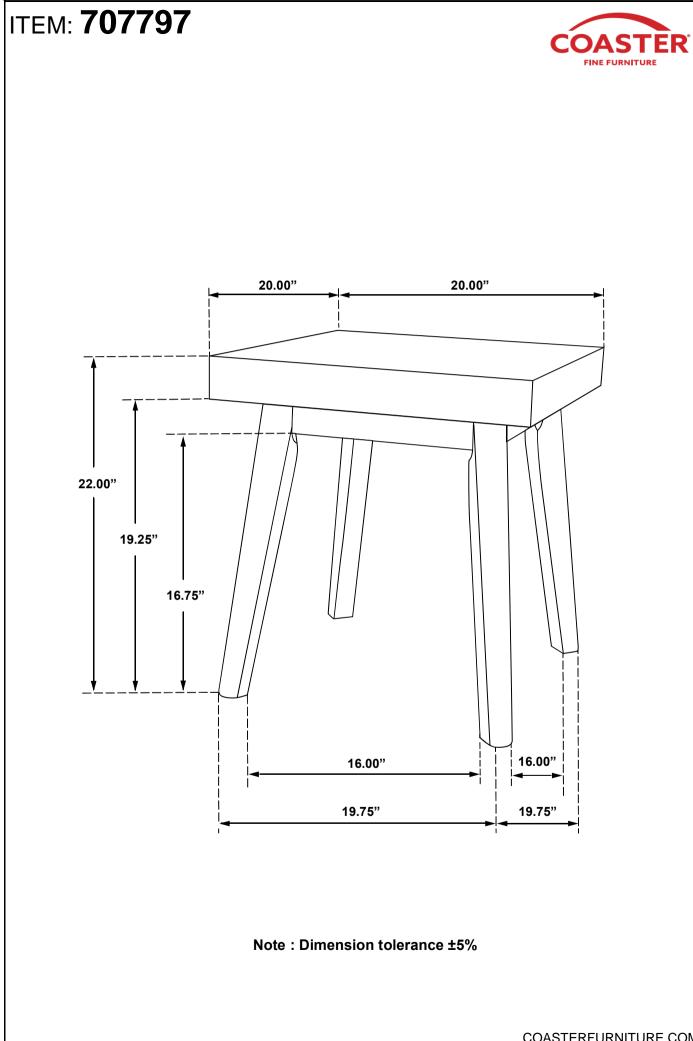



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life



PAGE 1 OF 3

ITEM: 707798 ASSEMBLY INSTRUCTIONS



4PCS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




WARNING!

LEG

В

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.

2. This product is for home use only and not intended for commercial establishments.

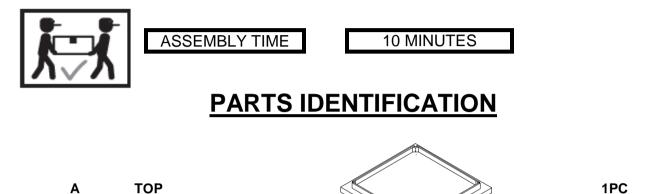

HARDWARE IDENTIFICATION

T١

1	BOLT (M6 x 60mm - RBW)	(i))))))))))))))))))))))))))))))))))))	8PCS
2	LOCK WASHER (M6 x 13mm - RBW)		8PCS
3	FLAT WASHER (M6 x 19mm - RBW)	\bigcirc	8PCS
4	ALLEN WRENCH (M4 x 65mm - BLK)		1PC

ITEM: 707798

ASSEMBLY INSTRUCTIONS



