











**X** A HOWARD MILLER COMPANY


## 79160P PEDS & MODESTY PANEL 79160T TOP PANEL

HARDWARE LIST					
A	B	C	D	E	F
ALLEN BOLT M $\frac{5}{16}$ " X 45 (4 PCS.)	FLAT W. M8 (6 PCS.)	SPRING W. M8 (6 PCS.)	ALLEN BOLT M $\frac{5}{16}$ " X 150 (2 PCS.)	PIN SHELF (4 PCS.)	ALLEN KEY L5 (FOR BOLT M $\frac{5}{16}$ ") 1 PC.
					

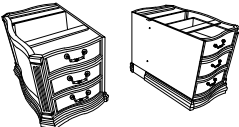

PART INSIDE			
1	2	3	4
TOP ASSEMBLY (1 Pc)	PEDESTALS (2 Pcs)	MODESTY PANEL (1 Pc)	SHELF PANEL (1 Pc)
			

### Assembly Instruction

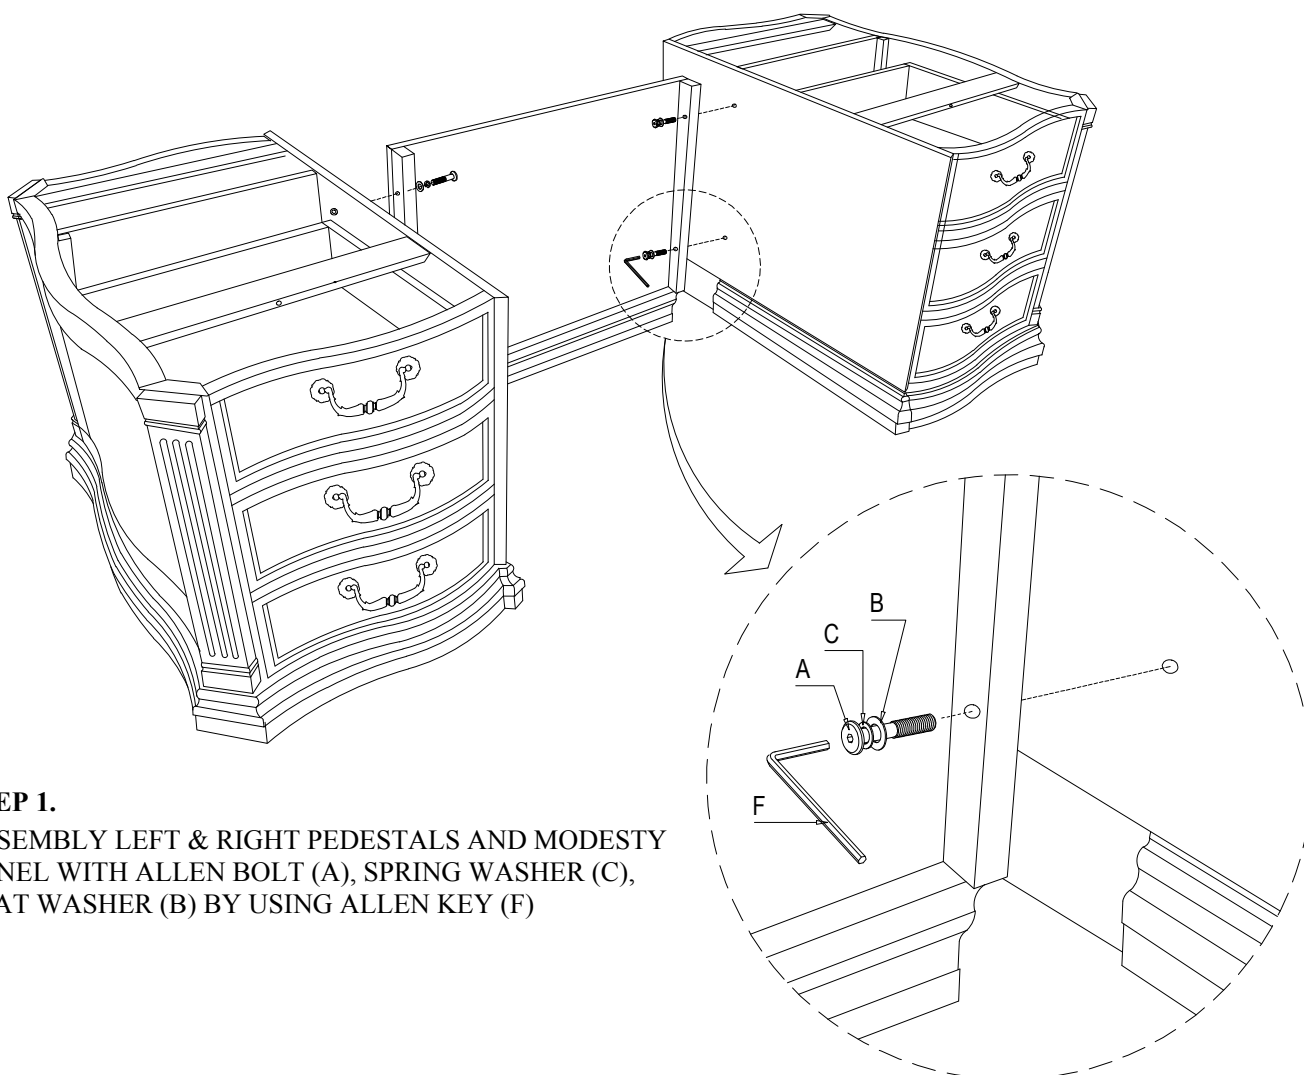


#### STEP 1.

ASSEMBLY LEFT & RIGHT PEDESTALS AND MODESTY PANEL WITH ALLEN BOLT (A), SPRING WASHER (C), FLAT WASHER (B) BY USING ALLEN KEY (F)

## STEP 2.

PLACE THE TOP ASSEMBLY ON THE PEDESTALS. AS SHOWN IN THE SIDE VIEW THE TOP ASSEMBLY IS SET A LITTLE FOWARD ON THE PEDESTALS THAN PUSHED BACK TO LOCK FRENCH CLEAT.  
OPEN THE UPPER DRAWERS IN THE PEDESTALS.  
SCREW THE TOP PANEL ASSE,BLY AND PEDESTALS WITH ALLEN BOLT (D), SPRING WASHER (C), FLAT WASHER (B) BY USING ALLEN KEY (F).  
CLOSE UPPER DRAWERS.

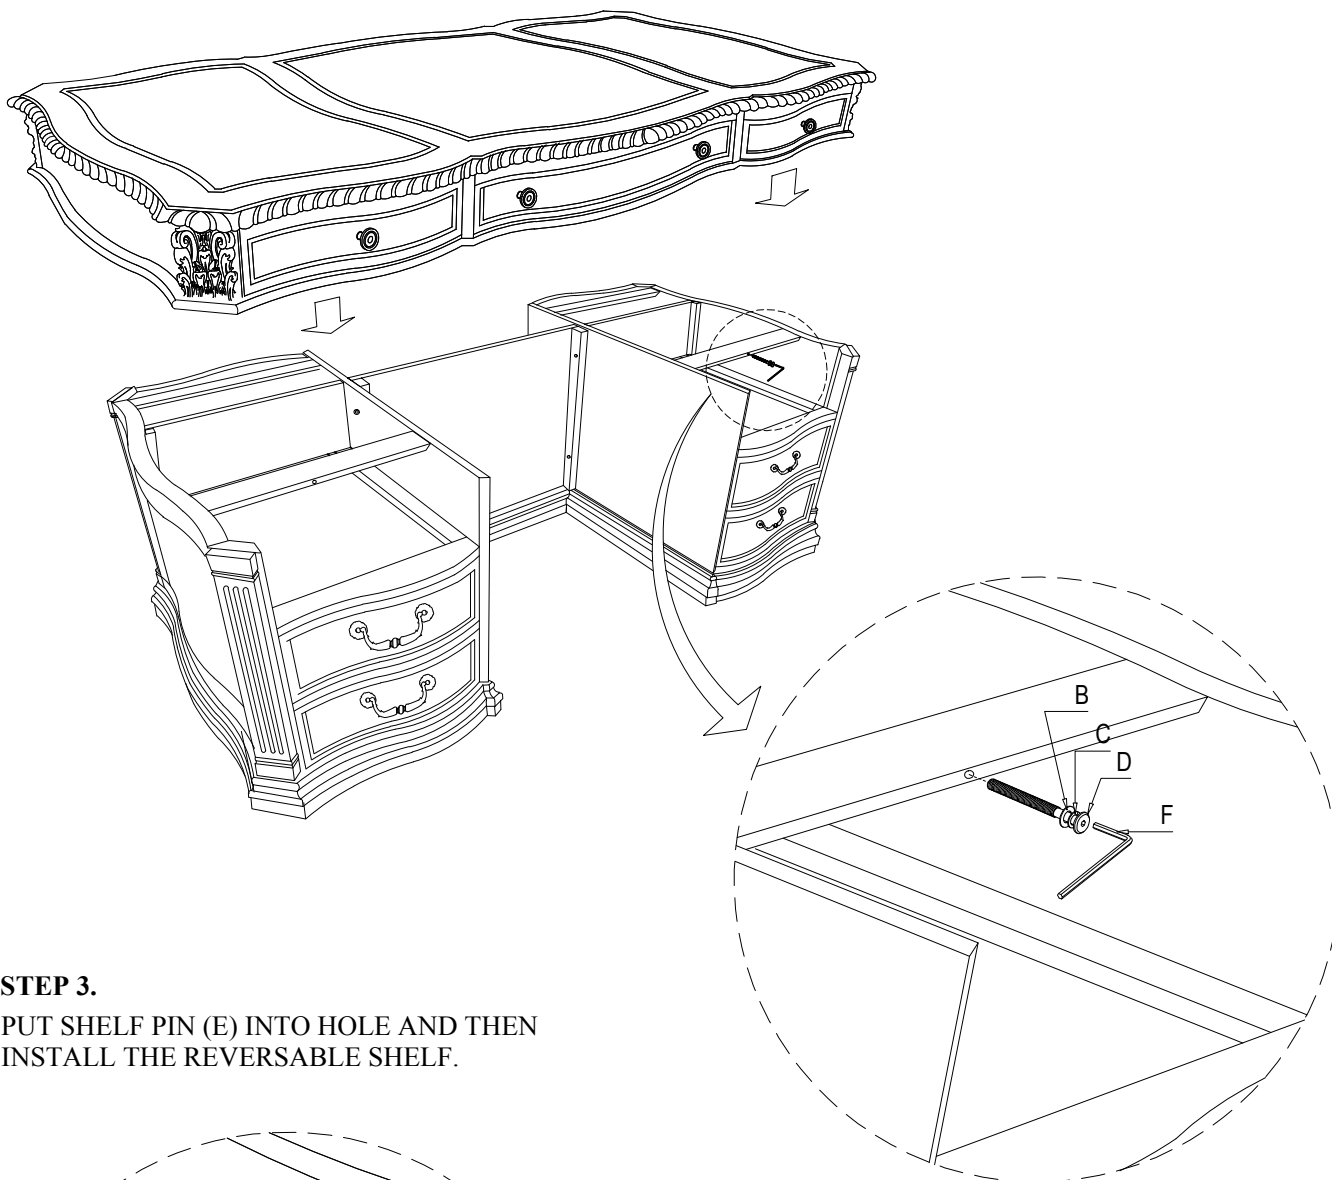

## STEP 3.

PUT SHELF PIN (E) INTO HOLE AND THEN  
INSTALL THE REVERSABLE SHELF.

