

C013-016-102/122/142 QUEEN / KING / CAL KING BED

1 of 2


ADELA

ASSEMBLY INSTRUCTIONS

TWO (2) PEOPLE AND PHILIP'S SCREW DRIVER REQUIRED

PLEASE UNPACK ALL PARTS AND CHECK THEM AGAINST PARTS LIST ON THIS INSTRUCTION SHEET BEFORE DISCARDING PACKING AND CARTON!!

- 1) Connect the side rail and headboard/footboard by bolt (F).
- 2) Assemble the side rail and headboard/footboard using the curved washer (A), flat washer (B), lock washer (C), and nut (D) tighten by wrench (E), as shown in Diagram A.
- 3) Assemble the support leg on the slat, as shown in Diagram B.
- 4) Mount the assembled support slats (done in step 3) onto the cleat of side rails with screws (G).
Use a Phillips Head Screwdriver to tighten screws, as shown in Diagram C.

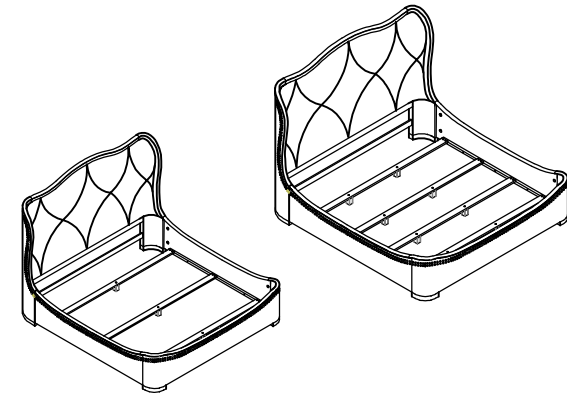

*** NOTE KEEP THIS SHEET!!! ***

In the unlikely event that you would need a replacement part for your table, please contact your local authorized Schnadig International dealer. If you need replacement hardware quickly, it could be purchased from your local hardware store.

	C013-016-102H/102F/102R Queen Bed		C013-016-122H/122F/102R King bed		C013-016-122H/122F/142R Cal King bed	
Part Description	Part No.	QTY	Part No.	QTY	Part No.	QTY
Headboard (1)	C013-016-102H	1	C013-016-122H	1	C013-016-122H	1
Footboard (2)	C013-016-102F	1	C013-016-122F	1	C013-016-122F	1
Side rail (3)	C013-016-102R	2	C013-016-102R	2	C013-016-142R	2
Slat (4)	C013-016-102F-3067	3	C013-016-122F-3067	4	C013-016-122F-3067	4
Support leg(5)	C013-016-102F-30305	3	C013-016-122F-30305	8	C013-016-122F-30305	8
RTA Hardware(6)	C013-016-102F-3001	1	C013-016-122F-3001	1	C013-016-122F-3001	1
RTA Hardware(7)	C013-016-102R-3001	1	C013-016-102R-3001	1	C013-016-142R-3001	1

RTA Hardware(7)			
NO.	Hardware List		Q'ty
A		Curved Washer(5/16"Dia)	8
B		Flat Washer(5/16"Dia)	8
C		Lock Washer	8
D		Nut	8
E		Wrench	1
F		Bolt	8

RTA Hardware(6)			
NO.	Hardware List		Q'ty(5-0 bed) Q'ty(6-6/0 bed)
G		Screw(4.2x32)	12 16

