ASSEMBLY INSTRUCTION

GLOBAL FURNITURE USA

MODEL: 9828 ROMO

DESCRIPTION: ROMO-WHITE-DR

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.

PART LIST#

NO	DRAWING	DESCRIPTION	QTY
A		Dresser	1pc
В		Acrylic Leg	2pcs
С	\mathcal{A}	Metal Leg	2pcs
D		Center Leg	1pc

HARDWARE LIST#


NO	NAME	PART	QTY		
1	Allen Key 5mm		1pc		
2	JCBC - 5" x 35mm		4pcs		
3	5/16" Spring Washer	0	4pcs		
4	5/16" Flat Washer	0	4pcs		
HARDWARE LOCATED IN ACRYLIC LEG BOX					

Remove Leg carton located in the drawer of the casegood. Remove and unwrap each Leg.



5	Allen Key 4mm		1pc
6	JCBC - M6 x 20mm		4pcs
7	M6 Spring Washer	0	4pcs
8	M6 Flat Washer	0	4pcs

HARDWARE LOCATED IN METAL LEG BOX

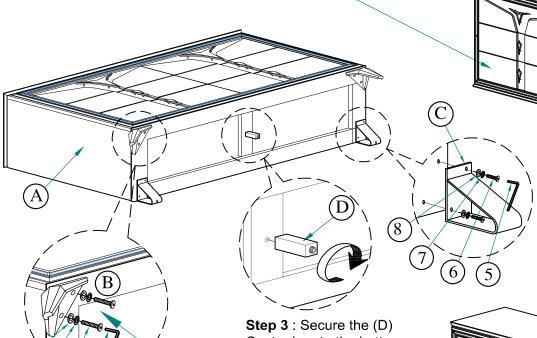


Step 2: Secure the (C) Metal Leg to the bottom of (A) Dresser tighten using (6) JCBC 20mm, (7) M6 Spring Washer & (8) M6 Flat Washer as a diagram shown.

A

Step 3: Secure the (D) Center Leg to the bottom of (A) Dresser as a diagram shown.

Step 1: Secure the (B) Acrylic Leg to the bottom of (A) Dresser tighten using (2) JCBC $\frac{5}{16}$ " x 35mm, (3) $\frac{5}{16}$ " Spring Washer & (4) $\frac{5}{16}$ " Flat Washer as a diagram shown.

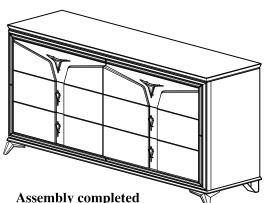

HARDWARE LIST (ANTI TIPPING)

NO	NAME	PART	QTY
A	Bracket	6	2pcs
В	Tie Wrap	Ĉ	1pc
С	Long Screw	()mmaaaa»	1pc
D	Short Screw	•)mmm-	1pc

