
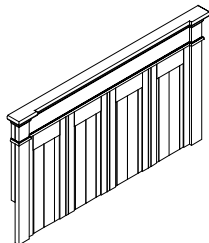


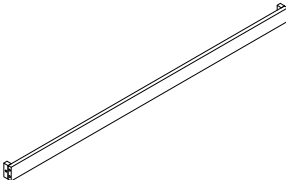

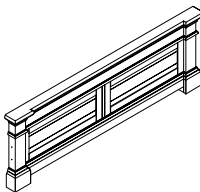

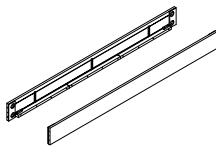


Riverside FURNITURE email: info@riverside-furniture.com	Bradford Bedroom Assembly Instructions		Page 1 of 5								
			Made in Viet Nam								
			King Panel Bed								
Warning : - Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. - To prevent possible scratches and damage, this furniture MUST BE ASSEMBLED BY TWO PEOPLE on a soft surface such as a blanket or carpet.											
Hardware and Parts packed with the Headboard											
Panel Headboard - 46680  (H-A) 1 pc.		Headboard Post (Left)  (H-B) 1 pc.		Headboard Post (Right)  (H-C) 1 pc.		Headboard Post (Stretcher)  (H-D) 1 pc.					
Ø5/16" x 1-9/16" Allen Head Bolt  (H-E) 2 pcs.		Ø5/16" x 2" Allen Head Bolt  (H-F) 8 pcs.		Ø5/16" Spring Washer  (H-G) 10 pcs.		Ø5/16" x Ø19mm Flat Washer  (H-H) 10 pcs.		4mm Allen key  (H-I) 1 pc.			
Hardware and Parts packed with the Footboard											
Panel Footboard - 46681  (F-A) 1 pc.		Slats  (F-B) 5 pcs.		Support leg  (F-C) 10 pcs.		Screw Ø4 x 1-3/16"  (F-D) 10 pcs.					
Hardware and Parts packed with the Bed Rails											
Bed Rails - 46672  (R-A) 2 pcs.		Ø5/16" Curved Washer  (R-B) 8 pcs.		Ø5/16" Spring Washer  (R-C) 8 pcs.		Ø5/16" x 17mm Nut  (R-D) 8 pcs.		Ø5/16"x 3-3/16" All - Thread Bolt  (R-E) 8 pcs.		12 mm Open Wrench  (R-F) 1 pc.	
6/6 King panel Bed 46680 -- 6/6 Panel Headboard 46681 -- 6/6 Panel Footboard 46672 -- 5/0-6/6 Bed Side Rails											


6/6 King Bed

46680 -- 6/6 Panel Headboard

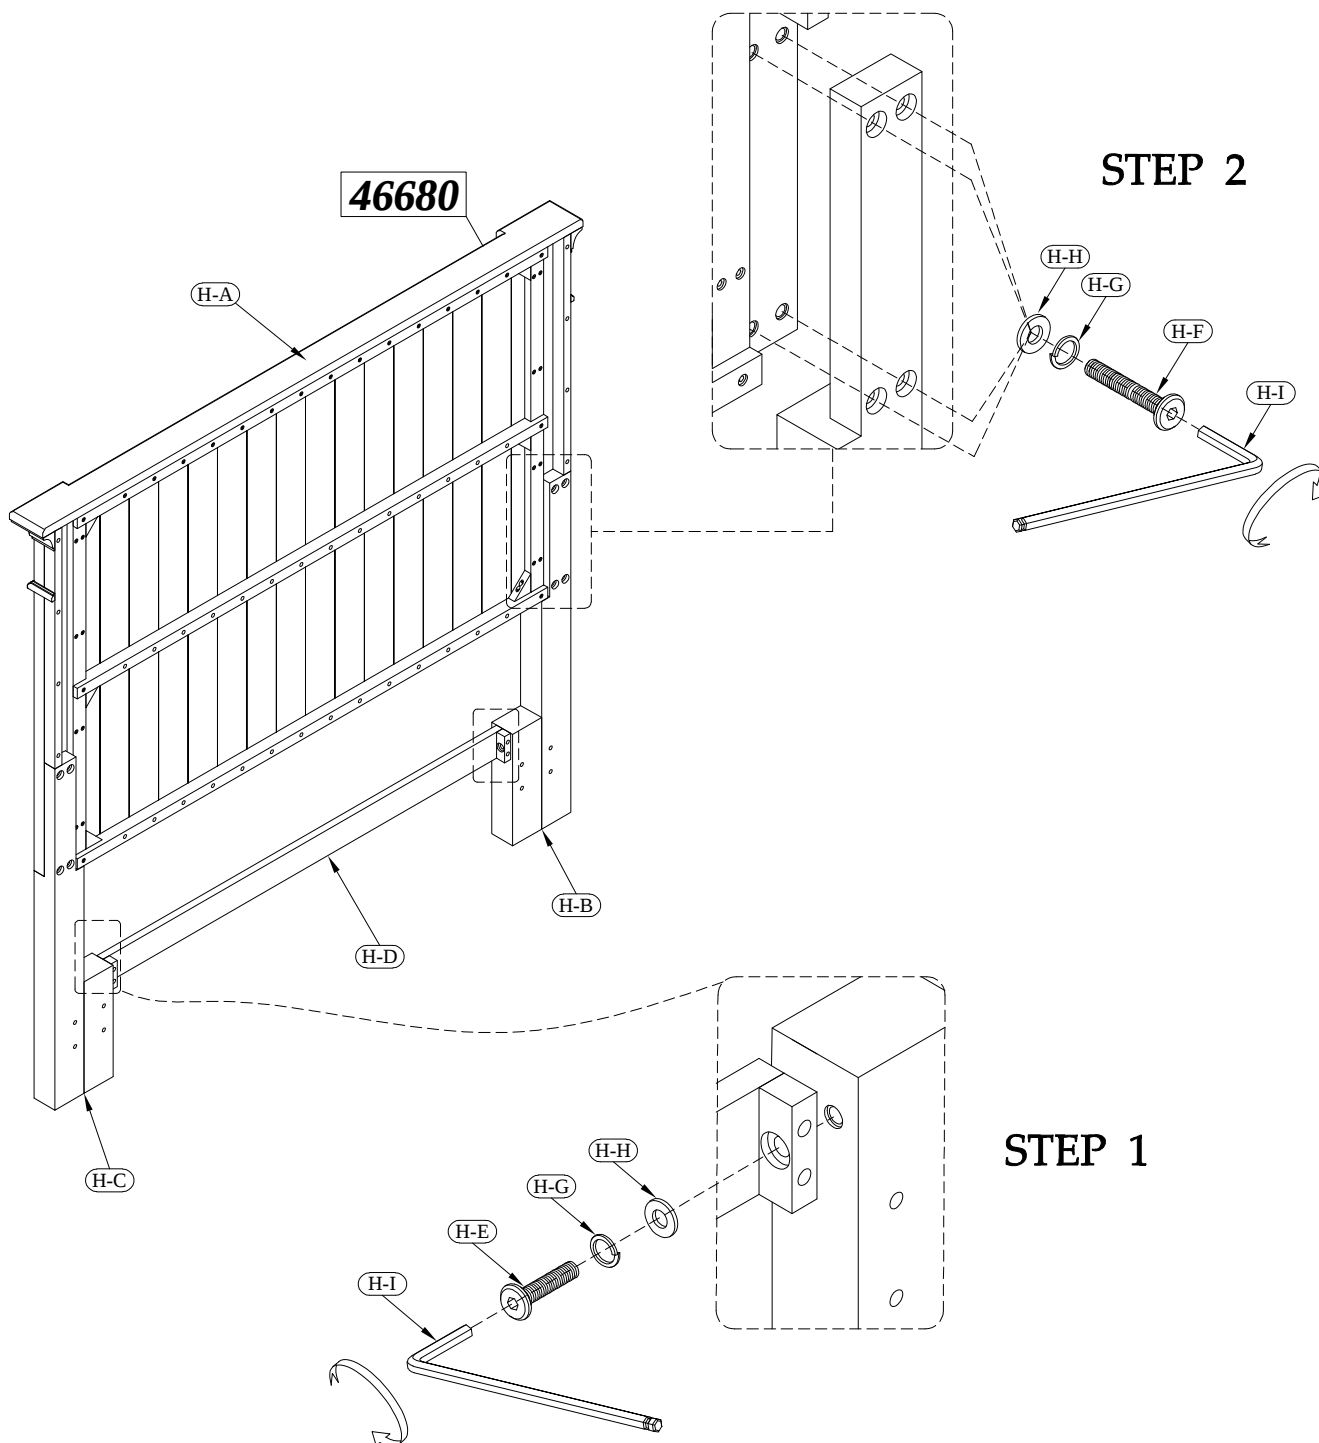

6/6 King Bed

46680 -- 6/6 Panel Headboard

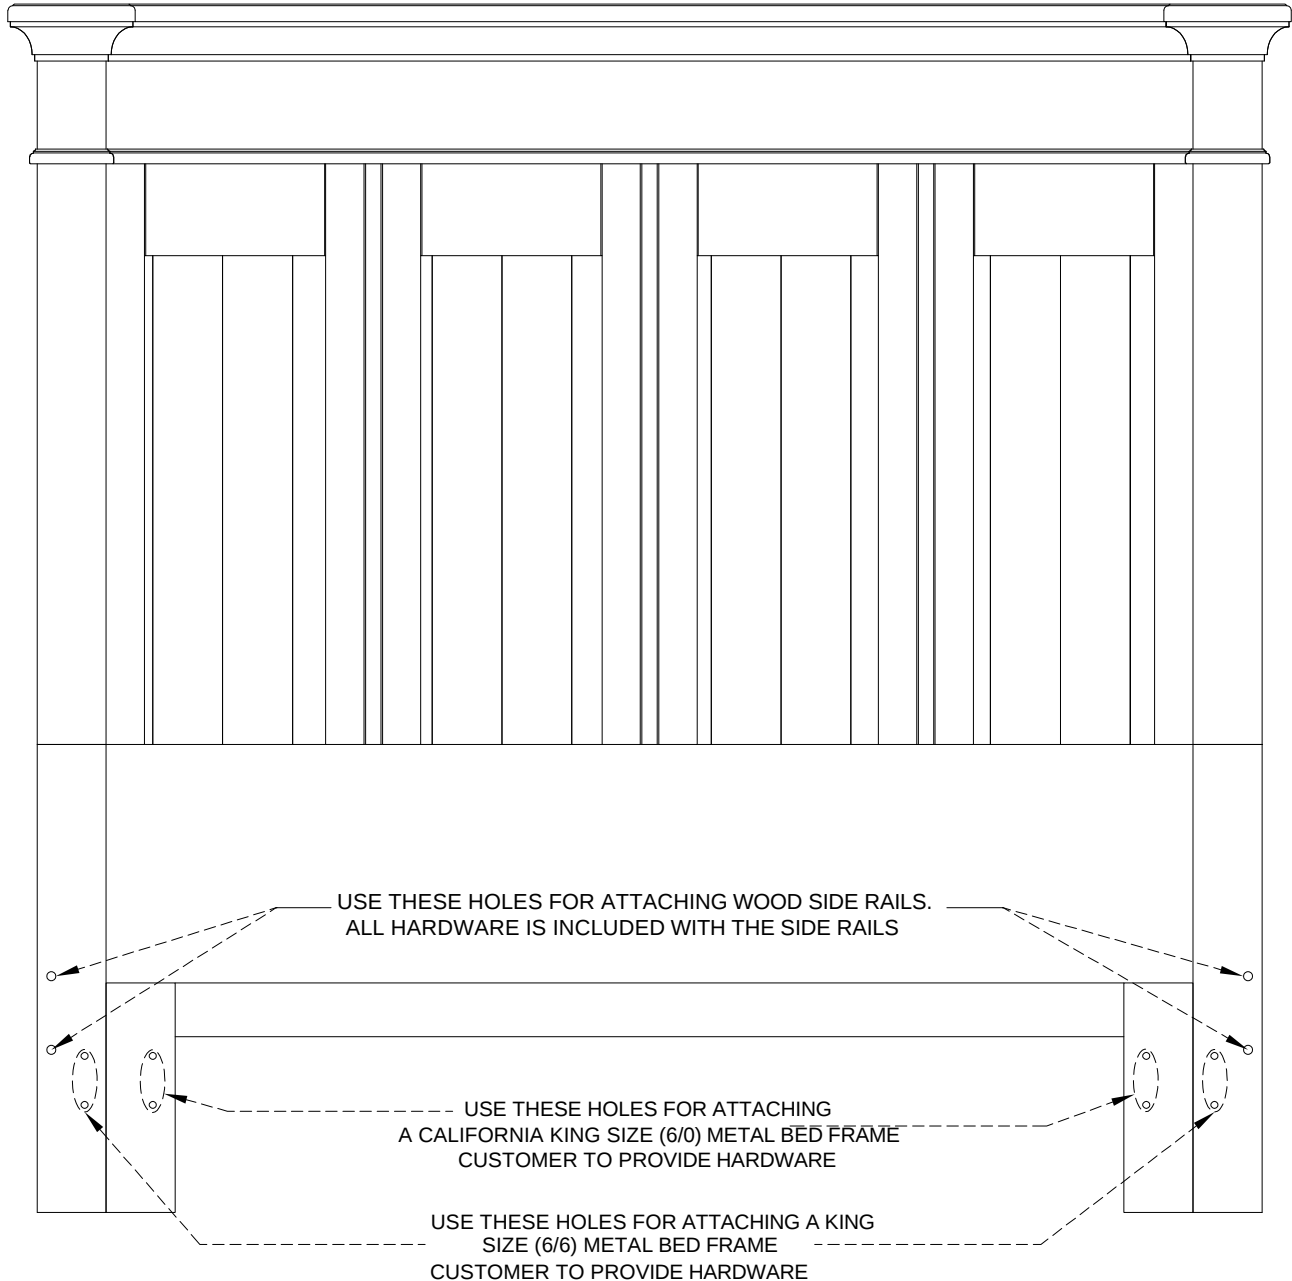

6/6 Bed

**THE HEADBOARD MAY BE USE ALONE WITH
A CALIFORNIA KING OR A STANDARD KING
SIZE METAL BED FRAME**


6/6 King panel Bed

46680 -- 6/6 Panel Headboard


46681 -- 6/6 Panel Footboard

46672 -- 5/0-6/6 Bed Side Rails


STEP 3

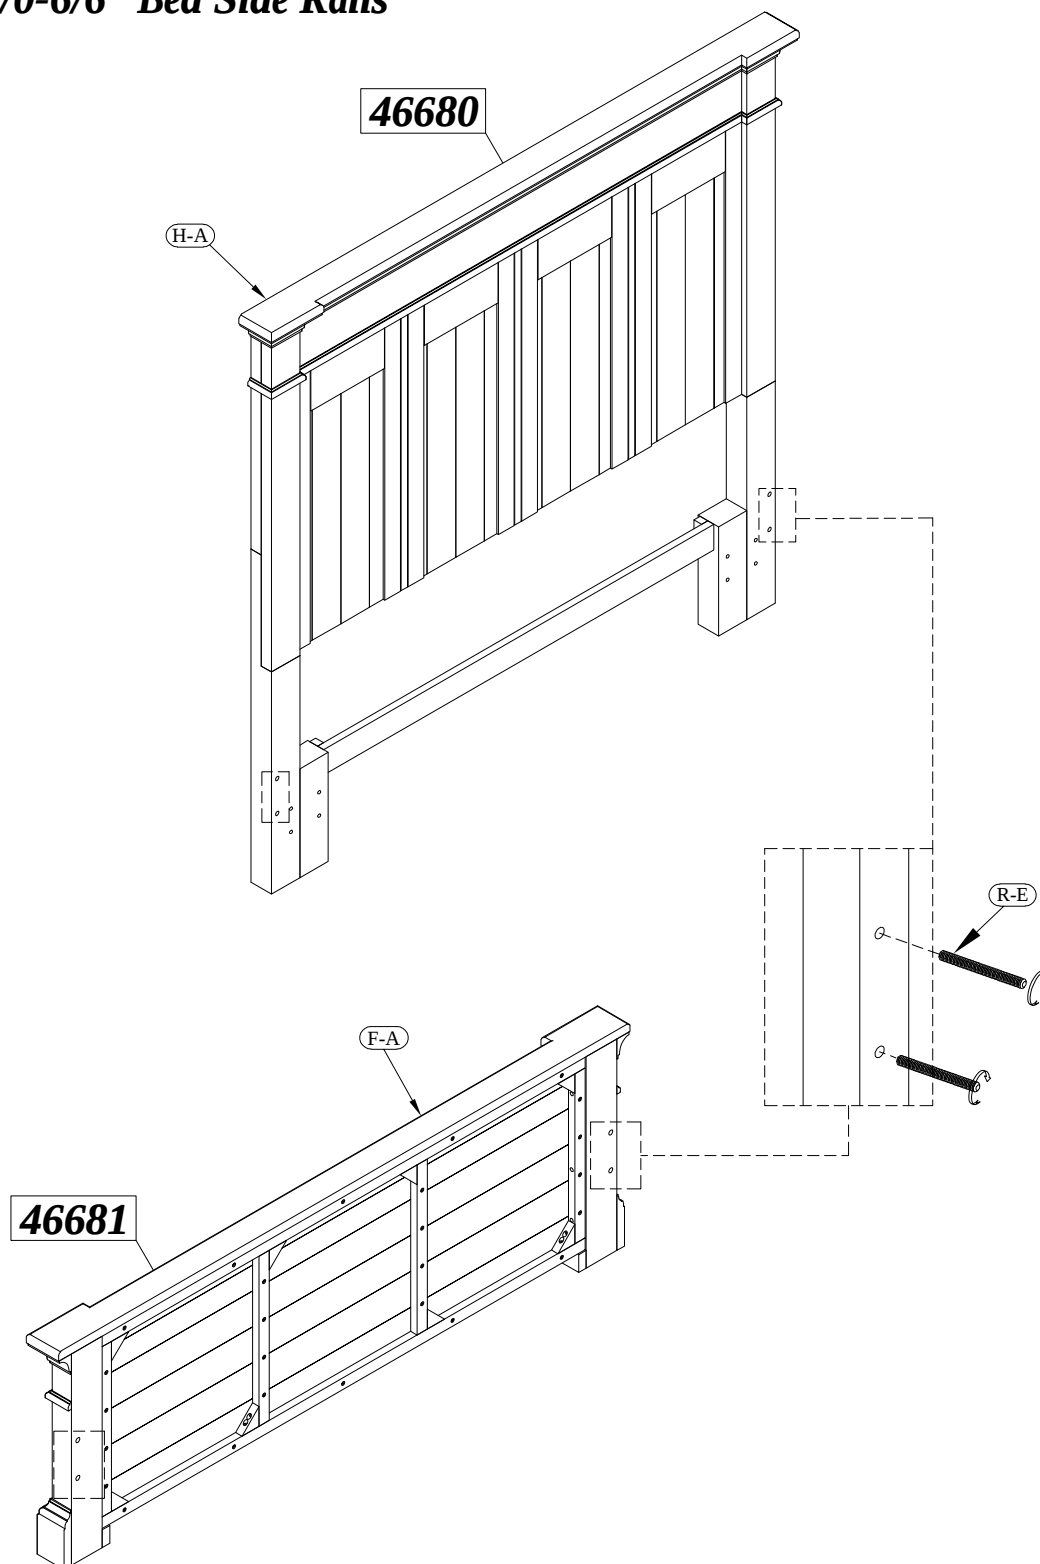

STEP 4

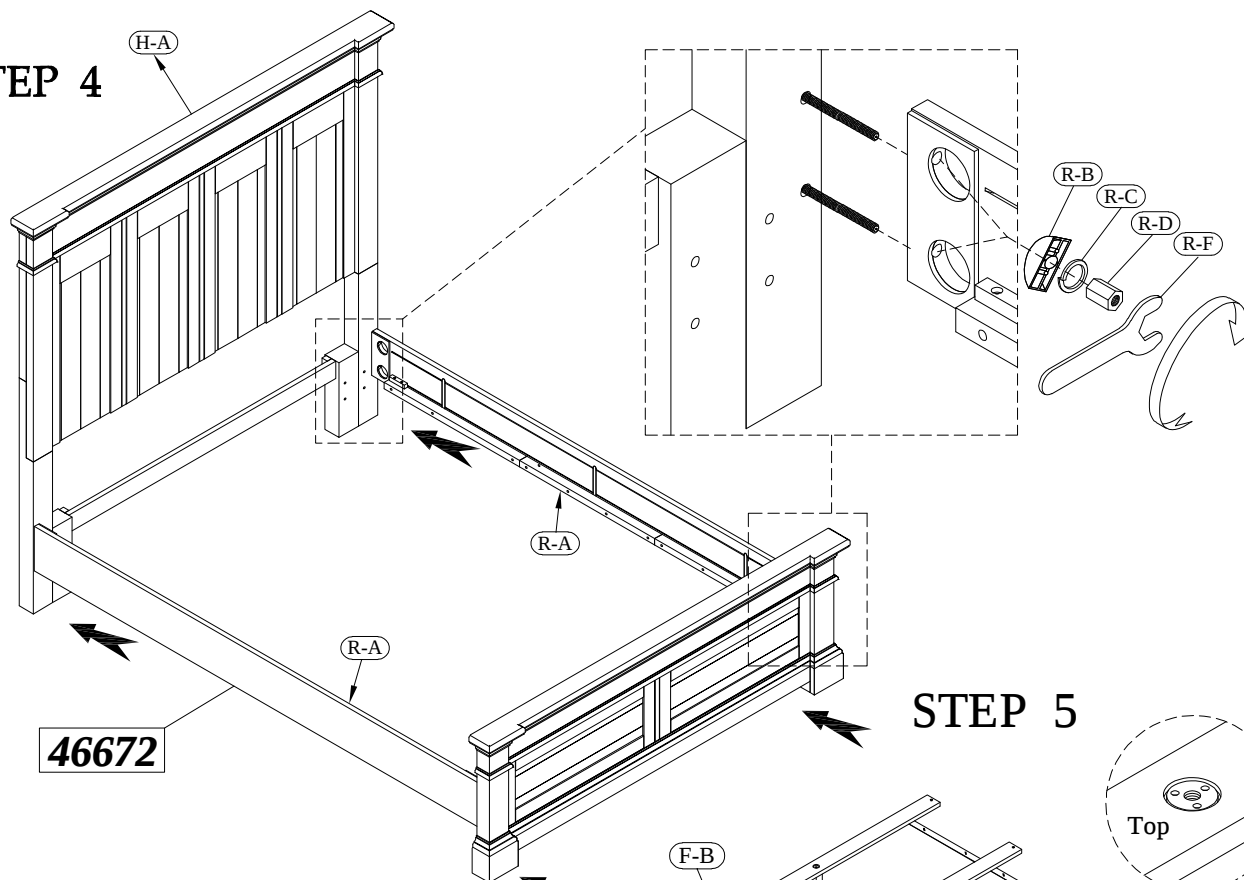

STEP 5

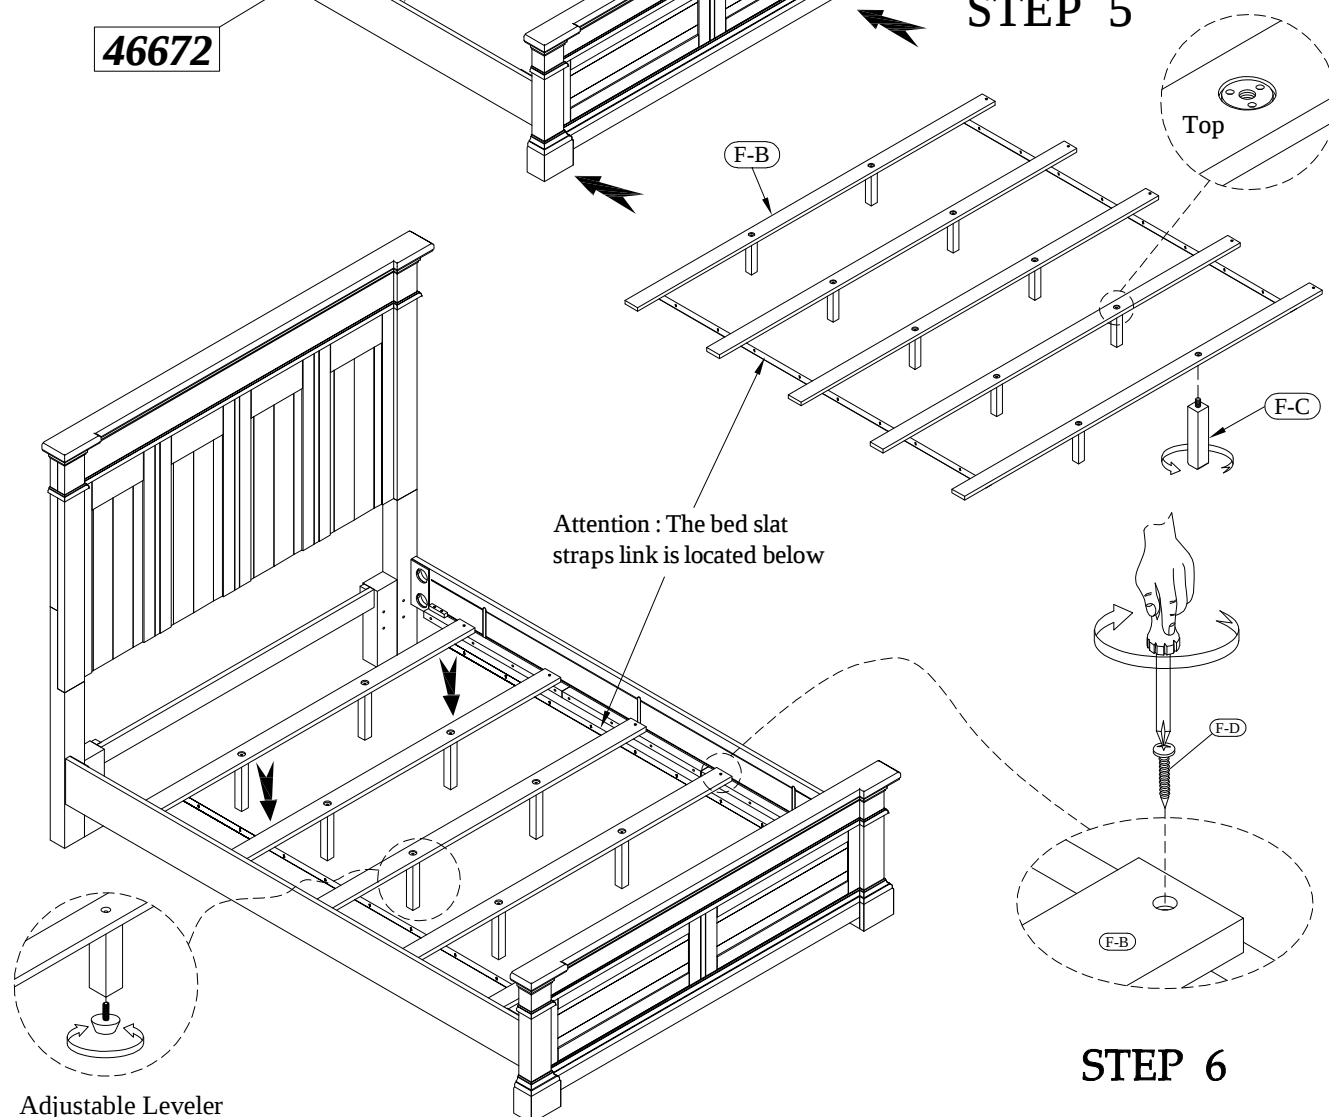

STEP 6