


MODEL: CANTERBURY SECTIONAL

ASSEMBLY INSTRUCTIONS NOTICE DE MONTAGE

* Please keep these instructions and have the product model # and part # available when requesting a service.


POWER LEFT ARM FACING RECLINER | MANUAL ARMLESS RECLINER



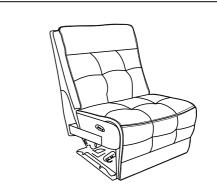

CORNER WEDGE




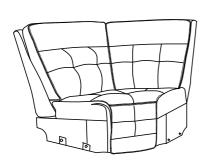




ENTERTAINMENT CONSOLE

POWER RIGHT ARM FACING RECLINER

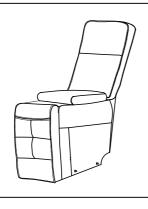


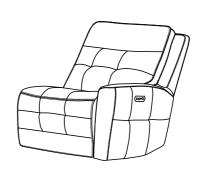

IMPORTANT NOTE

Do not use a power tool to assemble this product as it could damage the thread of the hardware and affect the solidity/durability of the product.



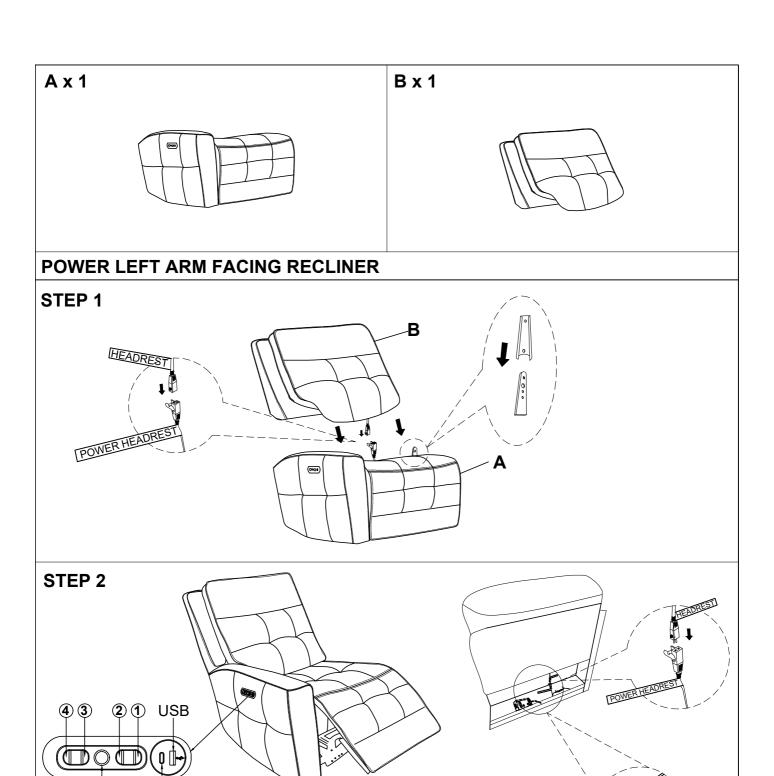




- 2.Press button 2 Mechanism Close.
- 3.Press button **3** Headrest Open.
- 4.Press button 4 Headrest Close.
- 5. Home button **5** All Close.

USB-C


(5)

TRANSFORMER

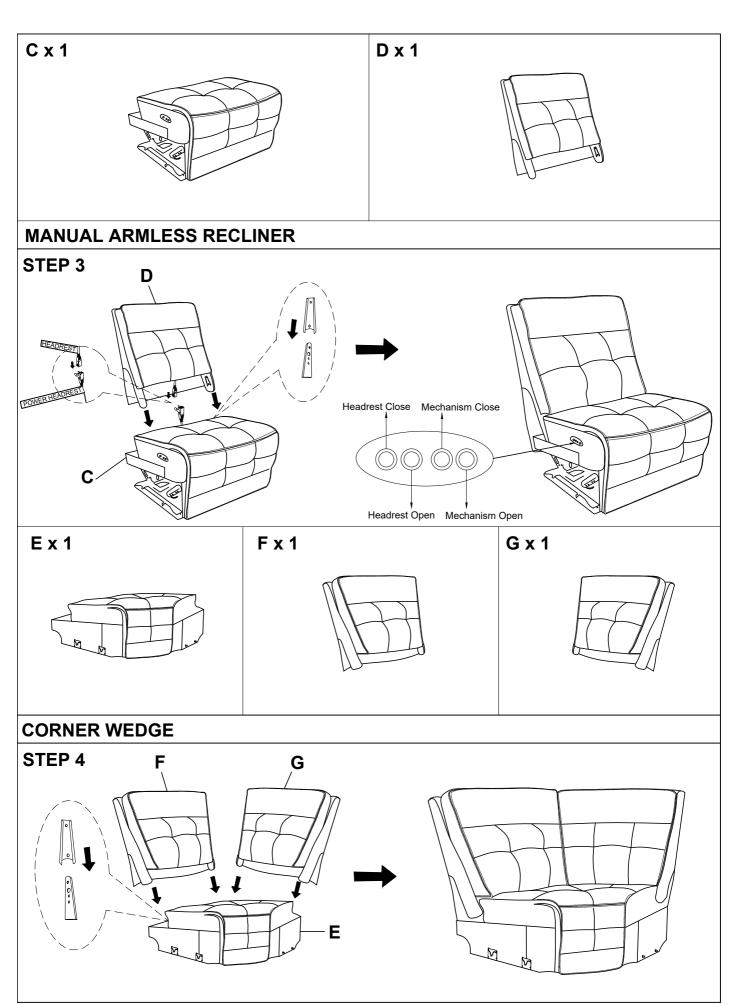


MADE IN VIET NAM

Page 3 of 6

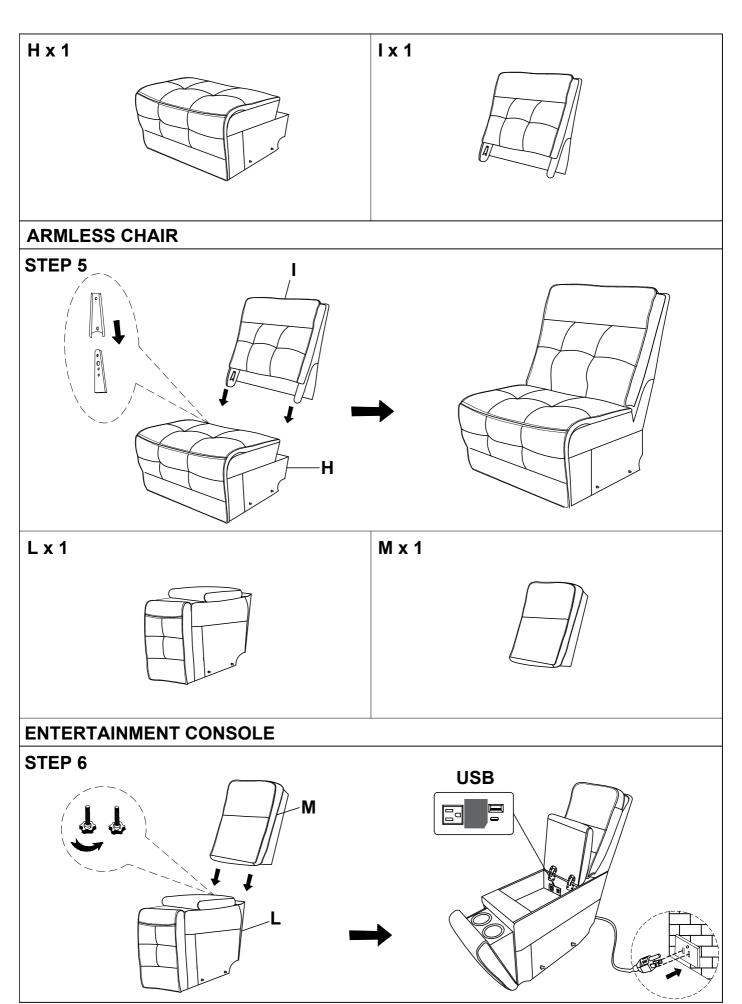


MADE IN VIET NAM

Page 4 of 6

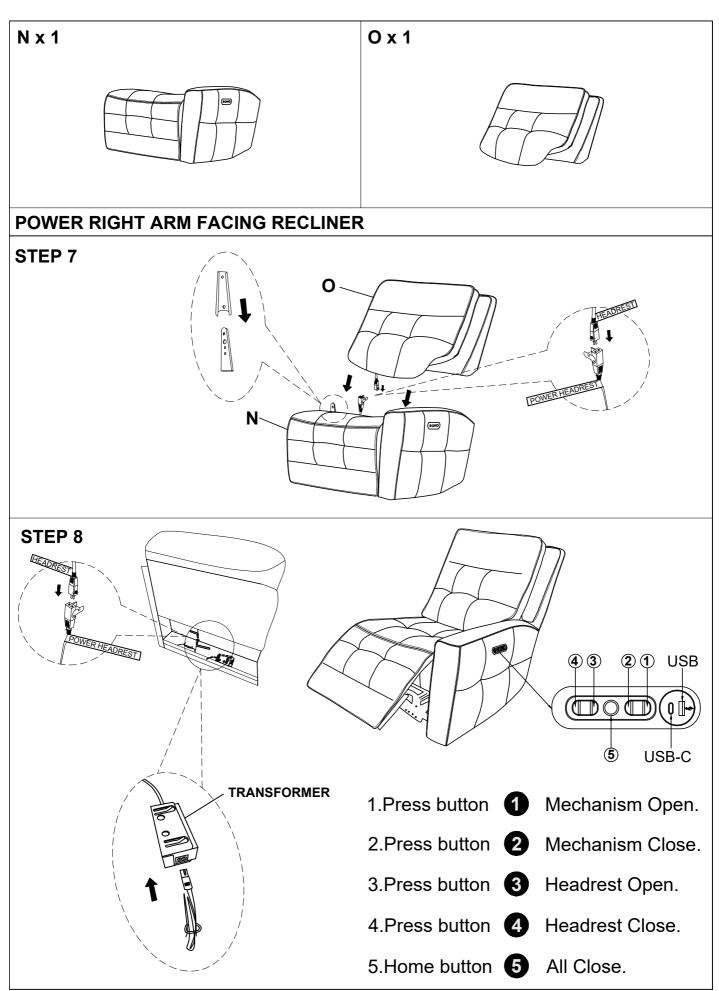

STEP 12

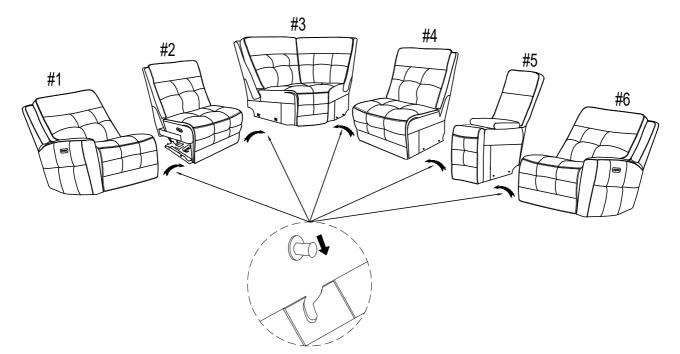

To connect your sectional pieces start with the piece on the left side when facing the sectional (#1). Hook the pins of the piece you want next to it into the slots on the bottom of item #1, continue connecting the remaining sectional piece in order. You can configure the pieces many ways. To disconnect, go in the reverse direction, in the drawing below you would begin with #6.

COMPLETED

