


# PROGRESSIVE FURNITURE B718 KING/QUEEN PLATFORM

## Assembly Instructions

### PARTS LIST

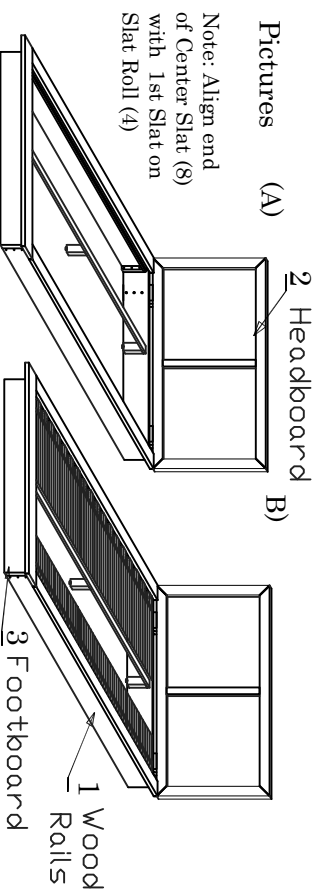


Pictures

(A)


2 Headboard  
B)

Note: Align end  
of Center Slat (8)  
with 1st Slat on  
Slat Roll (4)


1 Wood  
Rails  
3 Footboard

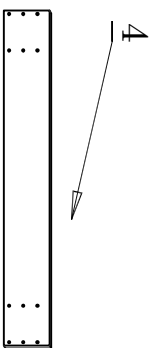

4

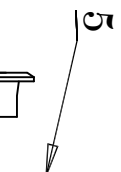

5

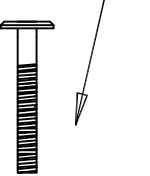

6



5




9

(6x) 1/4"-20 Cap Nut

(18x) 1/4" x 2 1/4"  
Machine Screw

Crossboard:

Queen  $\frac{11}{16}$ " x  $8 \frac{1}{2}$ " x 62"  
King  $\frac{11}{16}$ " x  $8 \frac{1}{2}$ " x  $78 \frac{3}{4}$ "

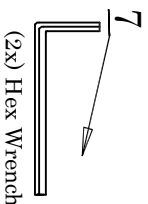


(2x) Hex Wrench

(1x) Center Slat 77"


(3x) Center Support  
6 5/8"

8

10

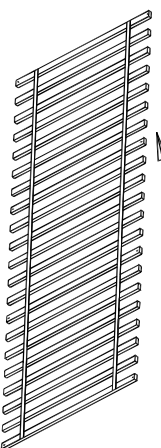

(1x) Slat Roll

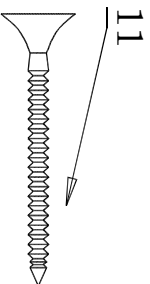


11

(14x) 1 5/8" Long  
Screws

### Step 1

Attach Headboard (2) to Crossboard


(4) using (6x)  $\frac{1}{4}$ " x 2 1/4" Machine Screw  
(6) and (6x)  $\frac{1}{4}$ "-20 Cap Nut (5), Tighten  
the screws using (2x) Hex Wrench (7).

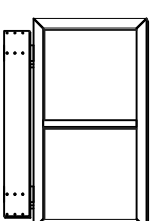

### Step 2

Attach Crossboard (4) to Wood Rails


(1) using (6x)  $\frac{1}{4}$ " x 2 1/4" Machine Screw  
(6) and Tighten the screws using the  
Hex Wrench (7).

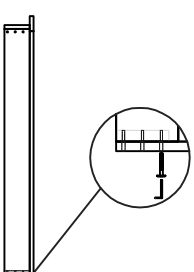

### Step 3

Attach Footboard (3) to Wood Rails

(1) using (6x)  $\frac{1}{4}$ " x 2 1/4" Machine Screw  
(5) and Tighten the screws using the  
Hex Wrench (7).

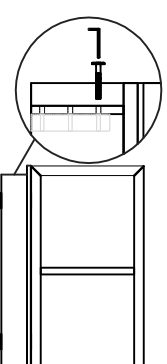

### Step 4


Join Center Slat (8) with Center Supports (9) using (3x)  $1\frac{1}{8}$ " Screws  
(11). Screw in Supports (9) to each edge of the Slat (8) and screw in  
the other Support (9) in the middle of slat, As seen in picture (A).

### Step 5

Center slat(8) with Supports (9) should be placed under slat  
roll(10) and centered onto slat roll (10) as seen in picture (A).  
Attach Center Slat(8) to the slat roll (10) through predilled holes on  
the slat roll (10) using (3x) 1 5/8" screws(11).

### Step 6

Attach slat roll(10) to the Wood Rails  
(1) through predrill holes on the  
slat roll (10) using (4x) 1 5/8" screws  
on each side (11). Make sure the  
slat roll is centered between  
Headboard (2) and  
Footboard (3).

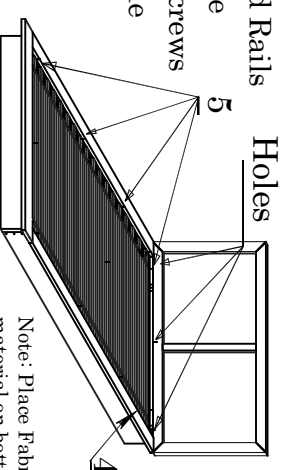

Note: Place Fabric  
material on bottom  
side of slats.