
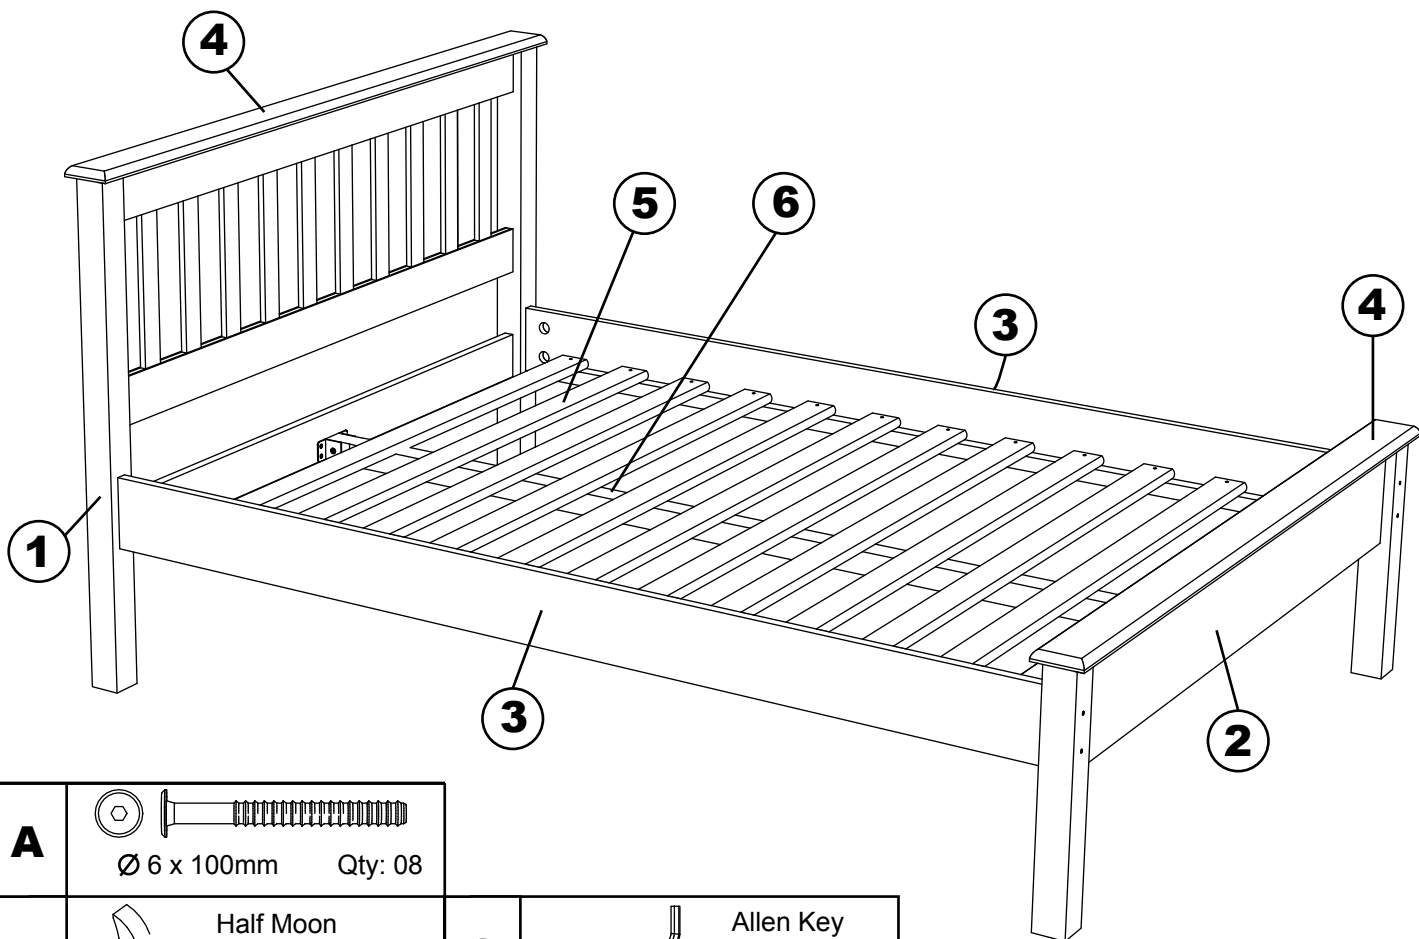







ASSEMBLY INSTRUCTION - FULL CONTEMPO BED




A	 Ø 6 x 100mm Qty: 08	B	 Half Moon Qty: 08	C	 Allen Key Qty : 01	D	 Ø10 x 40mm Qty:10	E	 Ø 4 x 30mm Qty: 32	F	 Ø 3 x 15mm Qty: 08
G	 Support Metal Qty: 02	H	 Ø 6 x 45mm Qty: 02	I	 Spacer Qty: 02						

Step: 1

D	 Ø 10 x 40mm Qty: 06
----------	--

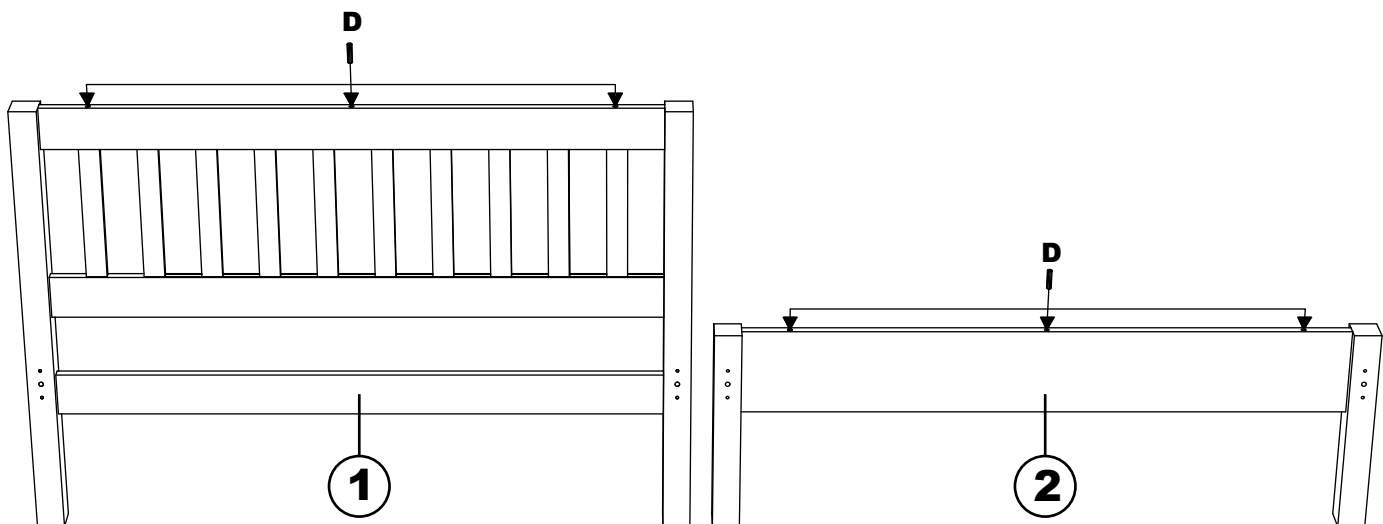

Step: 2


E

Ø 4 x 30mm


Qty: 08

Observation:

Place cardboard underneath for protection.

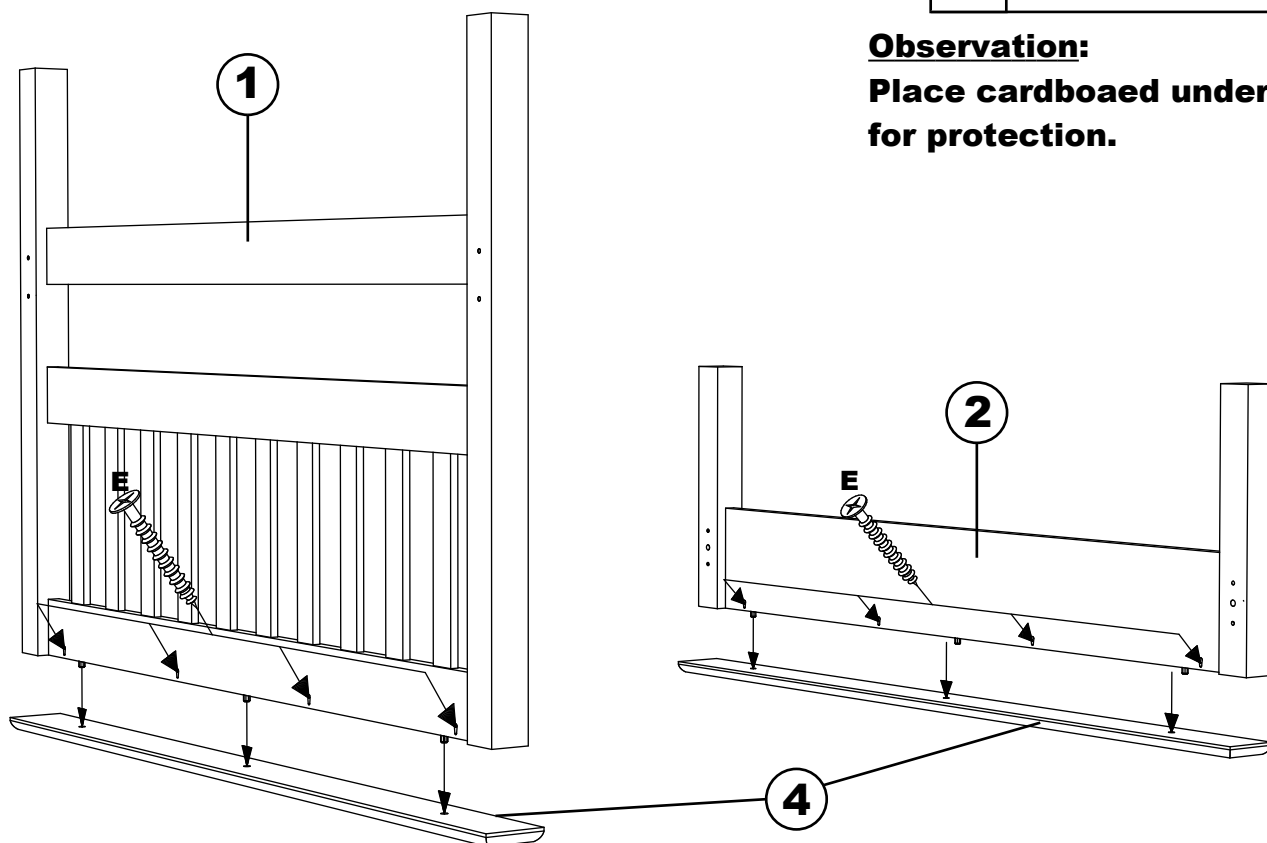


Step: 3





D


Ø10 x 40mm

Qty: 04

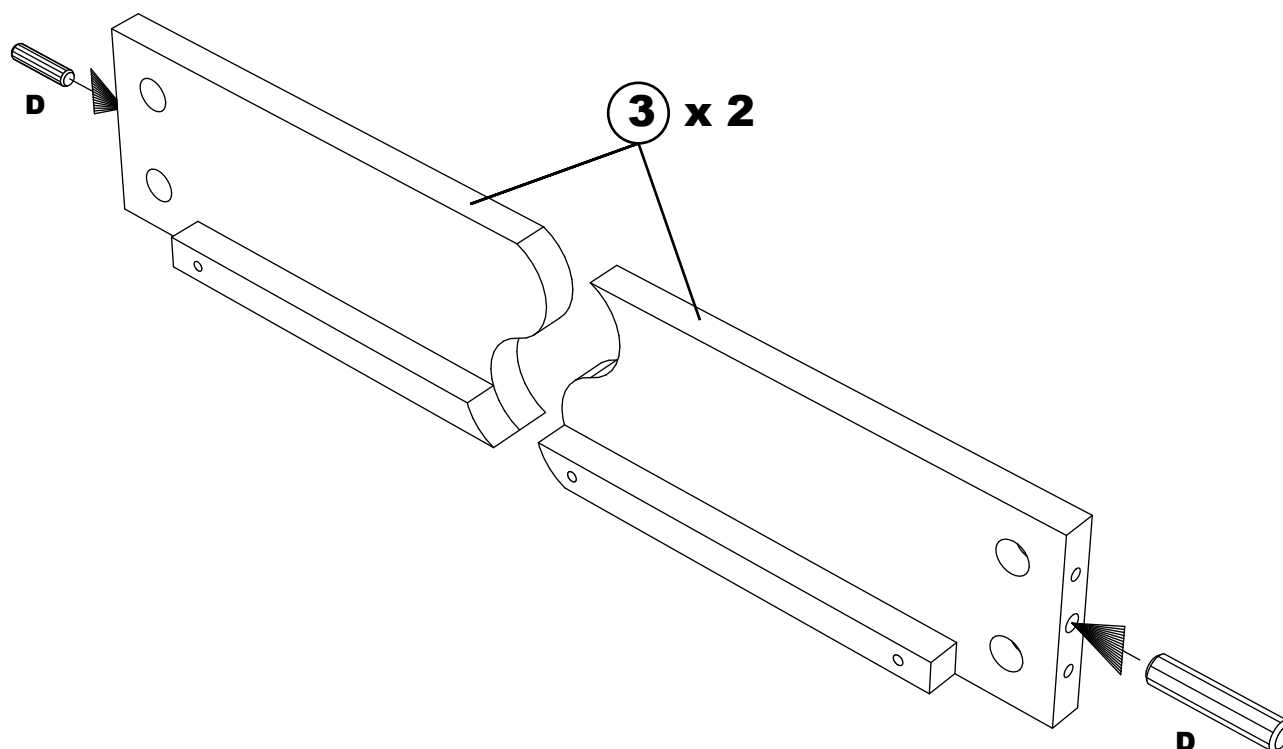


Step: 4

C		Allen Key Qty: 01	A	 Ø 6 x 100mm Qty: 08	B	 Half Moon Qty: 08
			F	 Ø 3 x 15mm Qty: 08	G	 Support Metal Qty: 02

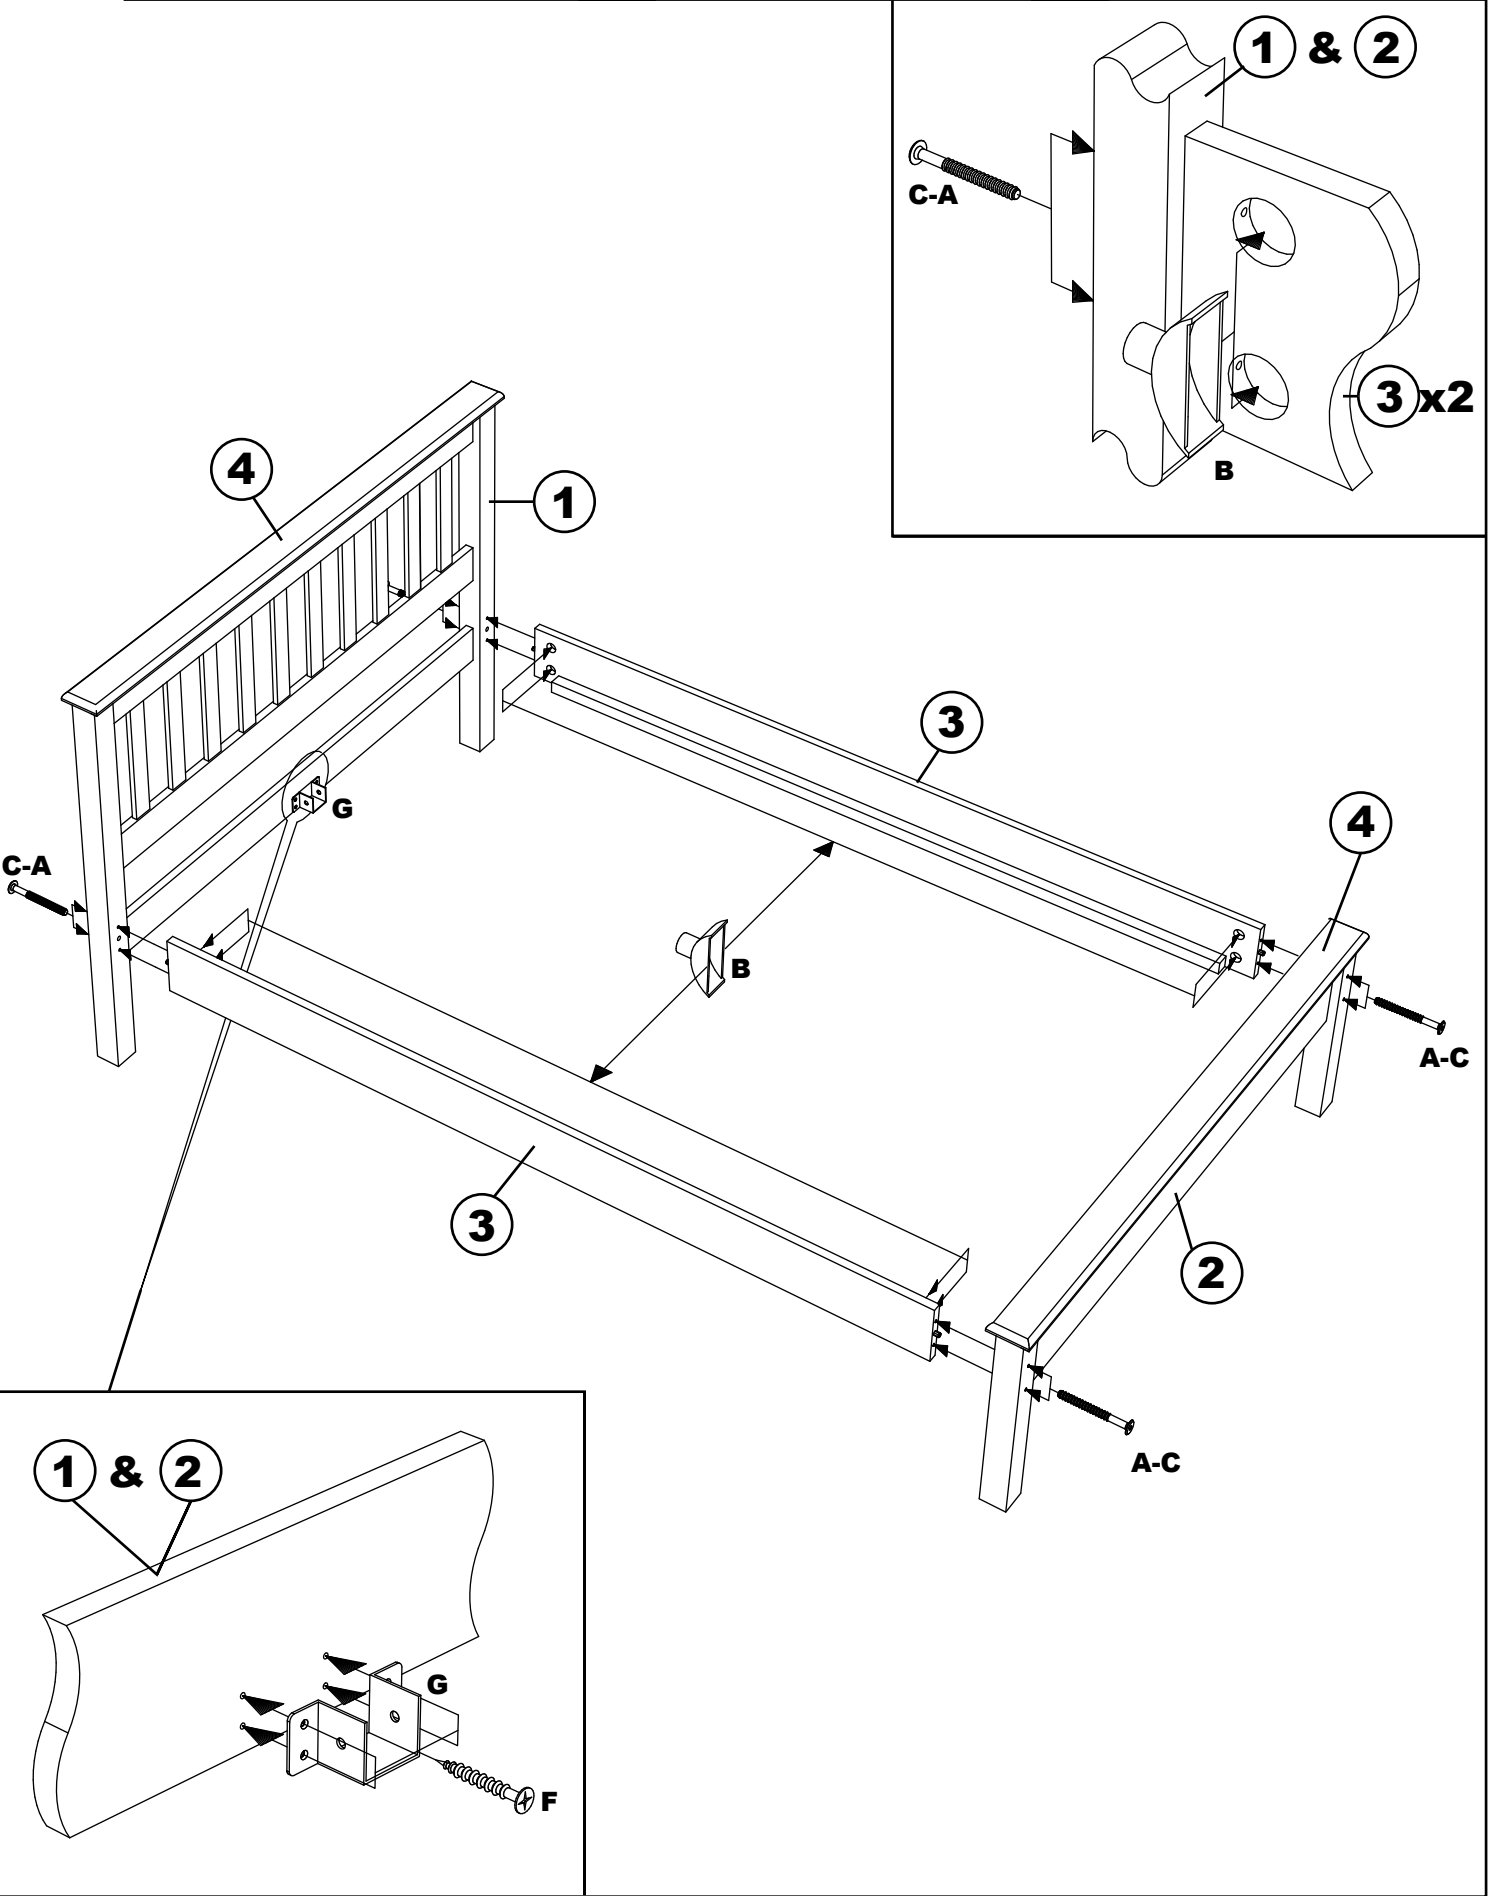

Step: 5

C



Allen Key


Qty: 01

H




Ø 6 x 45mm

Qty: 02

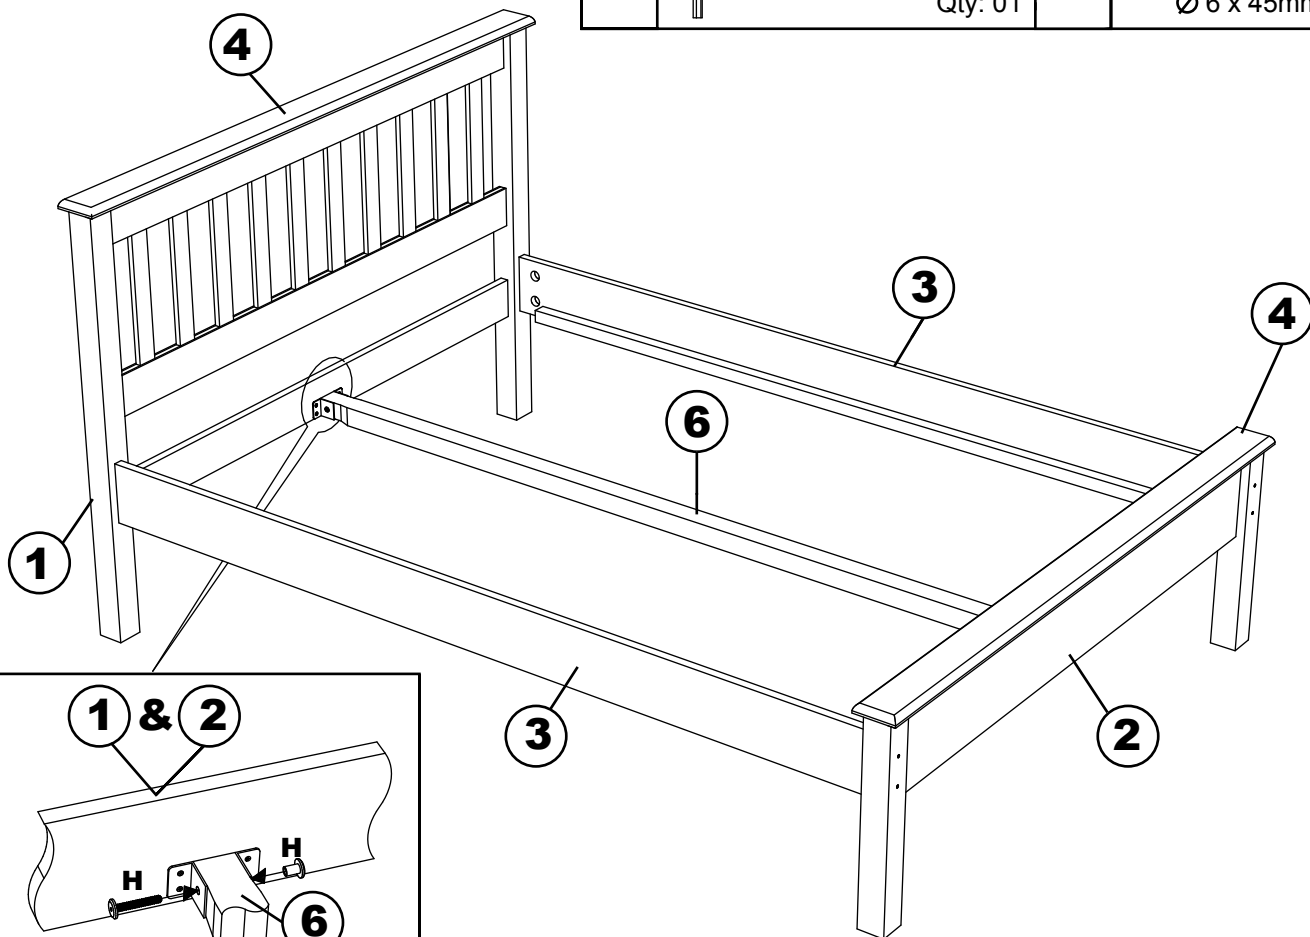

Step: 6


E



Ø 4 x 30mm

Qty: 24

I



Spacer

Qty: 02

